

Assembly Instructions

IMPORTANT: It is recommended that you retain the carton for storage purposes. If you will dispose of the carton, please write the product information found on the carton in spaces at bottom of this page, for future reference.

FOR INDOOR USE ONLY

LIMITED WARRANTY FOR ARTIFICIAL CHRISTMAS TREES

Please read this warranty thoroughly and familiarize yourself with its restrictions and requirements.

We warranty its 6.5 ft. and taller trees against **manufacturer-only defects for a period of five (5) years from the date of purchase indicated on your sales receipt.** (White Trees, one year).

The lights on Trees are warranted for **a period of two (2) years from date of purchase; three (3) years for low voltage LED trees** (see below).

This Warranty does not apply to trees that are used as display trees in the store. This warranty is only valid on purchases made from our authorized retailers. We do not warranty tree stands that break due to stress from tipping or moving of fully assembled/ decorated tree. This tree is for indoor use only. Outdoor use of this tree voids the warranty.

TREES LIMITED WARRANTY:

We warranty the light sets on its trees against **manufacturer-only defects in material or workmanship for a period of two (2) years from date of purchase; three (3) years for low voltage LED trees.**

IMPORTANT NOTES:

Removing factory attached functioning or non-functioning light strings from any section of your tree will **void the warranty.**

Please retain the product carton for storage purposes and/or for use in the event of warranty service for product shipment.

Keep product away from heat and moisture. This limited warranty does not cover damage resulting from accident, misuse, abuse, negligence, or normal wear. In these instances, parts can be purchased at a reasonable fee plus shipping charges.

RETAIN FOR YOUR RECORDS:

Tree Item No.: _____

Store Where Purchased: _____ Purchase Date: _____

IMPORTANT:
SAVE YOUR SALES RECEIPT.
It will be needed when requesting
warranty service.

SAVE THESE INSTRUCTIONS

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- **When decorating trees, use miniature light bulb strings or LED light strings only. "C" size bulbs are not recommended.**
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- **CAUTION:** This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not let lamps rest on the supply cord or any wire.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Never operate this product if the power cord or plug is damaged.
- Use only manufacturer specified replacement bulbs.
- Read and follow all instructions that are on the product or provided with the product.

USE AND CARE INSTRUCTIONS

 
 
 
 
 
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

Branch Shaping Instructions

Branch shaping is best performed during assembly procedure but can be done, if preferred, when tree assembly is completed.

PRE-LIT TREE NOTE: If your tree is pre-lit, and not a power connect tree, it is recommended that the light plugs between sections be connected prior to or at the same time as shaping is performed.

1. Trees are shipped from the factory with the tips of each branch compressed to the center (Figure 1).
Branches should be shaped one row at a time. Make sure that all of the branches of the row to be shaped have been moved to their lowered position.
2. Starting with the bottom row of the tree bottom section, pull the two branch wing tips out away from center to about a 45° angle (Figure 2).
3. The smaller individual tips should then be spread out separately (Figure 3). Figure 4 shows a fully shaped branch with wing tips.
4. Follow this same sequence as you work around the bottom row of branches. When completed, move up to the next branch row and repeat.
5. As you work your way up branch rows, the wing tip style branches will diminish, but branches will otherwise shape similarly. Figure 5 shows a fully shaped branch without wing tips.
6. The top section of the tree will have *wrapped* branches in place of hinged branches. Gently lower the branches and shape in a similar manner as the branches in previous sections (Figure 6).
7. Upon completion of the assembly and shaping procedures, walk around the tree and perform additional shaping to fill any obvious holes or openings.

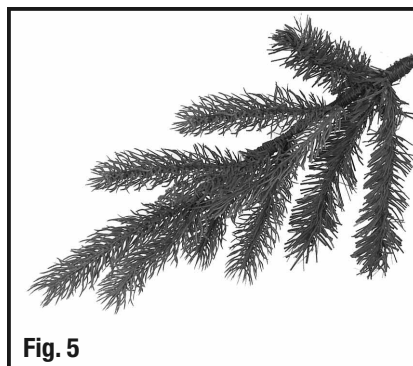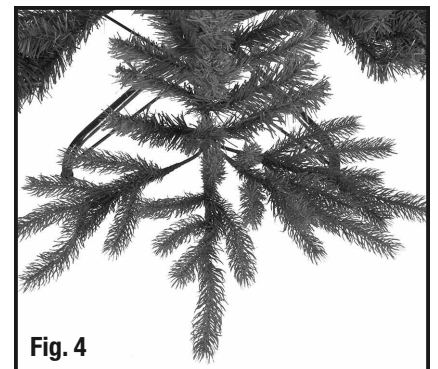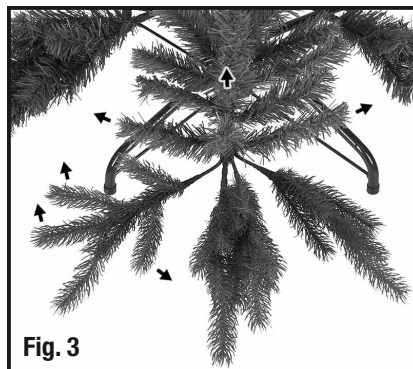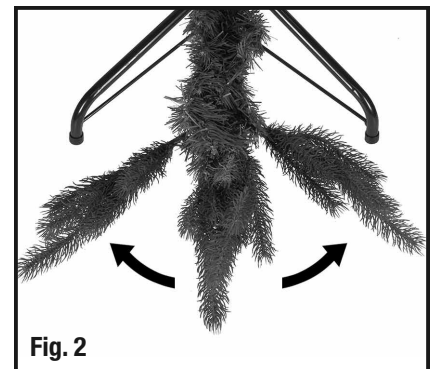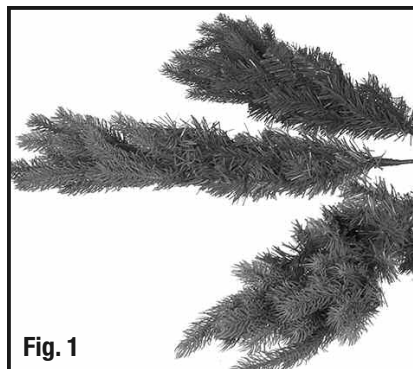

Assembly Instructions

 
 
Each carton contains one bottom section, one middle section (larger trees include additional middle sections), one top section and a metal tree stand.

Special note about larger trees: Some of the larger trees (9 ft. and taller) will include more than one middle section. If your tree contains additional middle section(s), note that each will be numbered in ascending order. The tree bottom section (which inserts into tree stand) will be number 1. The next section as you build up, will be number 2. Section 3 will follow until assembly is completed by inserting tree top section.

1. Remove packing material from ends of all poles. Unfold the tree stand and partially insert the eye bolt.

The tree bottom section will have a tapered center pole. Insert the bottom section pole into the tree stand making sure it is seated properly (Figure 7). Tighten eye bolt.

2. Release the tie wrap holding the branches together and let the branches fall into their lowered positions (Figure 8). Begin shaping process (see **Branch Shaping**).

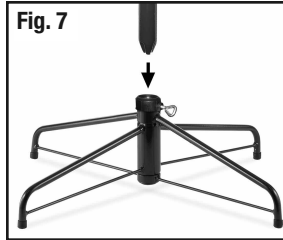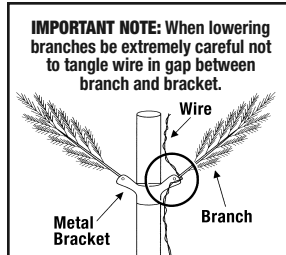

Trees with WRAPPED Branches

The assembly procedure is the same, but unlike hinged tree branches, wrapped branches need to be individually lowered to position. Working your way up from the bottom, gently lower all branches from their upright setting by grasping the branch and pulling it downward (Figure 6). See **Branch Shaping** for proper shaping procedures.

Trees with Branches

These tree designs do not require extensive branch shaping. Branches fall into place during assembly. Minimal shaping may be required to fill obvious holes or openings.

Tree Light Connections

There are several variations of pre-lit tree light connections. Refer to the below **LIGHTING STYLE** descriptions and supporting diagrams to find the light connection instructions for your tree.

LIGHTING STYLES




STYLE 1: Each tree section has a light string cord that will plug into a receptacle on the section below. The extension cord at the bottom of the tree plugs into a standard electrical outlet or other power source.

NOTE: Trees with more than 1300 lights will include an additional extension cord. This extension cord must be plugged into an electrical outlet separately. We recommend using a multiple socket power strip (not included) to accept added light set extension cords.

STYLE 2: The light string cords from all sections should be pulled down through the center of the tree. The cords can then be plugged into each other and then into an extension cord to power supply.


STYLE 3: *Low voltage LEDs.* Each tree section has a light string cord that will plug into a receptacle on the section below. Note that the male and female connectors are keyed and will only connect in one direction. After connection, twist closed each connector nut securely.

   continued on next page

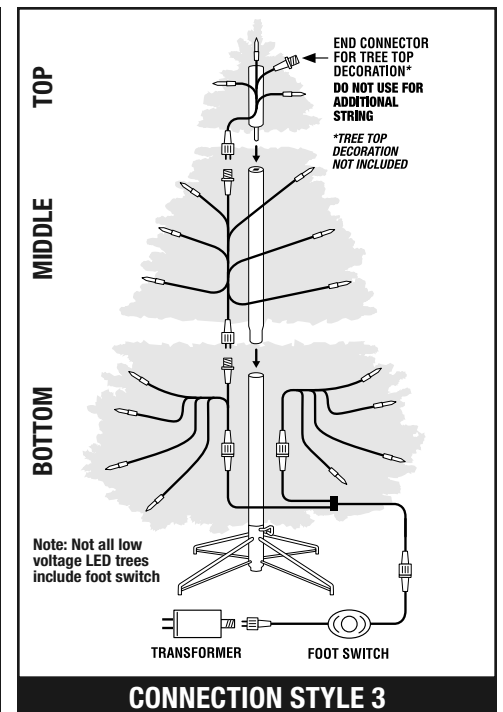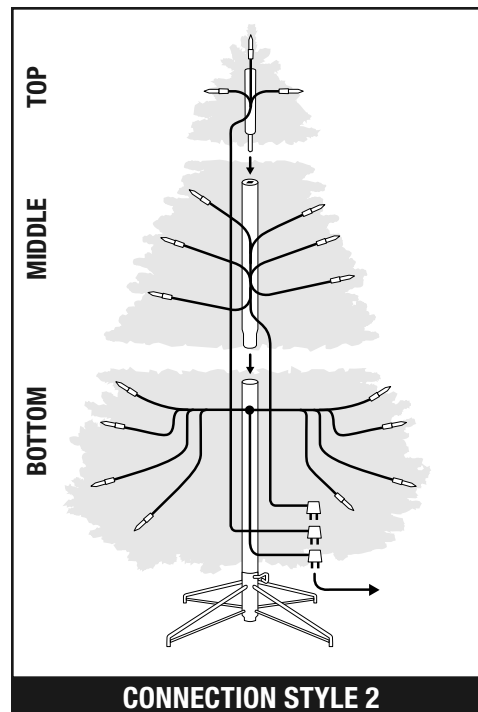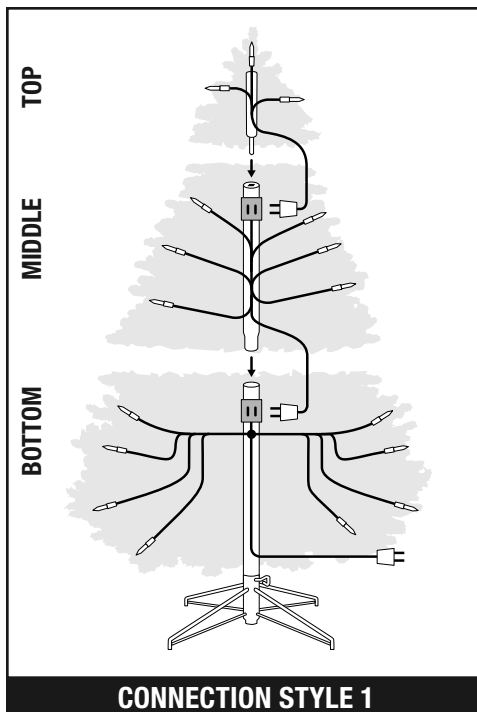

STYLE 4: These trees do not require the connection of light strings between sections. Electrical connections are made when each section is assembled. **During tree**

 assembly or disassembly, DO NOT DISCONNECT any of the factory connected light strings that are located on the center pole or within the tree.

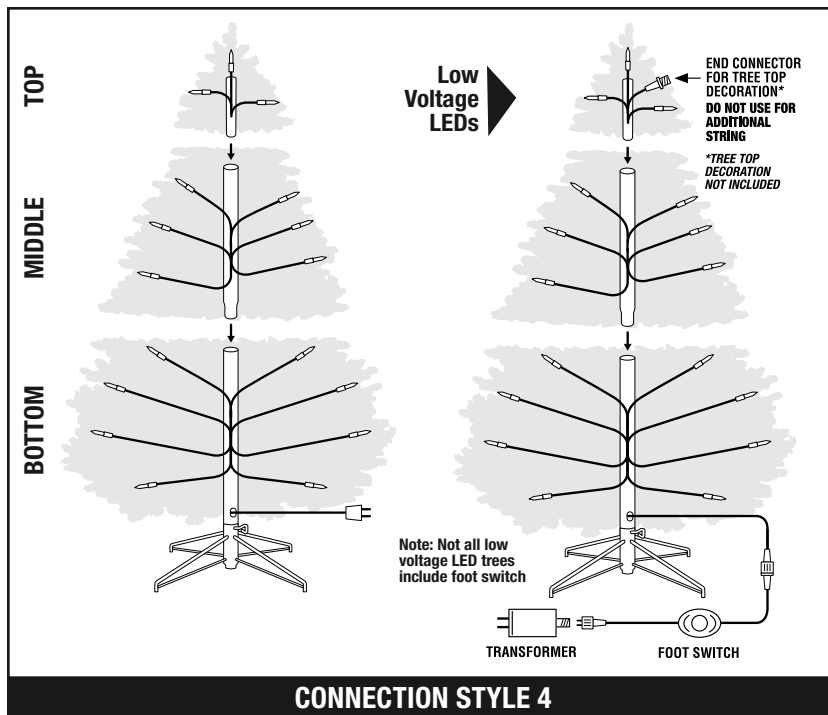

CONNECTION STYLE 4

Lights Operating Instructions (if equipped)

The foot switch operates the functions of the lights. There are nine functions, each one is activated with the press of the foot switch. Functions occur in the following order:

Steady warm white; steady multicolor; steady pastel; warm white fading to multicolor; fading warm white; Fading multicolor; flashing warm white; flashing multicolor; flashing warm white to multicolor.

Light functions always follow this sequence.

Storage

Gently compress the tips back into the center of each tree branch. Raise all branches to original upright position taking care not to place undue pressure on the attached ends of the branches. Secure the section branches together with tie wrap (if included).

When disassembling tree, a twisting motion will help to separate the sections from each other. All tree parts can be replaced in carton and should be stored in a cool, dry place.

Trees with Multi-Function Light Sets

OPERATING INSTRUCTIONS

Trees with light strings include 40 light functions which are chosen by using the push button controller.

Use the left side button to turn the lights ON and OFF.

The four directional buttons will move your light choice up, down, left and right among the 39 listed functions on the controller screen.

 
 
 
The fortieth and last function will cycle through all 39 functions one after the

other. Press the button inside the arrows for this function.

Note that after powering off, the last function in use will be the start function when string is next powered on.


Bulb Replacement Instructions

1. Unplug light string from power source.
2. Pull up on the base lock unlatching the bulb from the bulb socket. Gently pull the bulb straight out (Figure 15).
3. Before inserting the new bulb into socket, make sure that the two wires on either side of the bulb base are straight up and flush with the base (diagram at right).
4. Carefully insert new bulb into socket and push down Base Lock until it snaps into place (Figure 16).

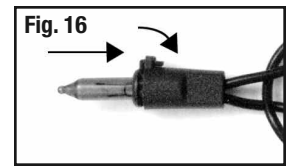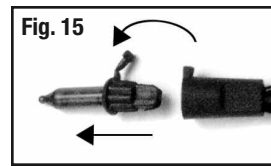

Low Voltage LED Bulb Replacement Instructions

 1. Unplug light string from power source.
2. Pull up on the base lock unlatching the bulb from the bulb socket. Gently pull the bulb straight out.
3. Carefully insert new bulb into socket (bulb is keyed and only goes in one way) and push down Base Lock until it snaps into place.



NOTE: Fuse failure is sometimes a reason for non-functioning light strings. The fuses are found in the light string plug. If one is burnt out, replace it with a spare fuse included in the accessories bag.

Fuse Replacement Instructions

1. Unplug light string from power source.
2. Slide the fuse access cover away from cord side (in direction of arrow, Figure 17) exposing fuses.
3. Remove fuses from compartment and examine. Replace burnt out fuse with new one.
4. Close fuse compartment by sliding access cover back in towards cord side of plug (Figure 18).

