

Water Vapor Fireplace

INSTRUCTION

〈The picture is for reference only. Please refer to the fact product for details〉



CELL PHONE APP



Operation instructions for water vapor fireplace



Water Vapor Fireplace

Feature:

- *Cellphone APP Control (Child Lock)
- *Remote Control (Child Lock)
- *Realistic Sound of Burning Wood
- *Auto Pumping Water
- *Automatic Shutdown Due to Water Shortage

7*24 hourssupport Team:

Email: sxj13989387055@outlook.com

Tel/whatsapp: +8613989387055

 
(Please contact us for customized size)

Remark:

1, The atomization effect will reach its peak approximately 10 minutes later. When the machine is just turned on, it is undergoing the process of ionization and atomization.

2. If tap water pressure is too high, install a pressure-regulating valve to prevent damage.

3 Only remote and APP can open/turn off the Child Lock

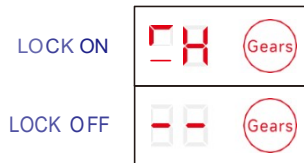


The device panel is locked and all buttons become ineffective when CHILD LOCKED ON.


4, The wifi is working when the fireplace working. When the fireplace is working, the power button blue light flashes,so you can connect your mobile phone to the Wi-Fi. If the connection is successful, the blue light will stop flashing.

5, Caution: Do not touch the hot metal surface in any cases to avoid the risk of burns.

Machine reset: After powering on, while in standby mode, press and hold the power button for 3 seconds. When you hear a "ding" sound, it will clear the WIFI information of the last connected device on your phone.

  Connect WIFI: Install Smart life APP,sign up an account, add the device and search the WIFI as “2103 fireplace” then connect it.



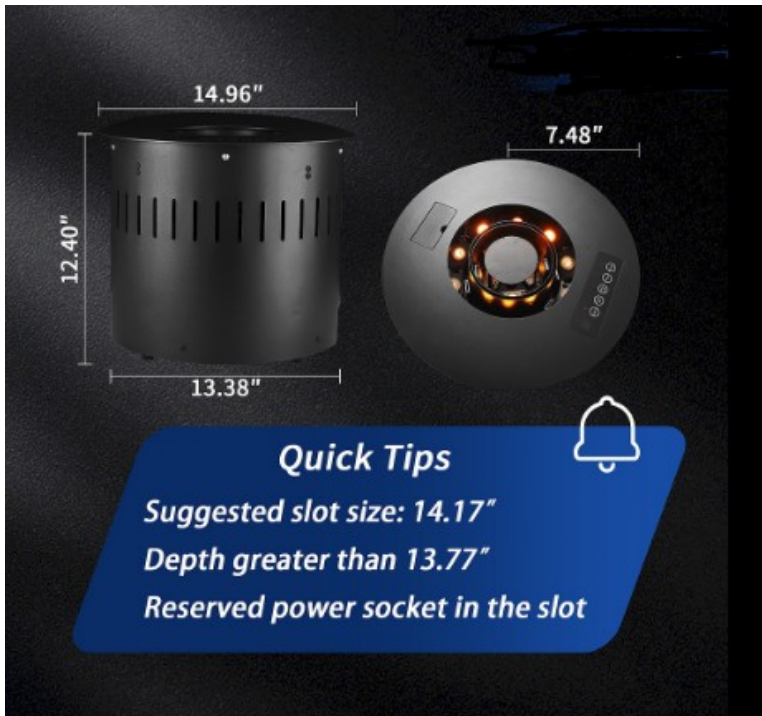

Attention:

- 1 Before using this equipment, please read all the supporting documents including this instruction manual, and keep this instruction manual in a safe place so that you can check it at any time.
- 2 Read the instructions carefully and follow the instructions for use and maintenance

3 Confirm that the power supply used meets the rated voltage and power required by the electrical equipment of the equipment, and the power outlet of the equipment should be equipped with a leakage protection device.

4 For this equipment, we recommended to use a dark background for the background and the top. Avoid using reflective materials. Above the machine, a space of at least 16 inches/40cm is recommended. At the installation site of the equipment, a ventilation opening of no less than 1/2 inch/1.5cm on one side must be reserved to facilitate air intake (the absence of an air intake will affect the height of the flame).

5. The visual effect of the equipment is significantly affected by airflow. When the airflow is strong, it is recommended to install detachable glass baffles. The height of the baffles should not exceed 12 inches/30cm.

6. We recommended to use pure water or distilled water for this fireplace because poor water quality will affect the performance and even damage the equipment (if connected to tap water, it is advisable to add a purification device).

7. This fireplace should be worked as horizontally (the height difference between the two ends should be less than 3mm) to avoid uneven flame. Excessive inclination may lead to leakage and cause damage to the machine.

8. Do not touch the fireplace while in operation, as high temperatures may cause burns.

9. When you are going to drain PLEASE first prepare the water pipe and container to make sure the water does not flow back into the fireplace to damage the product or cause electric shock!

10. After the fireplace filled with water, it is forbidden to lift or move the equipment at will. Please drain all the water and take off the plug then move it. Make sure to move this fireplace horizontally and slowly in order to avoid damaging the fireplace.

11 Forbidden to move the fireplace when it's working.

Panel Description



There is a remote in the package for this fireplace.

CHILD LOCK button is for child lock(only in mobile APP and remote)to prevent children from touching by mistake; There is hidden water recharge and drain sockets in the top of the fireplace as below picture.

Operating Instructions::

- 1 Placed flat the fireplace and powered up. You will hear a "drip" sound when you plug in the power supply.
2. Prepare the water and linked the water pipe(from the package) with the fireplace inlet socket.
- 3.Press the POWER button; the indicator light will turn on, and a voice prompt will sound. It will be continuous voice alarms for first time power it or short water,after adding water the water shortage alarm prompts to stop automatically.



4. **WATER ADDING:** Put the pipe one end into the water and linked the other end to the fireplace WATER INLET socket, press the with water button, the water adding button indicator will light up and there will be a voice prompt. The pump will start working and it will automatically stop when full(meanwhile the indicator light goes out). Do not force adding too much water overflows which will damage the equipment.
5. After adding water, you can select the flame gear as your will. Each time you press, you can convert one gear. There will be a voice prompt, and there will be a gear display on the display panel, and 1 to 5 gears will be converted cyclically.
6. There are voice prompts when water is short. Please add water in time. The power will automatically turn off after 5 minutes short water.
7. **Drainage :** After linked the power plug , in the shutdown (standby) state, connect the pipe from fireplace OUTLET socket (right above) to the water container, quickly press drainage button(discharge water) 3 times to drain the water and there is a voice prompt. Press the button again to stop the drainage. Please stop the drainage in time after the equipment has drained water. It will damage the pump for a long time without water. The drainage is only for move the fireplace or stay for long time.
8. **Timing:** Press the TIMING button in standby status is timed to power on, it's timed to power off when working. Each press is half a hour and there is a voice prompt. It supports up to 10 hours. The screen is displayed accordingly time.
9. The realistic firewood burning sound is 4 gears, 0-3 gears, 0 gears are silent, and 3 gears are the maximum sound, and the cycle is converted.
10. **CHILD LOCK:** Press the remote control or mobile APP child lock button, the screen shows CH and all the buttons were paused untill you press the lock button again to lock off.

In the child lock state, the body panel is locked and all buttons are invalid.

Maintenance Instructions:

1 We suggest use pure water for this fireplace flame(impure water will get bad effect even damage the fireplace). Please fill the water then use to avoid pump damaging by water shorter. The full water will work for 5-8 hours.

2. Please drain the water and power off the fireplace till it cooled then move it to avoid burning. Please prepare the water container then draining in order to protect from damaging the fireplace or electric shock.

3. The light bulb and atomizer are consumables and need to be replaced after damage. The power supply must be cut off before replacement, and it can only be carried out after the equipment is cooled. The machine and equipment must be lifted out horizontally, otherwise there may be water leakage, causing damage to the machine.

Common Questions and Solutions

NO.	Problem	Reason	Solutions
1	Remote control failed	The remote control battery runs out	Replace new battery
2	Only light no fog	1. Water shortage; 2. Too much water 3. The atomization film is damaged; 4. The fan is damaged;	1. Add water; 2. Drain or replace the water level sensor 3. Replace the atomizer sheet or atomizer; 4. Replace the fan
3	Only fog no light	Bulb damage	Replace the bulb
4	Flame asymmetry	The machine is not placed horizontally	Adjust the horizontal position of the machine
5	All the whole machine No response	The touch panel, main control board, main power supply, etc. are damaged.	Contact technical support for detail info

Package:

Fireplace *1 pc, Instruction* 1 pc, remote control *1 pc. Auto pipe *1 pc, silicone water pipe* 1 pc, power cord* 1 pc



Automatic water pipe



Pagoda joint



Manual water pipe



Reinforcement bucklex2



instructions



power cord



Remote control

Install the "Smart Life" app

Download method 1: You can go to the APP store and Android app stores to search for "smart life" to download and install

Download method 2: Scan the code to download "Smart Life" App



Operation instructions for water vapor fireplace

Ensure a stable internet connection during app download

24/7 Support Team:
Email: sxj13989387055@outlook.com
Tel/whatsapp: +8613989387055