

STOPCOCK	STOPCOCK
BEFORE INSTALLATION	INSTALLATION INSTRUCTION
<p>ALL INFORMATION IS COMPILED BASED ON THE LATEST PUBLISHED PRODUCT INFORMATION. THE COMPANY RESERVES THE RIGHT TO CHANGE PRODUCT CHARACTERISTICS, PACKAGING, OR AVAILABLE TYPES OF PRODUCTS AT ANY TIME WITHOUT NOTICE.</p> <p>THE MANUAL INCLUDES IMPORTANT INSTALLATION, MAINTENANCE, AND CLEANING INFORMATION. PLEASE PROVIDE THESE MATERIALS TO THE USER FOR READING</p> <p>PRECAUTIONS:</p> <p>1. IT IS NECESSARY TO THOROUGHLY FLUSH THE WATER SUPPLY PIPE TO REMOVE IMPURITIES FROM THE PIPELINE.</p> <p>IF INSTALLING A NEW WASHING BASIN, THE FAUCET CAN BE INSTALLED ON THE BASIN FIRST.</p> <p>3. SPRINKLER WORKING PRESSURE: 0.1MPa TO 0.5PA. WHEN THE WATER PRESSURE EXCEEDS 0.5MA, A PRESSURE REDUCING VALVE MUST BE INSTALLED. THE MAXIMUM WORKING TEMPERATURE AND AMBIENT TEMPERATURE OF THE SHOWER: 60 ° C. PLEASE PAY SPECIAL ATTENTION TO THE ARM TUBE CONNECTING THE SHOWER AND THE SHOWER BEING KEPT AWAY FROM THE HEATER, OTHERWISE IT MAY DAMAGE THE SHOWER AND ITS SEALING PARTS, AND EVEN CAUSE HARM TO THE USER</p>	
INSTRUCTIONS FOR USE	
<p>TURN THE HANDWHEEL SWITCH TO THE LEFT AND ADJUST THE TEMPERATURE TO PRODUCE COLD WATER, MIXED WATER, AND HOT WATER; TURN TO THE RIGHT TO TURN OFF THE WATER OUTLET MAIN SWITCH. THE LEFT BUTTON CONTROLS THE WATER OUTLET METHOD.</p>	
INSTALLATION DIMENSIONS	

INSTALLATION STEPS			USAGE GUIDE		
<p>1. INSTALL THE GASKET</p>	<p>2. INSERT THE FAUCET INTO THE HOLE</p>	<p>3. CHECK IF THE PIPELINE IS PULLED SMOOTHLY</p>	<p>LEFT ROTATION FIXED TEMPERATURE, COLD WATER MIXED HOT WATER ROTATE RIGHT TO CLOSE</p>	<p>WATER OUTLET BUTTON</p>	<p>WATER OUTLET BUTTON</p>
<p>4. INSTALL THE SCREWS UNTIL THEY EXPOSE THE MOUNTING RING</p>	<p>5. INSTALL THE GASKET ONTO THE PIPE AND THE INSTALLATION RING ONTO THE PIPE</p>	<p>6. ADJUST THE POSITION OF THE SCREWS ON THE MOUNTING RING AND TIGHTEN THEM</p>	<p>SCREEN DIGITAL DISPLAY OF OUTLET WATER TEMPERATURE AND TIME</p>	<p>FREE PULLING OF THE FAUCET</p>	<p>PRESS TO SWITCH TO WATER OUTLET MODE</p>
<p>7. CONNECT THE HOT AND COLD PIPES, CONNECT THE COLD WATER TO THE BLUE PIPE, AND CONNECT THE HOT WATER TO THE RED PIPE</p>	<p>8. INSTALL THE M8 * 1 QUICK CONNECT PIPE ON THE MAIN BODY</p>	<p>9. TURN ON THE HOT AND COLD WATER SOURCES AND LET THE WATER FLOW FOR TWO MINUTES</p>	<p>PRESS TO SWITCH BUBBLE WATER OUTLET</p>	<p>MAINTENANCE OF FAUCETS 1. TURN ON THE FAUCET AND RUB THE NOZZLE TO REMOVE IMPURITIES</p>	<p>2. WHEN THE WATER FLOW DECREASES, CLEAN THE BUBBLER AND REINSTALL IT</p>
<p>10. INSTALL THE GRAVITY BALL ON THE PEANUT HOSE</p>	<p>11. CONNECT THE SPRINKLER HOSE TO THE QUICK CONNECT PIPE</p>	<p>12. ADJUST THE GRAVITY BALL TO THE APPROPRIATE POSITION</p>	INSTALLATION COMPLETION INSPECTION		
<p>CHECK AND ENSURE THAT ALL CONNECTIONS ARE TIGHTENED, ENSURE THAT THE HANDWHEEL IS IN THE CLOSED POSITION, OPEN THE MAIN WATER SOURCE AND DRAINAGE SYSTEM, CHECK AND REPAIR ANY LEAKING INTERFACES</p>					
CLEANING INSTRUCTIONS					
<p>SUITABLE FOR ALL PROCESSED SURFACES: CLEAN THE COATING SURFACE WITH NEUTRAL SOAPY WATER, AND THEN THOROUGHLY DRY THE ENTIRE SURFACE WITH A CLEAN SOFT CLOTH. MANY CLEANING AGENTS, SUCH AS AMMONIA, DETERGENT, TOILET SOAP, ETC., CAN CAUSE DAMAGE TO THE SURFACE OF THE COATING. REMEMBER TO USE THEM. ABRASIVE CLEANING TOOLS OR CLEANING AGENTS SHOULD NOT BE APPLIED TO FAUCETS AND THEIR ACCESSORIES</p>					

INSTALLATION STEPS				INSTALLATION STEPS			
 1. INSERT THE FAUCET BODY INTO THE SINK HOLE	 2. ROTATE THE SCREW INTO THE MOUNTING RING	 3. INSTALL THE GASKET ONTO THE PIPE AND THE MOUNTING RING ONTO THE PIPE	 4. ADJUST THE POSITION OF THE SCREWS ON THE MOUNTING RING AND TIGHTEN THEM	 17. CONNECT THE OUTLET PIPE OF THE WATER PURIFIER TO THE MAIN WATER PURIFICATION INTERFACE	 18. TURN ON THE HOT AND COLD WATER SOURCES AND THE FAUCET SWITCH, ALLOWING THE WATER TO FLOW OUT FOR TWO MINUTES	 PRESS TO SWITCH TO OTHER WATER OUTLET MODES	 PRESS TO SWITCH TO OTHER WATER OUTLET MODES
 5. INSTALL THE CUP WASHER AND TIGHTEN THE SCREW RING	 6. INSTALL THE SOAP DISPENSER AND TIGHTEN THE SCREW RING	 7. CONNECT THE ELBOW TO THE MAIN BODY OF THE FAUCET AND CHECK FOR SMOOTH ROTATION	 8. PULL THE PIPE TO CONNECT THE SPRINKLER AND THREAD IT THROUGH THE BEND	 PRESS TO SWITCH TO OTHER WATER OUTLET MODES	 MAINTENANCE OF FAUCETS	 1. TURN ON THE FAUCET AND RUB THE NOZZLE TO REMOVE IMPURITIES	 2. WHEN IMPURITIES REDUCE THE SHOWER FLOW, REMOVE THE SHOWER HEAD BUBBLER, CLEAR THE BUBBLER, AND REINSTALL IT
 9. INSTALL THE GRAVITY BALL ON THE SPRINKLER HOSE	 10. CONNECT THE SPRINKLER HOSE TO THE MAIN BODY	 11. CONNECT THE MOTOR TO THE QUICK CONNECT PIPE AND CONNECT THE WIRES	 12. INSTALL THE CONNECTING PIPE ON THE MAIN BODY AND LOCK IT TIGHTLY, AND CONNECT THE QUICK CONNECTOR TO THE MOTOR	USAGE GUIDE			
 13. INSTALL THE CONNECTING TUBE ON THE HOLE OF THE CUP WASHER AND LOCK IT TIGHTLY. CONNECT THE CUP WASHER TUBING AND LOCK IT TIGHTLY	 14. CONNECT AND LOCK THE HOT AND COLD PIPES TO THE WATER SOURCE, CONNECT THE COLD WATER TO THE BLUE PIPE, AND CONNECT THE HOT WATER TO THE RED PIPE	 15. ADJUST THE GRAVITY BALL TO THE APPROPRIATE POSITION AND LOCK IT TIGHTLY	 16. CONNECT THE CONSOLE TO THE SINK CONSOLE INTERFACE	 LEFT ROTATION FIXED TEMPERATURE, COLD WATER, HOT WATER, HOT WATER, ROTATE RIGHT TO CLOSE	 WATERFALL WATER OUTLET BUTTON	 TAP WATER OUTLET BUTTON	 TAP WATER OUTLET BUTTON
 13. INSTALL THE CONNECTING TUBE ON THE HOLE OF THE CUP WASHER AND LOCK IT TIGHTLY. CONNECT THE CUP WASHER TUBING AND LOCK IT TIGHTLY	 14. CONNECT AND LOCK THE HOT AND COLD PIPES TO THE WATER SOURCE, CONNECT THE COLD WATER TO THE BLUE PIPE, AND CONNECT THE HOT WATER TO THE RED PIPE	 15. ADJUST THE GRAVITY BALL TO THE APPROPRIATE POSITION AND LOCK IT TIGHTLY	 16. CONNECT THE CONSOLE TO THE SINK CONSOLE INTERFACE	 WATER PURIFIER OUTLET BUTTON	 SCREEN DIGITAL DISPLAY OF OUTLET TEMPERATURE AND OUTLET TIME	 CONSOLE CONTROL SWITCH KNOB	 SOAP DISPENSER PRESS
INSTALLATION COMPLETION INSPECTION							
CHECK AND ENSURE THAT ALL CONNECTIONS ARE TIGHTENED, ENSURE THAT THE HANDWHEEL IS IN THE CLOSED POSITION, OPEN THE MAIN WATER SOURCE AND DRAINAGE SYSTEM, CHECK AND REPAIR ANY LEAKING INTERFACES							
CLEANING INSTRUCTIONS							
SUITABLE FOR ALL PROCESSED SURFACES: CLEAN THE COATING SURFACE WITH NEUTRAL SOAPY WATER, AND THEN THOROUGHLY DRY THE ENTIRE SURFACE WITH A CLEAN SOFT CLOTH. MANY CLEANING AGENTS, SUCH AS AMMONIA, DETERGENT, TOILET SOAP, ETC., CAN CAUSE DAMAGE TO THE SURFACE OF THE COATING. REMEMBER TO USE THEM. ABRASIVE CLEANING TOOLS OR CLEANING AGENTS SHOULD NOT BE APPLIED TO FAUCETS AND THEIR ACCESSORIES							

STOPCOCK
BEFORE INSTALLATION
<p>ALL INFORMATION IS COMPILED BASED ON THE LATEST PUBLISHED PRODUCT INFORMATION. THE COMPANY RESERVES THE RIGHT TO CHANGE PRODUCT CHARACTERISTICS, PACKAGING, OR AVAILABLE TYPES OF PRODUCTS AT ANY TIME WITHOUT NOTICE.</p> <p>THE MANUAL INCLUDES IMPORTANT INSTALLATION, MAINTENANCE, AND CLEANING INFORMATION. PLEASE PROVIDE THESE MATERIALS TO THE USER FOR READING</p> <p>PRECAUTIONS:</p> <p>1. IT IS NECESSARY TO THOROUGHLY FLUSH THE WATER SUPPLY PIPE TO REMOVE IMPURITIES FROM THE PIPELINE.</p> <p>IF INSTALLING A NEW WASHING BASIN, THE FAUCET CAN BE INSTALLED ON THE BASIN FIRST.</p> <p>3. SPRINKLER WORKING PRESSURE: 0.1MPA TO 0.5PA. WHEN THE WATER PRESSURE EXCEEDS 0.5MPA, A PRESSURE REDUCING VALVE MUST BE INSTALLED. THE MAXIMUM WORKING TEMPERATURE AND AMBIENT TEMPERATURE OF THE SHOWER: 60 °C. PLEASE PAY SPECIAL ATTENTION TO THE ARM TUBE CONNECTING THE SHOWER AND THE SHOWER BEING KEPT AWAY FROM THE HEATER, OTHERWISE IT MAY DAMAGE THE SHOWER AND ITS SEALING PARTS, AND EVEN CAUSE HARM TO THE USER</p>
INSTRUCTIONS FOR USE
TURN THE HANDWHEEL SWITCH TO THE LEFT AND ADJUST THE TEMPERATURE TO PRODUCE COLD WATER, MIXED WATER, AND HOT WATER; TURN TO THE RIGHT TO TURN OFF THE WATER OUTLET MAIN SWITCH. THE LEFT BUTTON CONTROLS THE WATER OUTLET METHOD.
INSTALLATION DIMENSIONS

STOPCOCK
INSTALLATION INSTRUCTION