

USING TIPS

Plug in the power first, then press the rocker switch on the wire to turn on/off.

TROUBLE SHOOTING

- 1.If your lamp does not work, please make sure that plug is firmly in and press the rocker switch to turn on.
- 2.If you have other questions, please feel free to contact us.

CUSTOMER SERVICE & WARRANTY


Thank you for your support and purchase of our products.
If you encounter any problem after receiving the goods or during the use of the products, please feel free to contact us on Wayfair.
We have a professional customer service team to serve you.
Your email will receive a reply within 24 hours after it is sent.

Here is the way to contact us:

- 1.Log in your account
- 2.My Account --> click "Help & Contact"
- 3.Choose the specific item you want to communicate with us
- 4.Send your message or email
- 5.You will receive our reply within 24 hours


Note: Our products have a two-year warranty.

If the product cannot be used normally within the warranty, please contact us,we will do our best to give you a satisfactory answer.

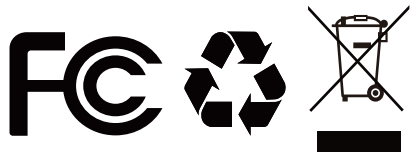


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

USER GUIDE

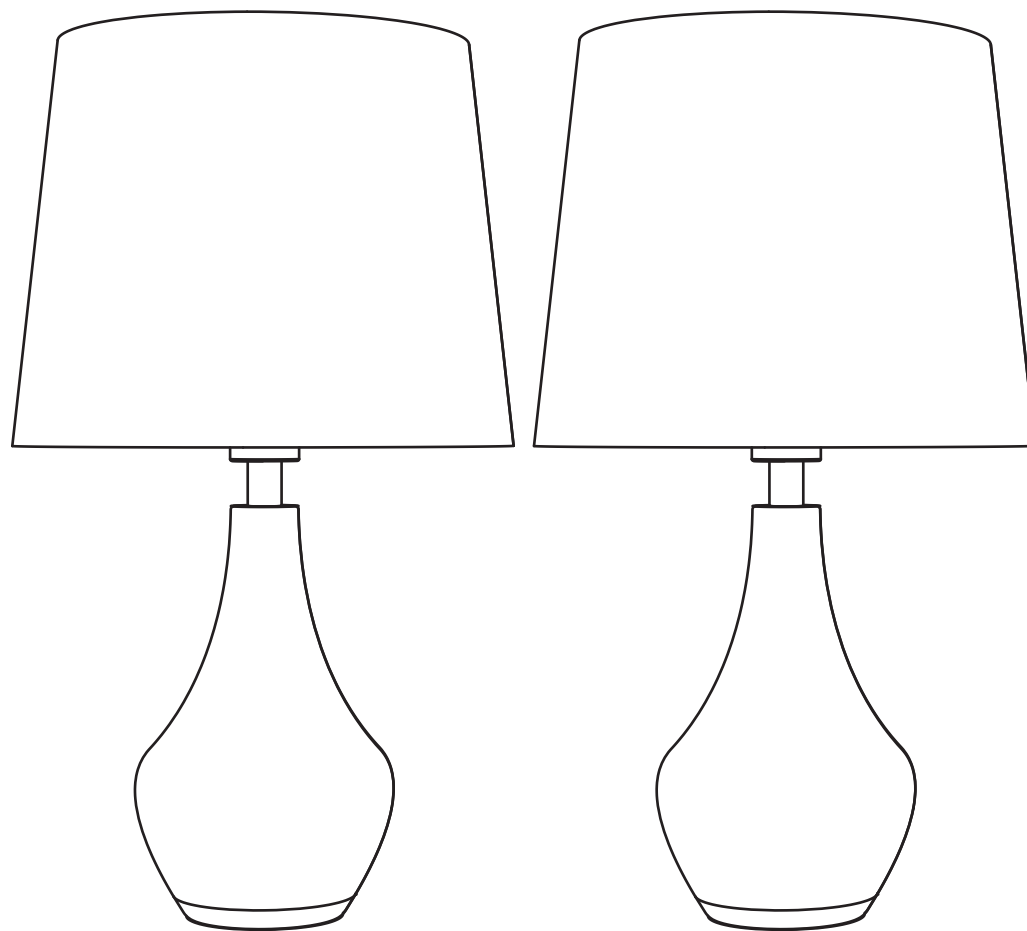


INSTALLATION DIAGRAM

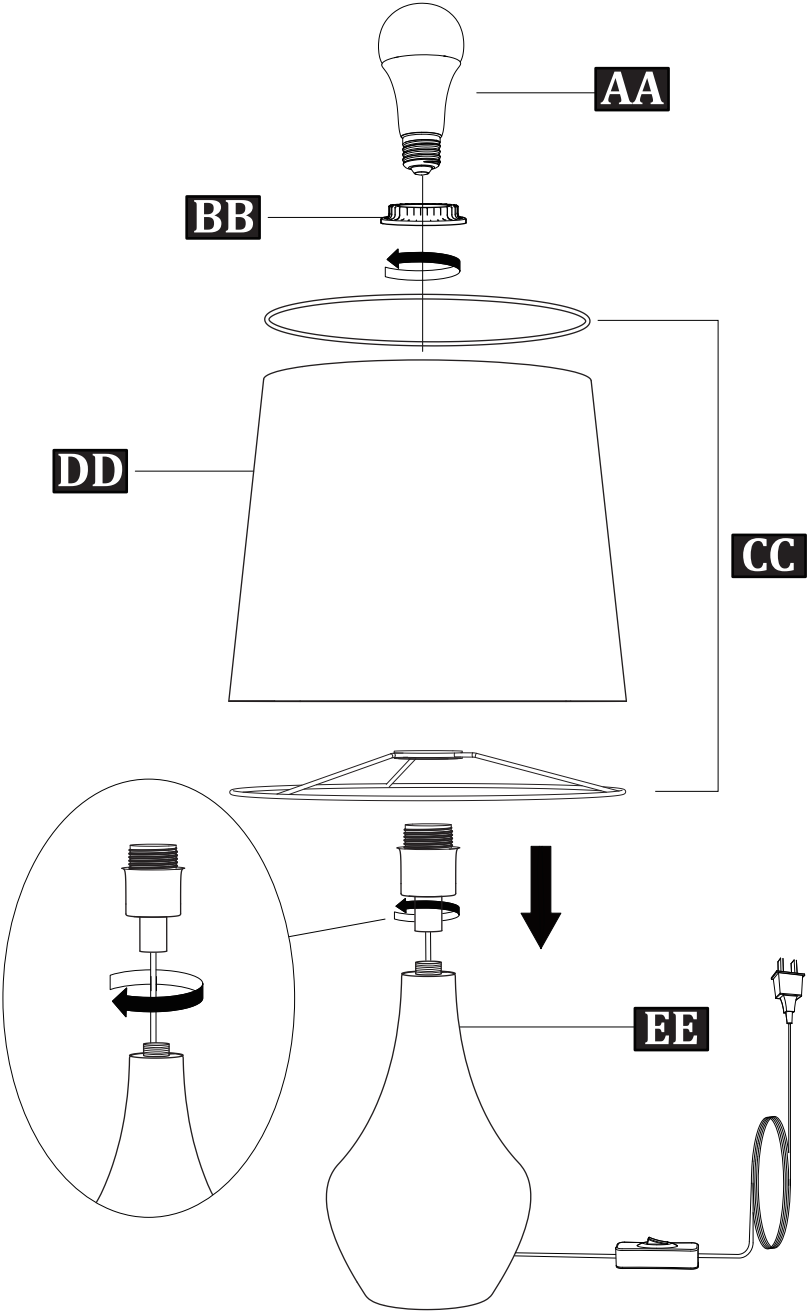

AA*2	BB*2	CC*2	DD*2	EE*2

EASY INSTALLATION

- STEP1** Fit the CC part in the DD part, Attach one edge of the velcro to another.
- STEP2** Follow the left picture, tighten the socket on the lamp base.
- STEP3** Fix the **lampshade** on the EE part and screw the BB part.
- STEP4** Install the AA part.

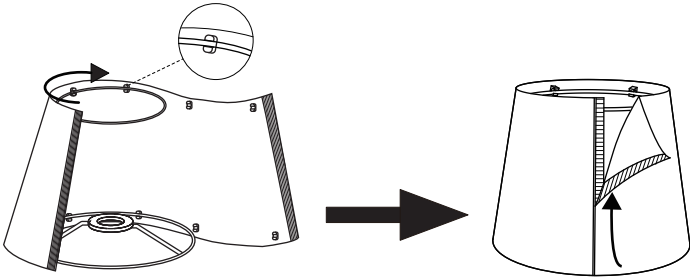

PRODUCT SPECIFICATIONS

Input:	110-120V~,60Hz
Bulb Wattage:	8W
Lampholder:	E26
Control Method:	Rocker Switch
Color Temperature:	3000K