

ENTERTAINMENT CONSOLE

Assembly Instruction


A. Components : Qty

- 1. Bun Feet : 4 Pcs
- 2. Center Leg : 2 Pcs

B. Hardware : Qty


- a. Allen Bolt : 4 Pcs
- b. Lock Washer : 4 Pcs
- c. Flat Washer : 4 Pcs
- d. Allen Key : 1 Pc

STEP - 1

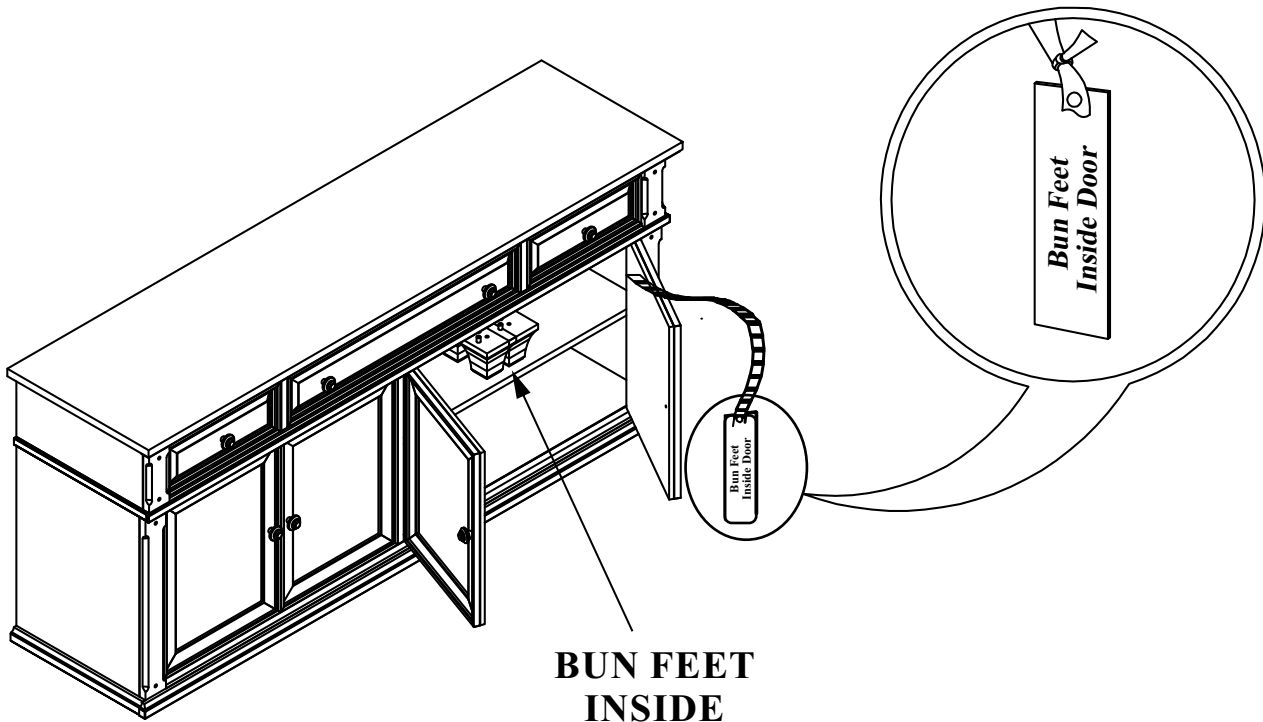

STEP - 2

MANDATORY

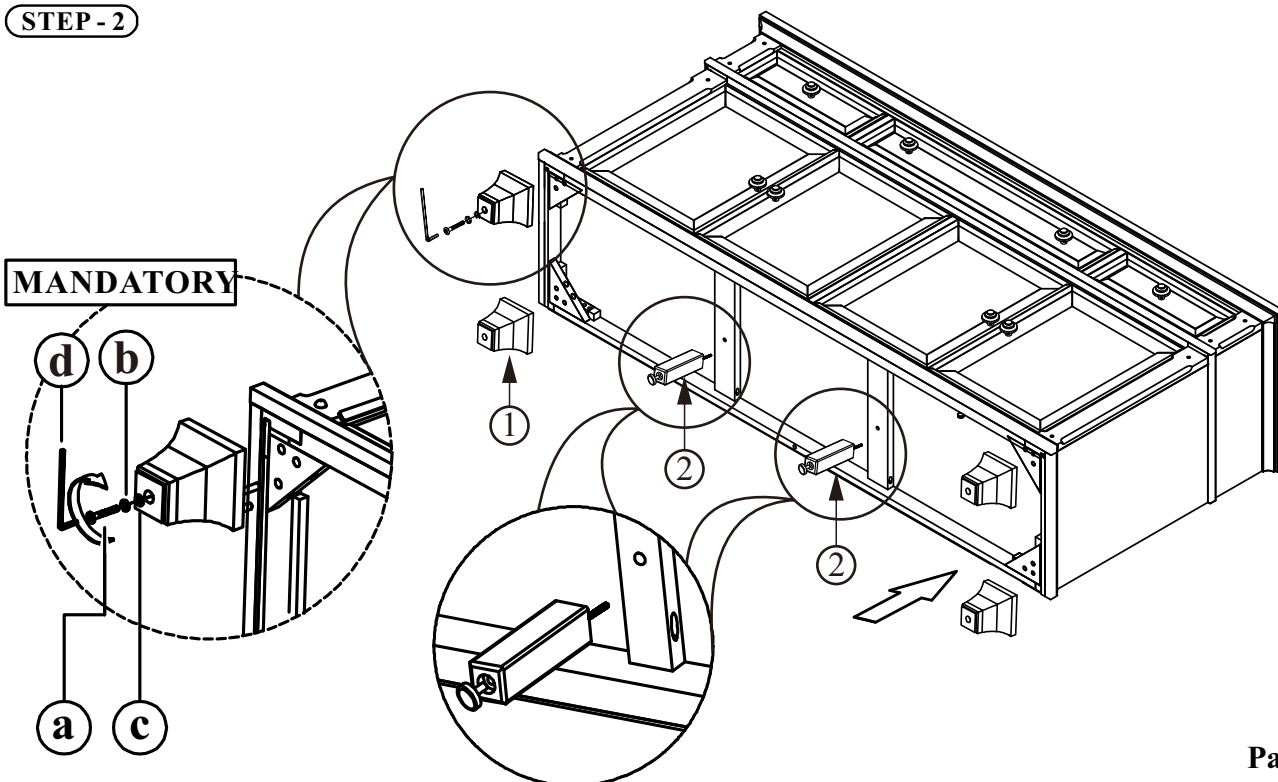


ENTERTAINMENT CONSOLE

Assembly Instruction

- A. Components :
1. Entertainment Console

Qty
1x

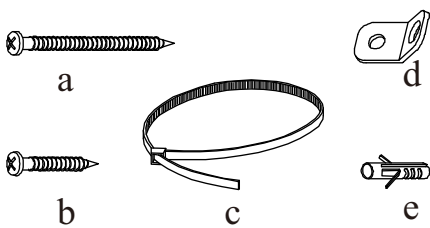

- B. Hardware :
- a. Screw ø8 x 2''


Qty
1 x
- b. Screw ø8 x 5/8''

Qty
1 x
- c. Restrain Strap

Qty
1 x
- d. Metal Tabs

Qty
2 x
- e. Plastic Wall Anchor

Qty
1 x

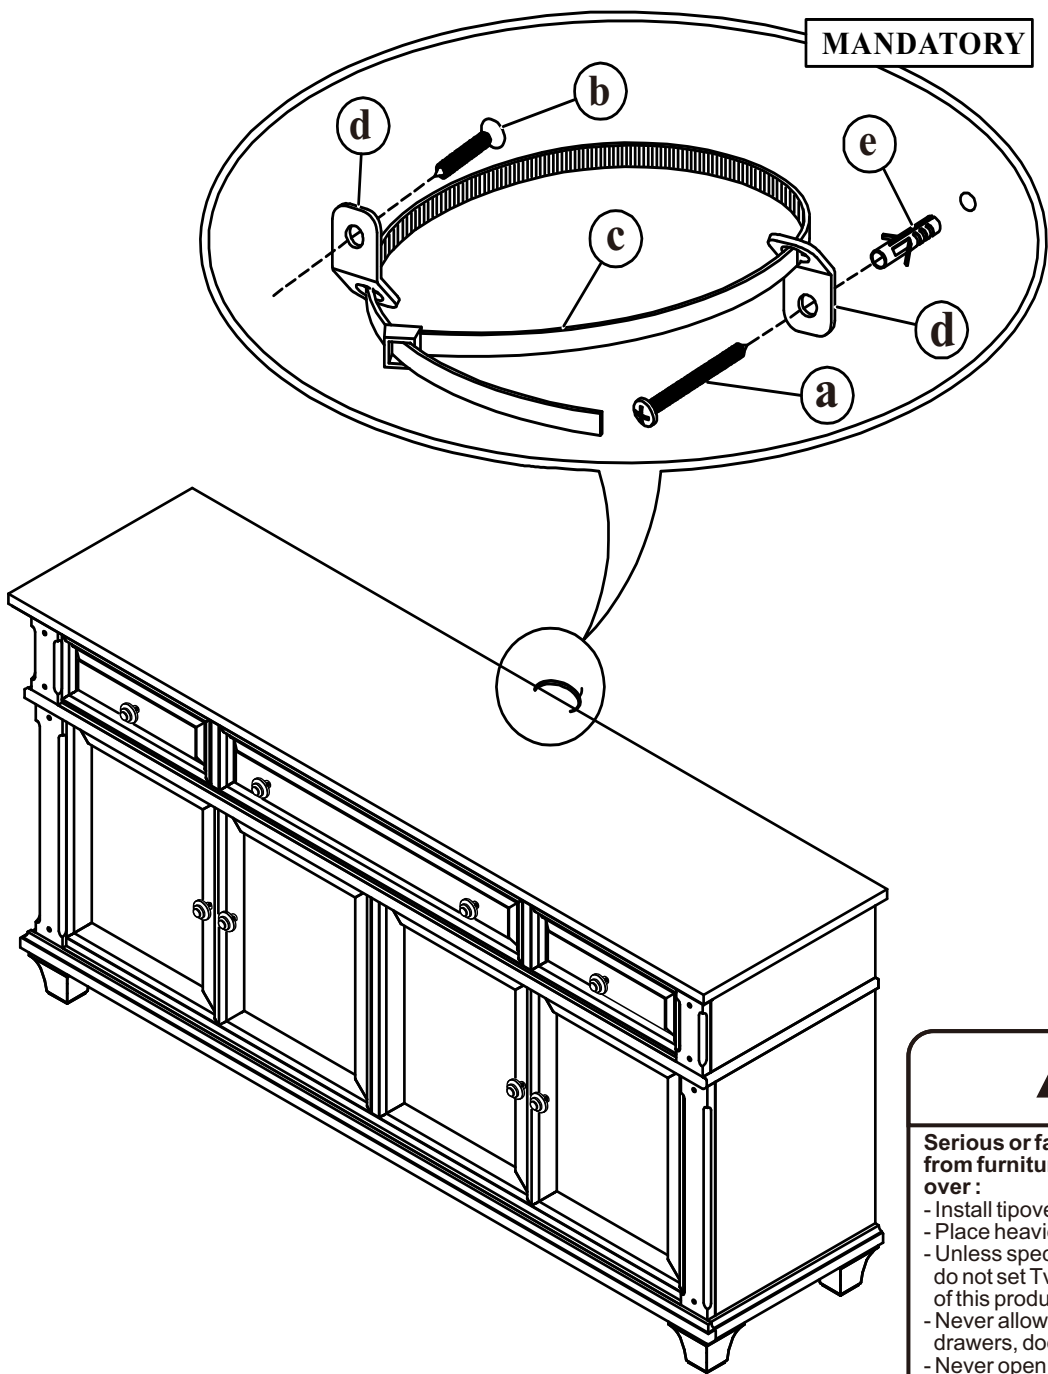

⚠ WARNING

Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tip-over :

- Install tipover restraint provided.
- Place heaviest items in the lowest drawers.
- Unless specifically designed to accommodate, do not set Tv's or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

(OR)

- Do not defeat or remove the drawer interlock system.

Use of tip over restraints may only reduce, but not eliminate the risk of tip-over.

This is a permanent label. Do not attempt to remove.