 
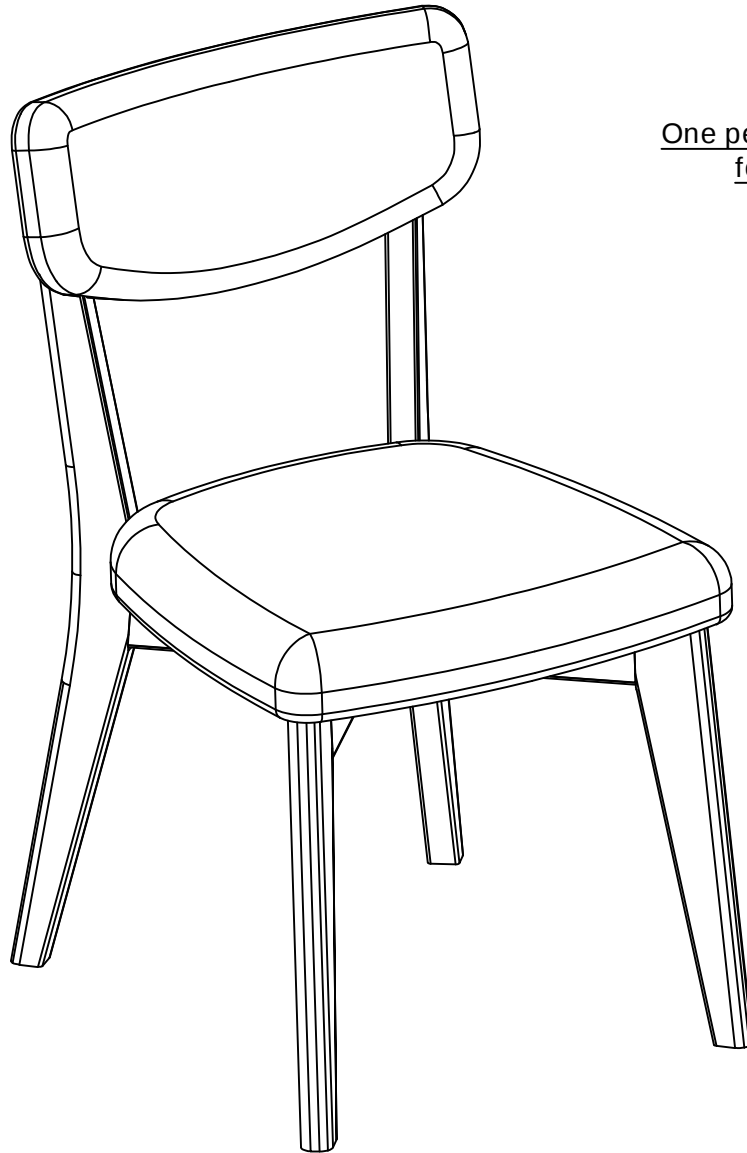 


ASSEMBLY INSTRUCTIONS

HICKORY DINING CHAIR UPHOLSTERED



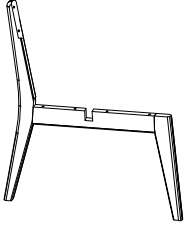 
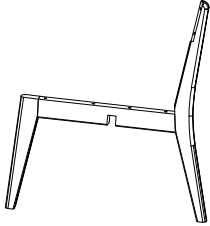 
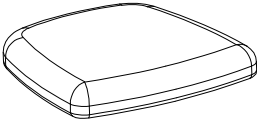 
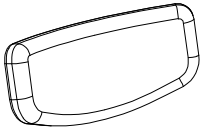 
 
 
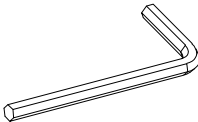 
One person is required
for assembly.




- READ THESE INSTRUCTIONS CAREFULLY.
- REFER TO THE HARDWARE AND FURNITURE PARTS LIST FOR GUIDANCE.
- BE SURE ALL PARTS ARE COMPLETE BEFORE ASSEMBLING.
- PLACE ALL WOODEN FURNITURE PARTS ON A CLEAN, FLAT, SOFT SURFACE TO PREVENT SCRATCHES.
- REFER TO THE STEPS PROVIDED IN THE ASSEMBLY GUIDE.

CAUTIONS:


1. DO NOT FULLY TIGHTEN THE NUTS OR BOLTS UNTIL ALL ARE IN PLACE.
2. TO PREVENT THREAD DAMAGE, ENSURE THAT NUTS OR BOLTS ARE NOT OVER-TIGHTENED.
3. KEEP HARDWARE OUT OF REACH OF CHILDREN.

PART LIST			
LABEL	PICTURE	DESCRIPTION	QTY
①		Left Leg Frame	1
②		Right Leg Frame	1
③		Seat Frame with Cushion	1
④		Backrest with Cushion	1
HARDWARE			
LABEL	PICTURE	DESCRIPTION	QTY
Ⓐ		Bolt (M6*70mm)	8
Ⓑ		Bolt (M6*35mm)	4
Ⓒ		Allen Wrench	1

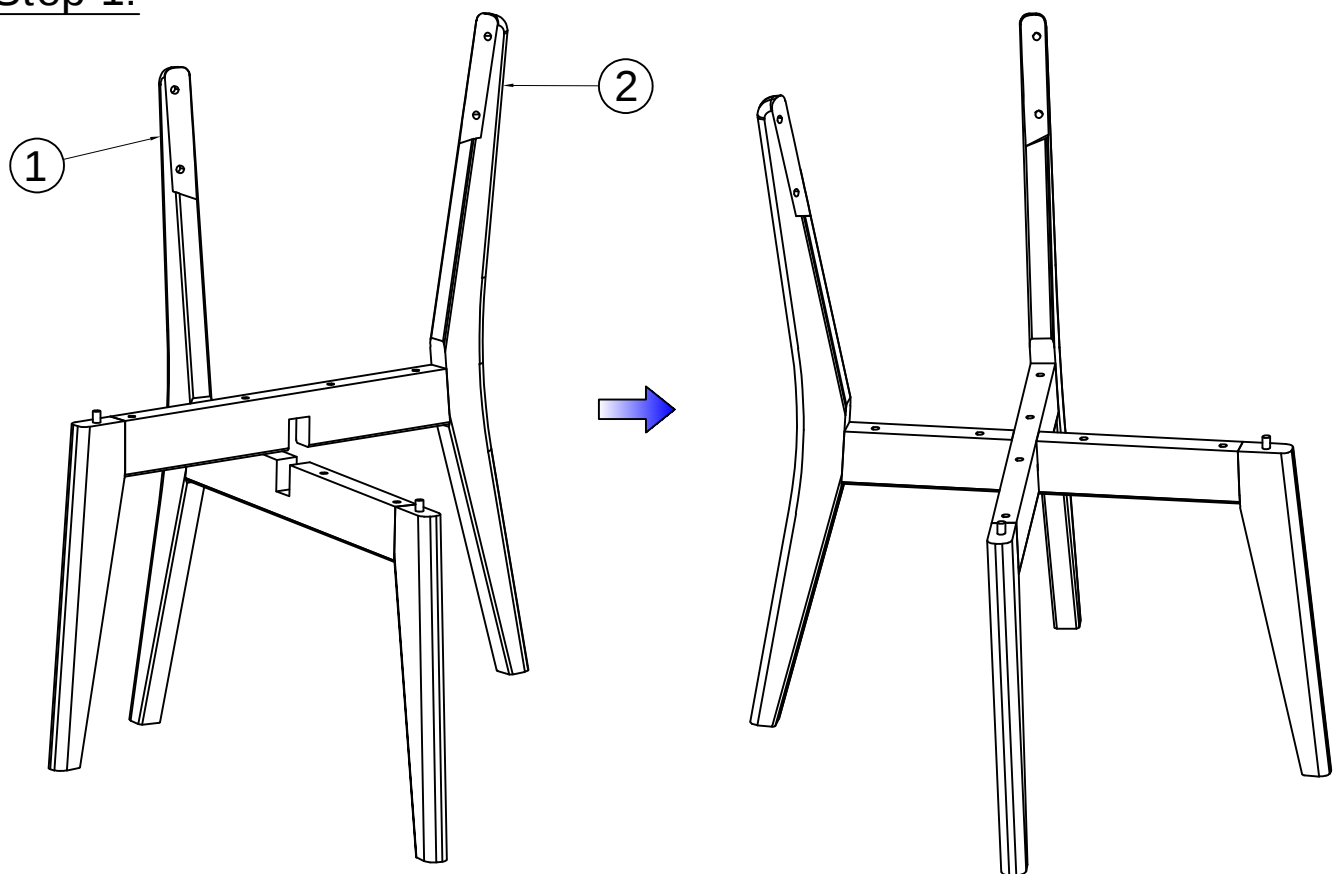 
Step 1:



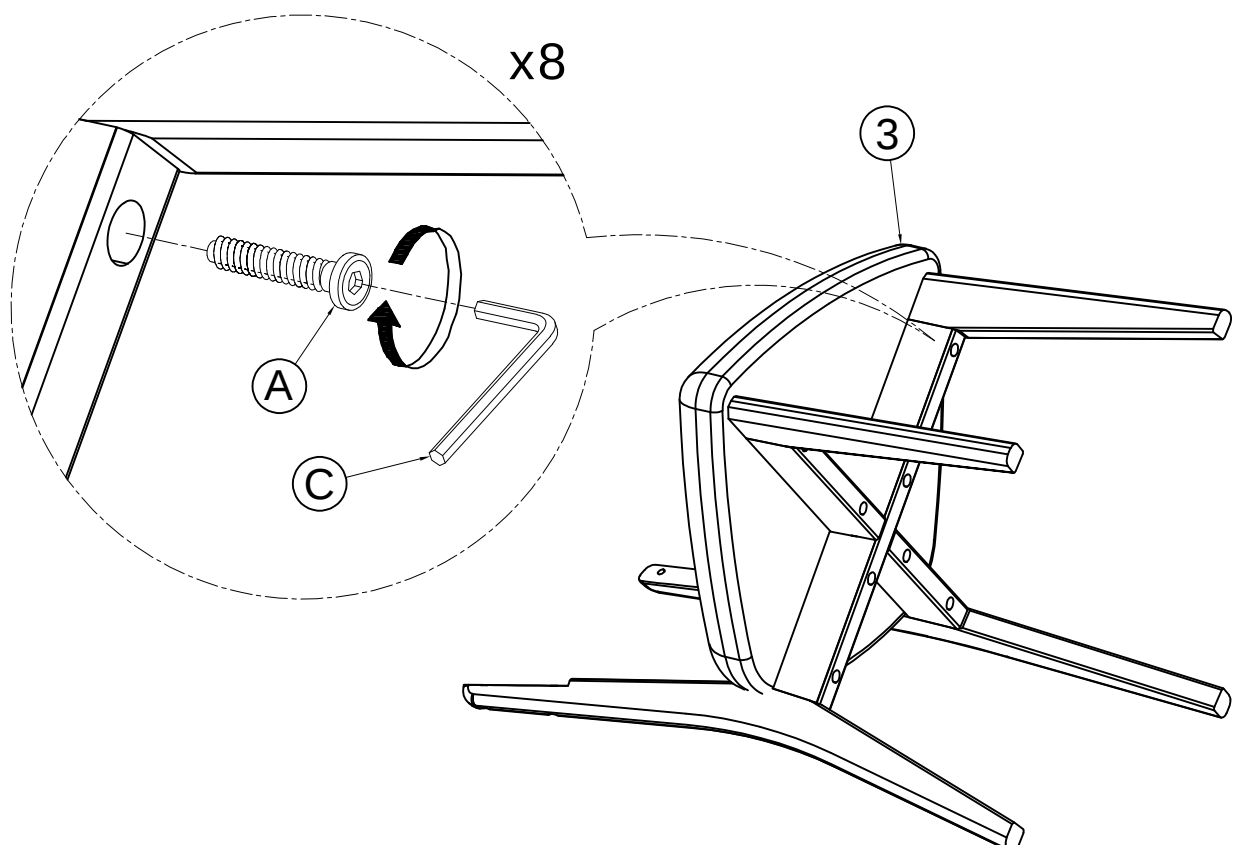 
Step 2:



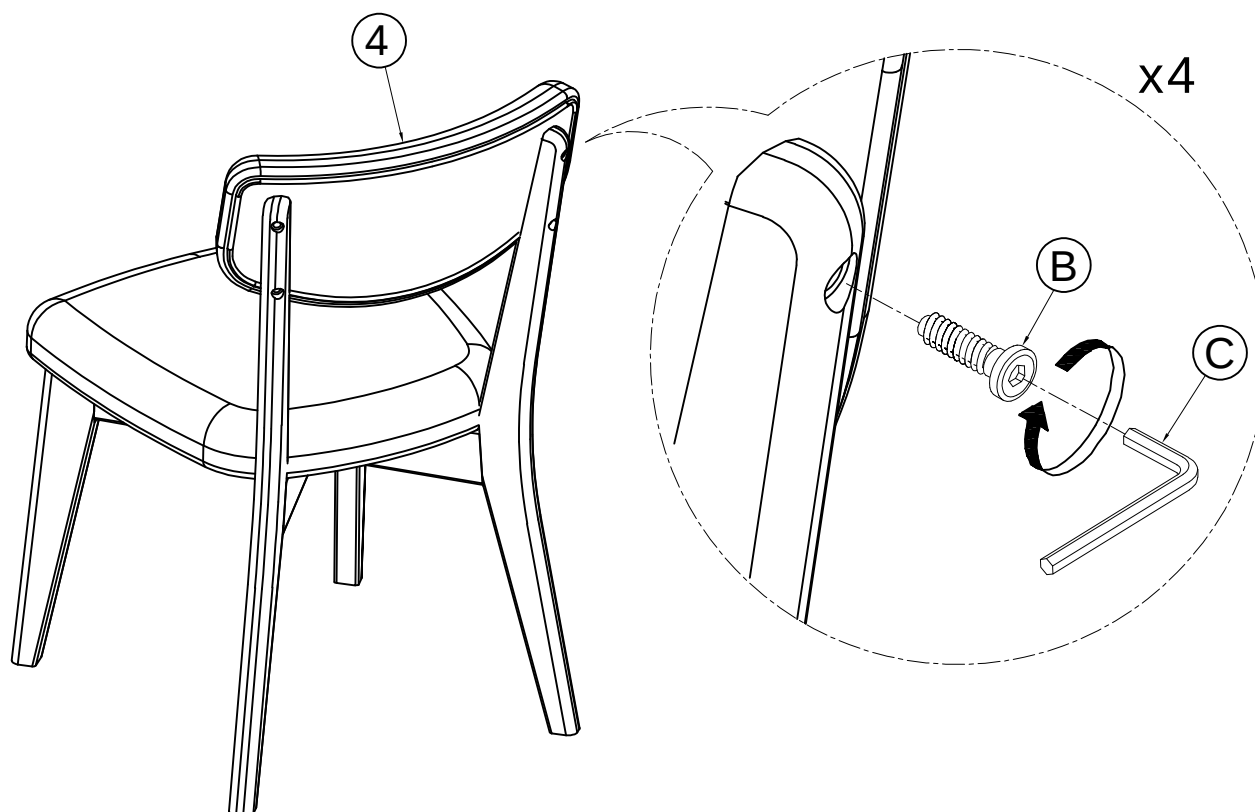 Step 3:



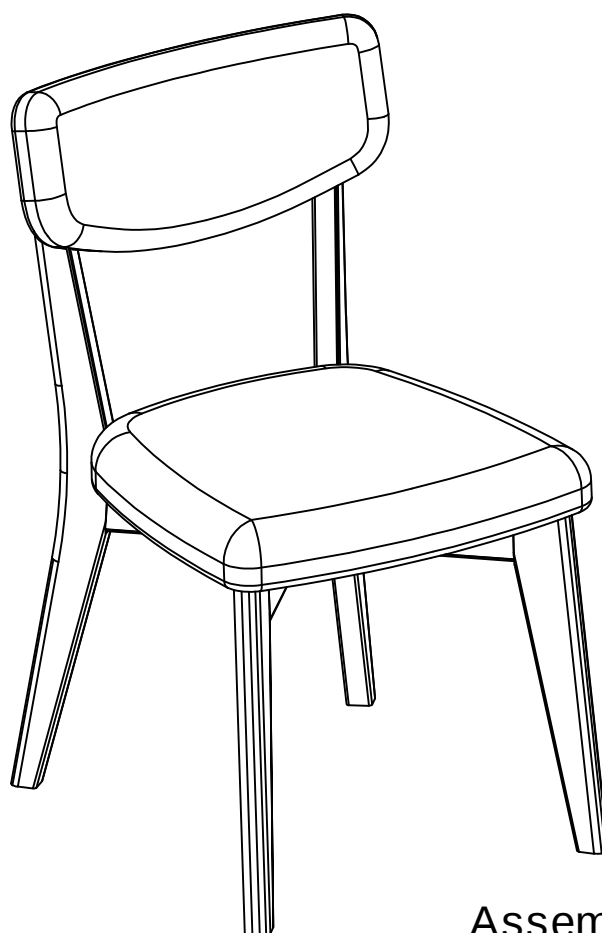 Step 4:



Assembly is complete.