 


ASSEMBLY INSTRUCTION

LFHM-076WH

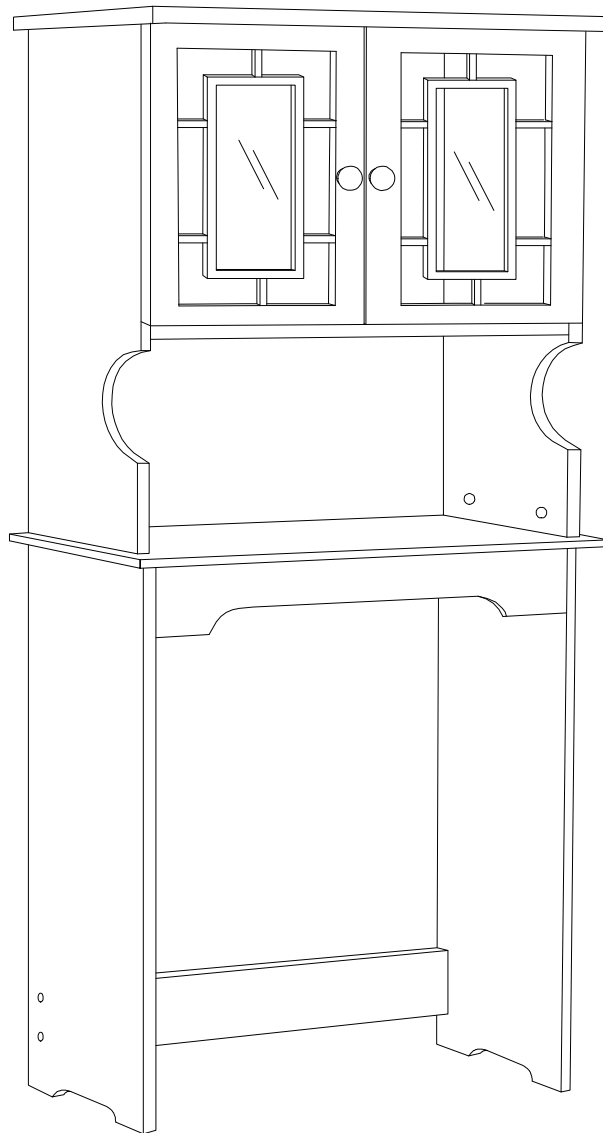


 
 


 
 

ATTENTION:

 
 
1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us,

we will check and offer you best solution soon.

 

1 x1 		2 x1 					
3 x1 		4 x1 					
5 x1 		6 x2 					
		7 x1 					
8 x1 		9 x1 					
10 x1 	11 x1 	12 x1 	13 x1 	14 x1 	15 x1 		
		16 x1 					
A x2 	B x4 	C x1 	D x2 	E x4 	F x20 	G x8 	H x6
I x12 	J x12 	K x2 	L x2 	M x22 	N x2 	O x2 	P x2
		4x20mm	3x14mm	3x12mm		4x35mm	4x40mm

 
STEP 1

	A x 2
	B x 4
	C x 1
	D x 2
	I x 12
	K x 2
	L x 2
	M x 10

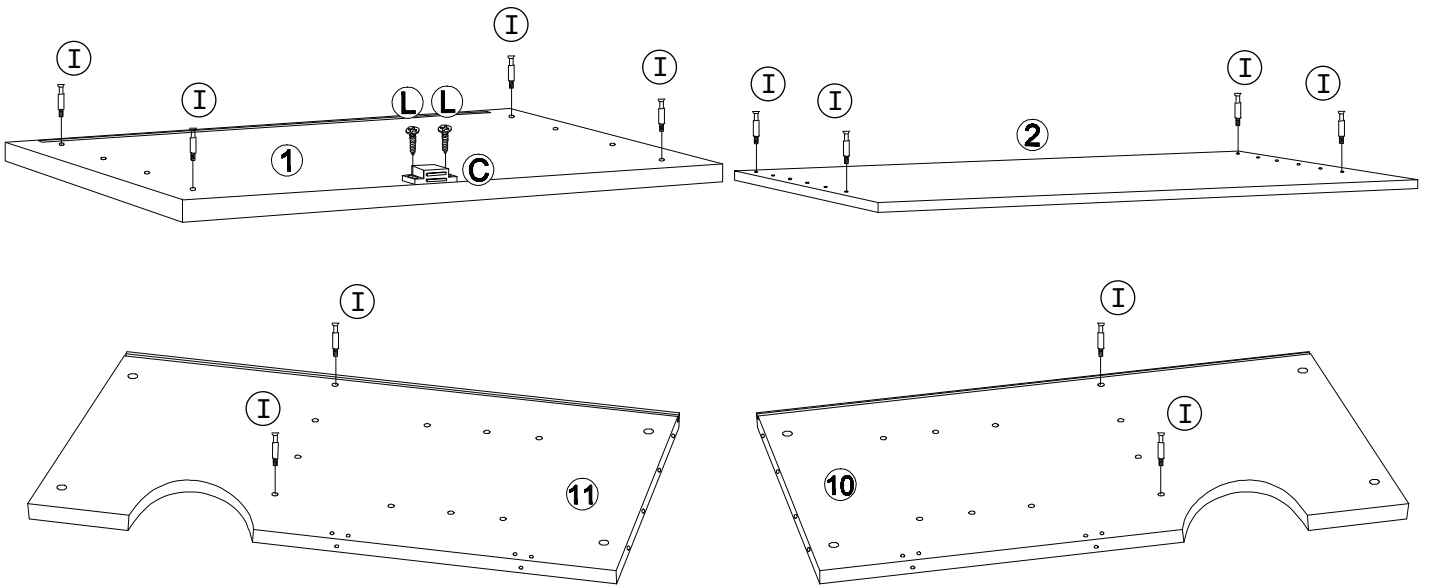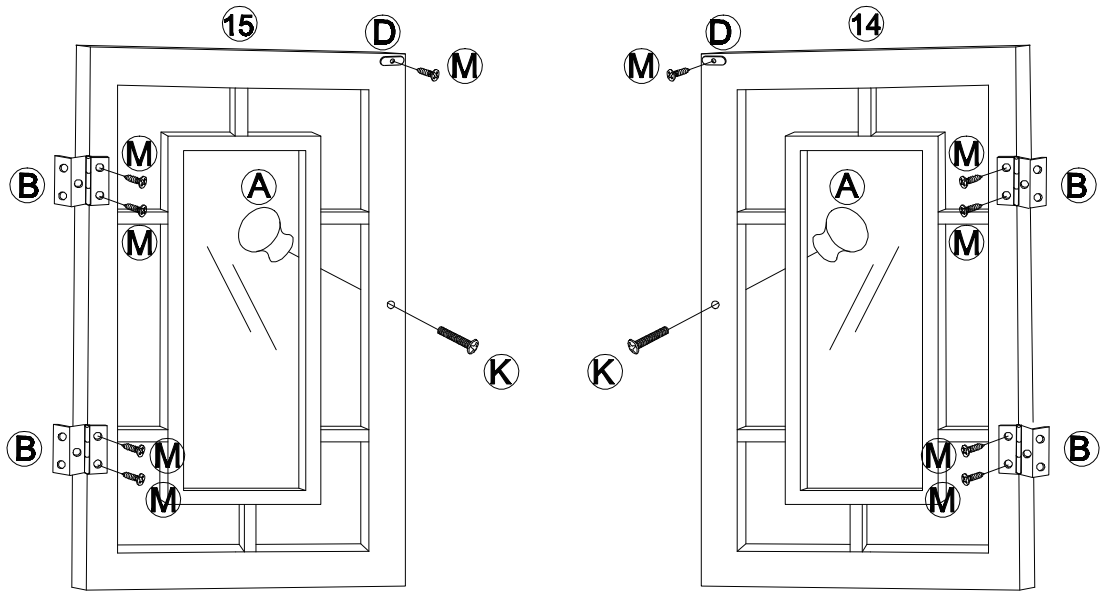 


STEP 2



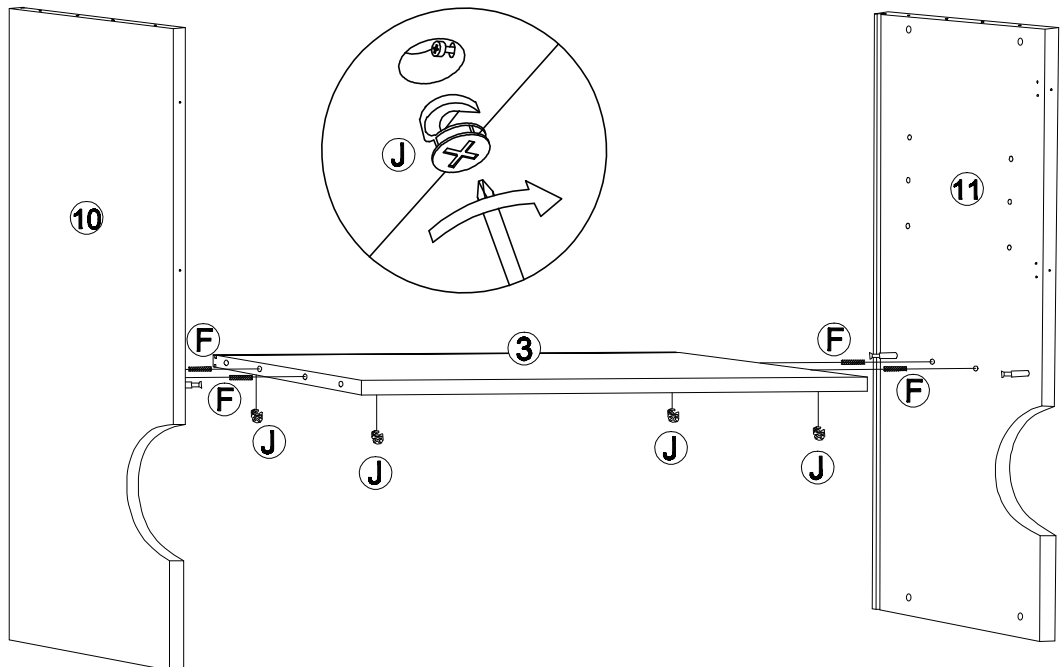	F x 4
	J x 4

 
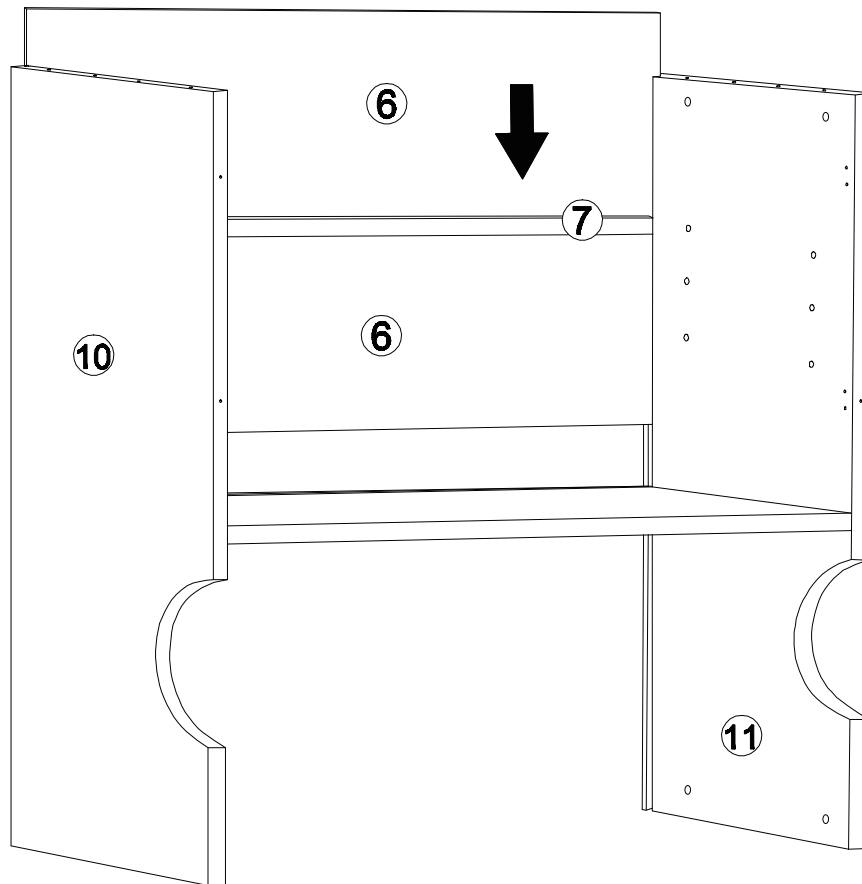 


STEP 3

 
 


STEP 4

 
 
	F x 4
	J x 4

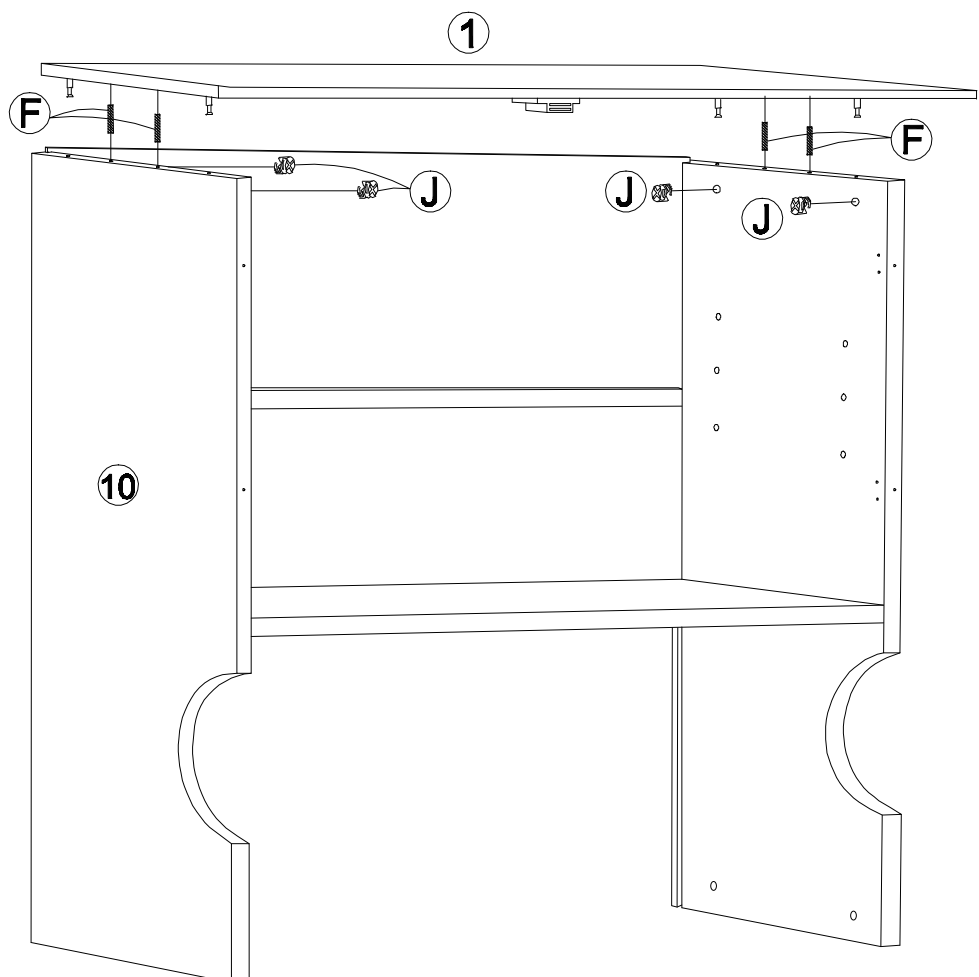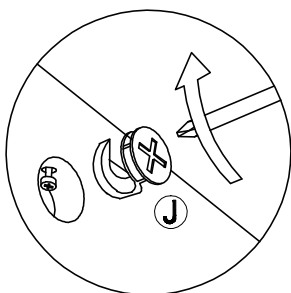

 
 
STEP 5

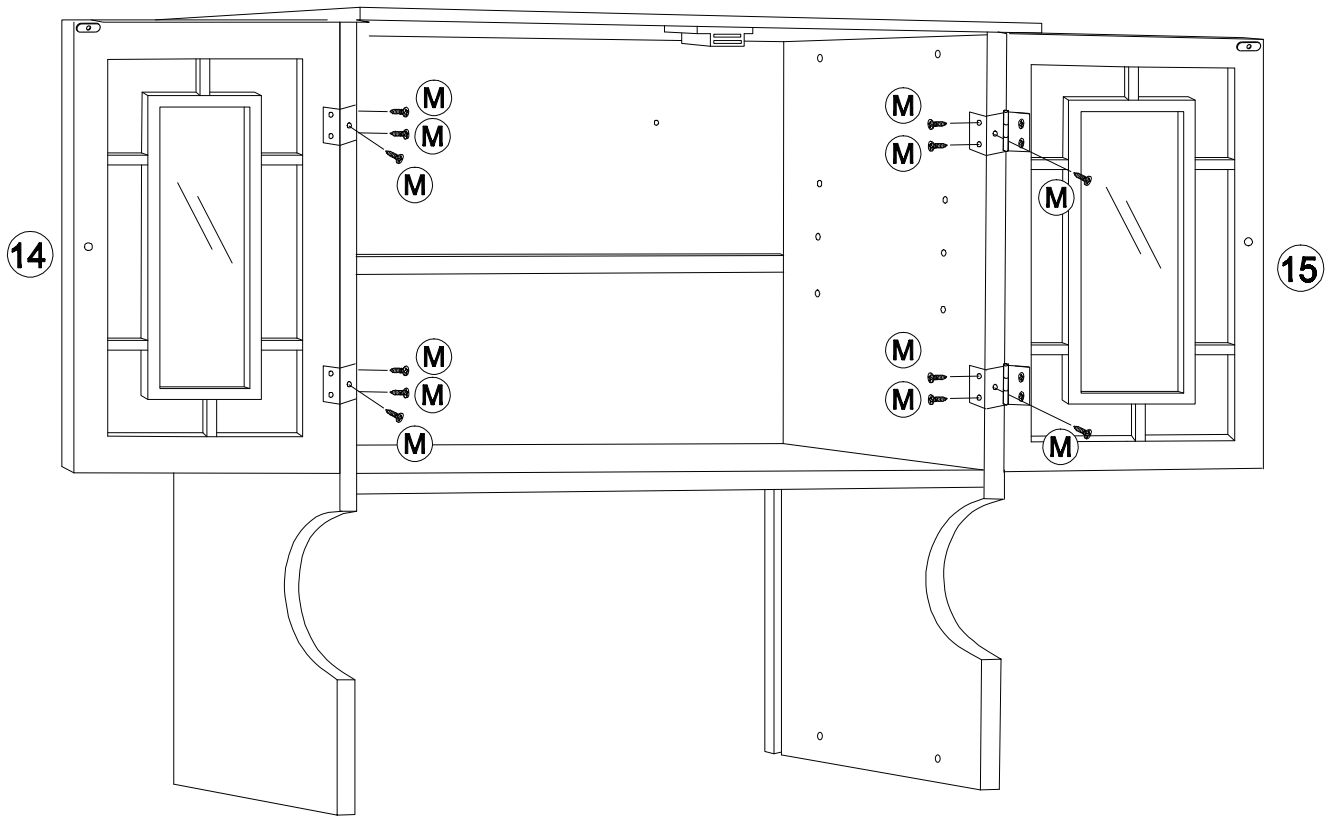

 
 
STEP 6

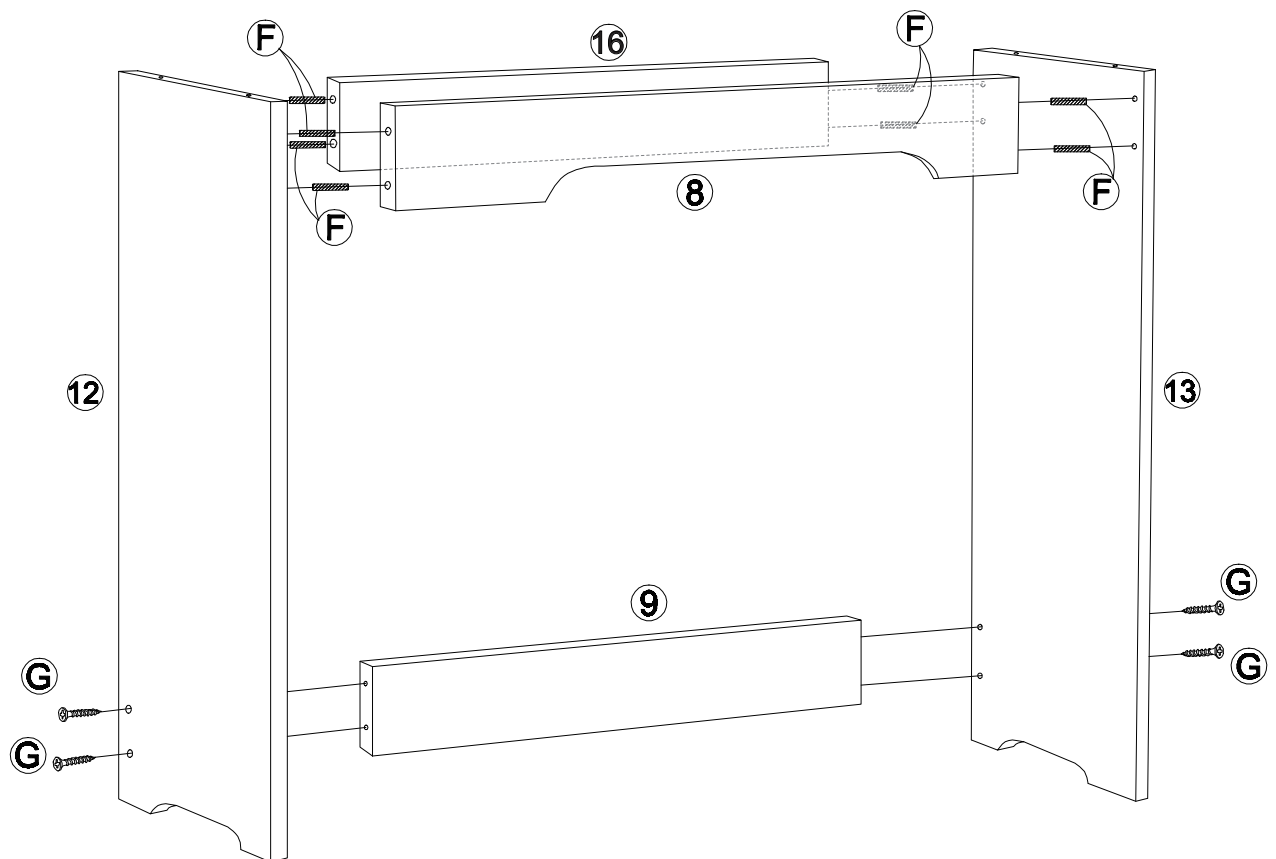

 
 
STEP 7

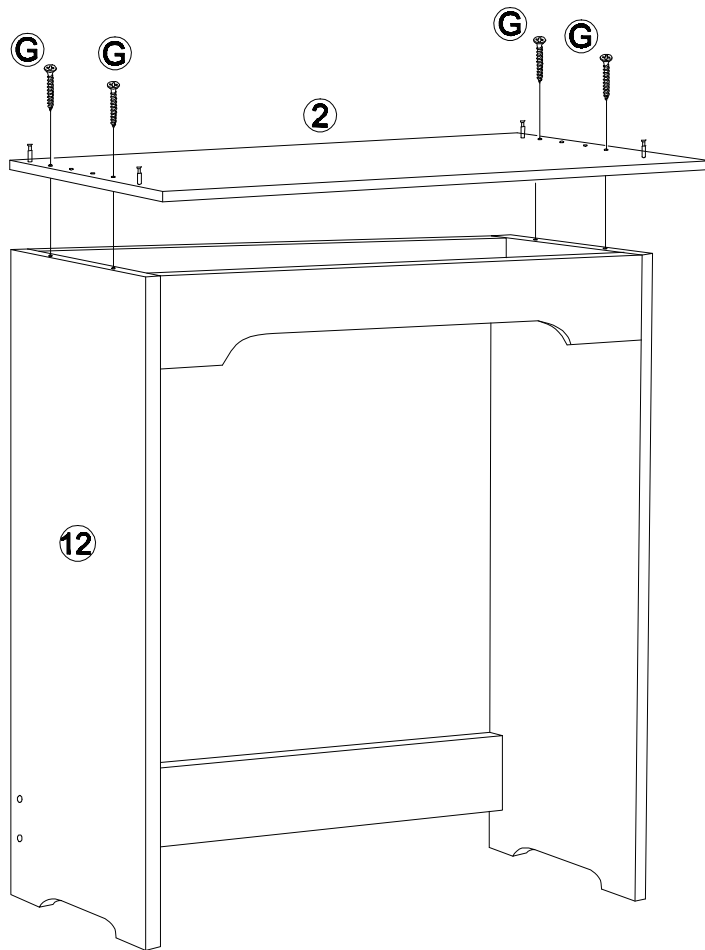

 
 
 
STEP 8

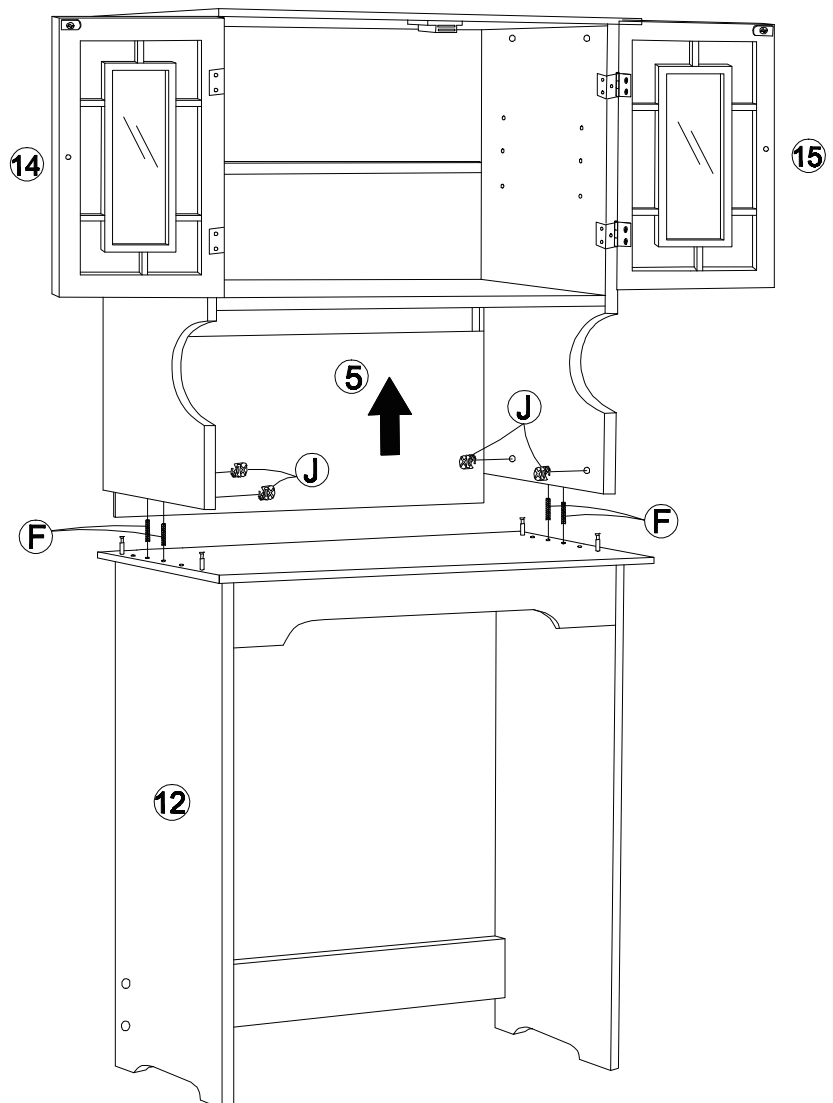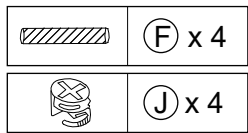

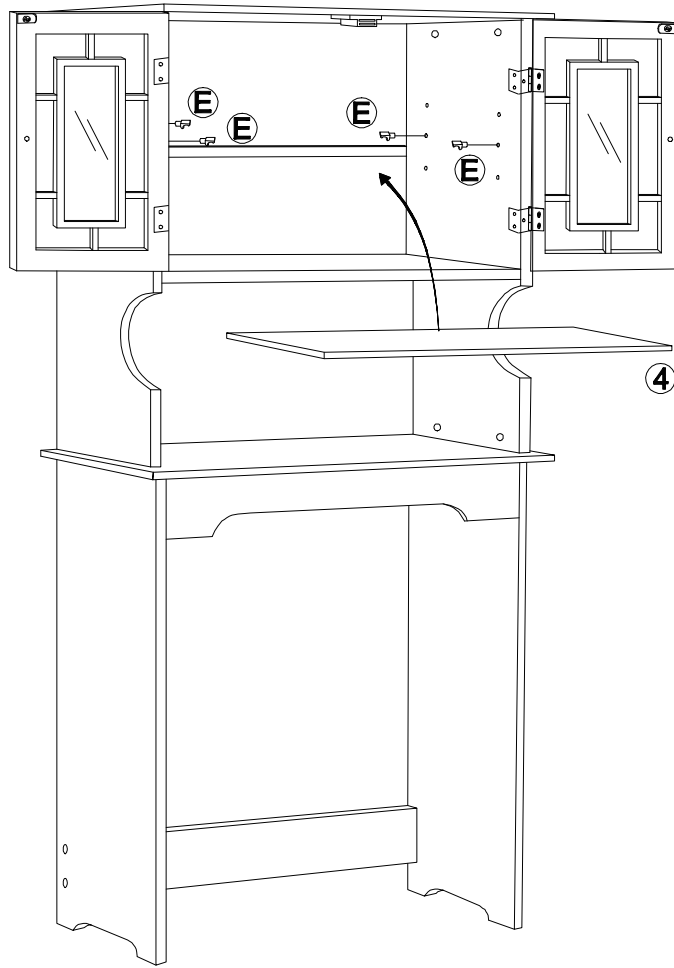


STEP 9

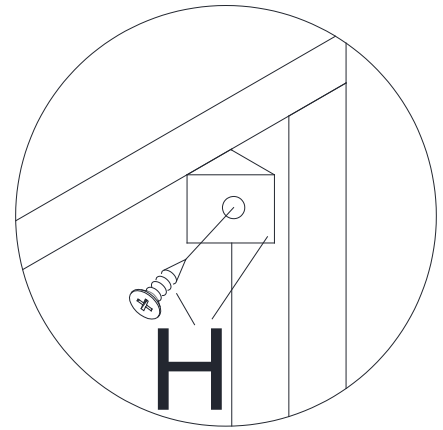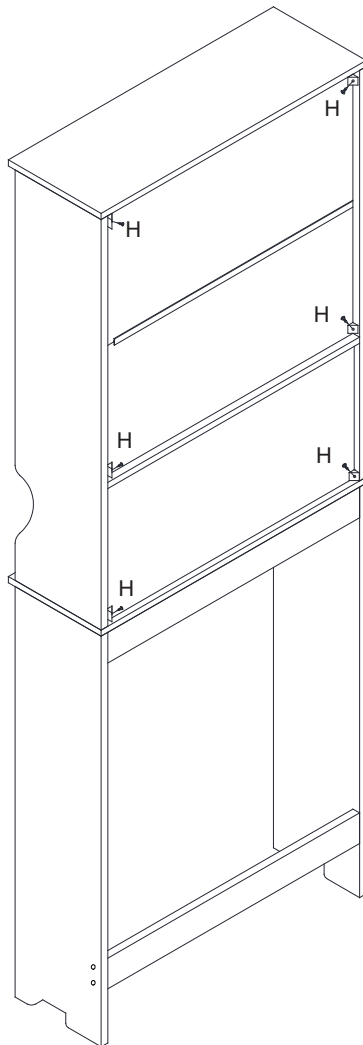

STEP 10



STEP 11

	N x 2
	O x 2
	P x 2

