 


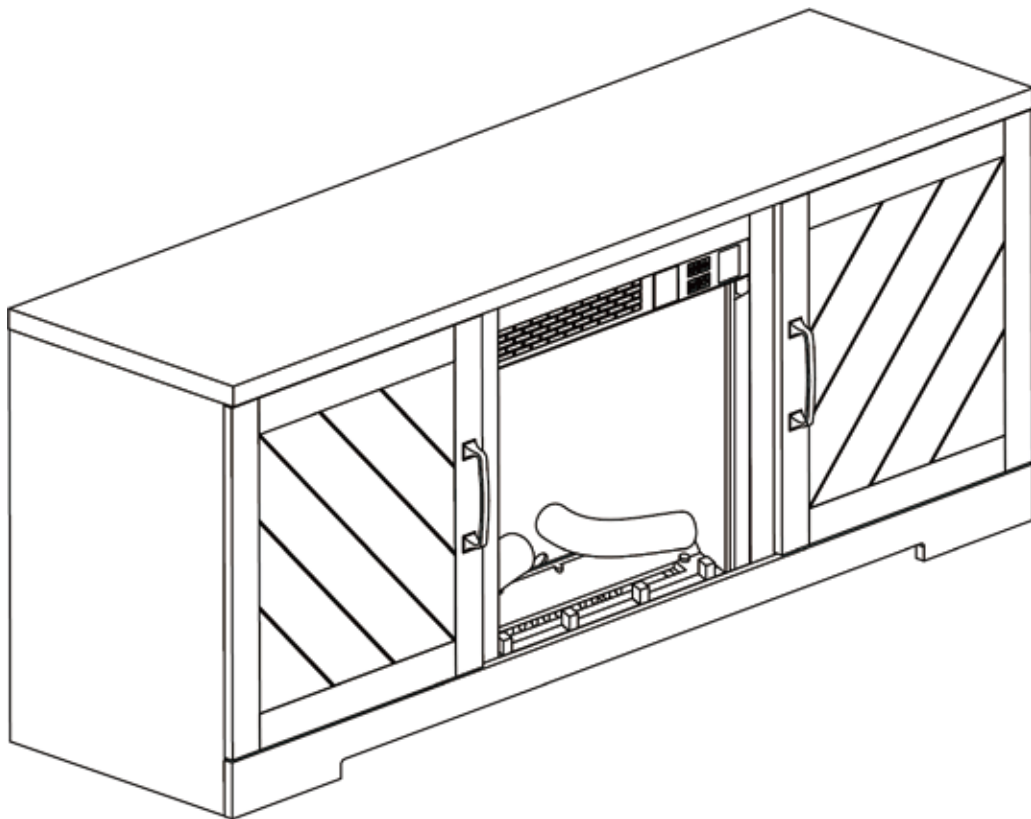


Instruction Manual

Read Before Assembly

The instruction booklet contains **IMPORTANT** safety information. Please read it in full and keep it for future reference.



 WARNING!

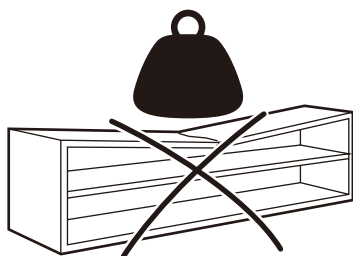



- Only place items that is within the recommended size and weight limit of the furniture.
- Items placed onto the furniture must be resting on a support surface without hanging over the edges.



- Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and / or injuries.



  CAUTION!

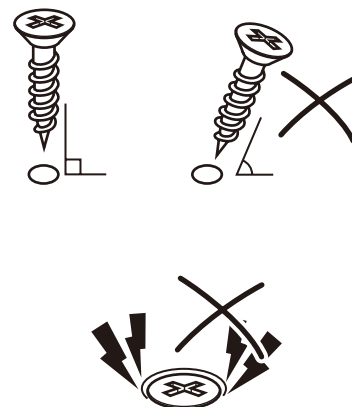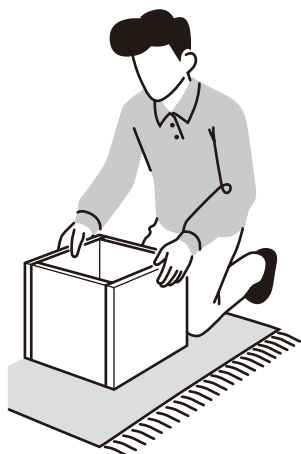

- Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.
- When assembling the furniture, keep pets and children away from the assembly area.
- Ensure the product is fully assembled before use. If you are missing any hardware or parts, do not use it until you have restored the missing parts.
- This furniture requires 2 people for assembly.
- Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.
- There are small components used in the construction of the furnitures. Loose items, plastic bags, and packaging films should be kept away from pets or children to avoid choking hazard or suffocations.
- Read this instruction manual prior to assembly and familiarize yourself with the various steps.
- Install all hardware perpendicular to the opening unless otherwise specified.
- Hand tight all hardware and careful not to over-tighten to avoid damaging the product.

Assembly Symbols



- Follow sequential order.



- Build specified number of parts.



- Flip part as indicated.



- Rotate part as indicated.



- Choose your own assembly options.



- Pay attention to the part orientation.



- Leave bolts or screws partially tighten.



- Fully tighten bolts or screws.



- Level the furniture on the ground.

 


Estimated Time for Assembly


120 mins




Weight Capacity Limitations are as Follows:

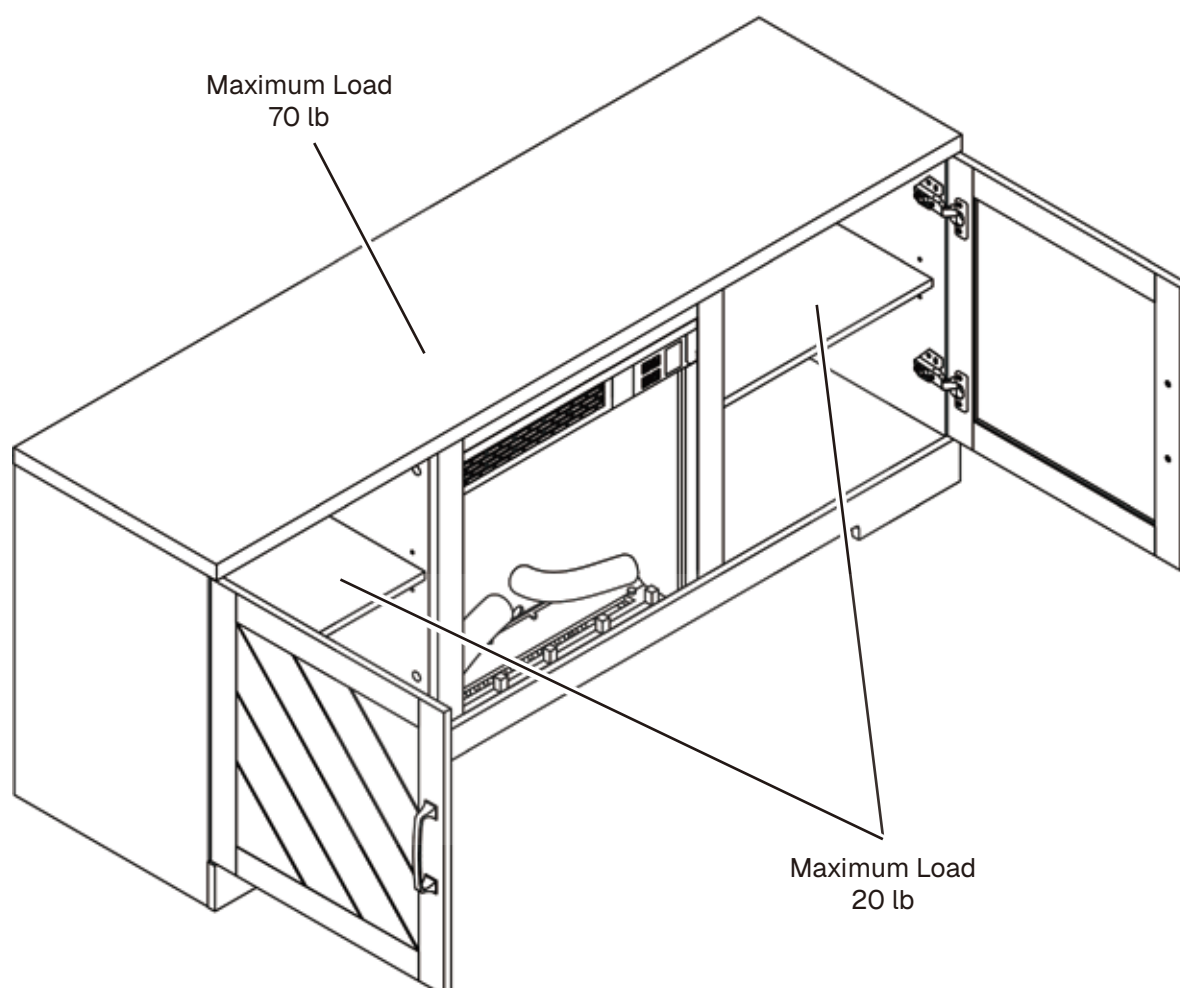

Tools Needed

 


- Philips Screwdriver

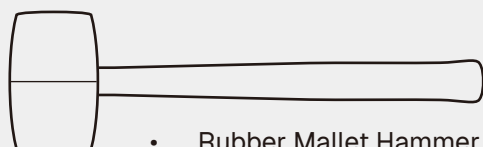 

- Rubber Mallet Hammer

 
Package Contents

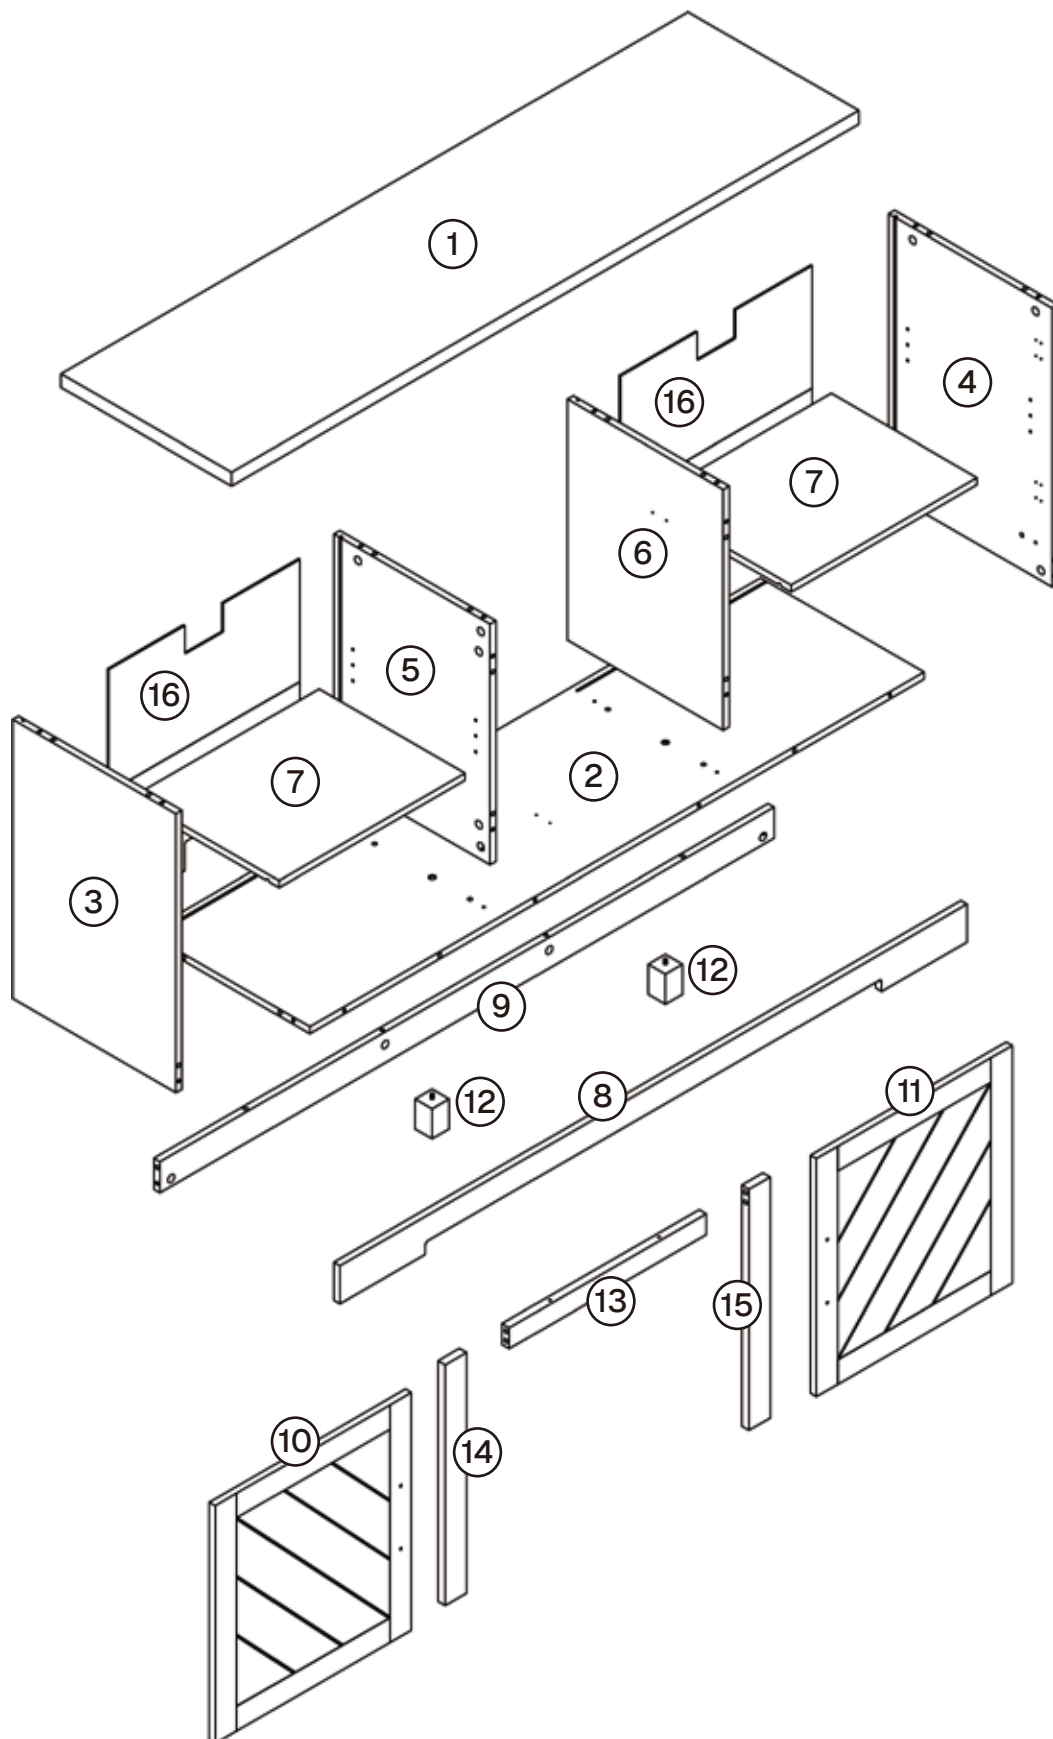

Package Contents



CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Left Lateral Panel	1
4	Right Lateral Panel	1
5	Left Medial Panel	1
6	Right Medial Panel	1
7	Storage Shelf Panel	2
8	Front Base Strip	1
9	Rear Base Strip	1
10	Left Carbinet Door	1
11	Right Carbinet Door	1
12	Support Legs	2
13	Top Surround Panel	1
14	Left Surround Panel	1
15	Right Surround Panel	1
16	Back Panel	2

 Package Contents

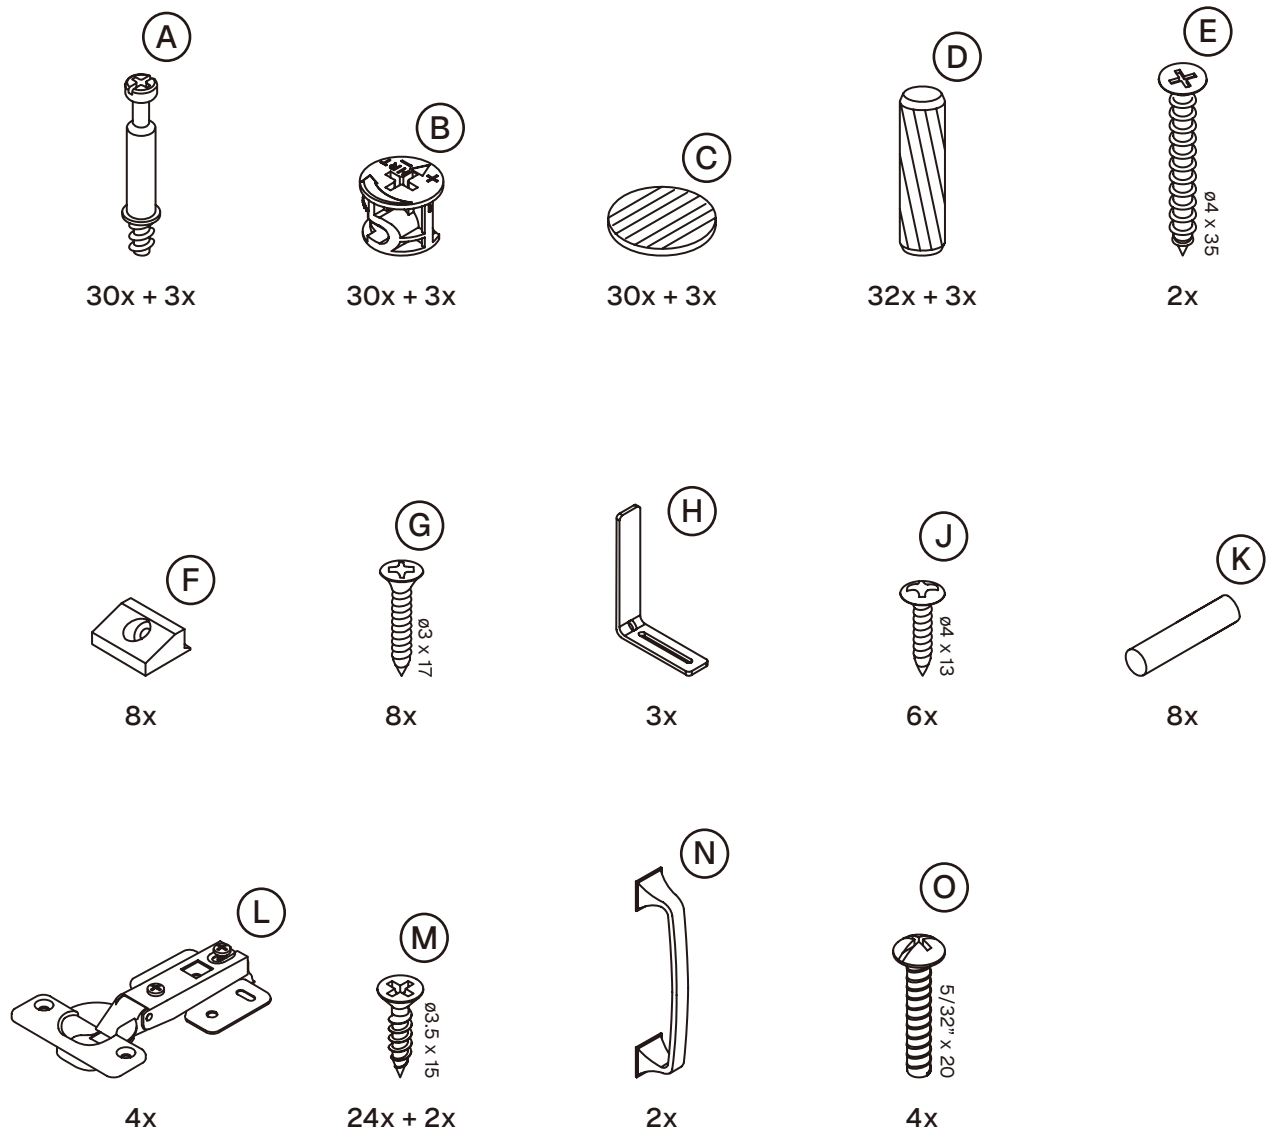



01

  Bottom panel

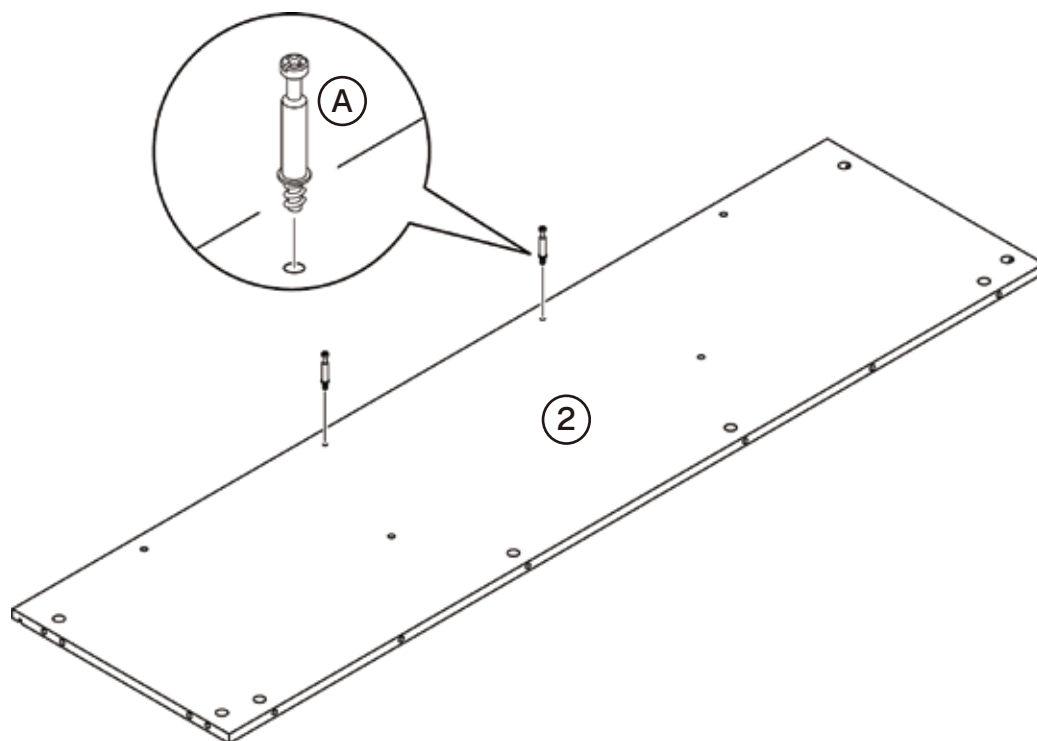

02

  Bottom panel and rear base strip

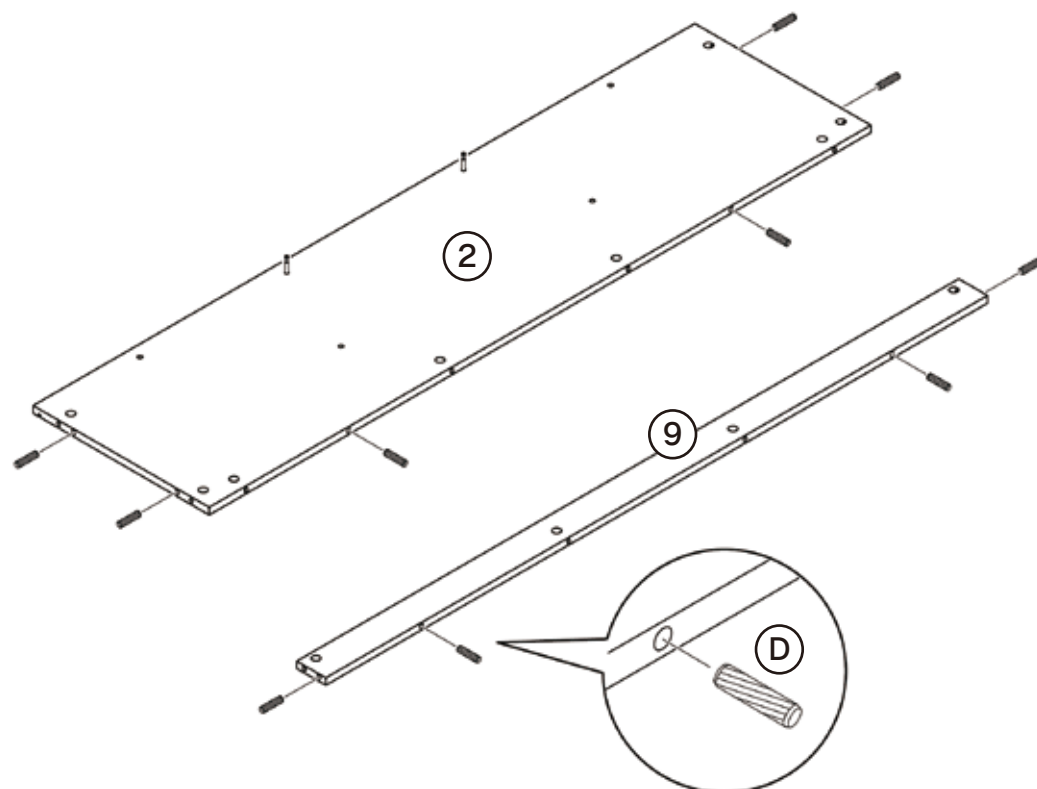


03 Attaching rear base strip



B 2x



 
C 2x

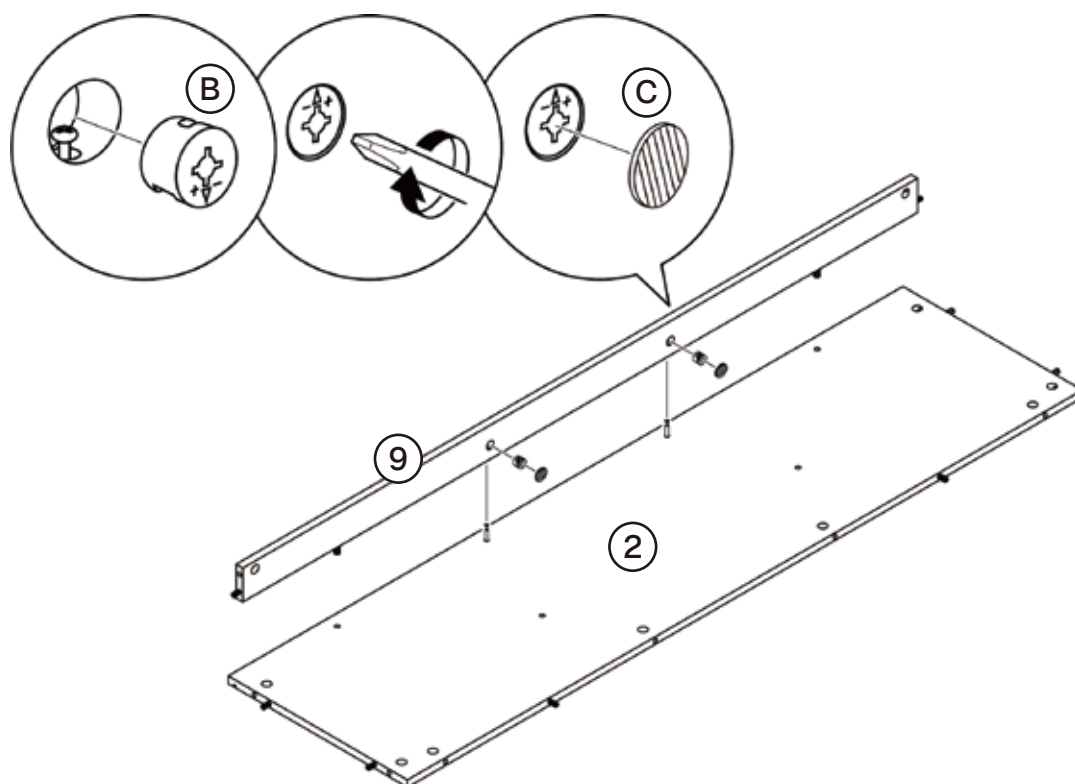

04 Lateral panels



 
A 6x

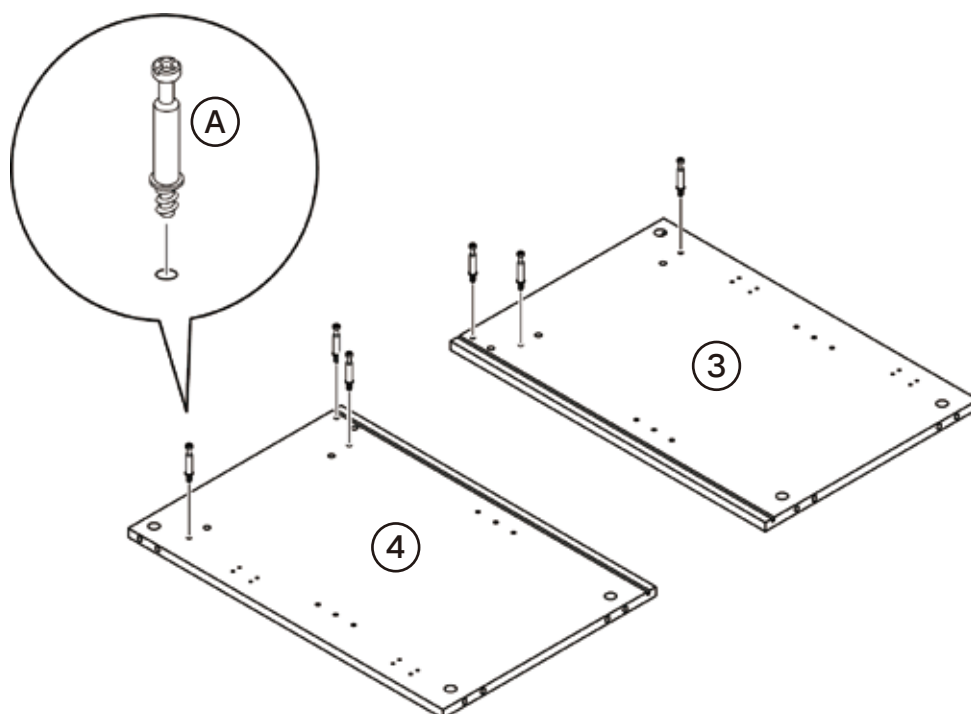

05 Lateral panels



 D 6x

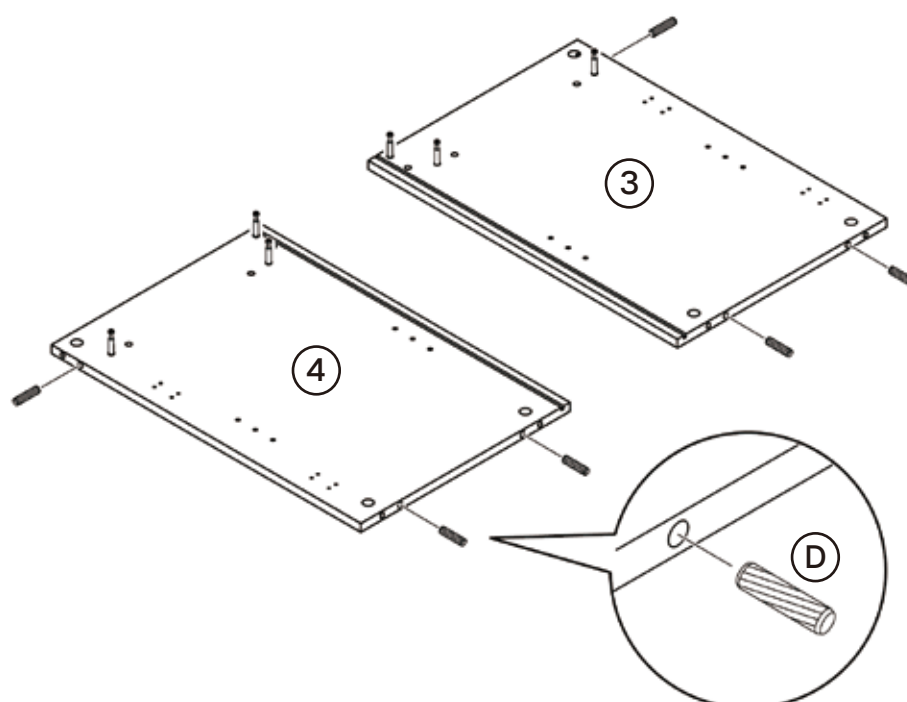


06 Attaching lateral panels to bottom panel



B 6x



 
C 6x

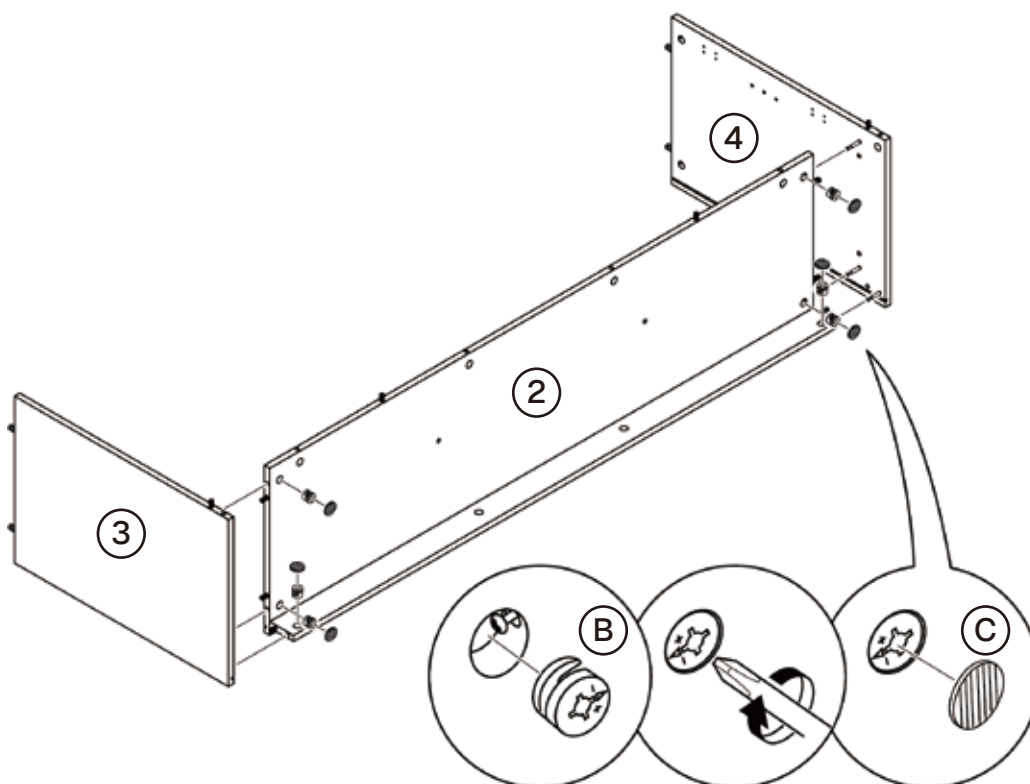

07 Front base strip



 A 6x

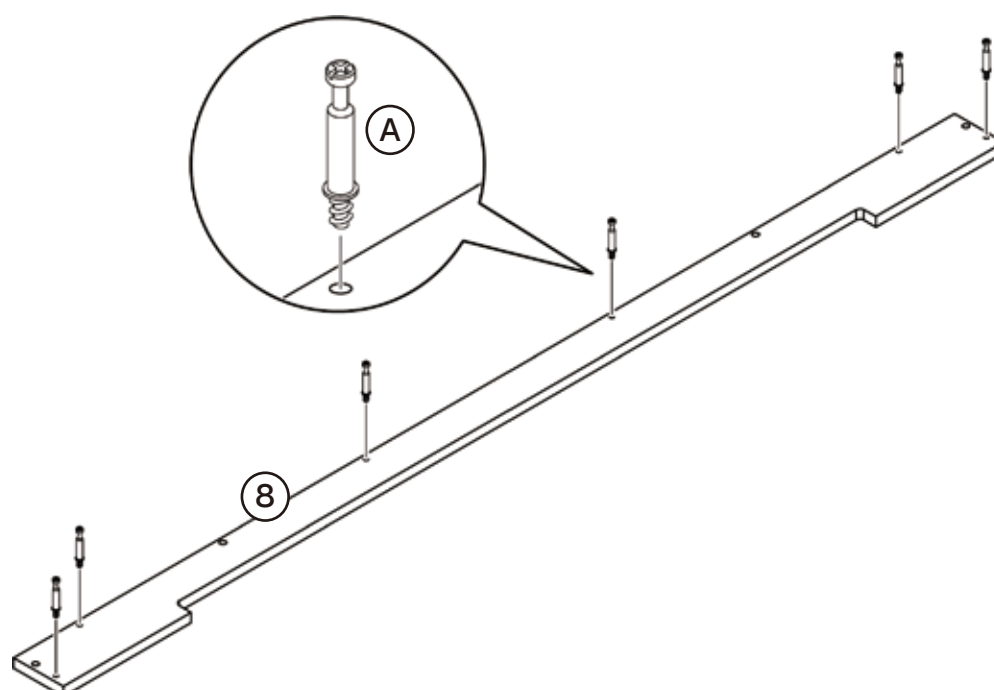


08 Attaching front base strip




B 6x



 C 6x

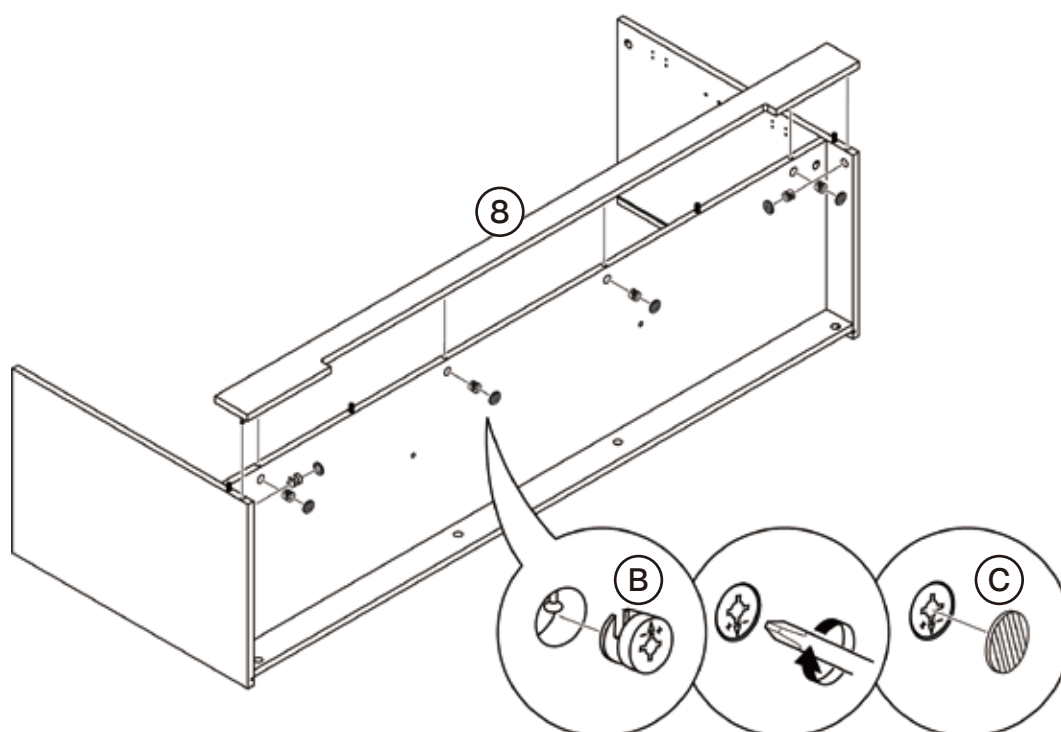


09 Attaching support legs

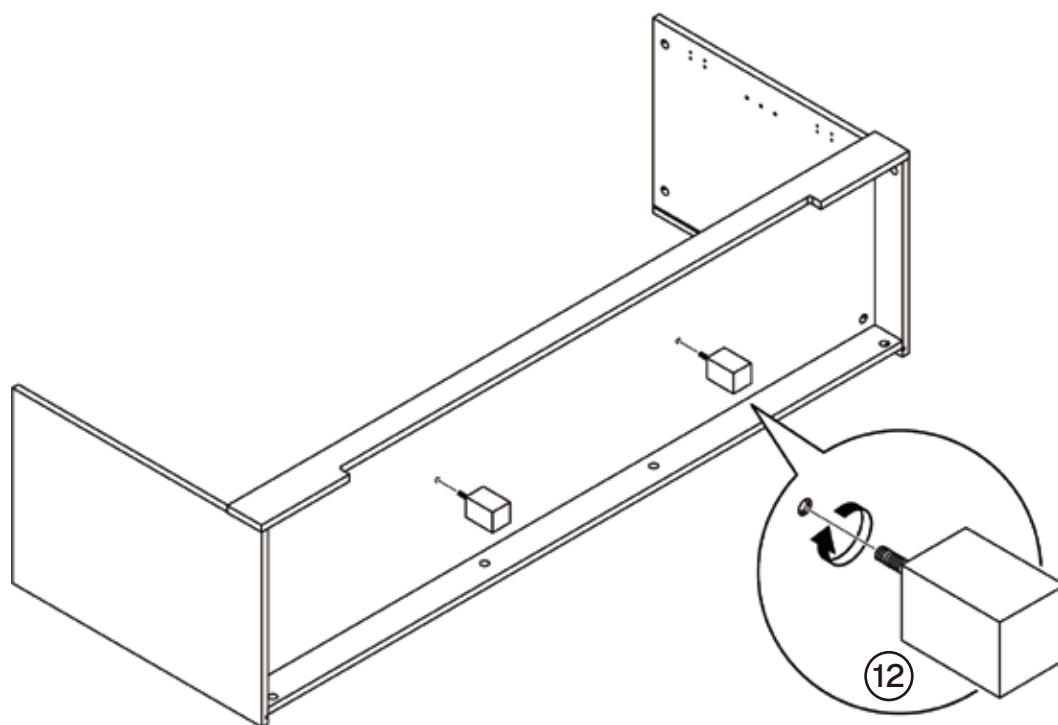 

10 Prepping bottom panel



 A 4x

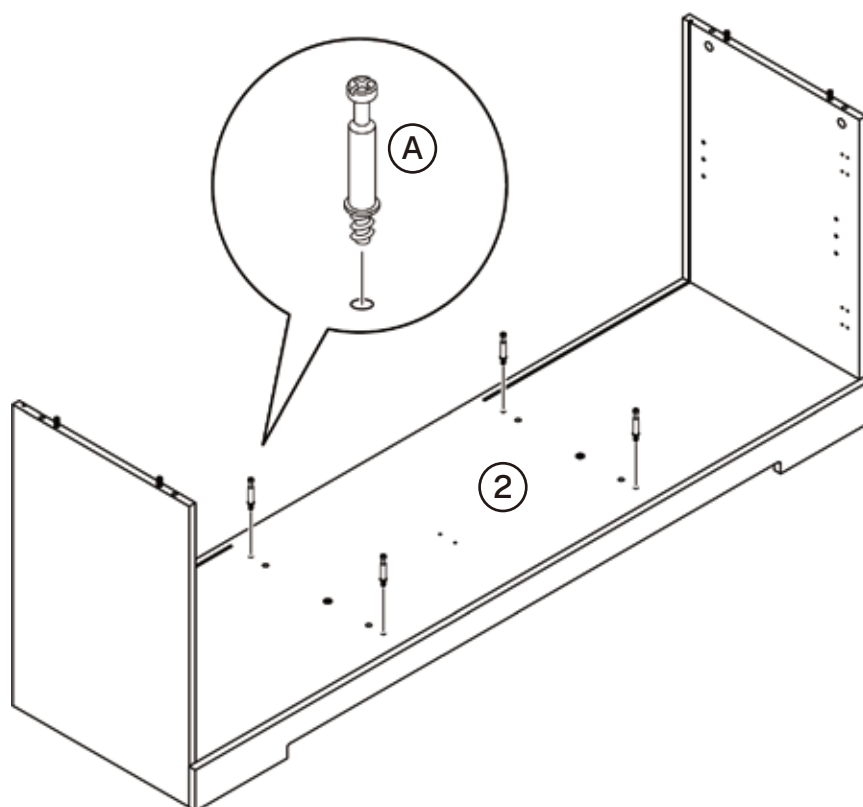


11

Medial panels



 D 12x

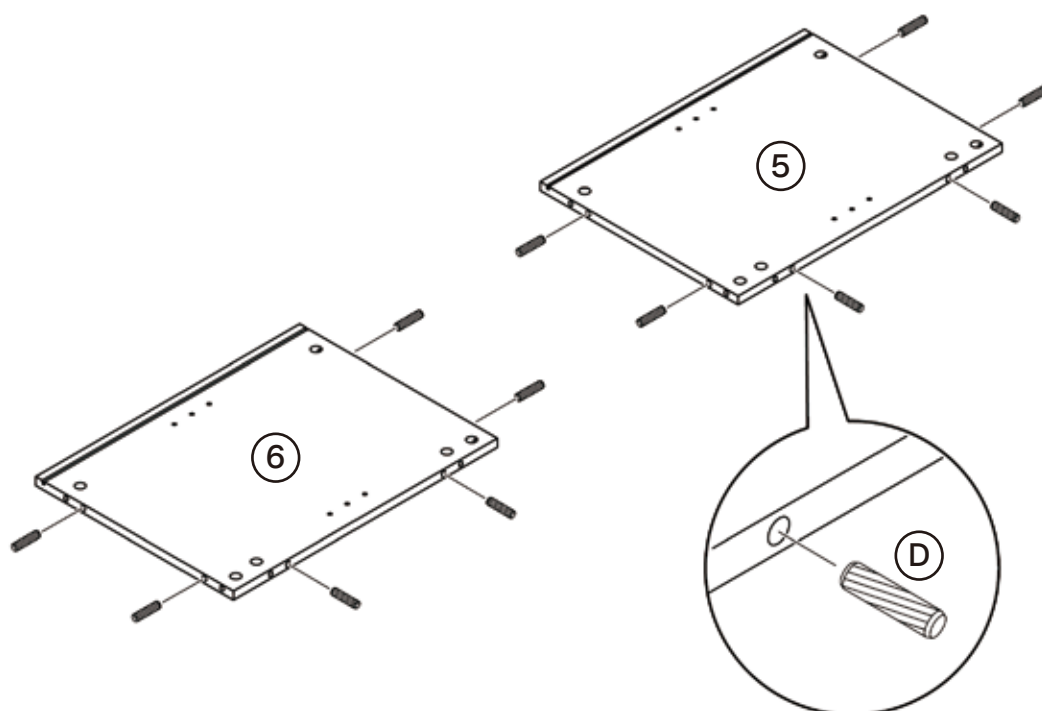

12

 
Attaching medial panels



B 4x





C 4x

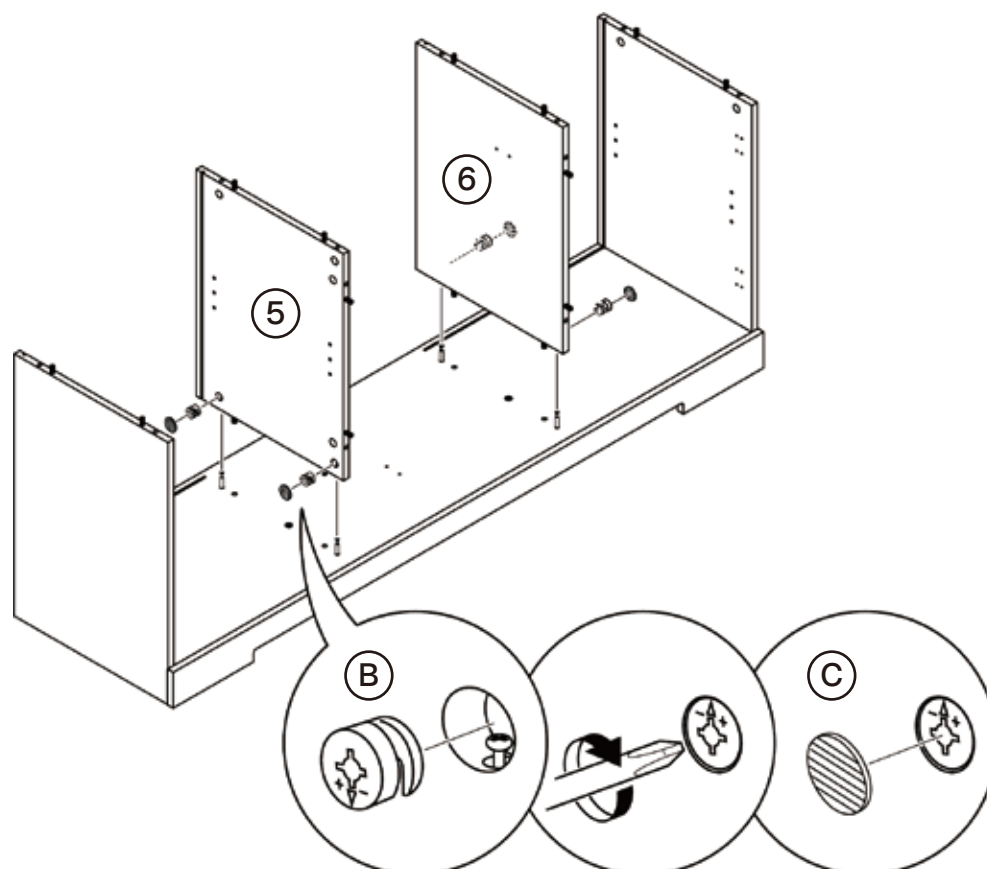



13

  Side surround panels

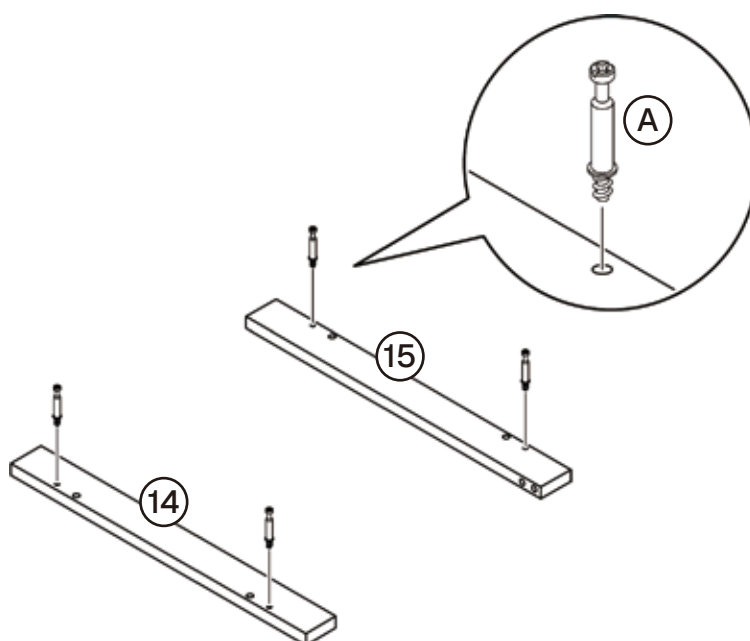

14

  Assemble the surround panels

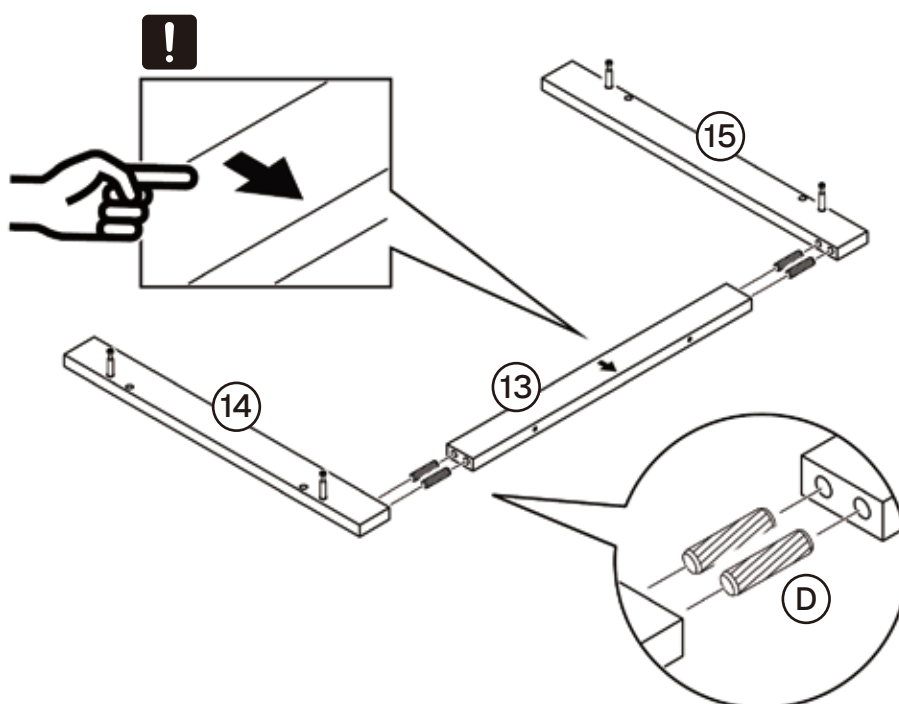

15

 
Attaching surround panels



B 4x




C 4x

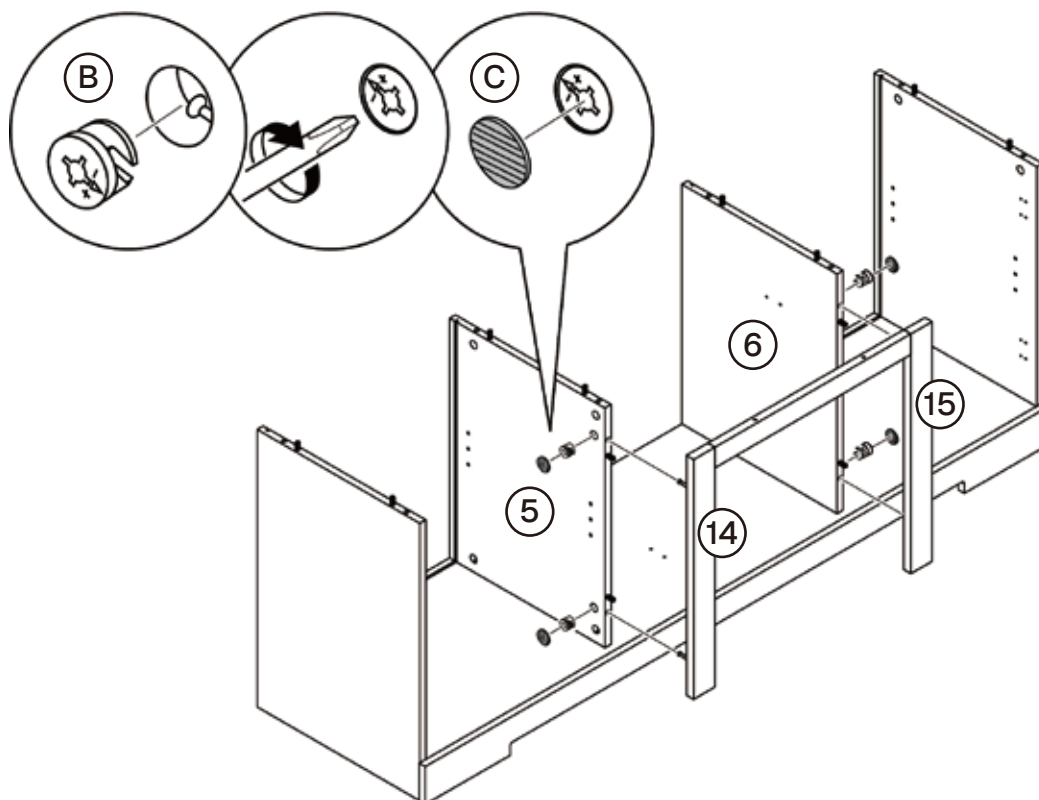



16

 Sliding in back panels

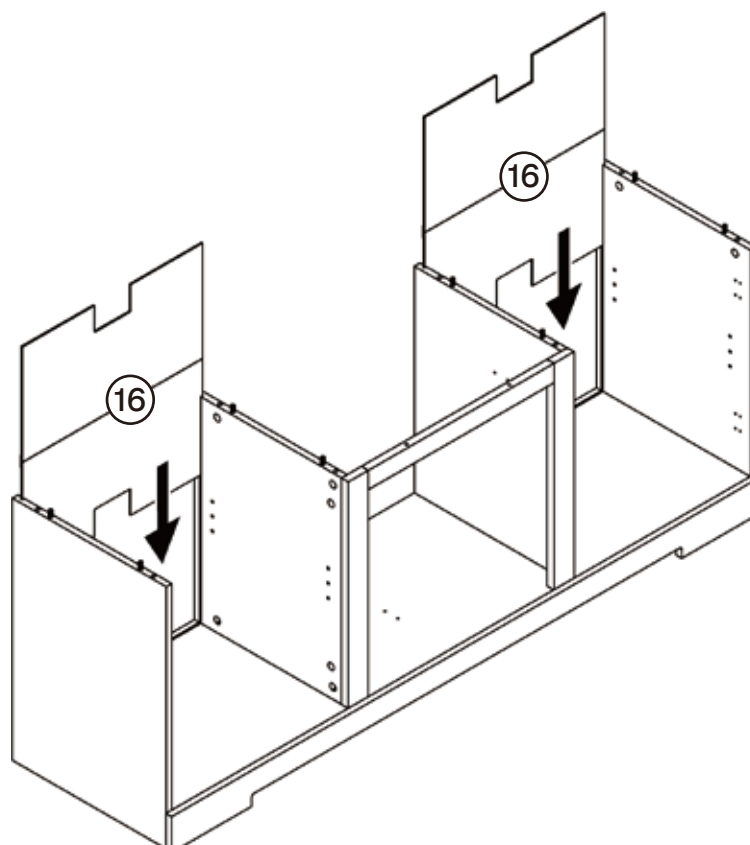



17

  Top panel

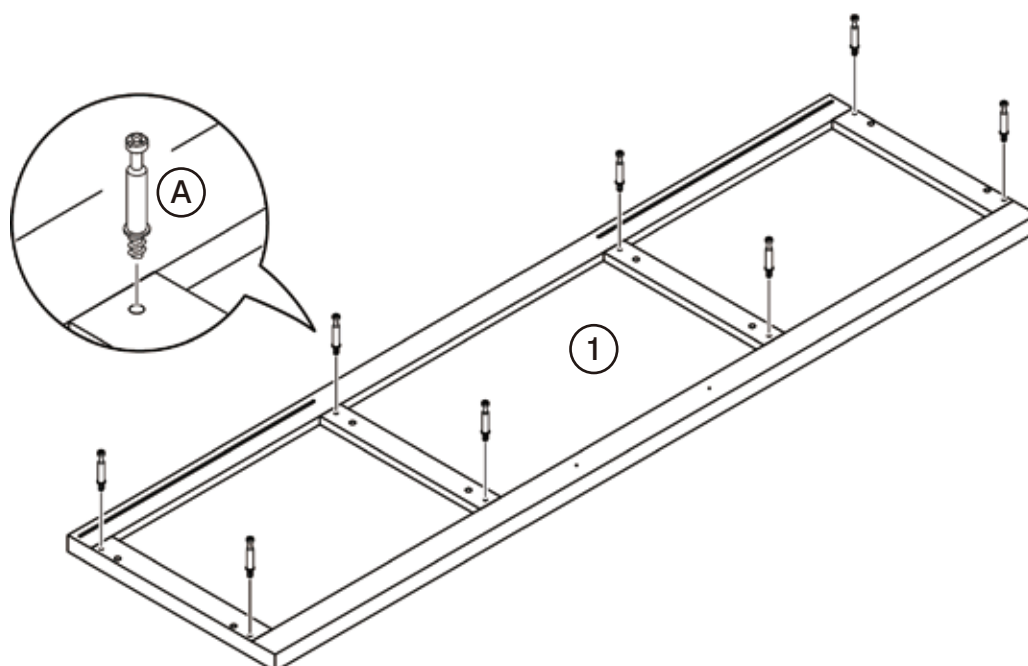

18

  Attaching top panel

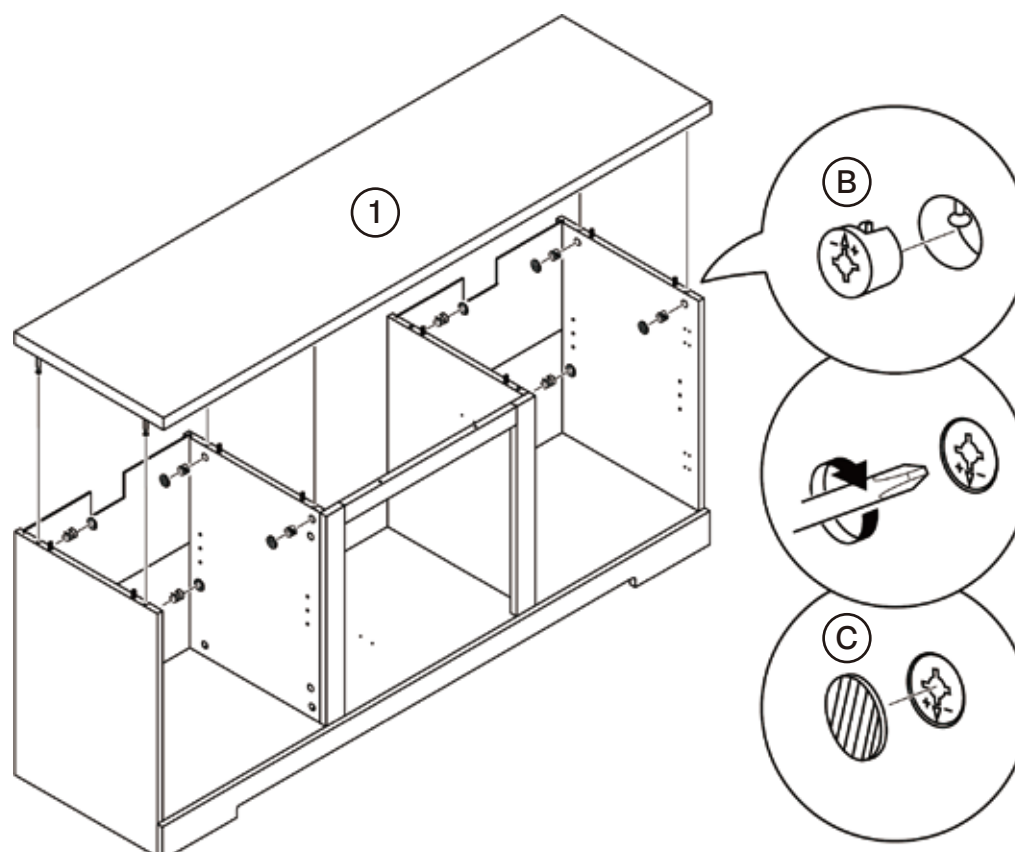


19

Securing top surround panel to top panel



 E 2x

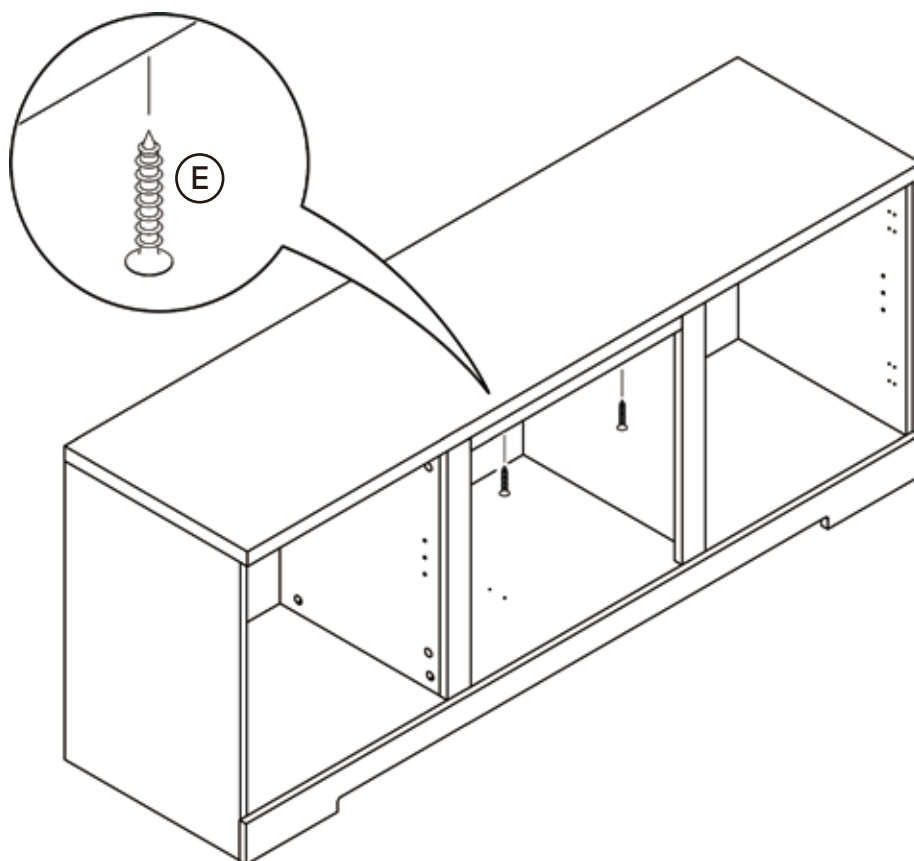

20

 
Securing back panels



F 8x



G 8x

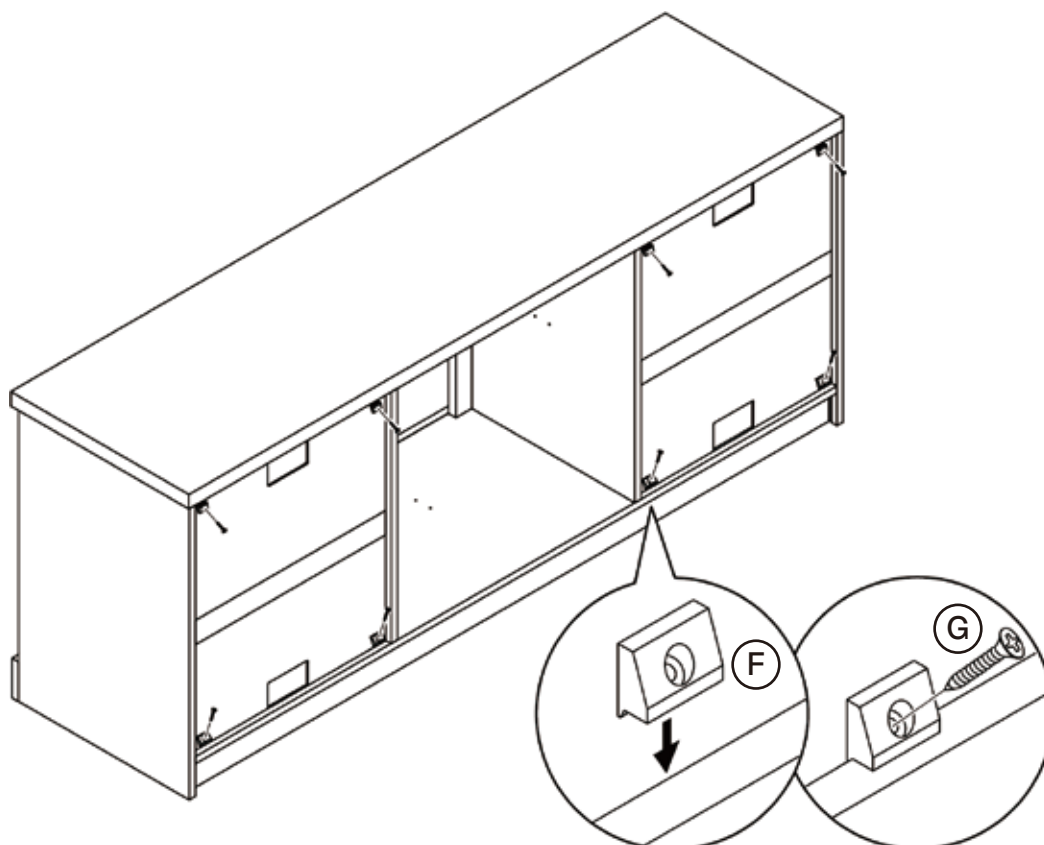


21 Installing fireplace heater


★ Do not attempt to install the fireplace unit from the front of the mantel. It will not fit.

The heater has a glass front panel. Careful when handling glass to prevent injury or damage.

 For the exact instruction, please refer to the user's manual provided with the fireplace.

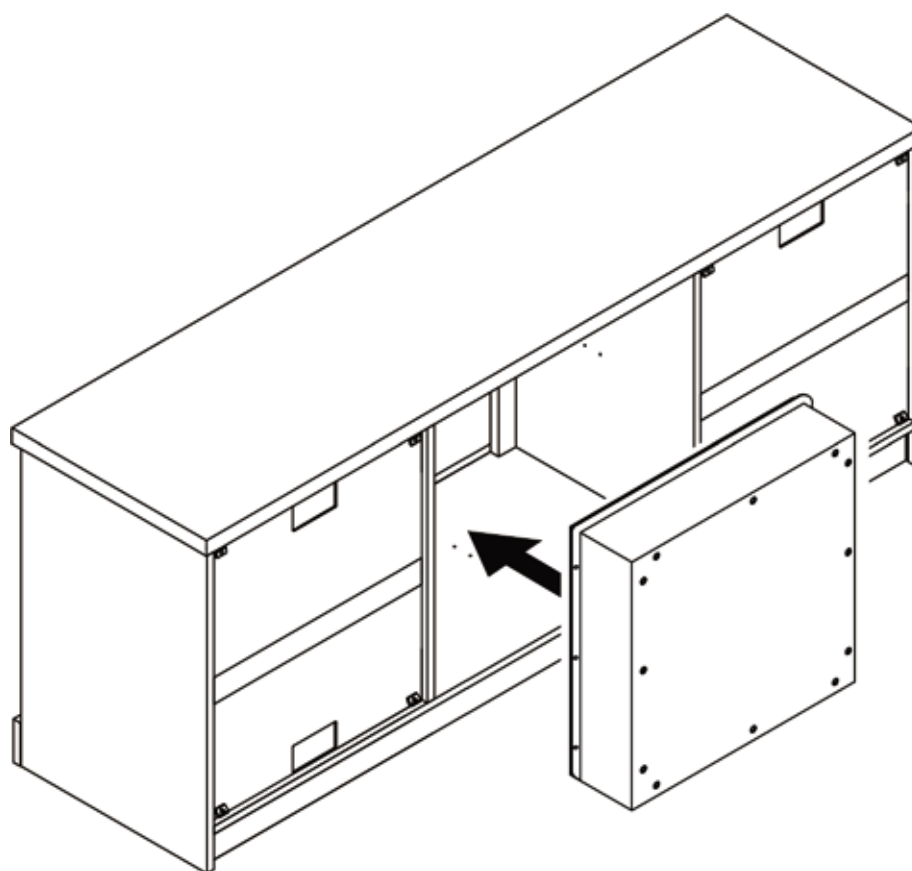


22 Attaching brackets to secure the fireplace heater

 


H 3x



 
J 6x

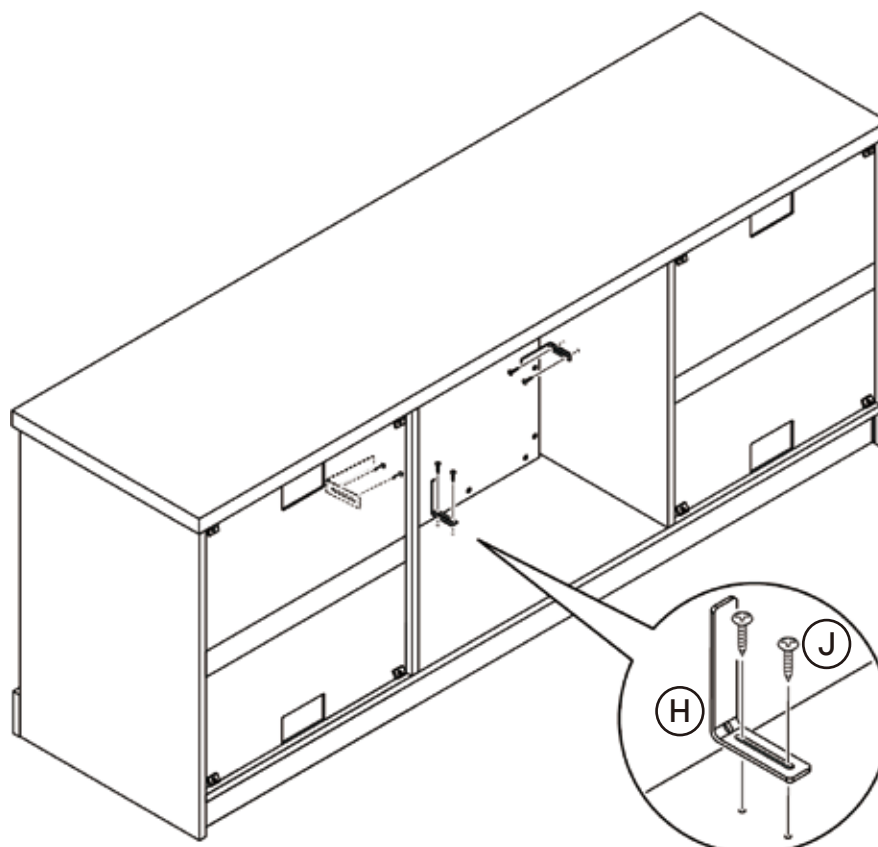

 
23 Inserting shelf pegs and putting on storage shelf panels



K 8x

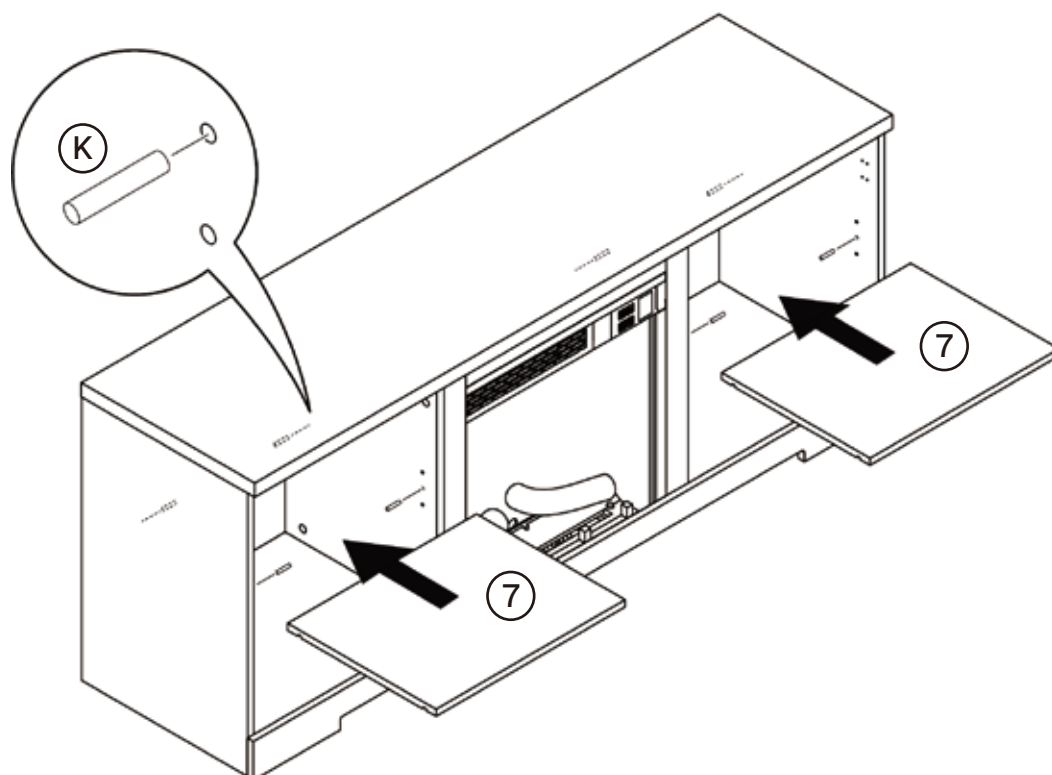 


24 Attaching door hinges

 

L 4x



 M 8x

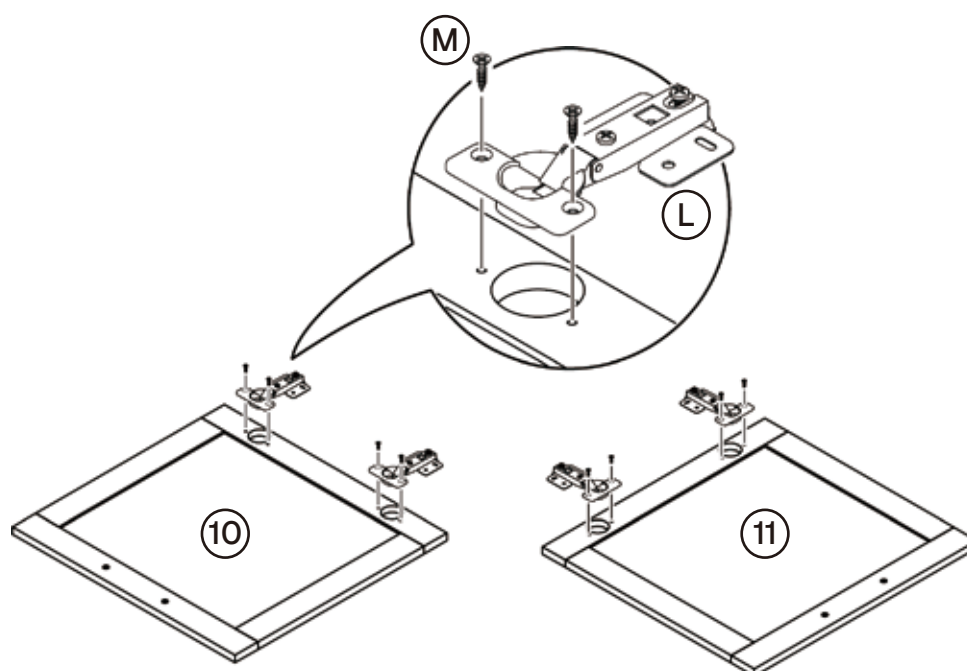


25 Attaching door handles



N 2x



 
O 4x

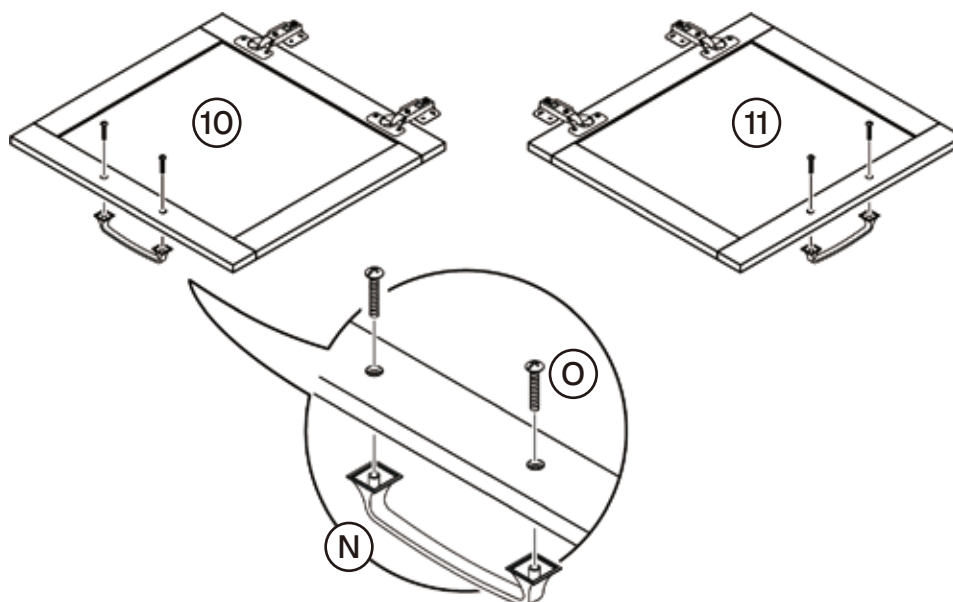


26 Attaching cabinet doors



 M 16x




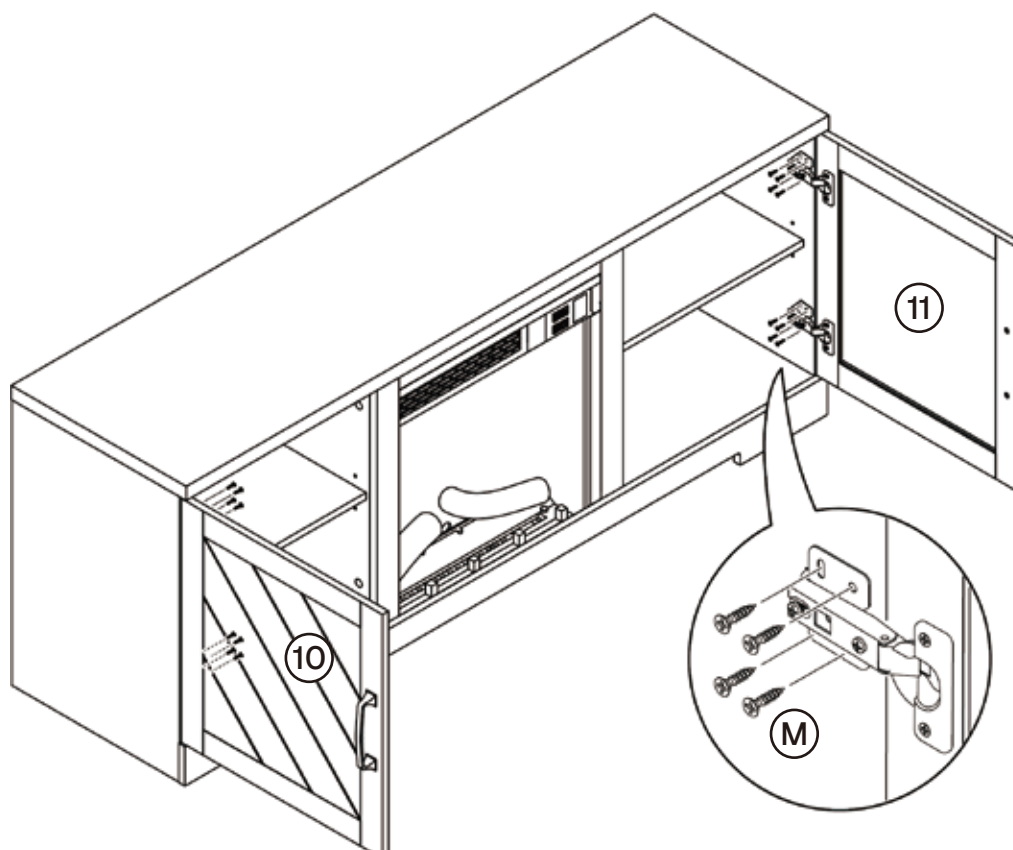


i




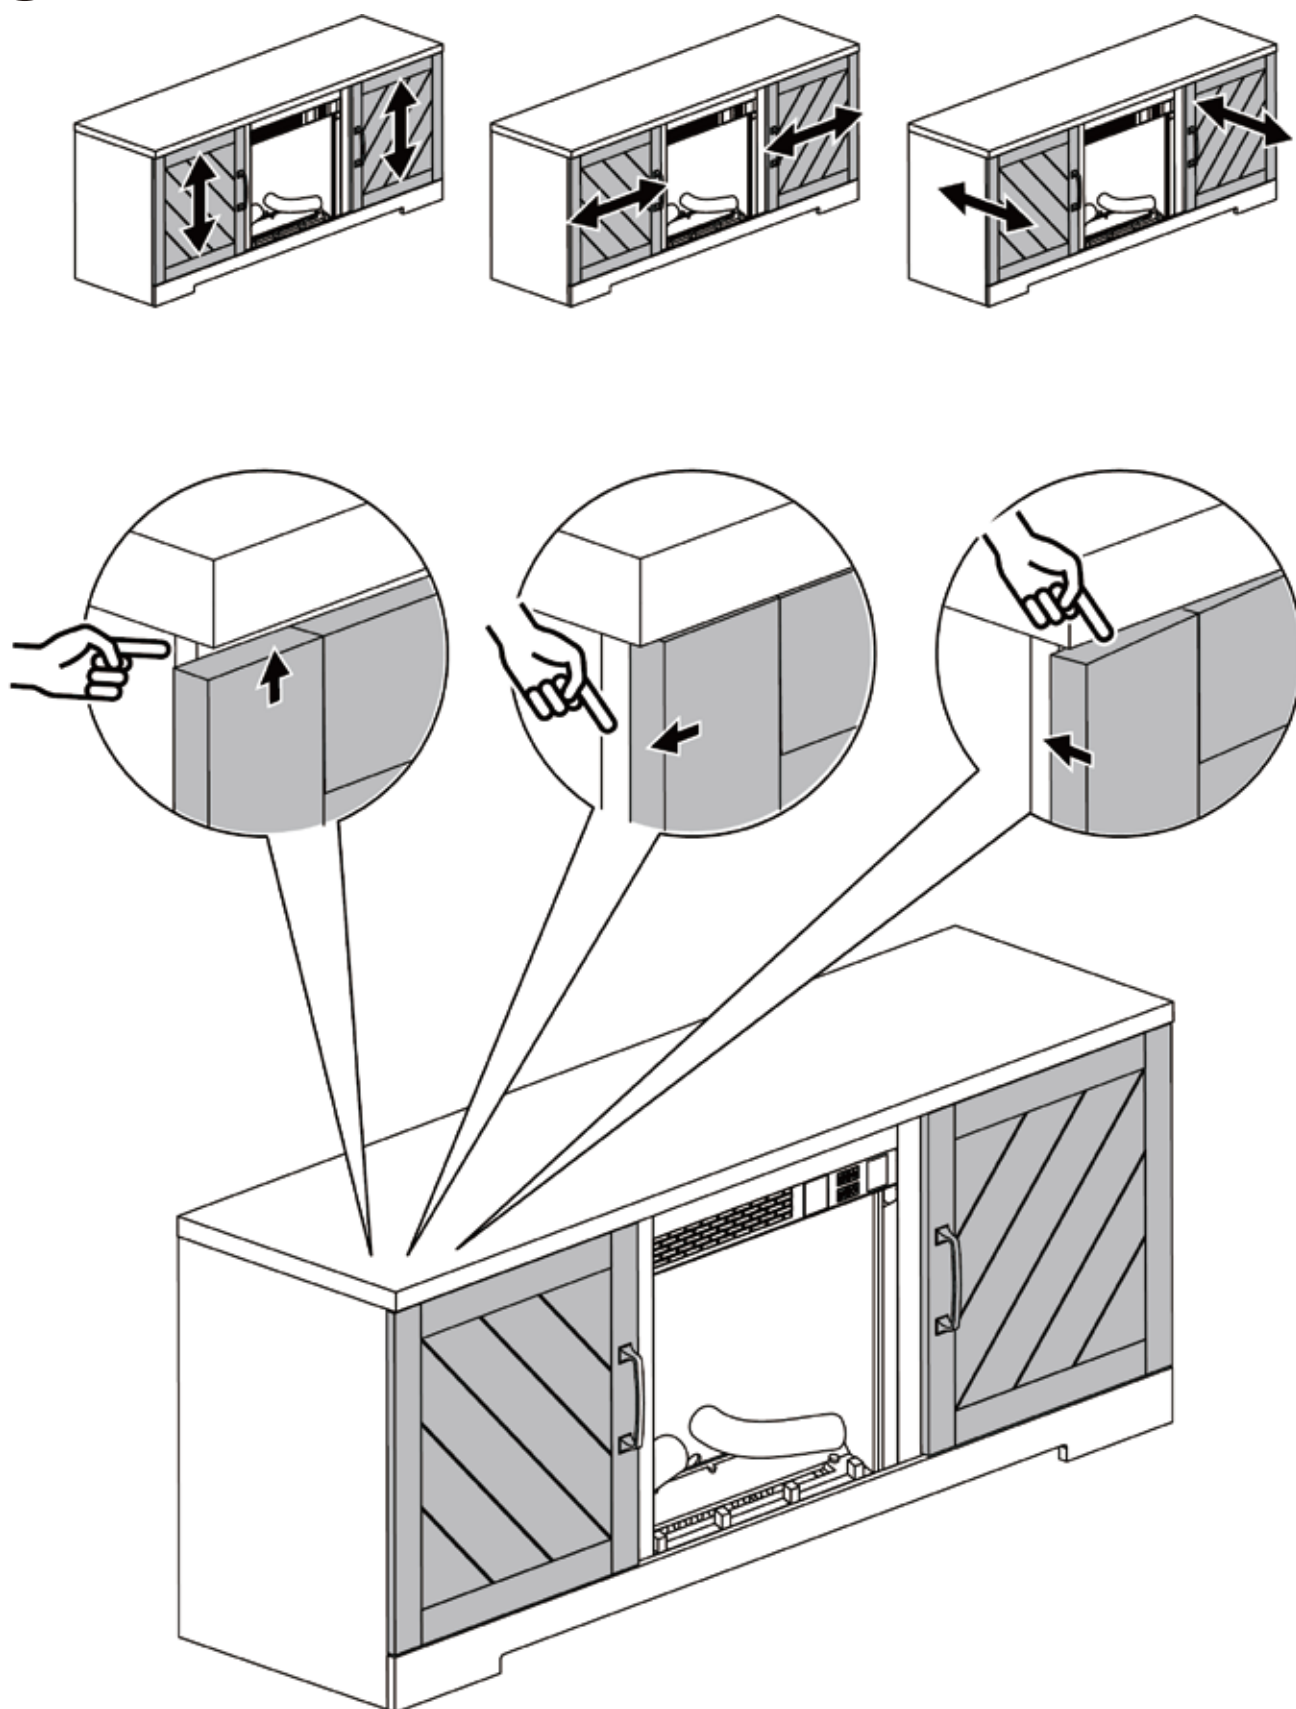 


Adjust the door hinge if there is excessive gaps or height difference between the cabinet doors and/or the cabinet. Adjust both the top and bottom hinge on the same door for best result.

 
 
 
 
i

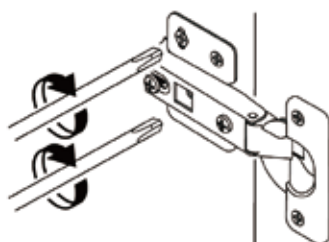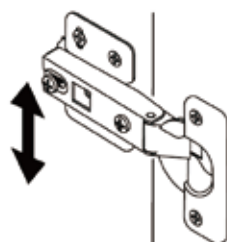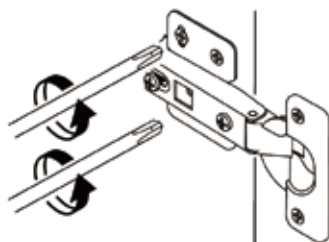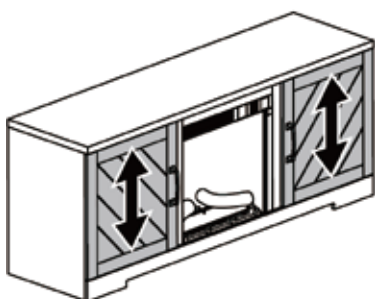

    Loosen the screws on the mounting plate to adjust the door **up and down**.

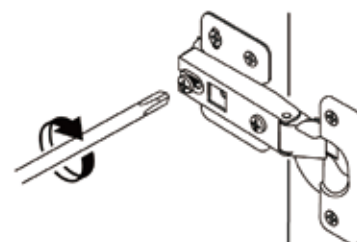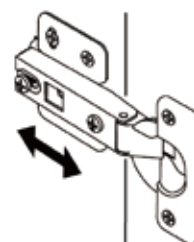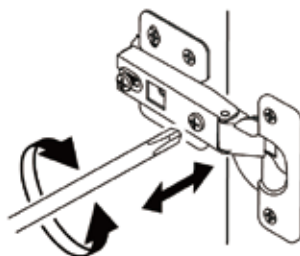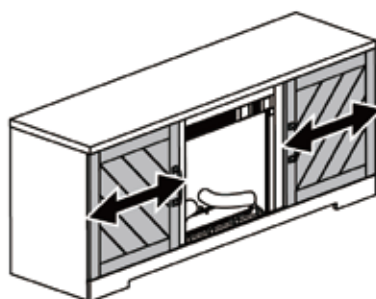

    Adjust the screw on the hinge to micro-adjust the door from **side to side**.

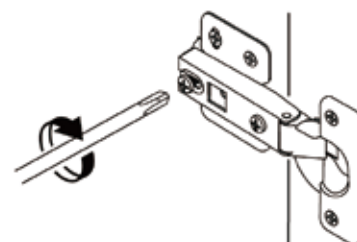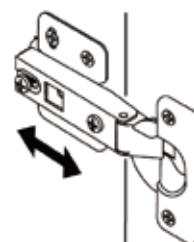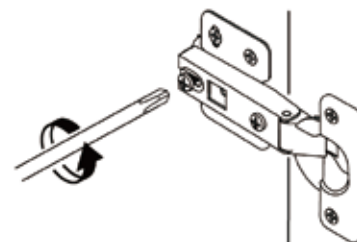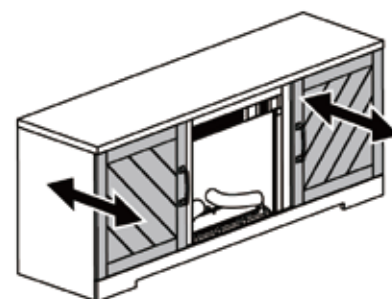

Loosen the screws on the hinge arm to adjust the door **in and out**.

Care and Maintenance

Thank you for your purchase. We want your item to last as long as possible.

To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



Maintenance

- Tighten all bolts and crews again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and re-tighten them if they come loose.



Cleaning

- Clean the surface of the MDF (medium density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.



Attention

DO NOT use bleach or alcohol based cleaner to clean the surface.

DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage.

Make sure to dry the furniture immediately after cleaning.



Attention

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of the product.



WARNING

For use with televisions weighing 80lbs (36.3kg) or less. Use with heavier televisions may result in instability, causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.



NOTICE

The recommended maximum width of the television is 75 inches. Do not exceed the maximum load capacity.

This product is designed for flat panel TVs only.