

Product User Guide

Executive Chair

Seat Height Adjustment:

To increase the seat height, lift the lever whilst no weight is being applied to the seat.

To lower the seat height, lift the lever whilst weight is applied.



Lock Tilt:

To unlock the tilt function, pull the lever outwards. While in this position the chair will tilt freely when weight is applied to the backrest.

To lock the tilt function, keep the chair upright and push the lever back in.

(Please note this will only lock while the chair is in a fully upright position)

Tilt Tension:

To increase the force required to lean back when the tilt is unlocked, twist the tilt tension handwheel clockwise to desired resistance.

To reduce the force required to lean back when the tilt is unlocked, twist the tilt tension handwheel anticlockwise to desired resistance.



Product User Guide

Executive Chair

Height Adjustable Lumbar Support:

Manually adjust the lumbar support by lifting this up or down using the handle shown to suit your individual requirements.



Folding Armrests:

Lift armrests to fold away or push down to return to original position.

Height Adjustable Headrest:

To raise the headrest, push the circled button and lift to the required height - release the button to secure in place.

The headrest pad is free pivoting and will move with your head to provide the necessary support.

