



MJ-Skyline Elite-30 Automatic Mahjong Table Manual

Assembly Instructions

Video Guide:

1. Folding style Version

<https://www.youtube.com/watch?v=3KrnFLO0Ggc>

Or use the mobile device to scan QR Code



2. 4-Legs style Version

<https://www.youtube.com/watch?v=7tQkq3i73wg>



Initial Setup (After Assembly)

1. **Open the first box of tiles.**
 - Remove the *extra tiles* so that only **152 tiles** remain.
2. **Power on** the table.
3. **Press both red buttons** at the same time.
 - The **center tower** will rise.
4. **Insert the 152 tiles** into the center hole.
5. **Press one red button.**
 - The tower closes, and the tiles are automatically sorted.
6. **Wait for one beep.**
 - The table is now ready for the second set of tiles.
7. **Open the second box of tiles.**
 - Again, remove the extra tiles so that only **152 tiles** remain.
8. **Press one red button** to raise the center tower.
9. **Insert the second set of tiles** into the center hole.
10. **Press one red button.**
 - The **first set of tiles** will rise up to the surface.
 - The **second set** is now being sorted below.

 **You are now ready to play!**

Playing and Resetting Between Games

Step 1:

After each game, **press one red button** and **insert all tiles** into the center hole.

Step 2:

Press one red button again.

- The tower closes, and the **next set of tiles** automatically rises up.

Repeat **Step 1** and **Step 2** at the end of every game.

Storing Tiles After Playing

1. When you finish your last game, **press one red button** to raise the tower.
2. **Insert all tiles** into the center hole.
3. **Press and HOLD two dice buttons across from each other for 5–10 seconds.**
 - The tower will close, keeping both sets of tiles safely stored inside.

Next Time You Play:

- **Press one red button** to raise the tower.
- **Press one red button** again to lower the tower and raise the first set of tiles.

 **Ready to play!**

Helpful Tips

1. Forgot to Insert Tiles?

If someone forgets to put tiles into the center hole after a game:

- **Press both red buttons** at the same time — the tower will rise.
 - **Insert the tiles.**
 - **Press one red button** to close the tower.
-

2. Tower Accidentally Raised

If a **red button** is pressed by mistake and the tower rises:

- **DO NOT press the red button again.**
 - Instead, **press and HOLD two dice buttons across from each other for 5–10 seconds.**
 - The tower will lower, and play can continue normally.
-  Pressing the red button again may cause a jam.
-

Folding and Unfolding the Table

Before folding, **remove all tiles** by following these steps:

1. **Press one red button** – the tower raises.
2. **Press one red button** again – the tower lowers, and the tiles come up.
3. **Remove all tiles** and **wait for the beep**.
4. **Press one red button** – the tower raises again.
5. **Press one red button** again – the second set of tiles comes up.
6. **Remove the second set of tiles**.

Folding the Table

- Under the table, on **each side of the black box**, locate the **locking levers**.
- **Unlock both latches** and carefully **tilt the table**.
- **Unlock the wheels** and **roll the table** for storage.

Unfolding the Table

- Roll the table to the playing area.
- **Lock the wheels**, then **lock both side latches** securely.
 The table is ready for use again.

Model: MJ-Skyline Elite-30

Product Type: Automatic Mahjong Table

For support or warranty inquiries:

 **Email:** mj@usamjtable.com