

MEJE Smart Toilet Operating Instructions

Model Number: MJ-MNE001U

Q: How to pair remote to smart toilet?

A:

1. Power smart toilet on.
2. Turn knob on side of toilet towards the direction of flushing and hold.
3. After hearing a beep, the toilet display will flash.
4. Press the "night light" button on the remote for a long period of time and the remote will pair to the smart toilet.

Q: How to turn off the top cover sensor, so that it does not open when you walk near the smart toilet?

A:

1. Press and hold the "open/close top cover" button on the remote for 5 seconds.
2. 2 beeps will activate the top cover sensor.
3. 1 beep will deactivate the top cover sensor.

Q: How to turn on auto flush?

A:


1. Press and hold the "flush" button on the remote for 5 seconds.
2. 2 beeps will turn on auto flush. User must sit on seat for at least 20 seconds to activate auto flush.
3. 1 beep will turn off auto flush

Q: How to turn on/off the radar sensor for lid flipping??

A:

1. Press and hold the hip wash button on the remote control for 5 seconds to turn on or off the radar sensor.
2. When the "flip" icon on the screen lights up, it means the radar sensor is on.

3. When the icon goes out, the radar sensor is off.

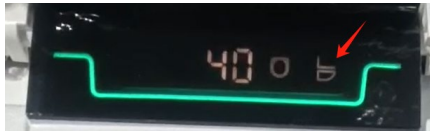

"flip" icon

Q: How to adjust the sensing distance?

A: Press and hold the flip button to enter the adjustment state :

1. The display shows "53", and the default sensing distance is "120cm" (about 4 feet).
2. Press the "up" adjustment button of "cleaning position" to display "54", and the sensing distance is "150cm" (about 5 feet).
3. Display "55" means "200cm" (about 6~7 feet), which is the farthest distance.
4. Press the "down" adjustment button of "cleaning position" to display "52", and the sensing distance is "60cm" (about 2 feet).
5. Display "51" means "first gear", and the sensing distance is "30cm" (about 1 foot)
6. After the adjustment is completed, press the "stop" button to resume operation.