


## Animated Bell with Ribbon

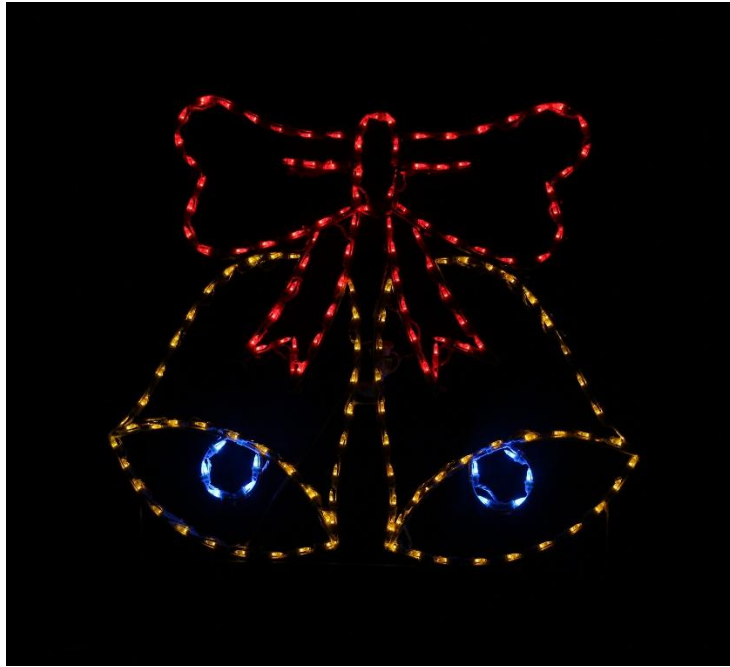

**Animated Bell with Ribbon** is made in one piece, one bell with ribbon. Plug the male end of the first bell into the first female end on the 2-channel controller. Plug the male end of the second bell into the second female end on the provided 2-channel controller. The ribbon plugs straight into power. Plug the controller directly into power. Adjust the speed by turning the knob at the top of the controller. This will create an animation to look like the bell is ringing.

We advise that you cover the animation controller with a plastic bag and point the animation cords downward to reduce potential water damage. Leave one side of the bag open to reduce condensation. Please do not place the animation controller on the ground.