

Pop-Up Snowman

Instruction Manual



NOTE



1-Person
Assembly



Takes Up to 25
Minutes

- Please retain these instructions for future reference.
- This item is not intended for permanent installation or continuous use.
- Unplug when not in use or when left unattended.
- Ensure the power supply matches the rated voltage.
- If any parts are missing, broken, damaged, or worn, discontinue use this product until repairs are made or replacement parts from the manufacturer are installed.
- Do not use this product in any manner inconsistent with the manufacturer's instructions, as doing so may void the warranty.

WARNING

- Do not plug into a wall outlet until the item is fully assembled and all lights are properly connected.
- Do not use in extreme weather conditions.
- Keep the item away from all heat sources (replace, stove, heater, etc.).
- Use the provided metal rods to properly assemble and secure the snowman.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug the item before removing or replacing bulbs.
- Replace burned-out bulbs immediately. Use bulbs with the same rated voltage and wattage.

1 Package Contents

1 x6



STAKES

2 x1



SCREW

3 x1



GUY ROPES

A x1



SNOWMAN

B x1



BASE

C x1




TOP POLE

D x1



BOTTOM POLE

E x1

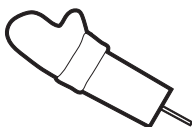

RIGHT ARM

F x1



LEFT ARM

G x1



SCARF


H x1



STAR


2 Product Assembly

Step 1

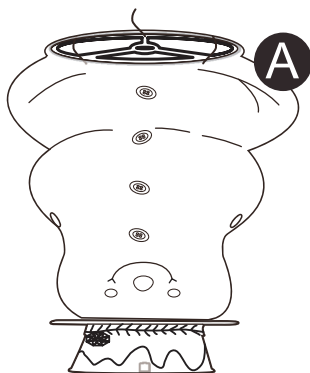


Place the snowman A upside down with its hat resting on the ground.

Step 2

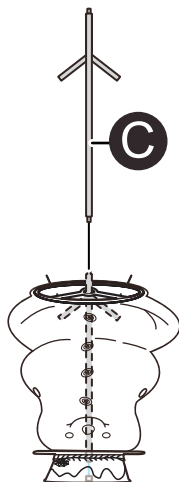


Insert the top pole C through the bottom opening of the snowman A. Slide the top of the pole into the opening inside the snowman's hat, then thread the lower end through the metal ring at the center of the snowman body.

Step 3

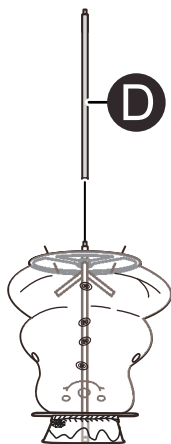


Flip the snowman A upright. Then insert the bottom pole D into the top pole C, guiding it through the metal ring located at the bottom of the snowman.

Step 4

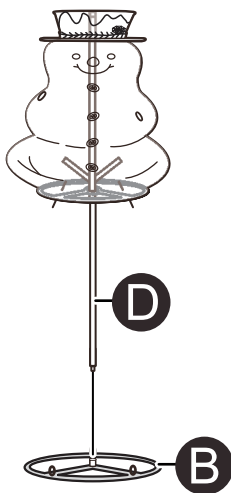

Insert the bottom pole D into the base B.

Step 5

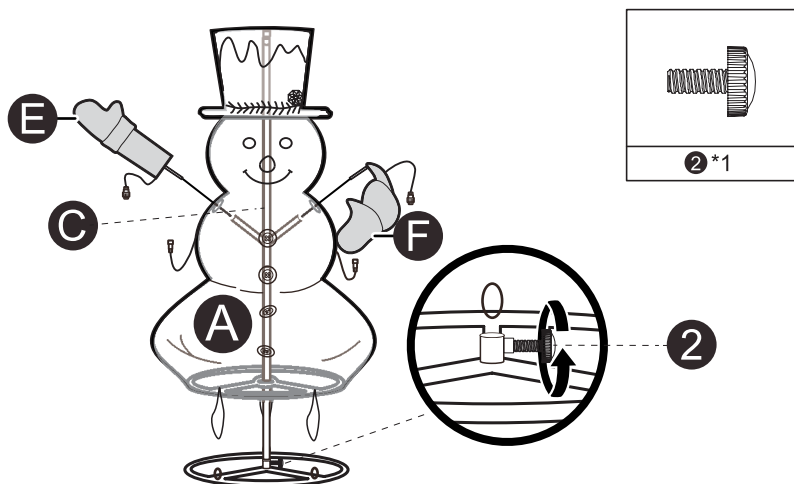


Locate the openings on both sides of the snowman A, and insert the arms E and F. Then connect the arms to the branch sections of the top pole C.

Step 6



Use both hands to grip the bottom of the snowman and pull it downward onto the base. Secure the hooks to lock the snowman in place.


Step 7

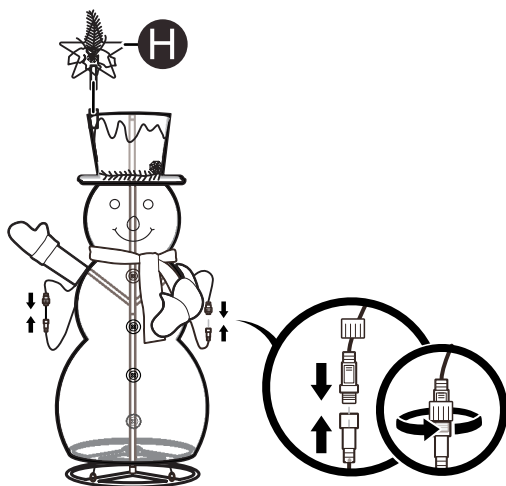

Find the 2-pin connectors on the string lights inside snowman A and connect them as shown in the diagram. If the light does not come on, please turn the 2-pin connector over and reinsert it.

Step 8

Instructions for Outdoor Use

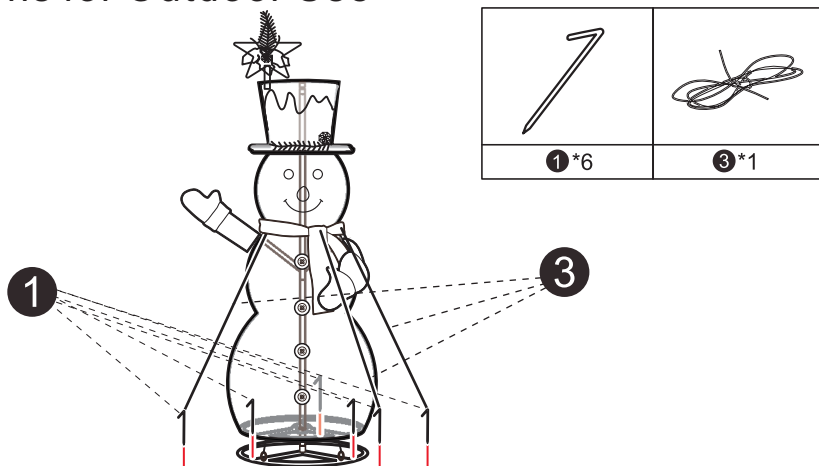

Secure the snowman using six stakes ① three attached to the guy ropes ③ and three driven into the ground next to the base B, with the stake heads pressing against the base to keep the snowman stable. Then plug into a power outlet to turn on the lights.



Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.