


SIZE CHART

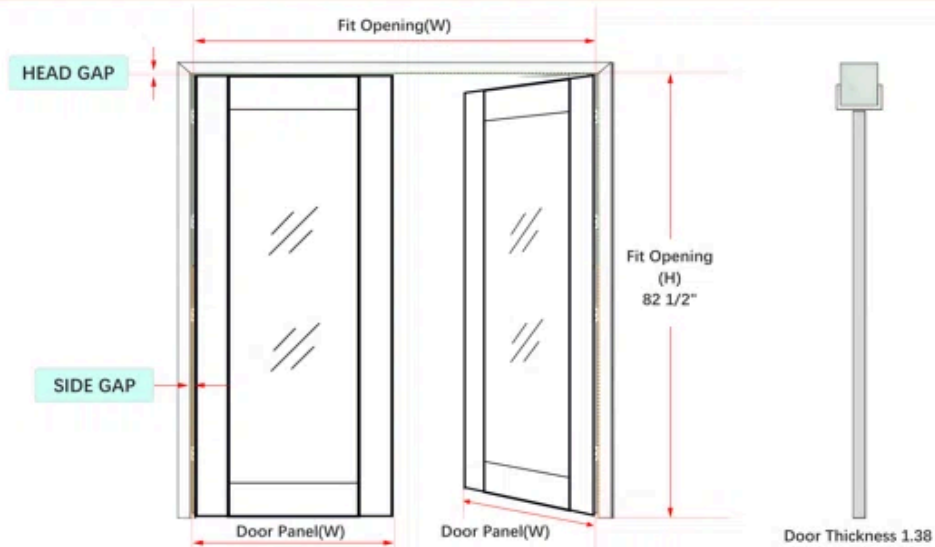

Pantry Door Rough Opening Guide

DOOR SIZE	FIT OPENING WIDTH	FIT OPENING HEIGHT
48"(24"X2)×80"	52"	82 1/2"
56"(28"X2)×80"	60"	82 1/2"
60"(30"X2)×80"	64"	82 1/2"
64"(32"X2)×80"	68"	82 1/2"
72"(36"X2)×80"	76"	82 1/2"

Please Note: Hinges and handles are not included—this listing is for door panels only. To ensure a perfect fit, kindly measure your door's rough opening carefully before purchase.