


Tolle™ Height Adjustable Desk (Frame Only)



by ERGOBOND

Dual Motor / 3 Stages / Premium Edition

Adjustable Frame (See desk top compatibility)

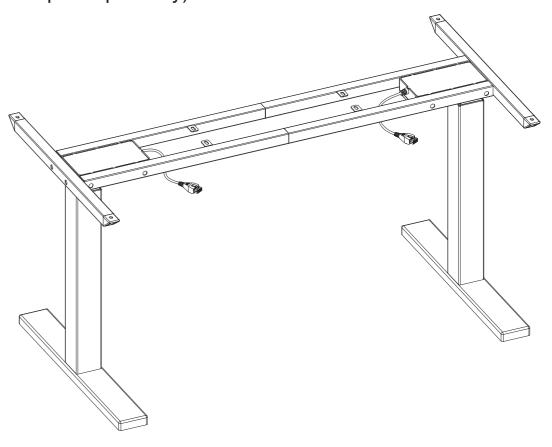


Recommended desktop sizes: 47" - 70" (1200mm - 1800mm) wide 23.5"- 35.5" (600mm - 900m) depth

Model: ER9240-S3 Weight Capacity: 265lbs



Part list

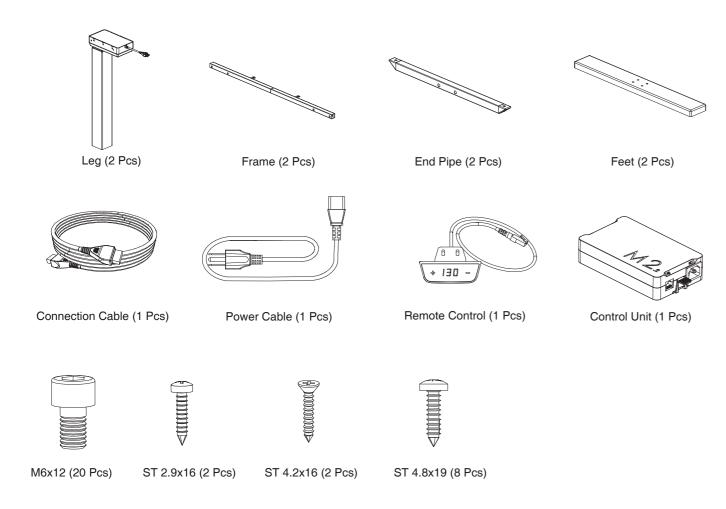


Parts displayed above may vary, based upon Frame Configuration


Torque Guide

- M6 Screw's max torque = 6nm
- M8 Screw's max torque = 6nm
- M10 Screw's max torque = 6nm
- Tapping screws hand tightening only


Assembly Instructions

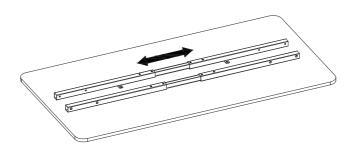


Step 1 Adjust Top Frame to suitable length.

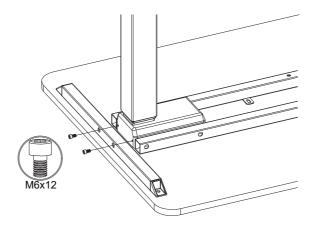


Step 3 Mount the End Pipe as illustrated above. Please refer to Page 2 Torque Guide.

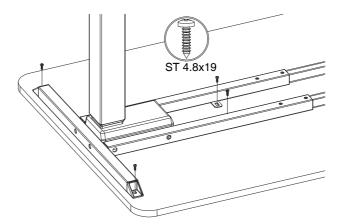


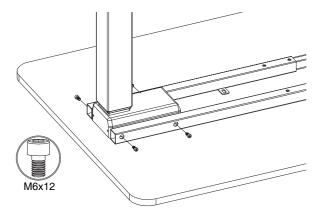

Step 2 Assemble the Leg and Frame as illustrated above. Please refer to Page 2 Torque Guide.

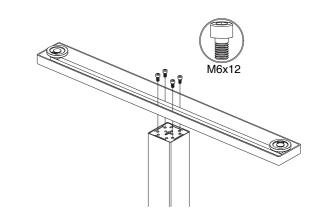


Step 4 Mount the Feet as illustrated above. The smooth side of the plate faces the foot. Please refer to Page 2 Torque Guide.

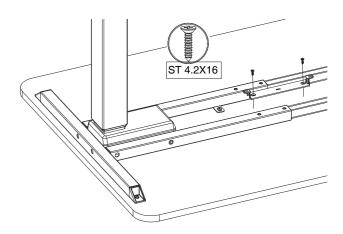


Step 6 Mount the Frame and End Pipe to the Table top as illustrated above. Mount the Control Unit Bracket as illustrated above. Please refer to Page 2 Torque Guide.

Page 2 Torque Guide.


Assembly Instructions

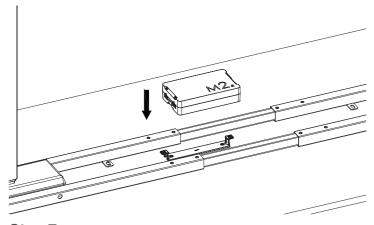


Step 7Mount the Control Unit as illustrated above.

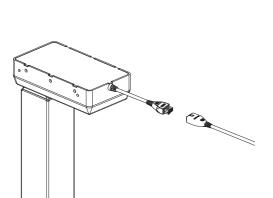


Step 9
Connect the Connection Cable to the Leg as illustrated above.
Do not put power to the system before it is fully assembled.

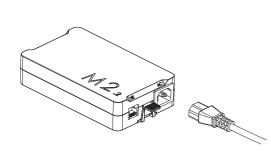

Connect the Remote Control Cable to the Control Unit as illustrated above.

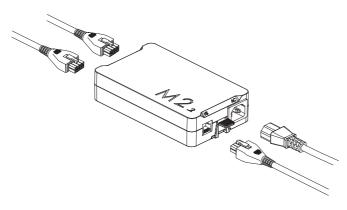


Step 8Connect the Cables to the Control Unit as illustrated above.

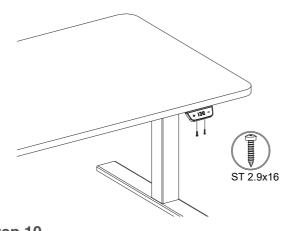

Step 10

Mount the Remote Control to the Table top as illustrated above.

Please refer to Page 2 Torque Guide.

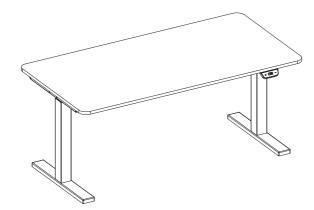

Step 12
Perform Zero Setting.

Zero Setting

When you use the height adjustable frame for the first time, you have to reset the lowest desktop position to the minimum height.

- Press ▼ button and keep pressing it until the desktop has reached the lowest position (programmed desktop position).
- Press ▼ button again and keep pressing it. After about 5 seconds, the desktop will slowly move further down until it reaches the absolutely lowest desktop position possible.
- Release ▼ button. The electric height adjustable frame can now be used.