FIXED TOP DINING TABLE

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



Warning!

- **1.** Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- **2.** This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION:

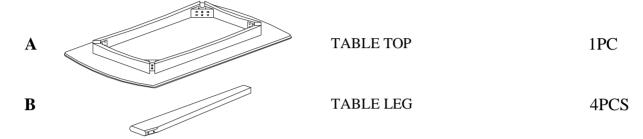

HARDWARE IDENTIFICATION:

| 1 | | WRENCH | 1PC |
|---|--|-------------|------|
| 2 | (83)———————————————————————————————————— | HEX BOLT | 8PCS |
| 3 | | LOCK WASHER | 8PCS |
| 4 | | FLAT WASHER | 8PCS |

STEP 1

Place table top (A) upside down on soft surface. Align and fasten all table legs (B) to table top (A) using hex bolt (2), lock washer (3) and flat washer (4). Then fully tighten with wrench (1).

