## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water.

## NOTICE

\*Please make sure that you have all parts indicated before you begin assembly of this item \*This item should be assembled on a soft surface to prevent scratching the finish during assembly

\*This item may require periodic tightening

## PARTS IDENTIFICATION: FIGURE QTY DESCRIPTION BACK REST- 1PC 1PC A.| 1PC B. LEFT LEG FRAME 1PC C. RIGHT LEG FRAME D. SHORT STRETCHER 1PC E. MIDDLE STRETCHER 1PC F. LONG STRETCHER 1PC HARDWARE IDENTIFICATION NO DESCRIPTION **FIGURE OTY** HW1|SCREW 7 x 0.5 x 35mm 12PCS 441111A HW2|ALLEN WRENCH 1PC HW3 WOOD BUTTON 6PCS

## PRODUCT DIMENSION: 19.3"W X20.9" D X 44.2" H




**PREPARATION** 

Before begining assembly of product, make sure all parts are presetn. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:10 minutes. Tools Required for Assembly (included): N/A

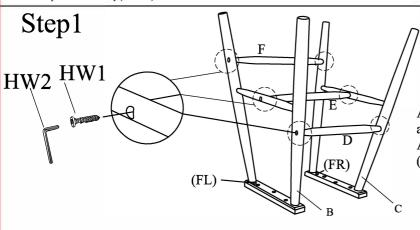

WARNING: DO NOT STAND ON CHAIR

Assemble Short stretcher (D), Middle stretcher (E), and Long stretcher (F) using Screw (HW1) and Allen Wrench(HW2). (Do not tighten yet.)

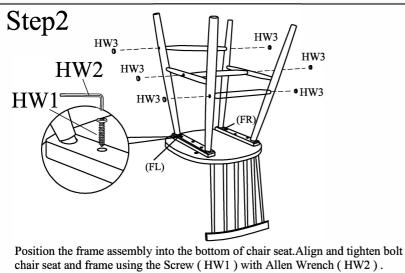

chair seat and frame using the Screw (HW1) with Allen Wrench (HW2). Tighten all the screw in Step 1 and Step 2 Inset the Wood Button (HW3) to the cover the hole on Left leg frame (B) and Right Leg frame (C).

