

 
INSTALLATION

Product Manual




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

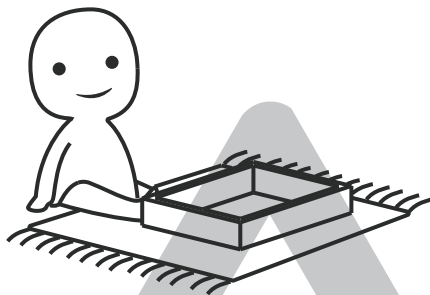



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

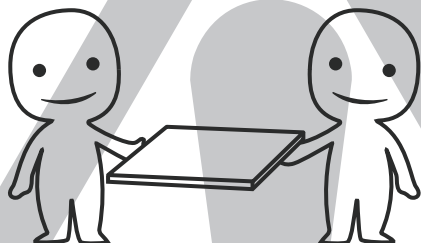

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

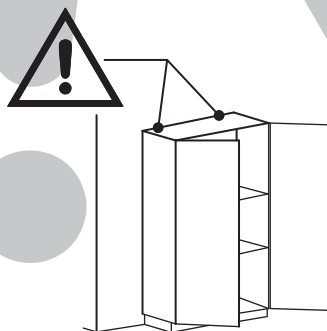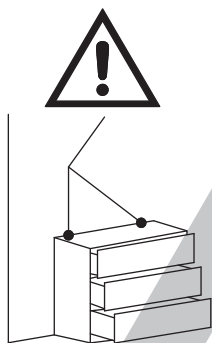

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

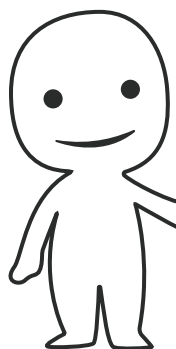


Please prepare the following tools

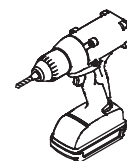    


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 99

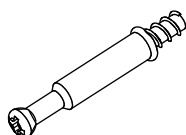


Ø 6 x 35 mm

 B x 99

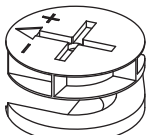


Ø 9.5 x 15 mm

 C x 28




Ø 3 x 12 mm

 D x 48



Ø 3.5 x 12 mm

 E x 4

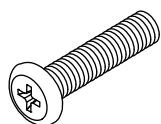

Ø 4 x 22 mm

F x 4



Ø 4 x 16 mm

 
G x 8




H x 4




J x 4

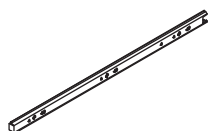

K x 8

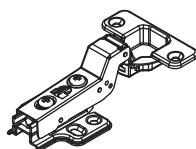 




P x 10

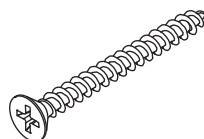 

Ø 3 x 30mm

   Q x 4

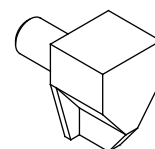

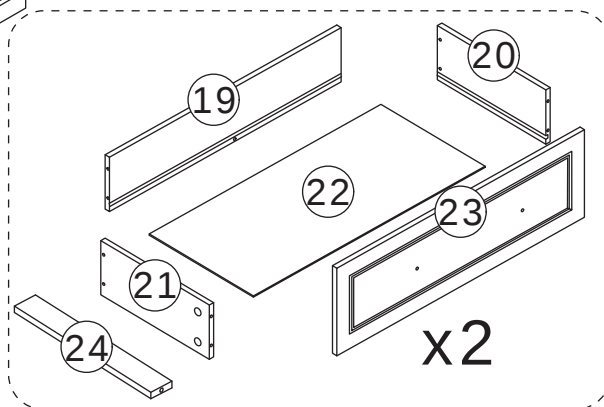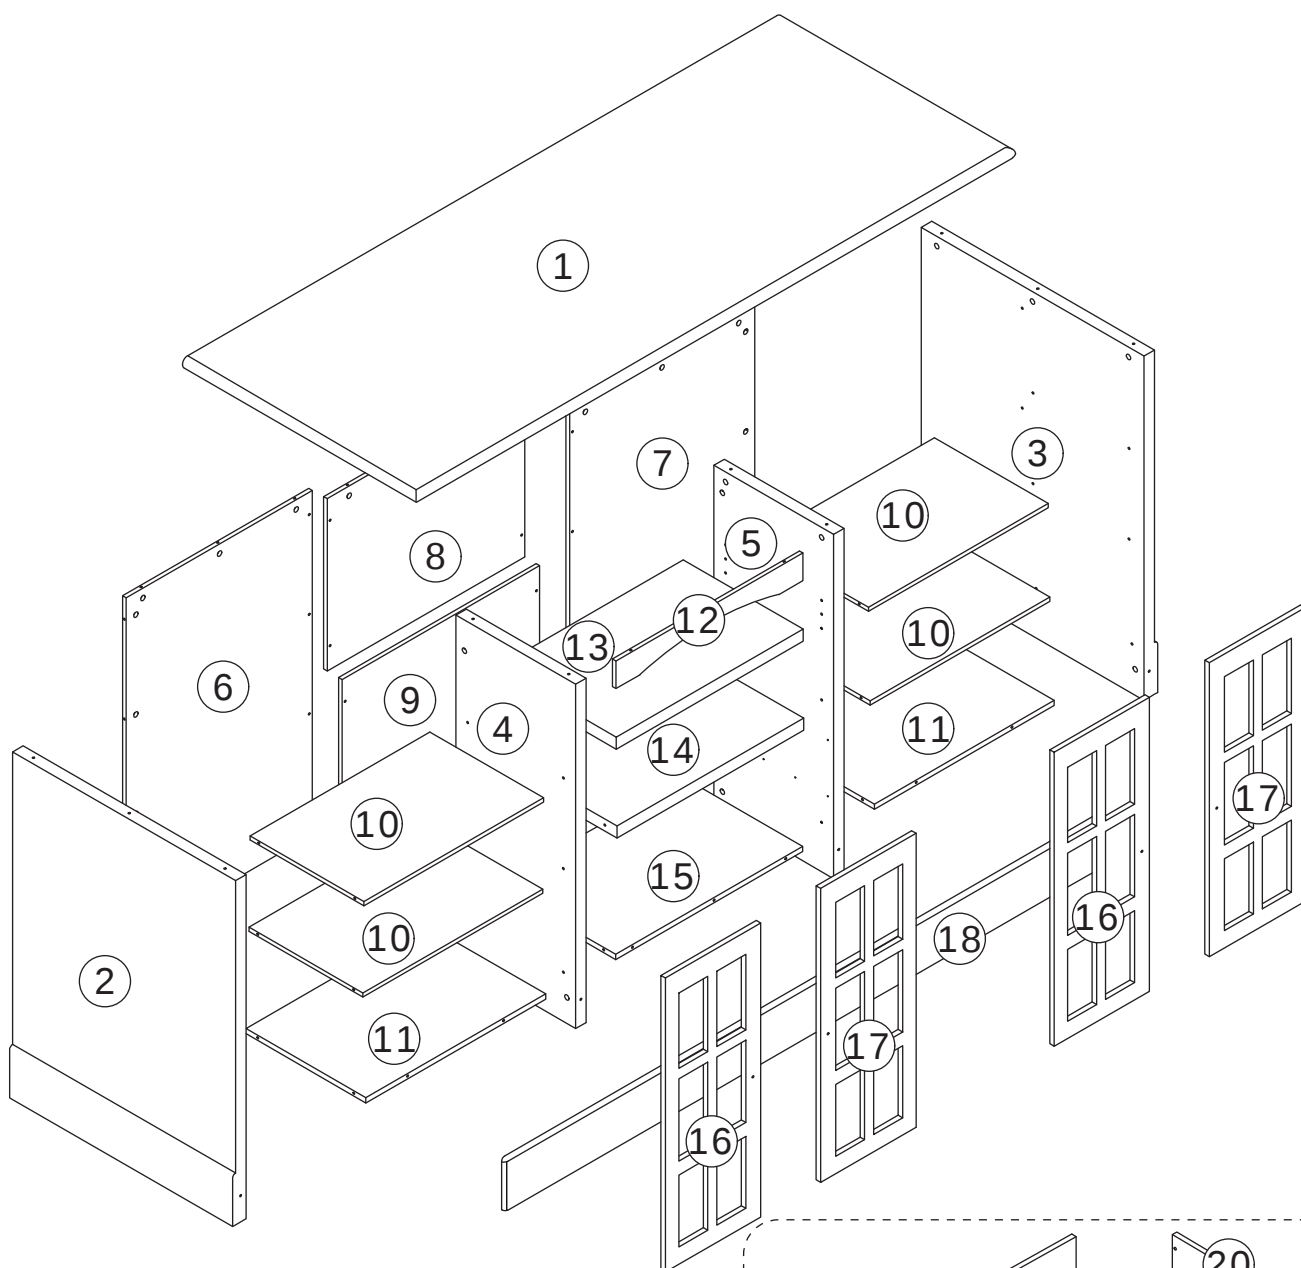


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

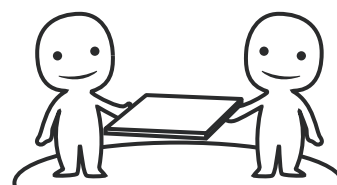

















ASSEMBLED BY 2 ADULTS










**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

               
 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

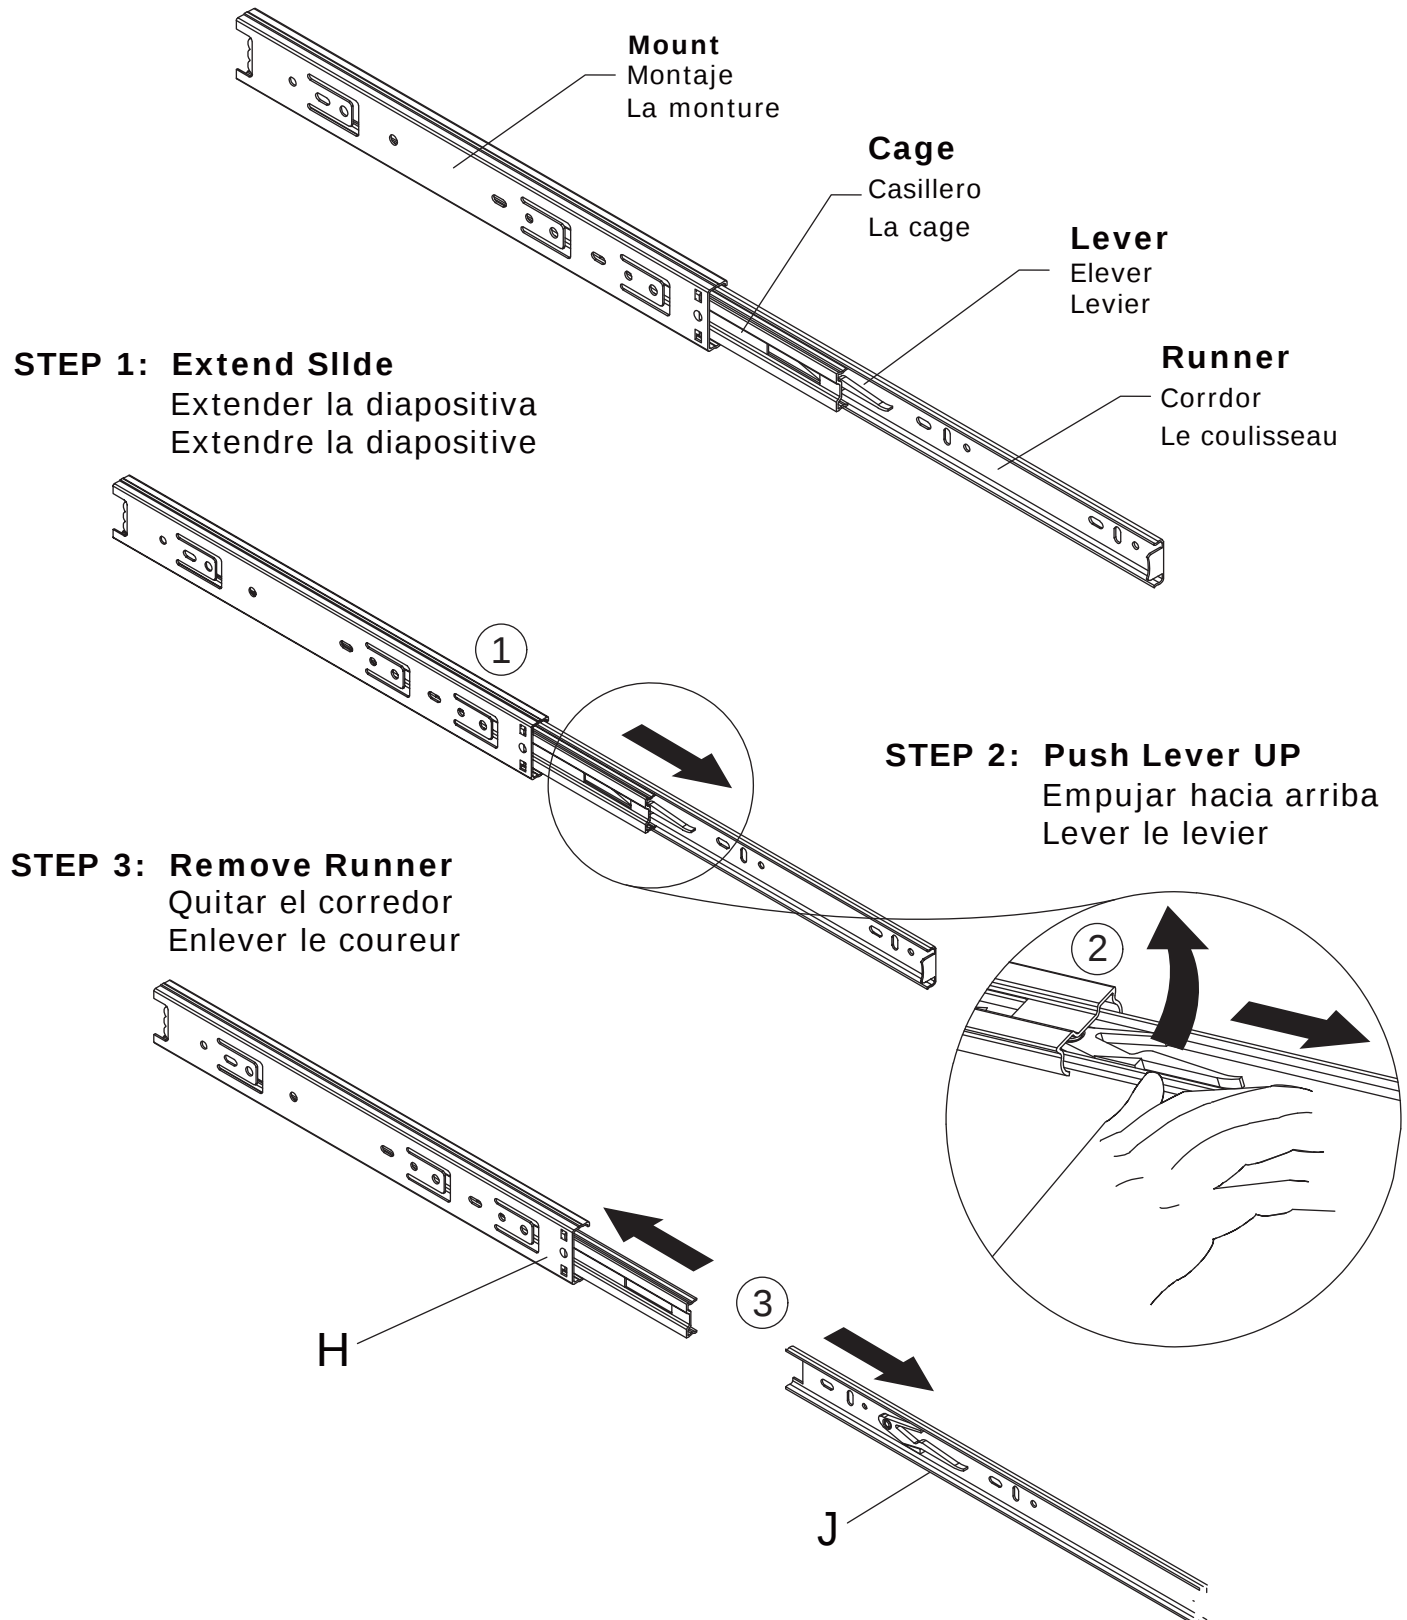

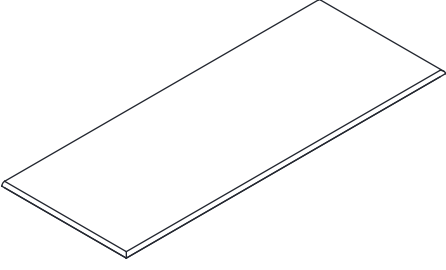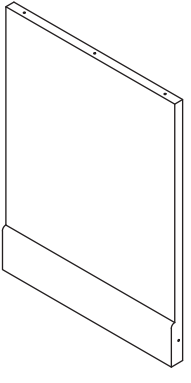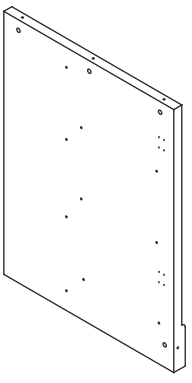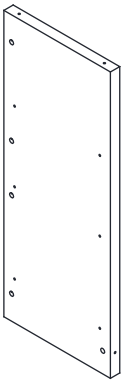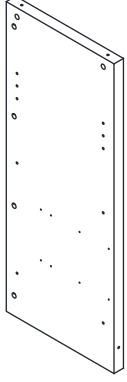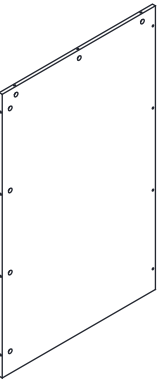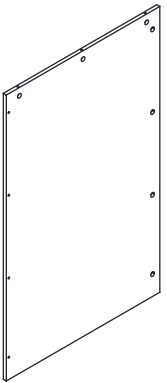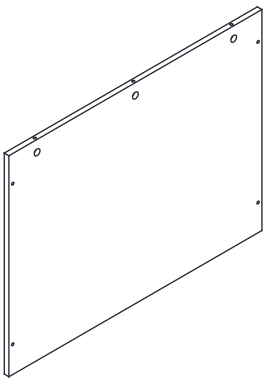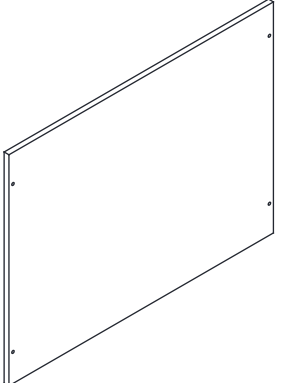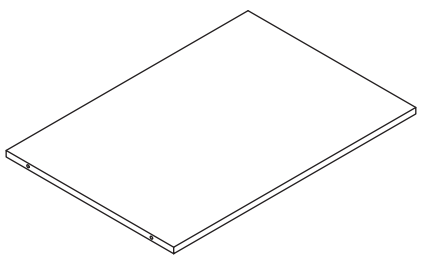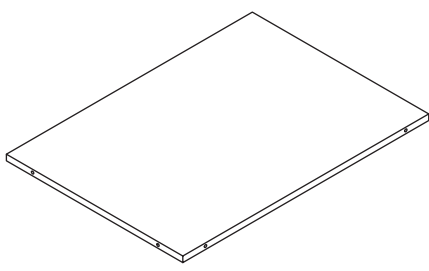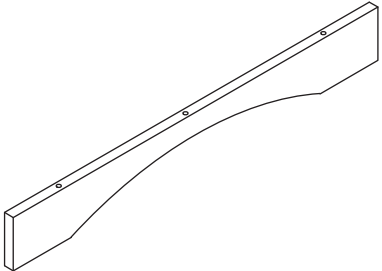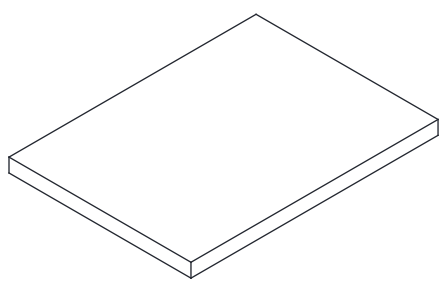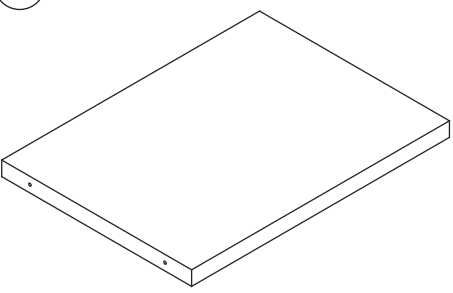
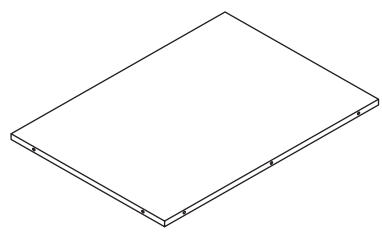
① x1 	② x1 	③ x1 
④ x1 	⑤ x1 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x4 	⑪ x2 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x1 
6/50		

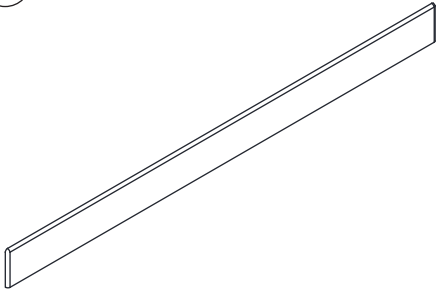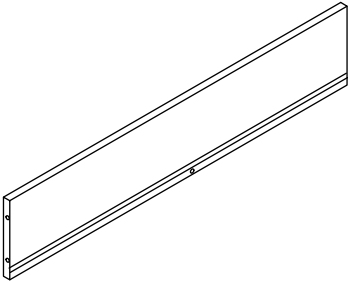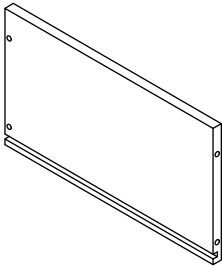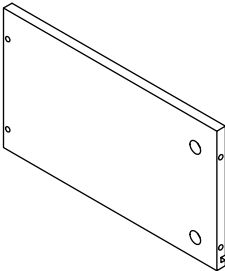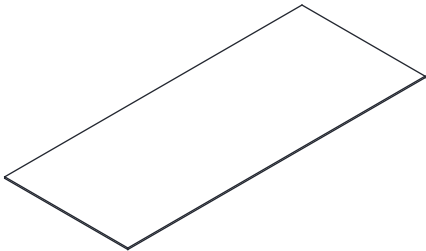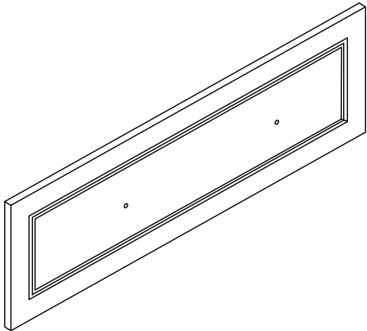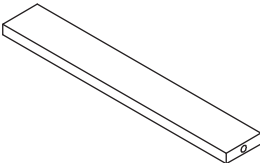         16 x 2 	17 x 2 	18 x 1 
19 x 2 	20 x 2 	21 x 2 
22 x 2 	23 x 2 	24 x 2 

 
 
1

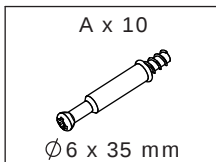

 
 
Screw eccentric rod (A) onto panel 2 as shown.

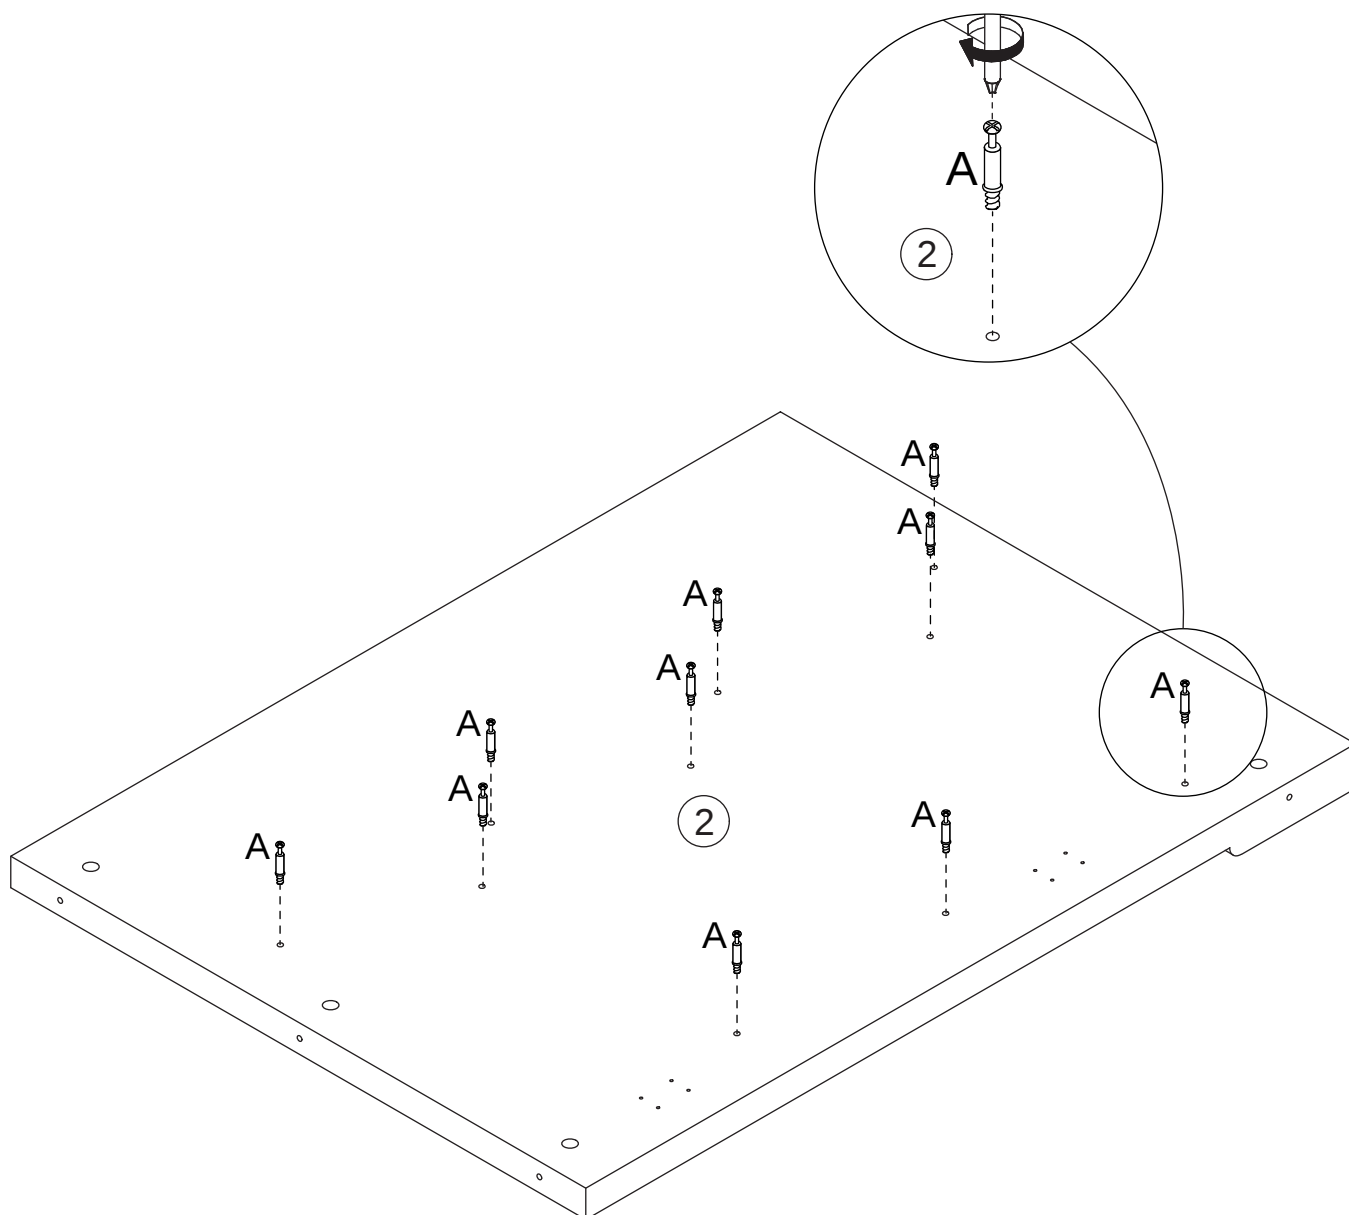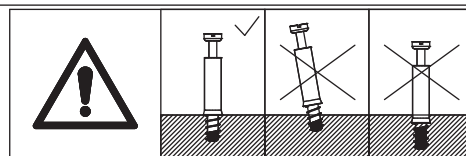



2

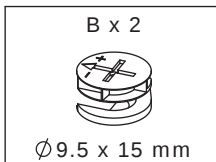  

 
 
Connect panel 2 to panel 10, tighten by turning cam lock (B) clockwise as shown.

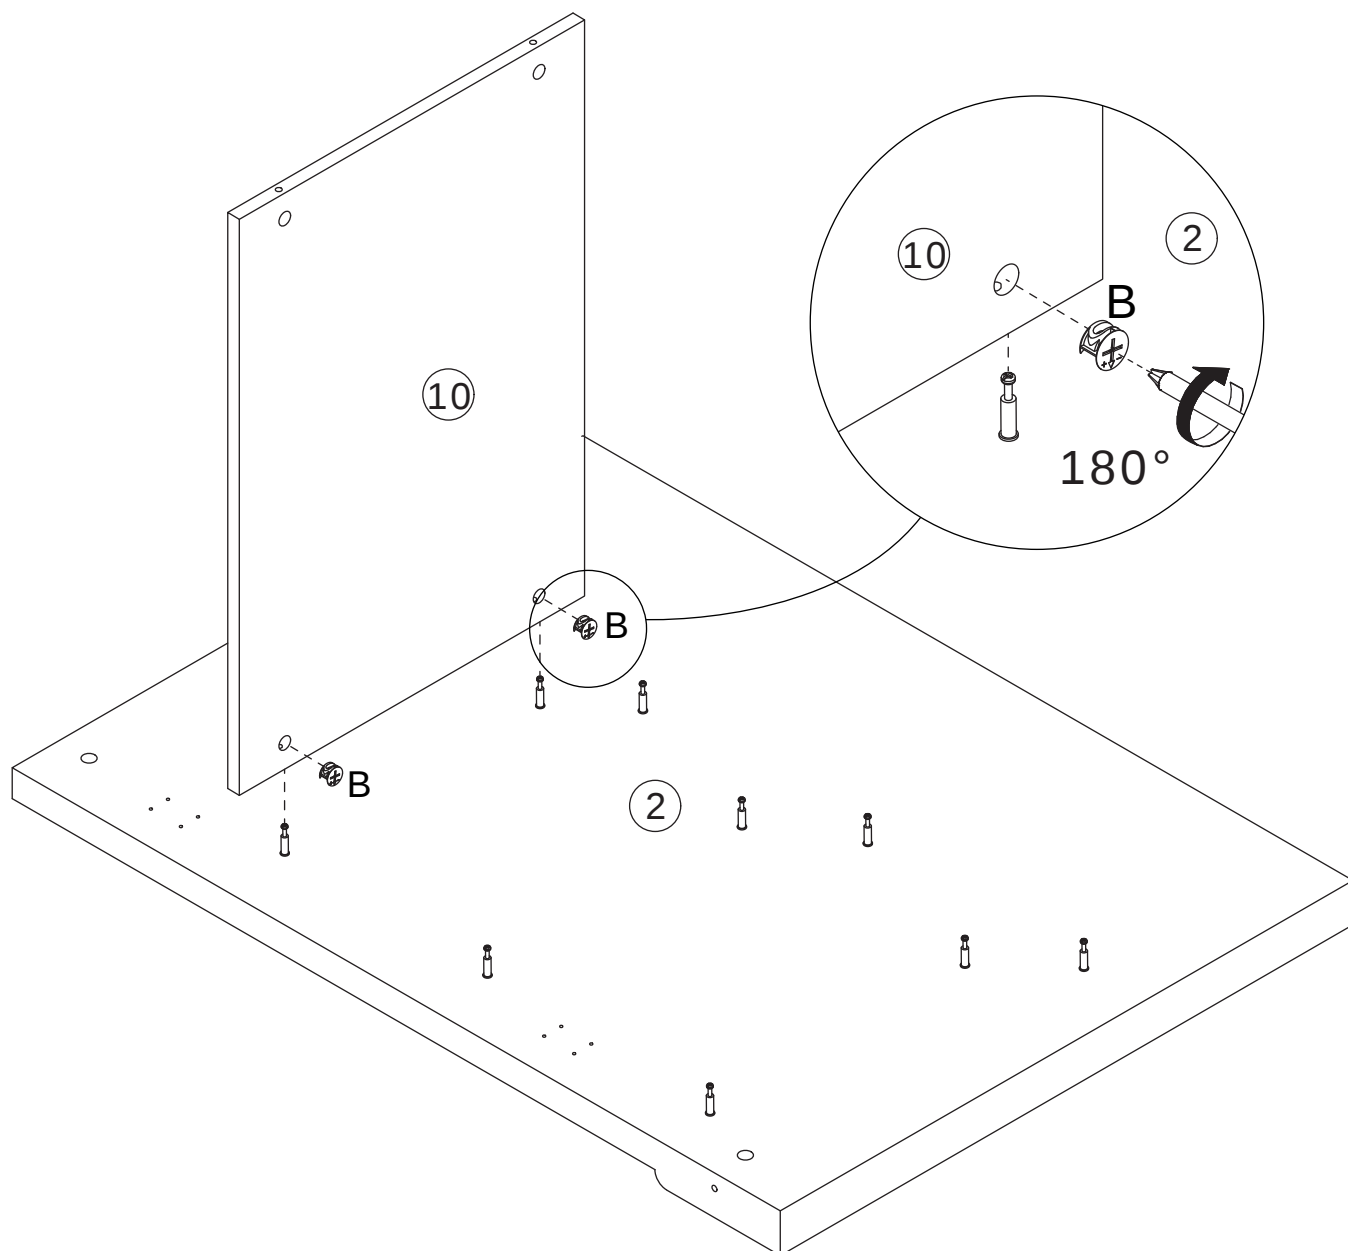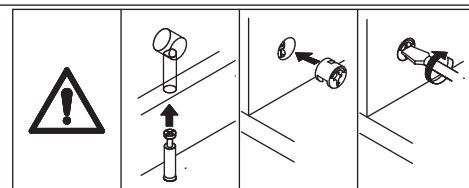



3

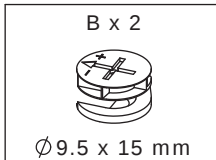  


 
 
Connect panel 2 to panel 10, tighten by turning cam lock (B) clockwise as shown.

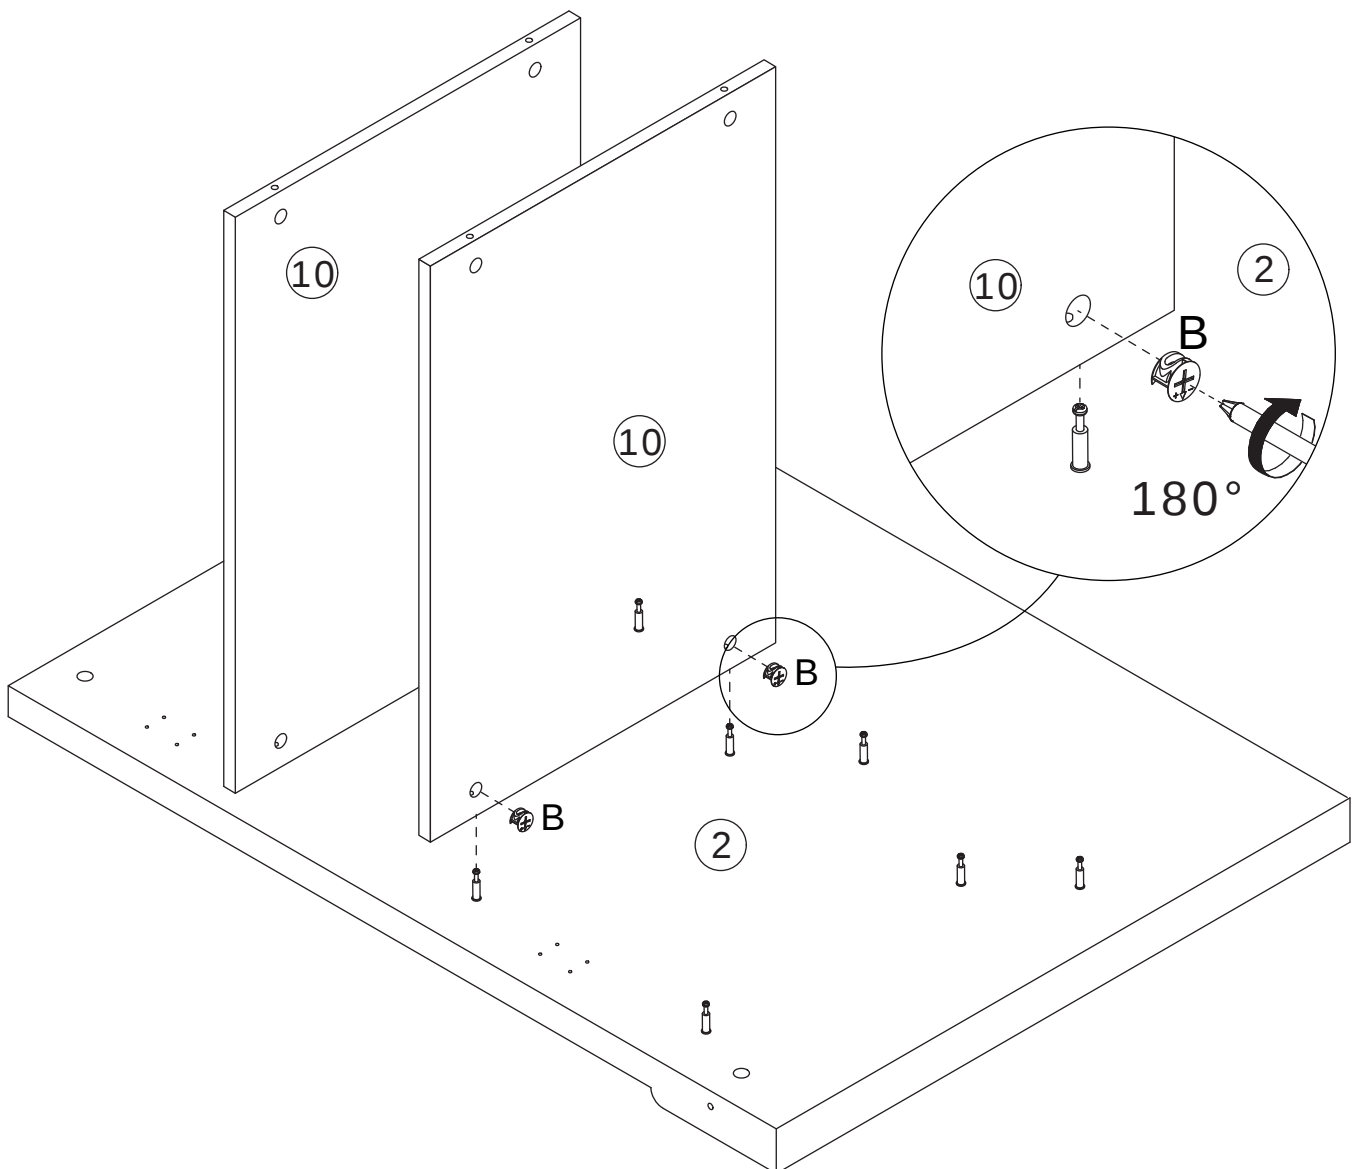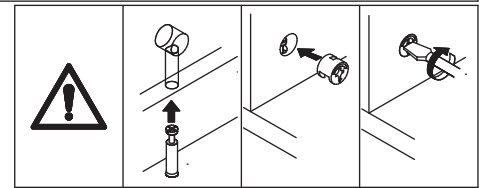



4

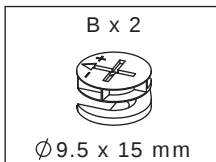  

  
 
Connect panel 2 to panel 11, tighten by turning cam lock (B) clockwise as shown.

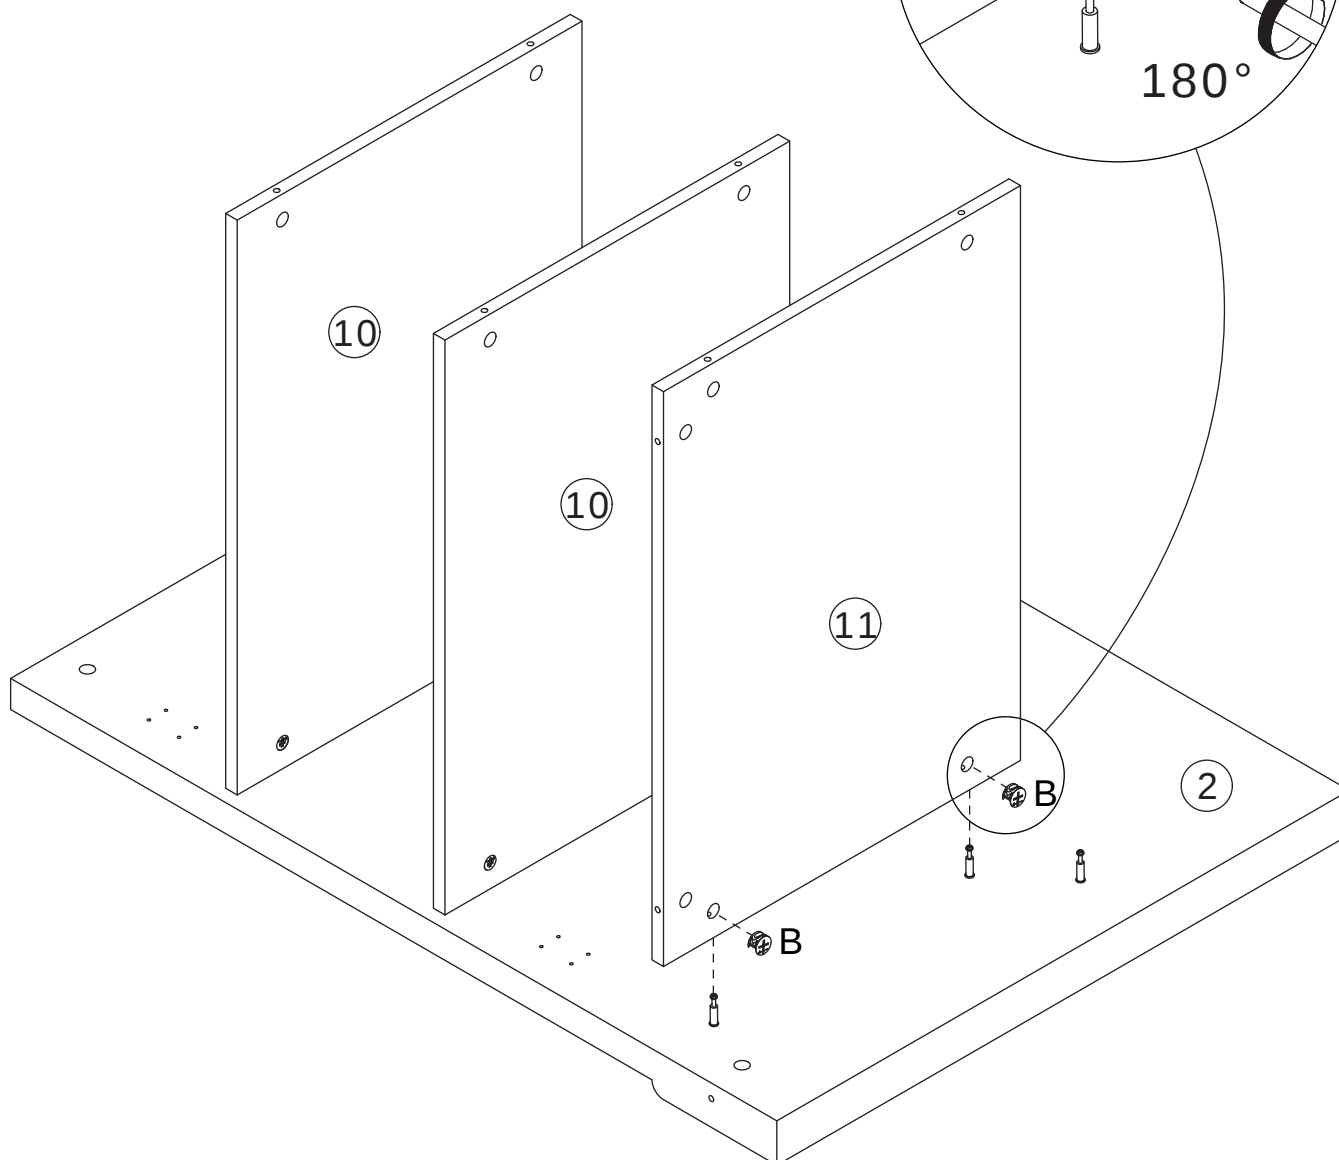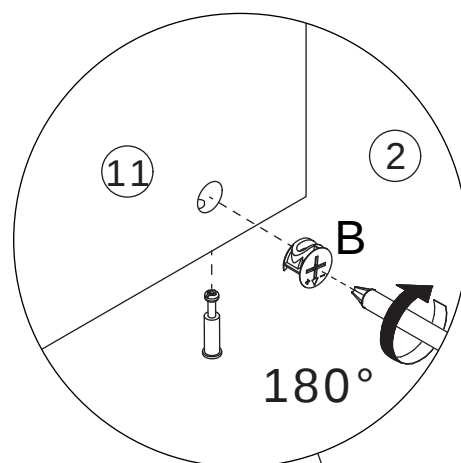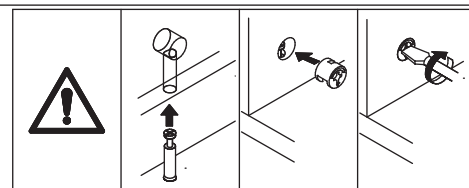

5

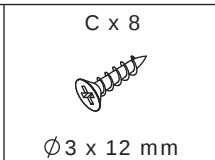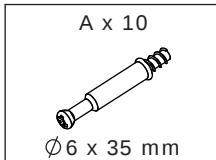  

  Screw eccentric rod (A) onto **both sides** of panel 4.
 Secure slide rail (H) to panel 4 using screw (C) as shown.

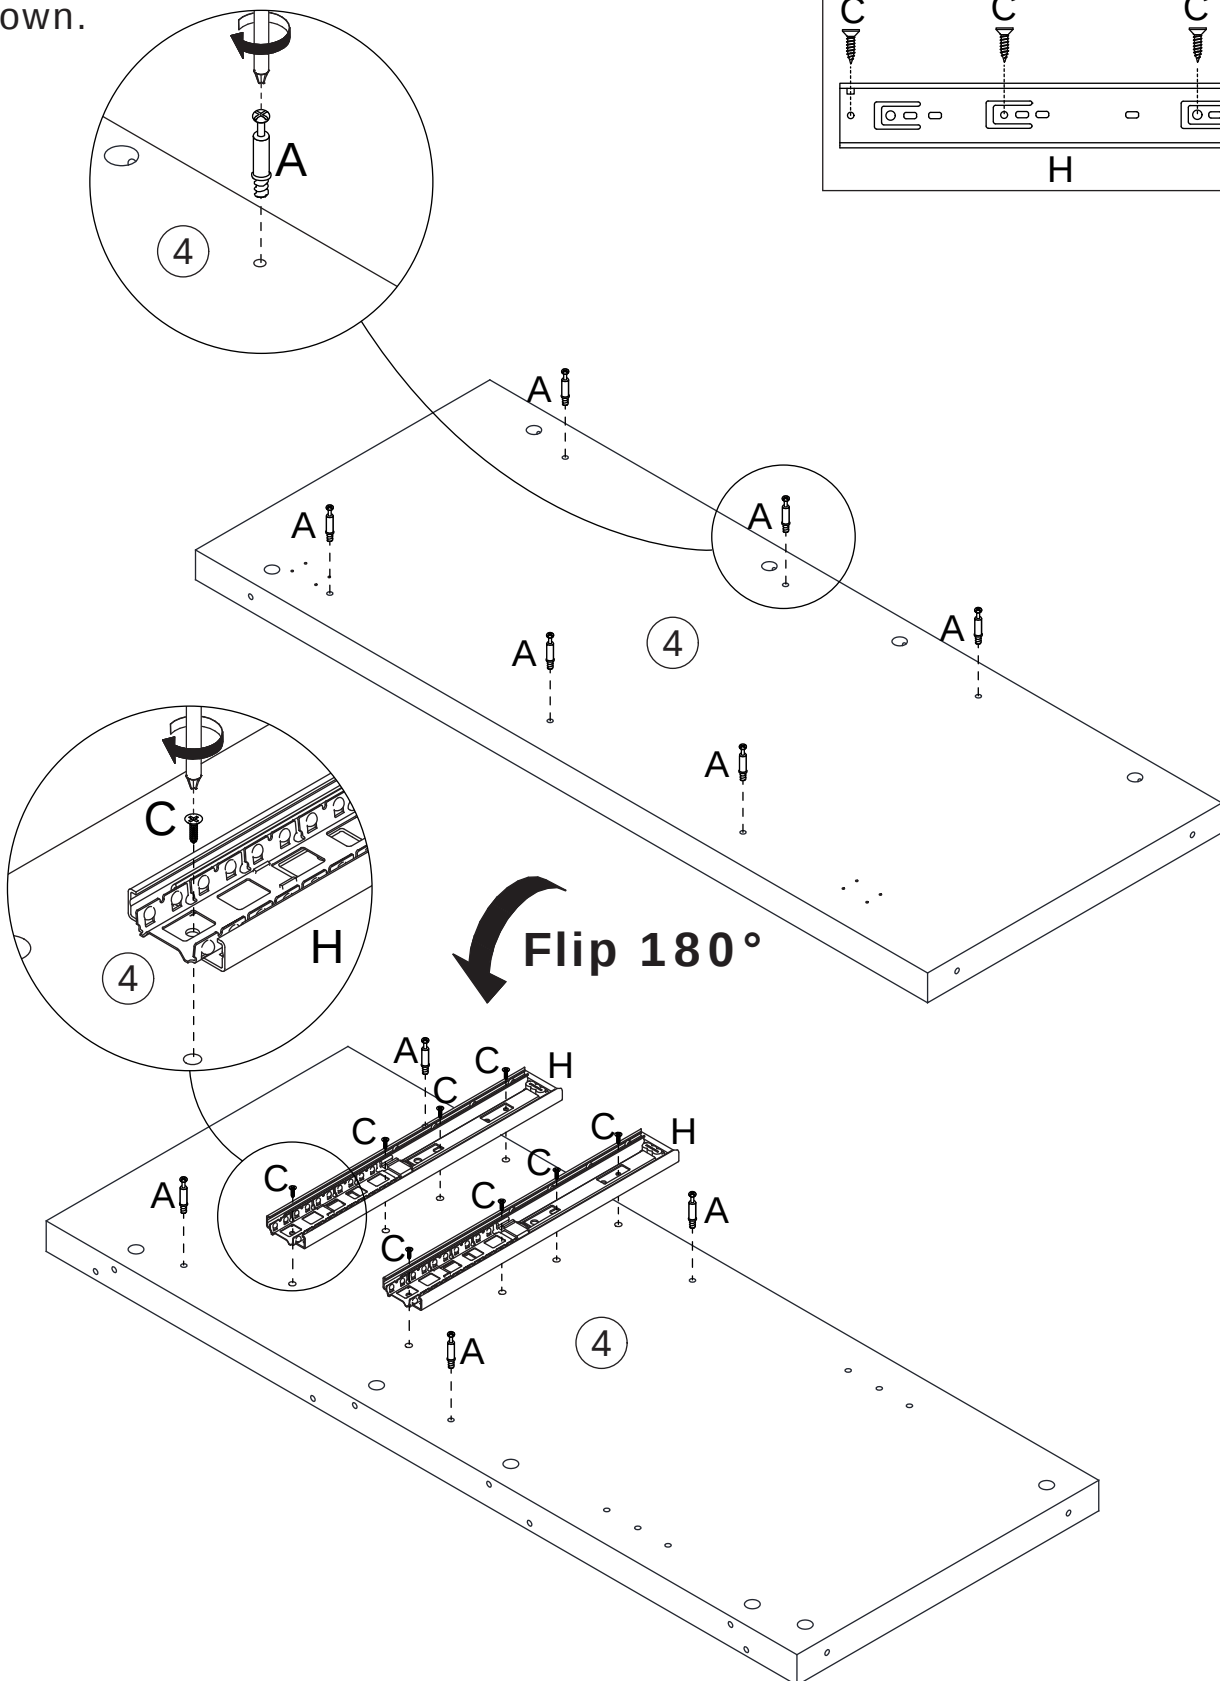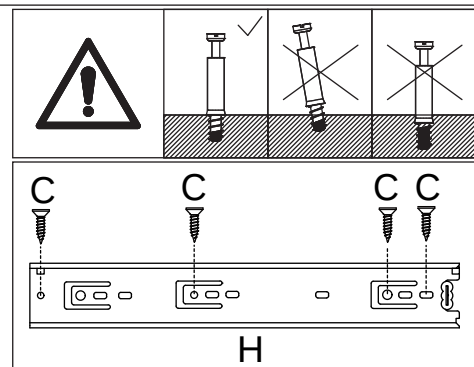


6



B x 6




 
Ø 9.5 x 15 mm



 
 
Connect panel 4 to panels 10 and 11, tighten by turning cam lock (B) clockwise as shown.

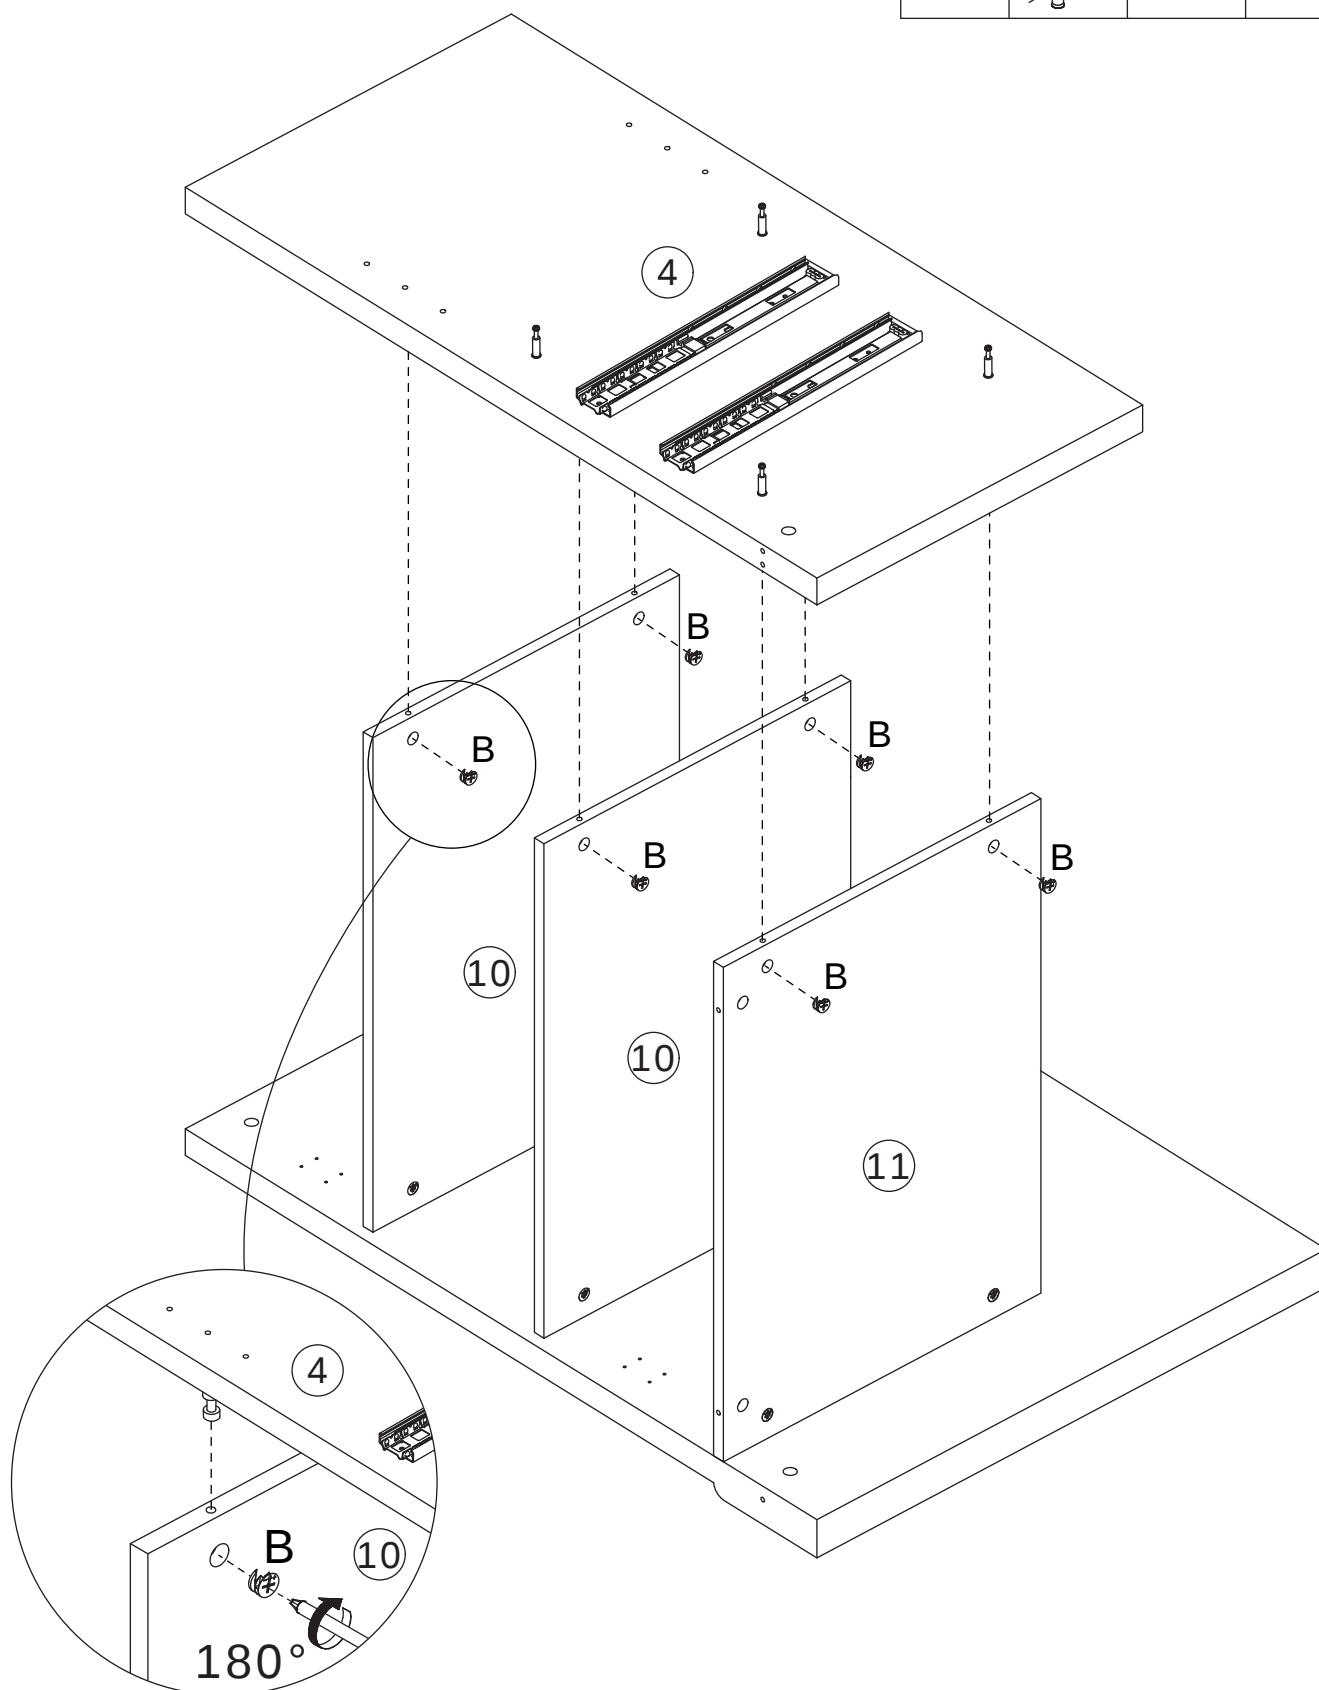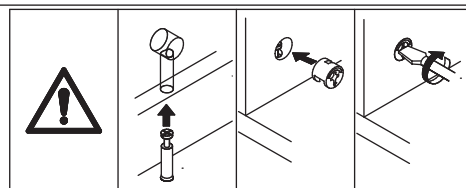

7

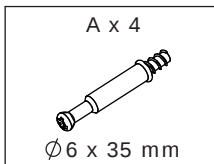  

  Screw eccentric rod (A) onto panel 6 as shown.

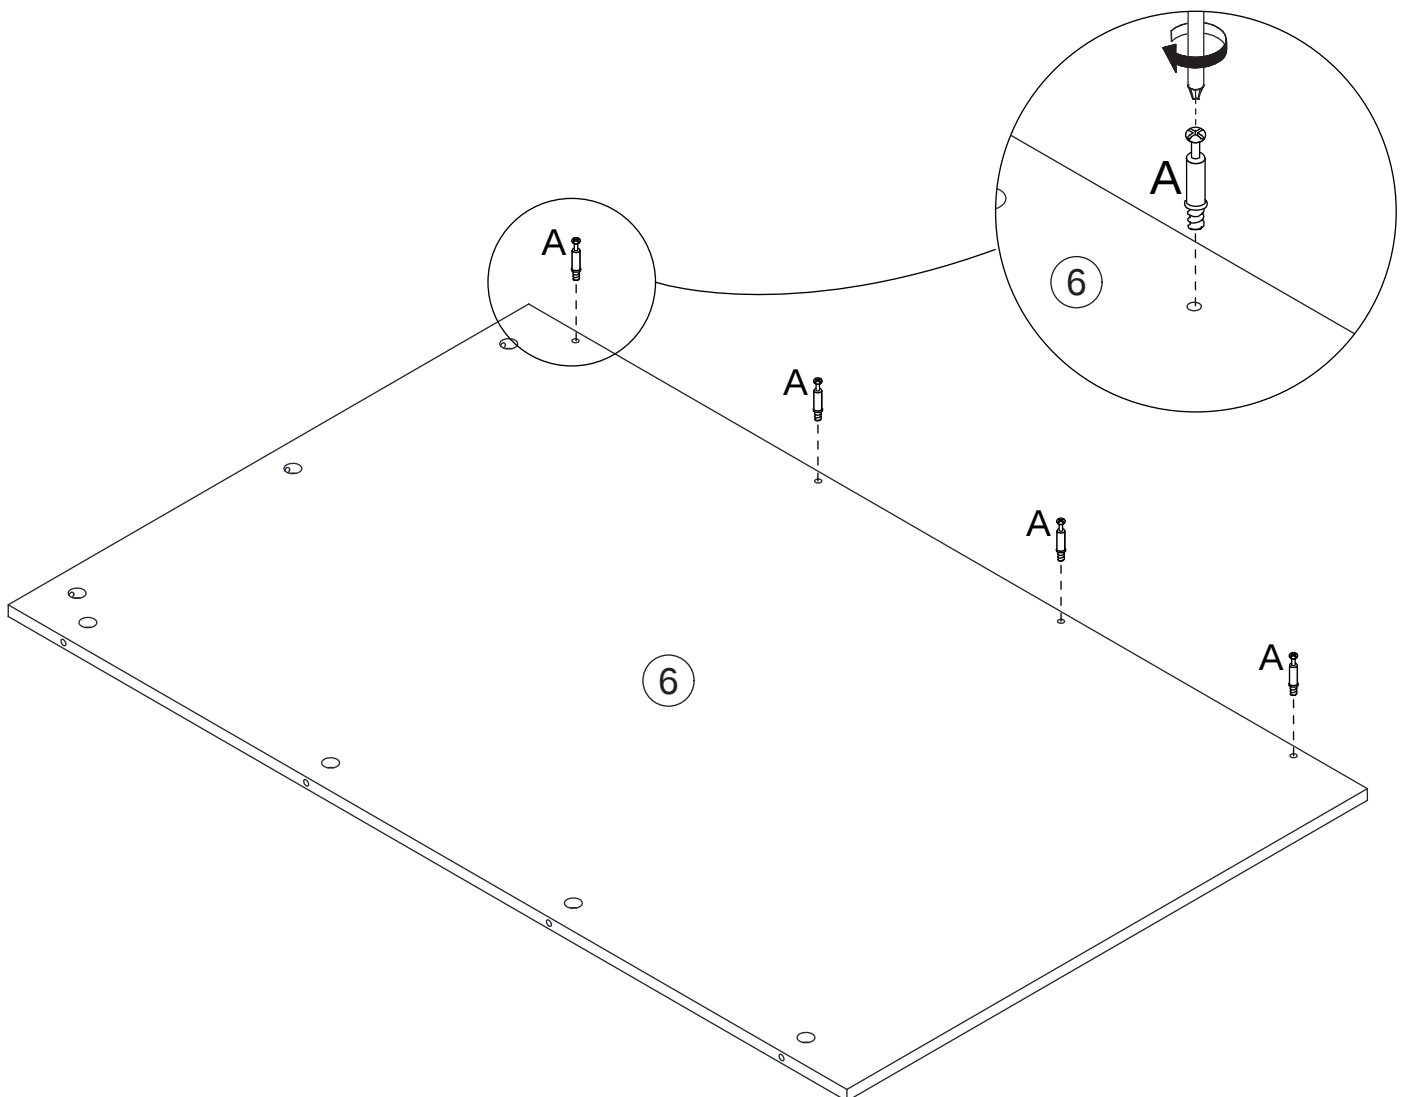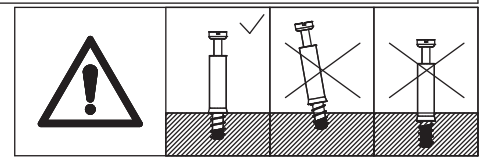


8

B x 8





 Ø 9.5 x 15 mm





Connect panel 6 to panels 2 and 4, tighten by turning cam lock (B) clockwise as shown.

 
 
Ensure that the arrows on panel 6 are pointing in the direction shown in the diagram.

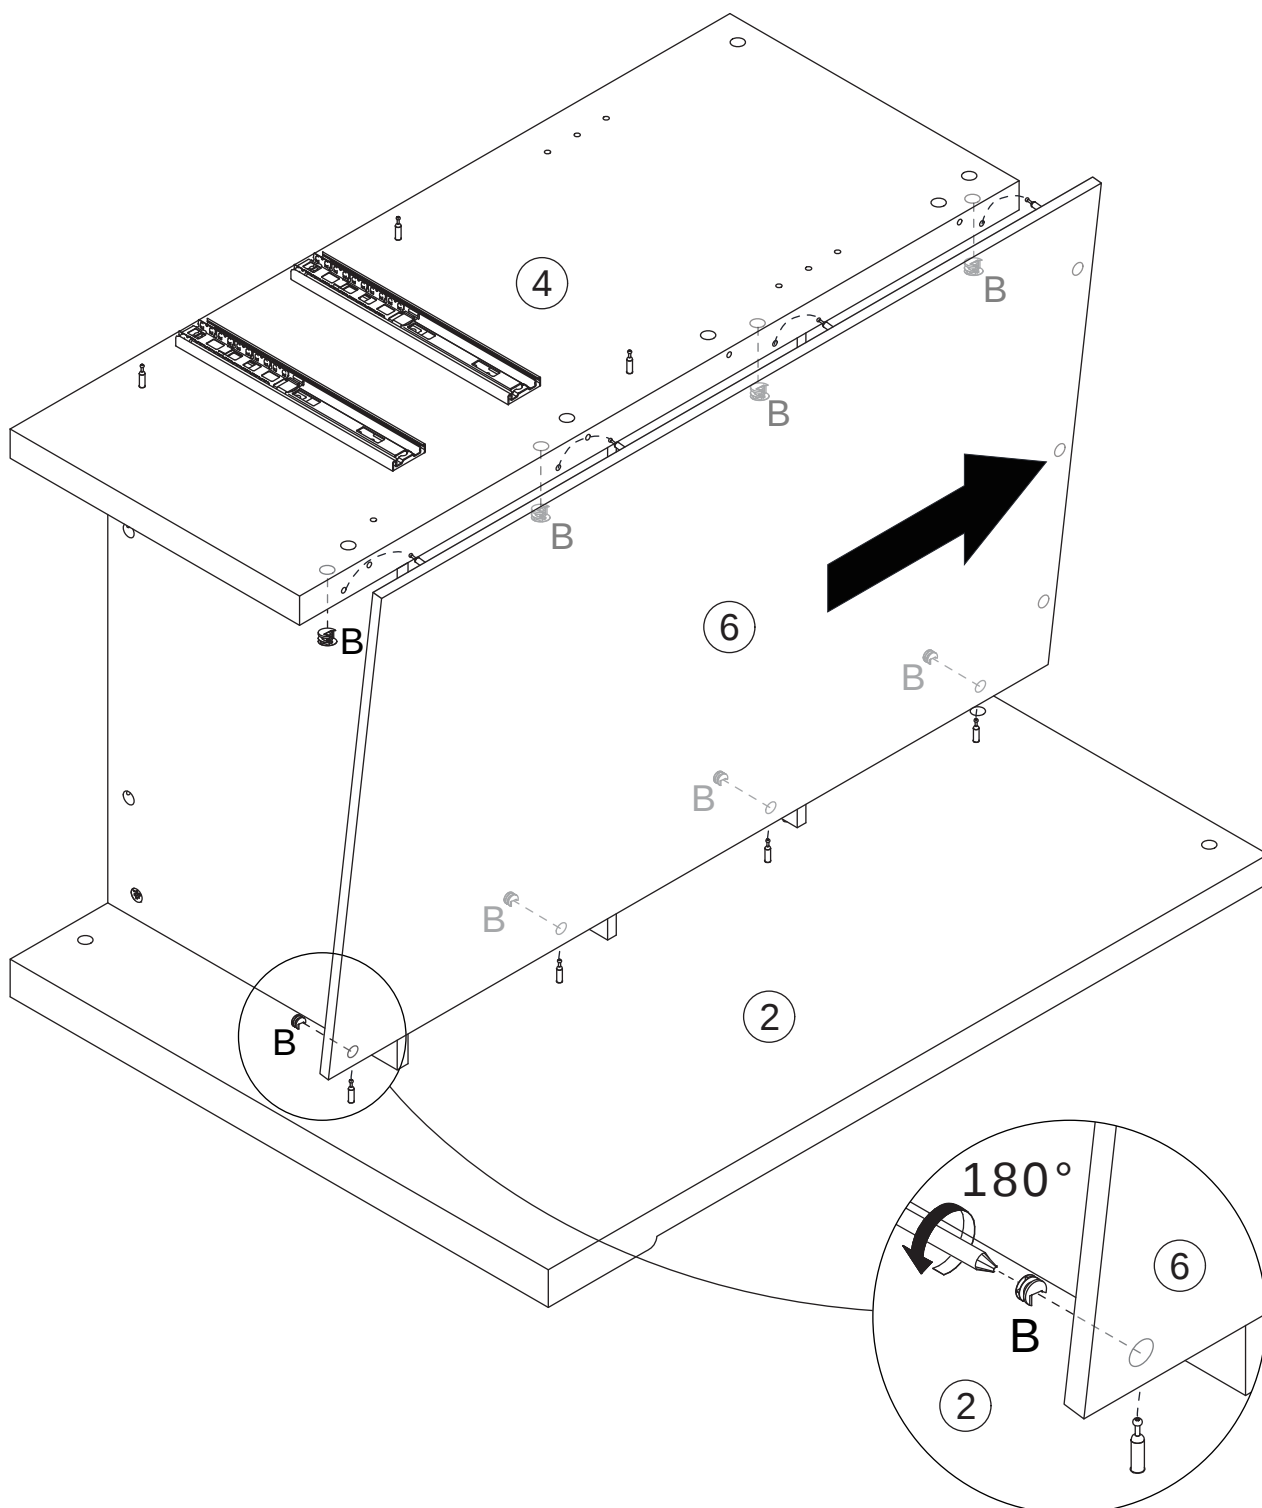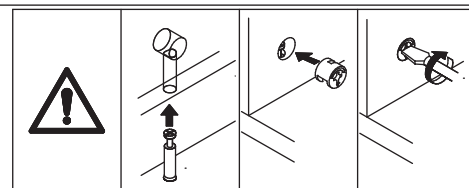



9

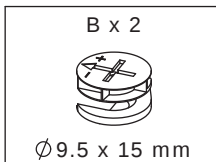  

 
 
Connect panel 4 to panel 14, tighten by turning cam lock (B) clockwise as shown.

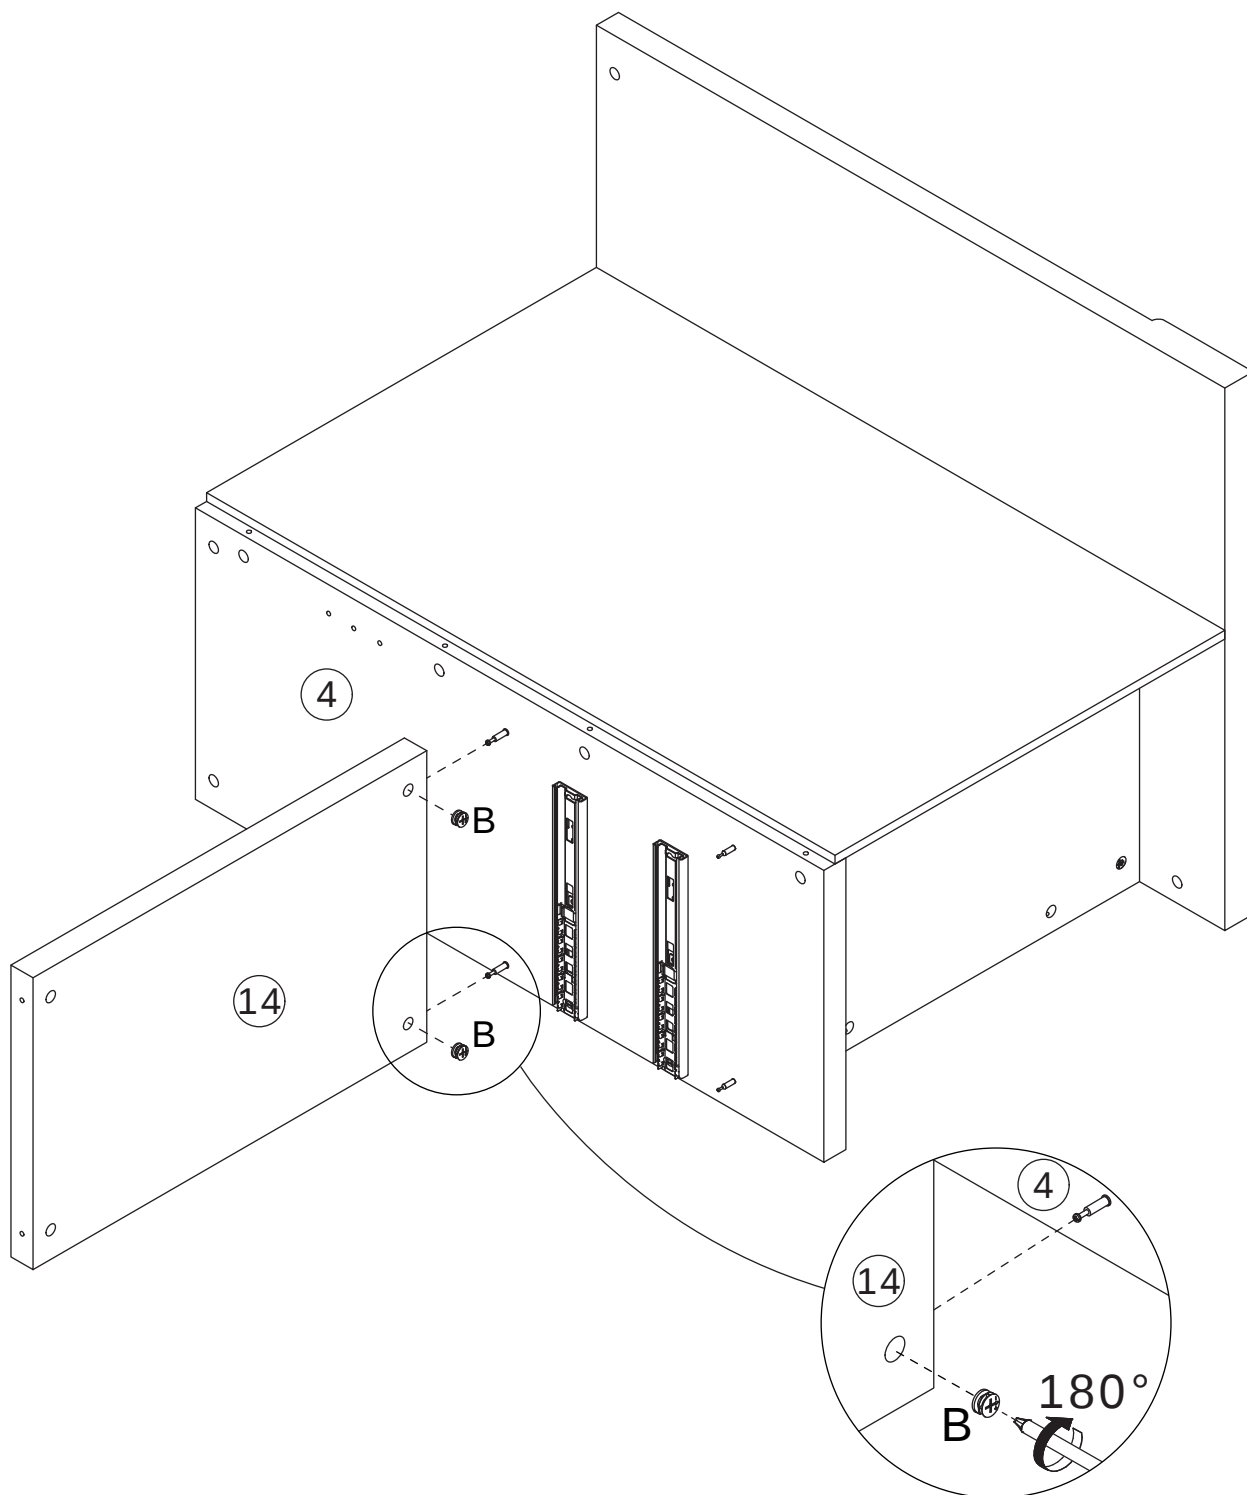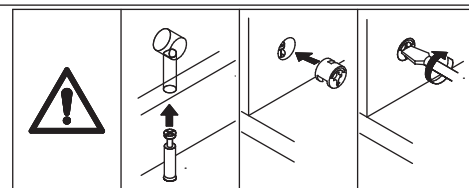


10

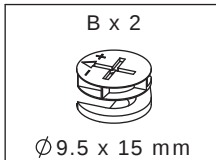  

 
 
Connect panel 15 to panel 4, tighten by turning cam lock (B) clockwise as shown.

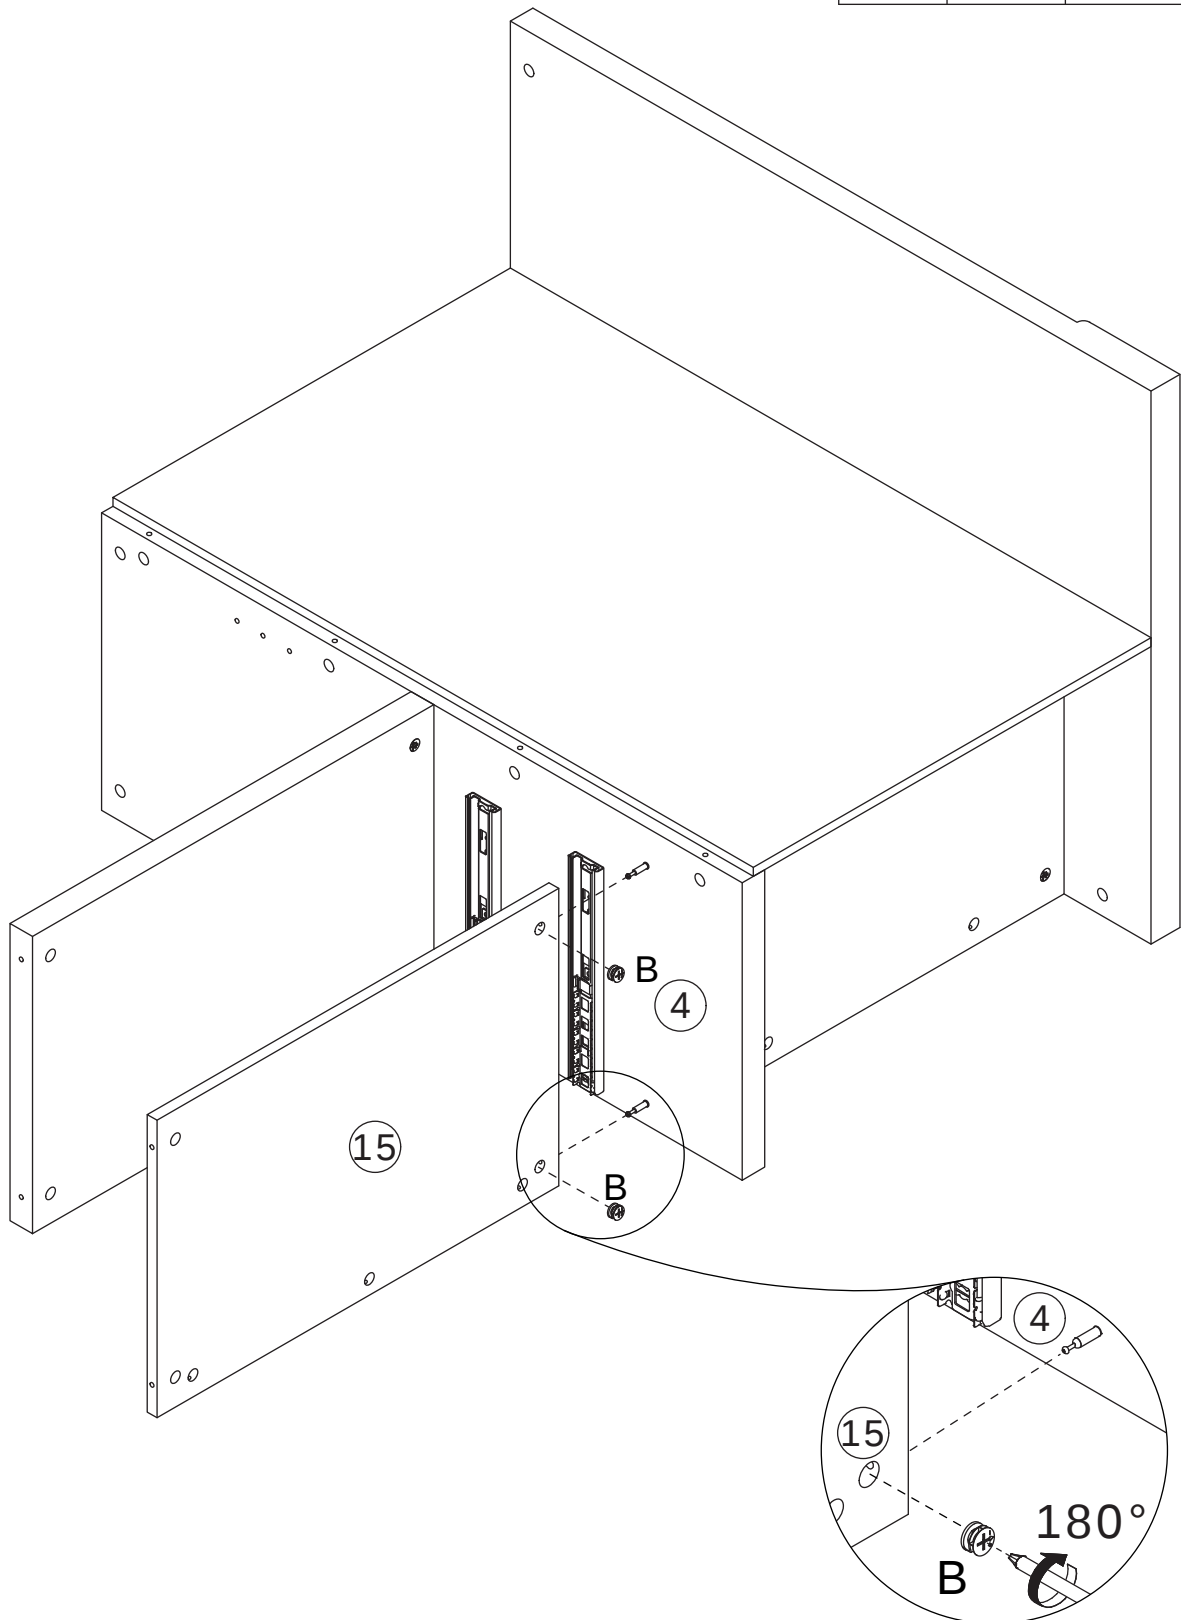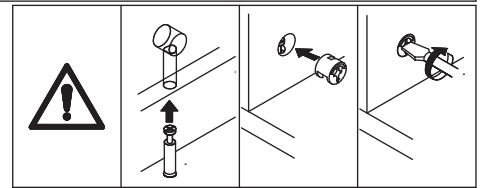



11

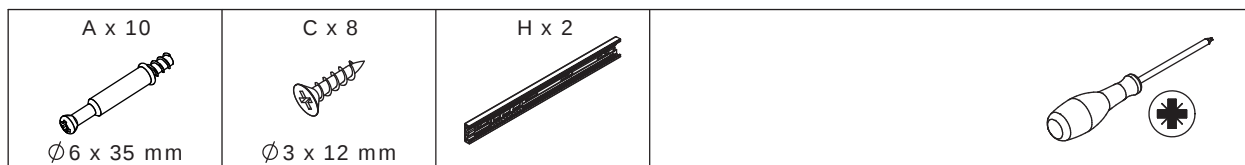 

 
 
Screw eccentric rod (A) onto **both sides of** panel 5.
Secure slide rail (H) to panel 5 using screw (C) as shown.

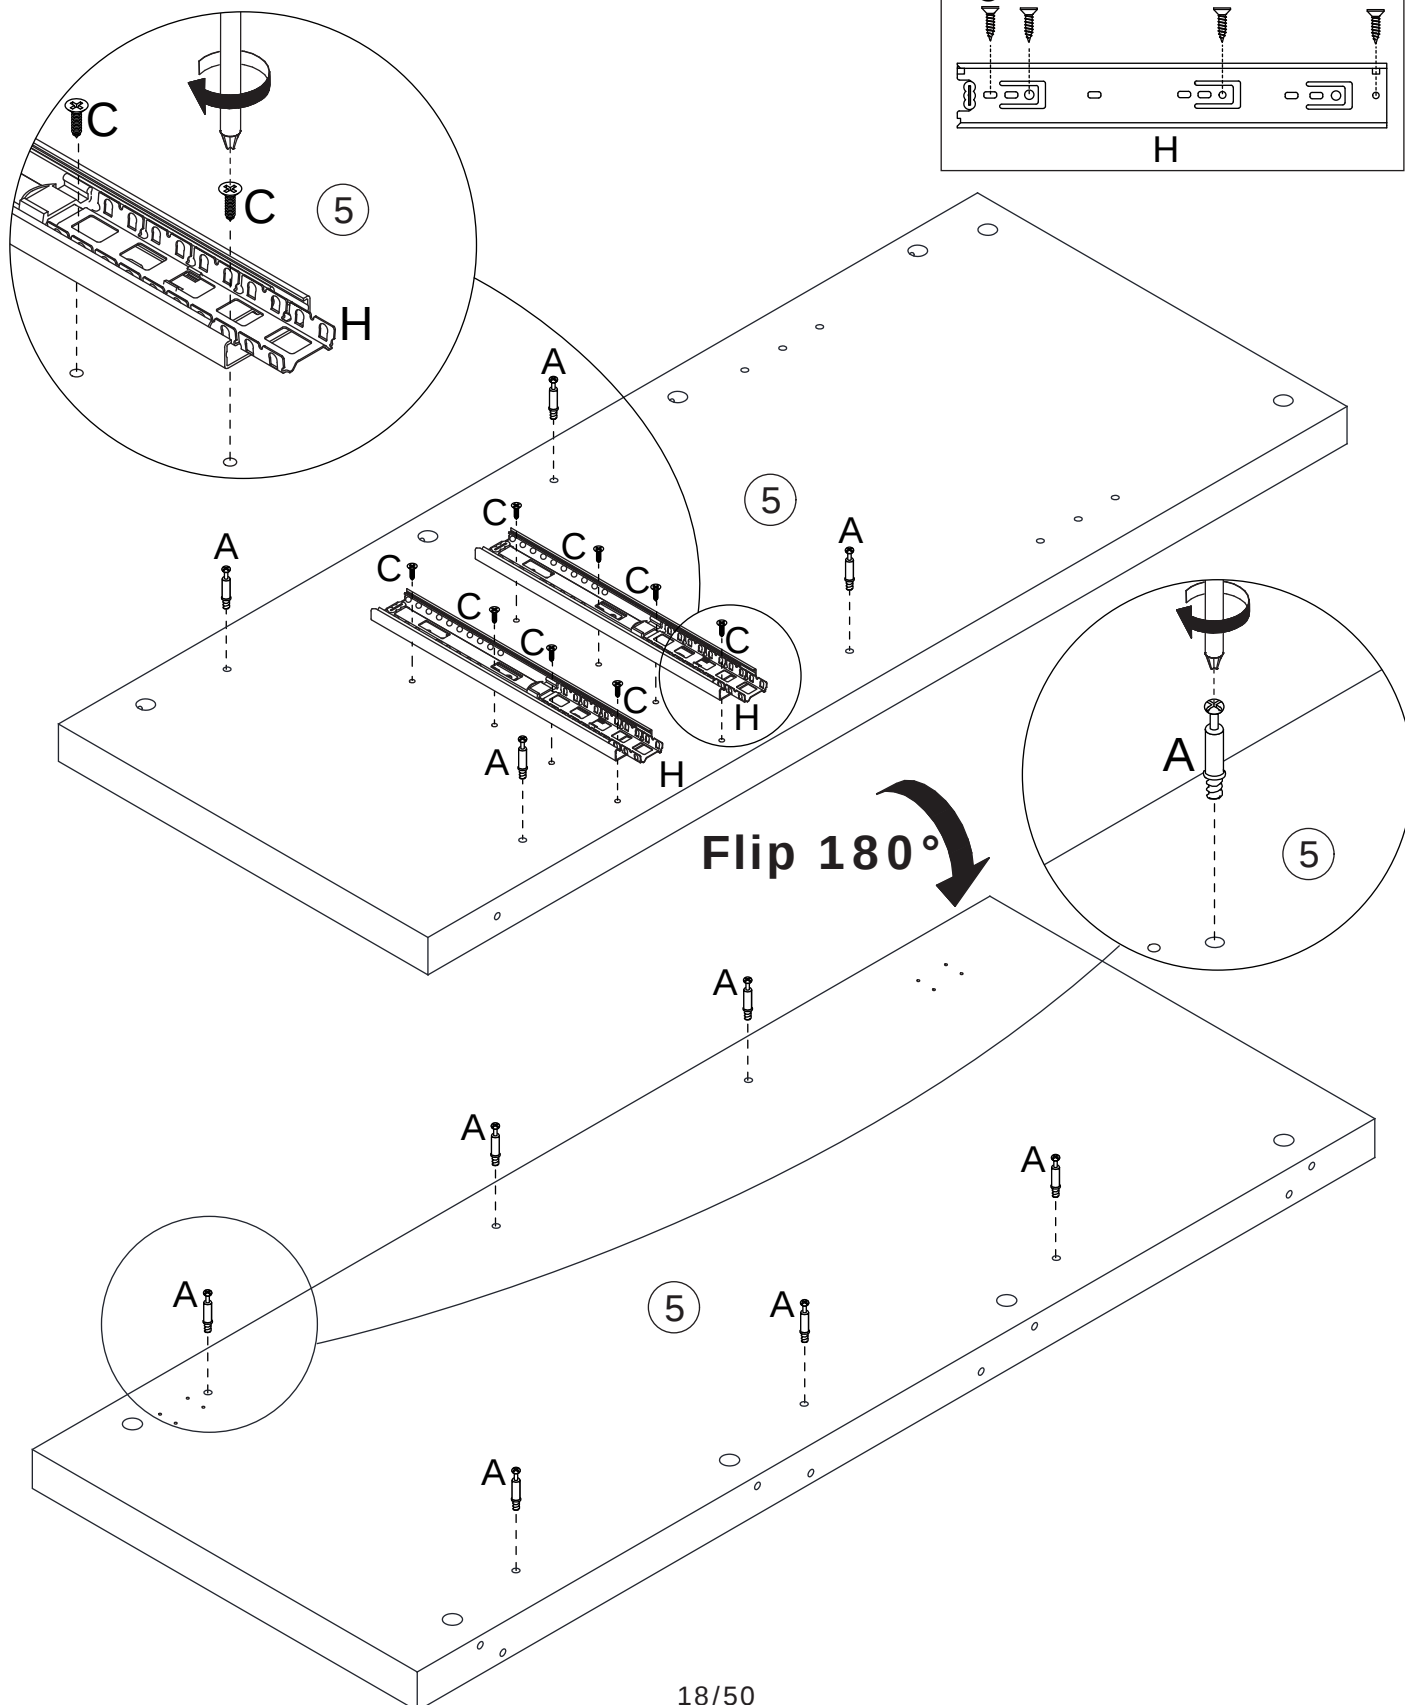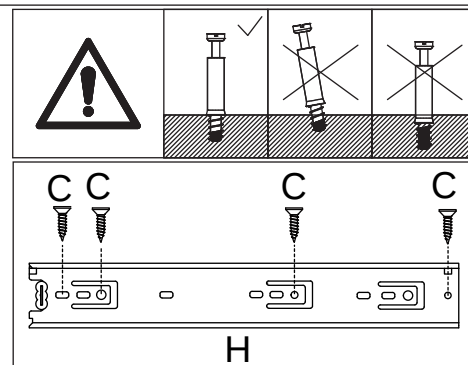



12

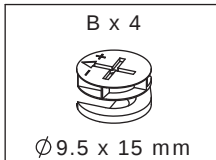  

 
 
Connect panel 5 to panels 14 and 15, tighten by turning cam lock (B) clockwise as shown.

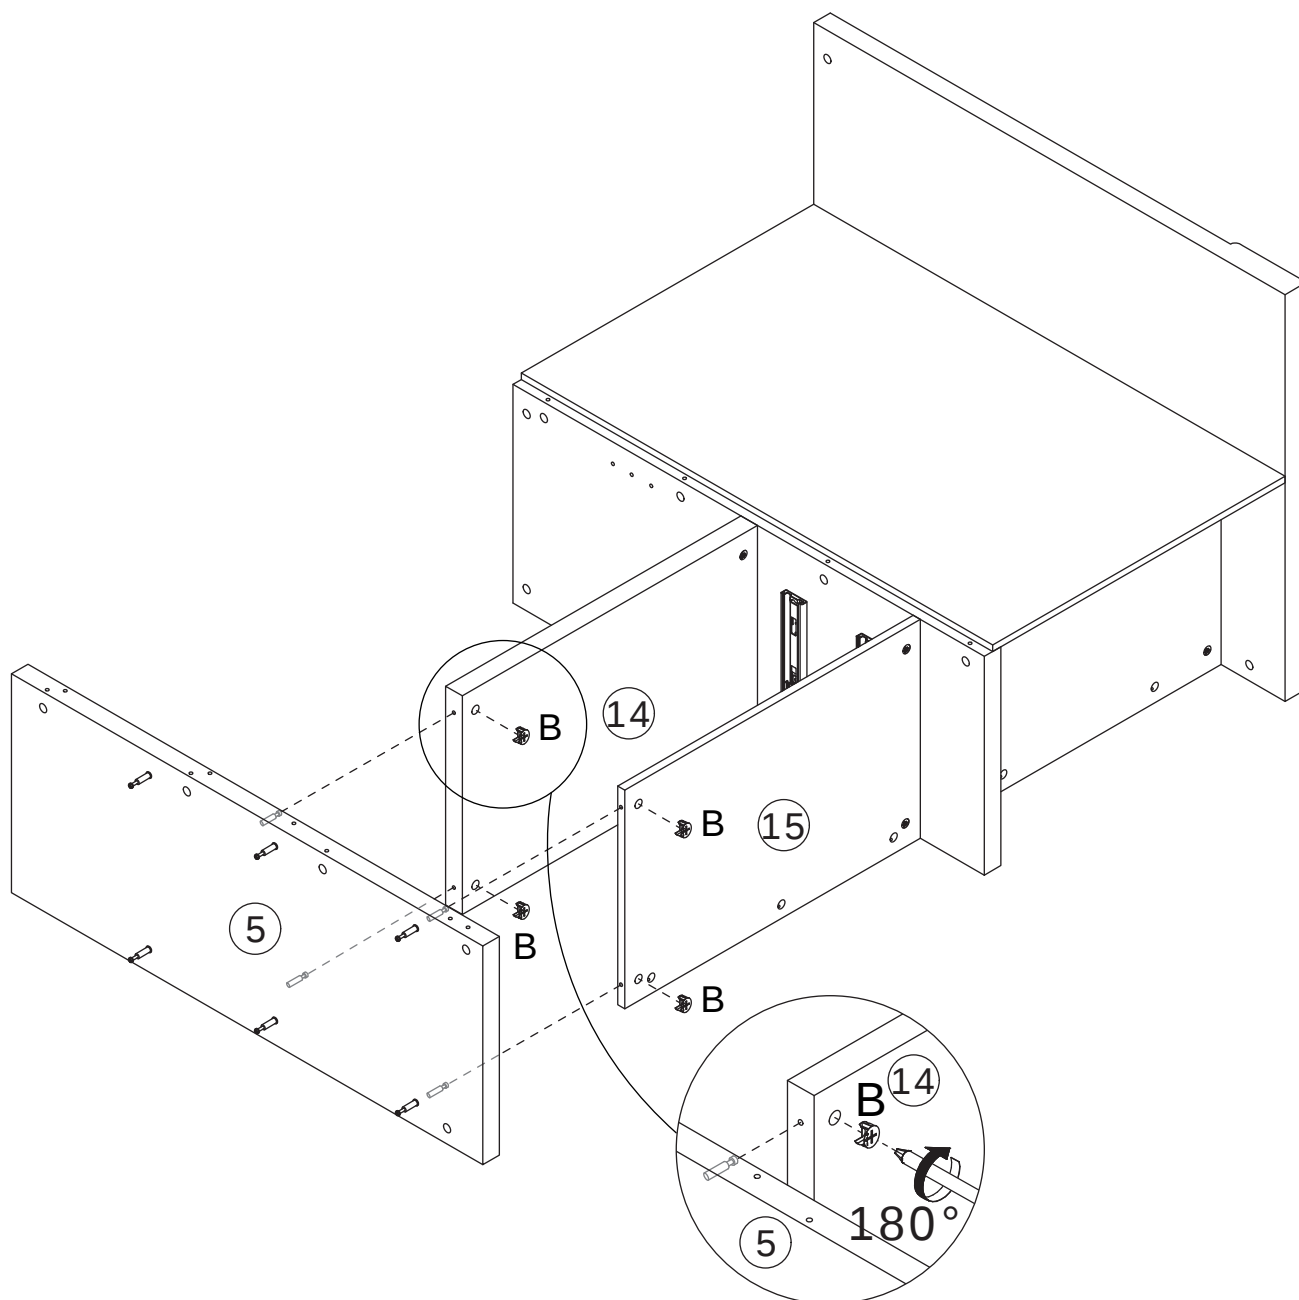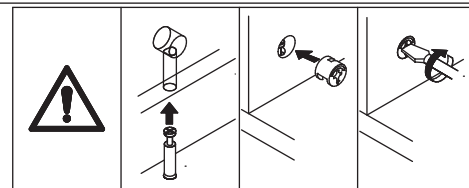



13

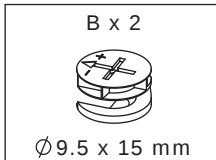  

 
 
Connect panel 10 to panel 5, tighten by turning cam lock (B) clockwise as shown.

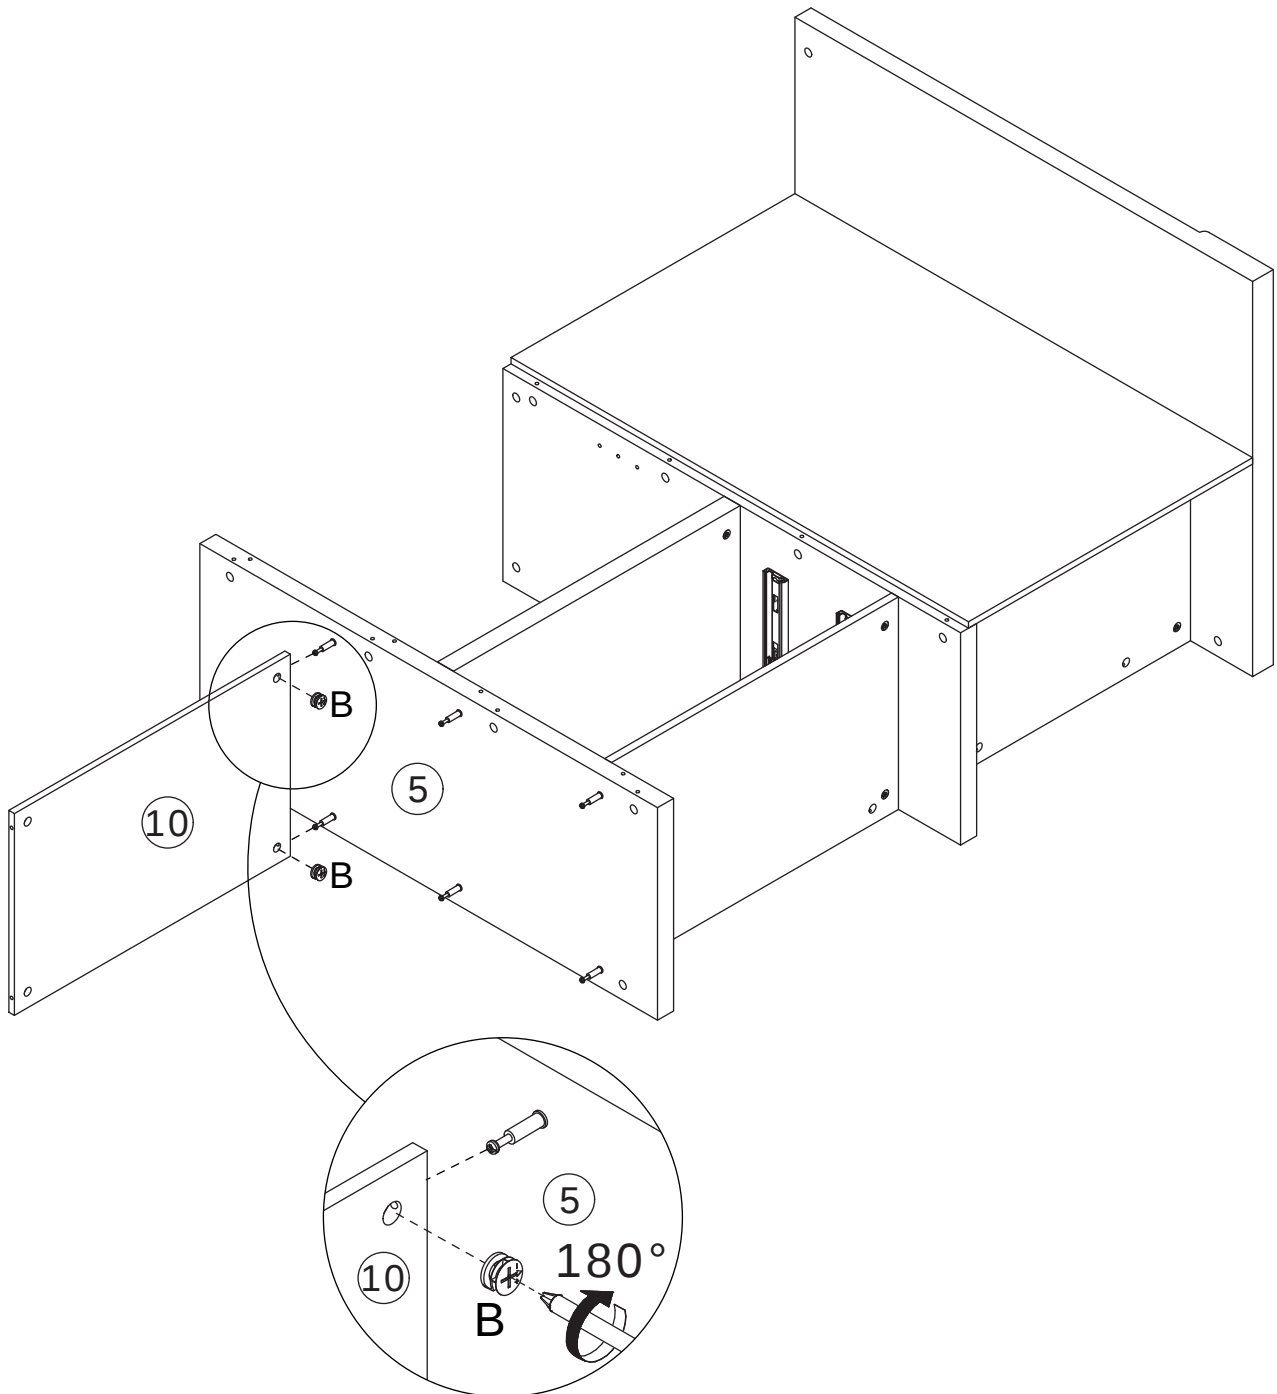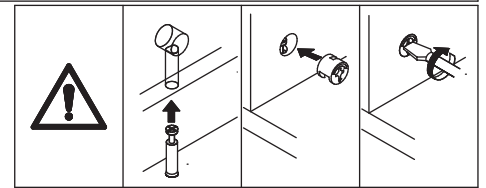

14

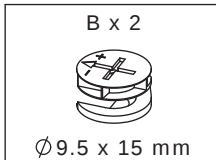  

  Connect panel 10 to panel 5, tighten by turning cam lock (B) clockwise as shown.

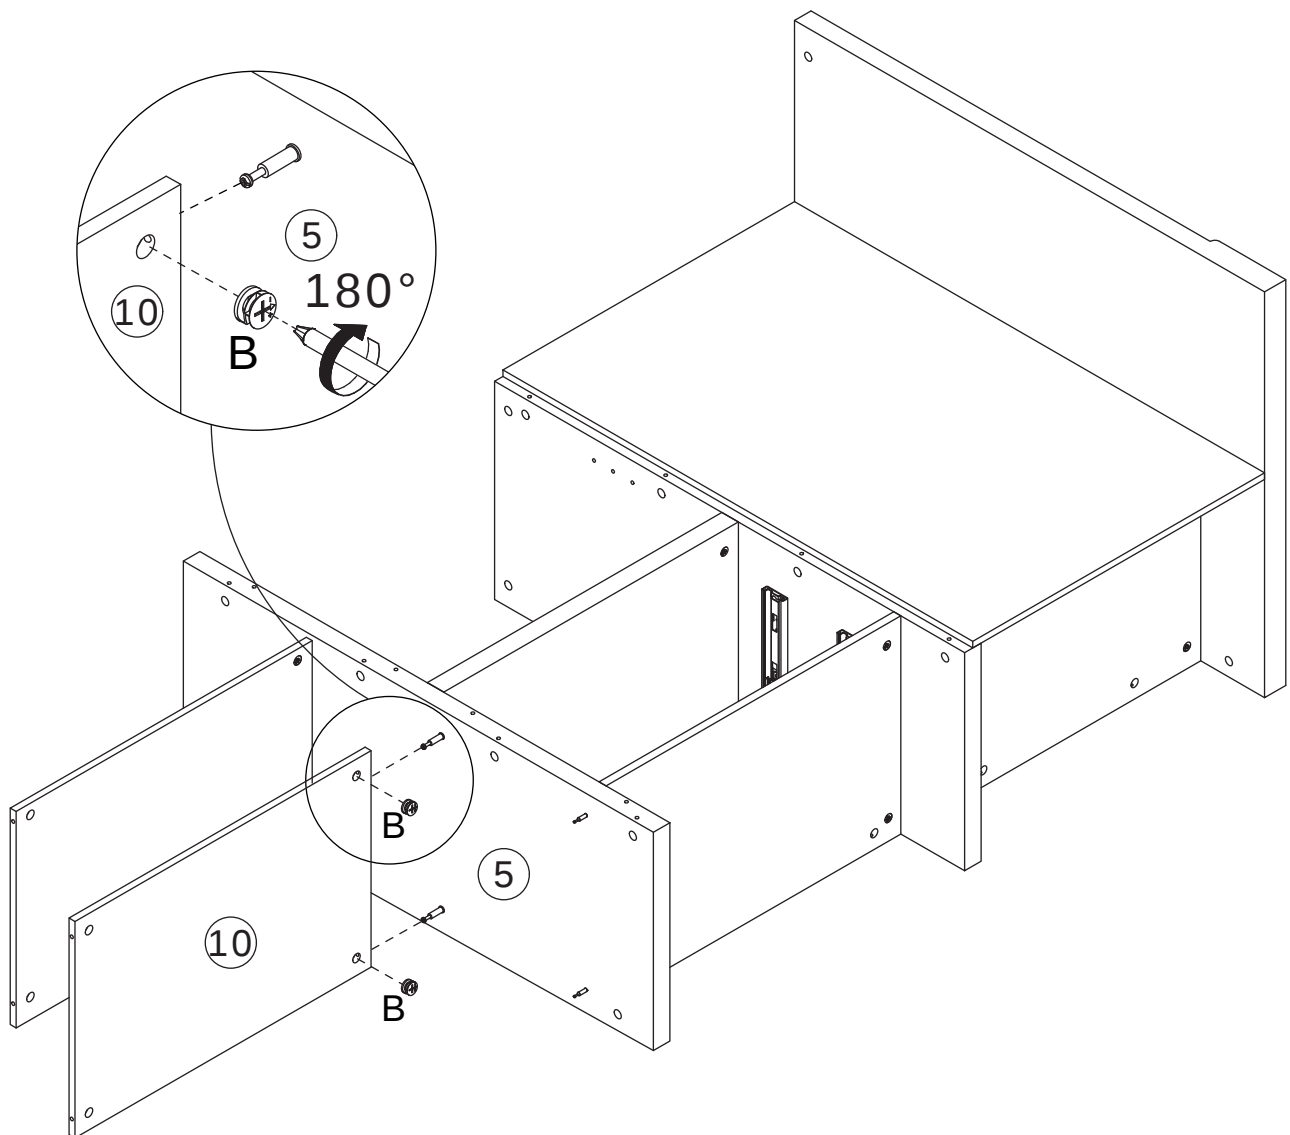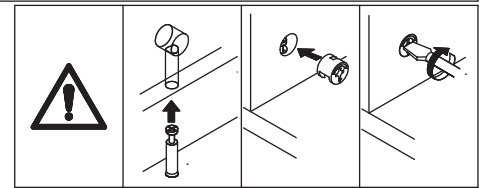


15



B x 2




 
Ø 9.5 x 15 mm



 
 
Connect panel 11 to panel 5, tighten by turning cam lock (B) clockwise as shown.

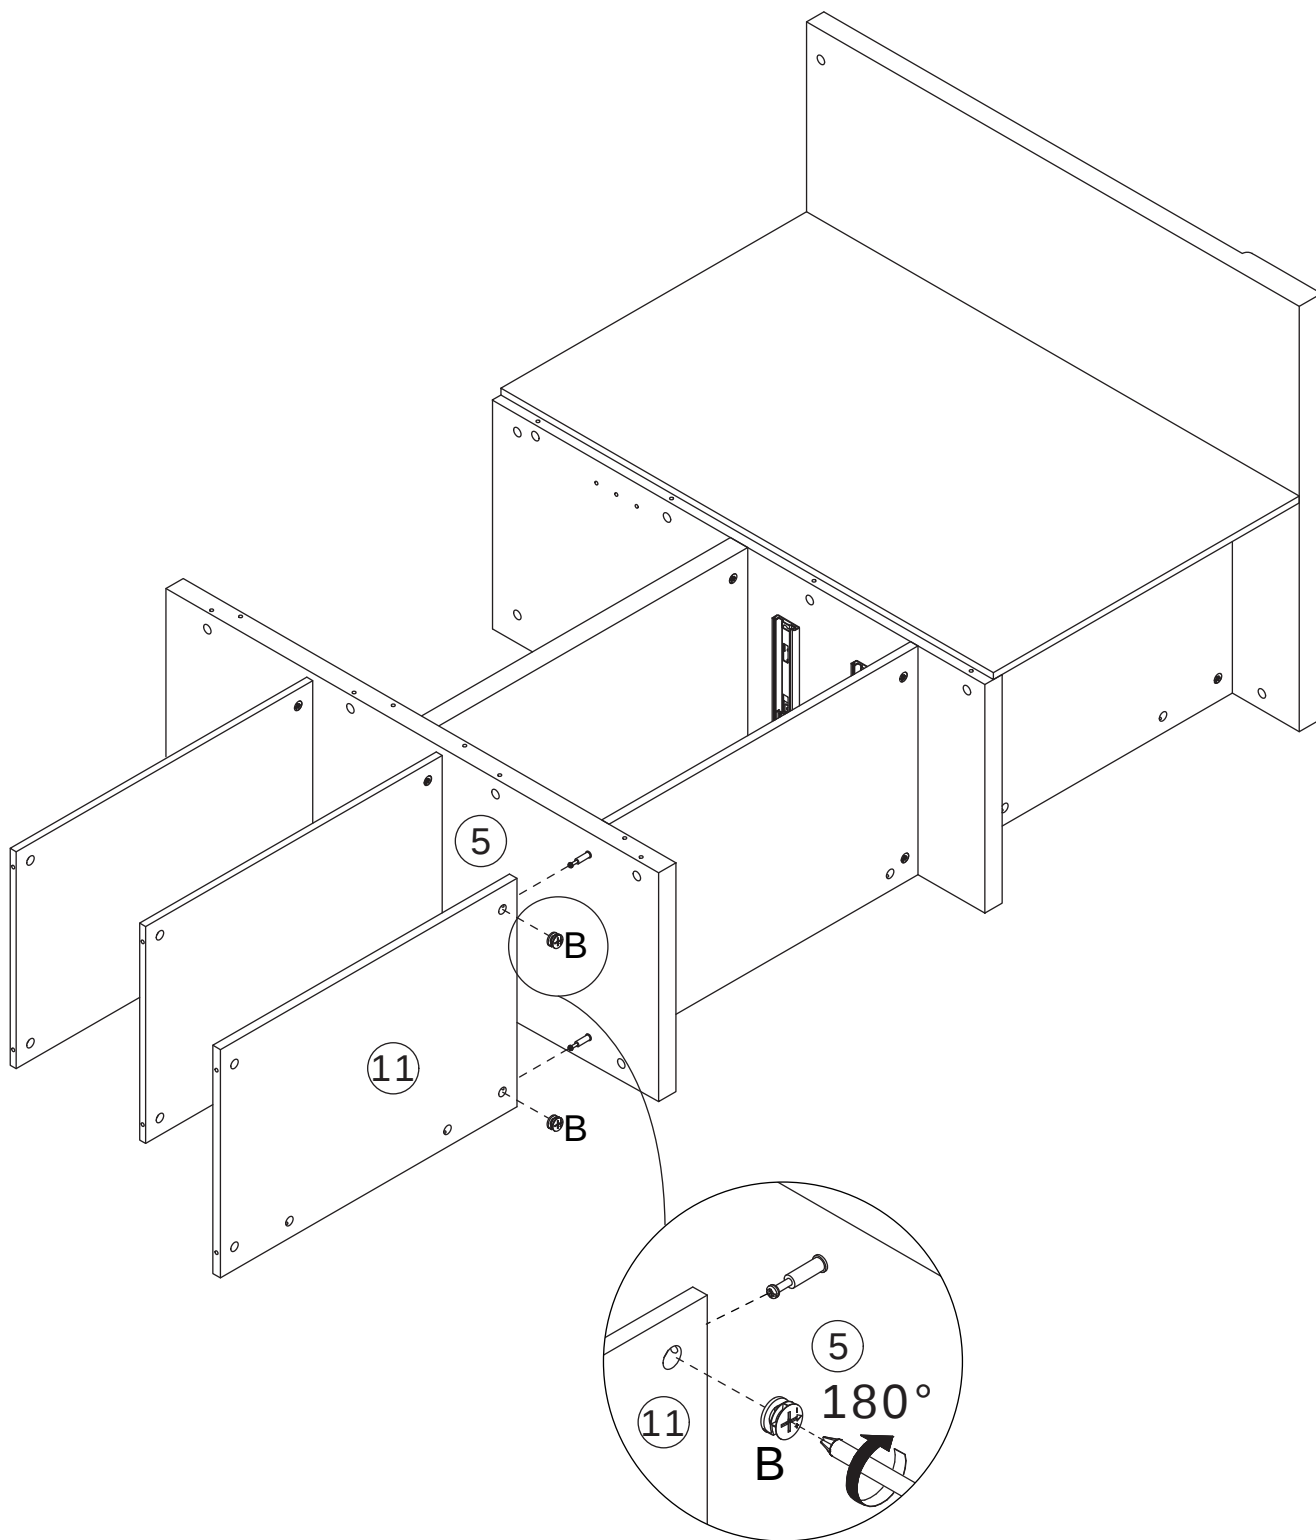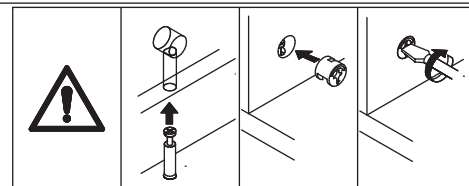



16

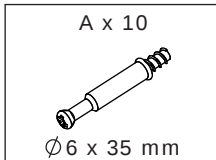  

 
 
Screw eccentric rod (A) onto panel 3 as shown.

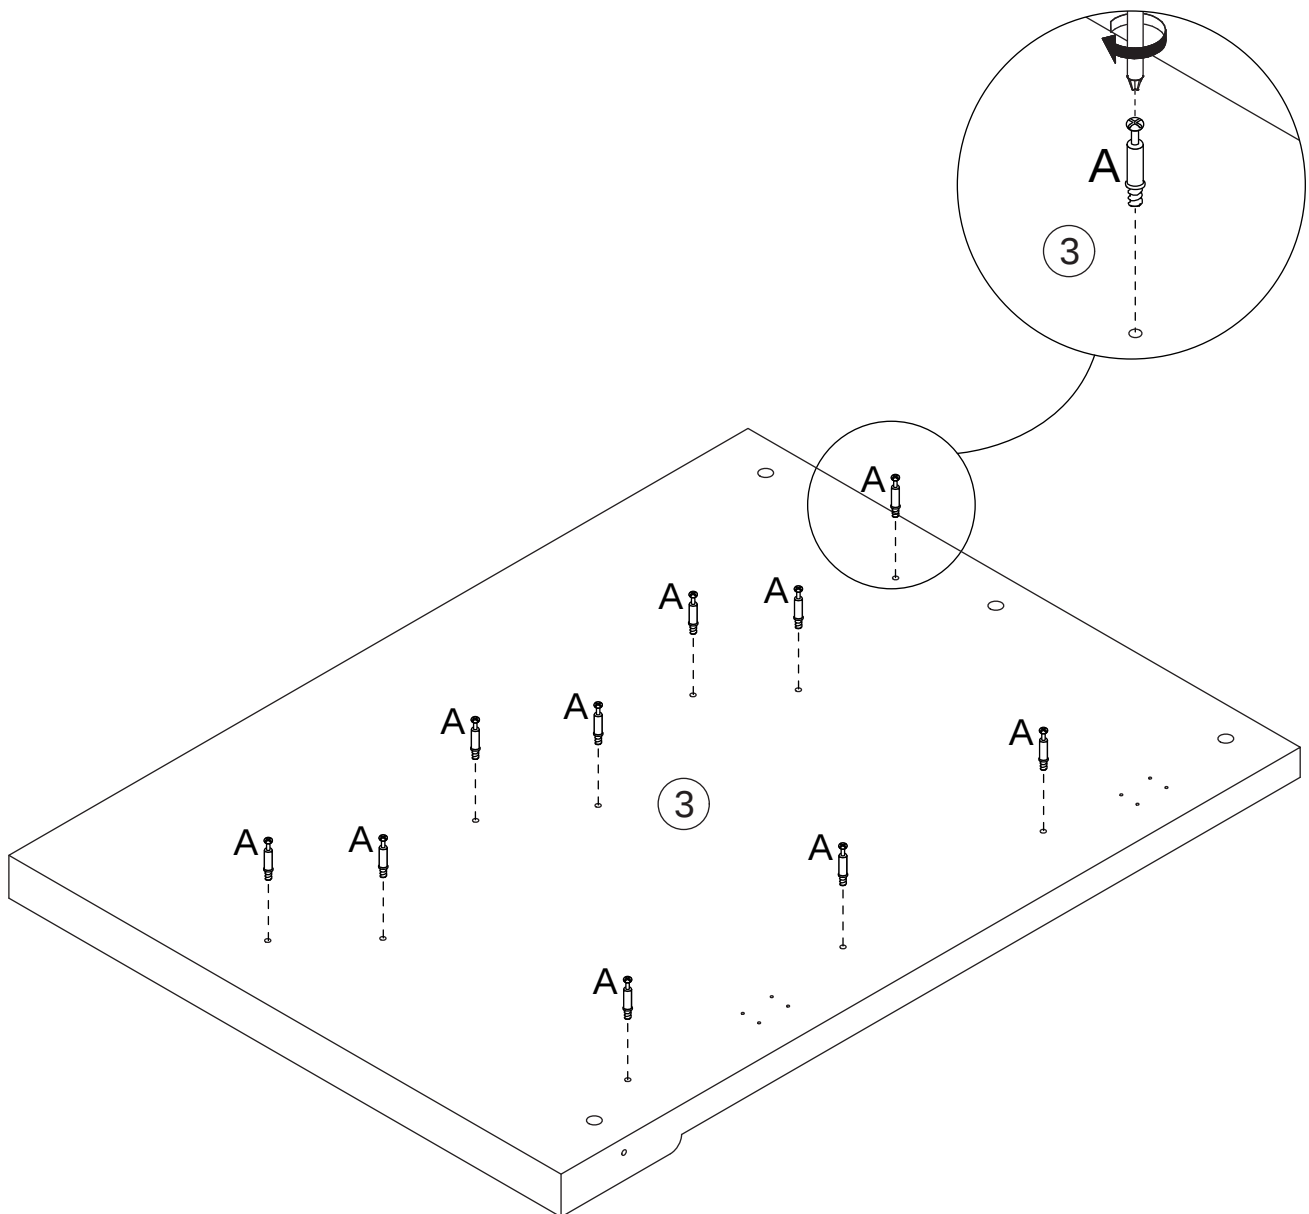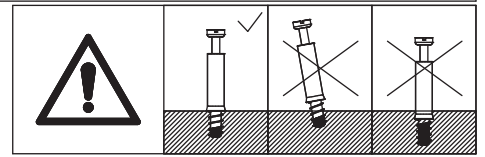



17

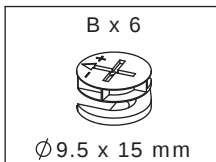  

 
 
Connect panel 3 to panels 10 and 11, tighten by turning cam lock (B) clockwise as shown.

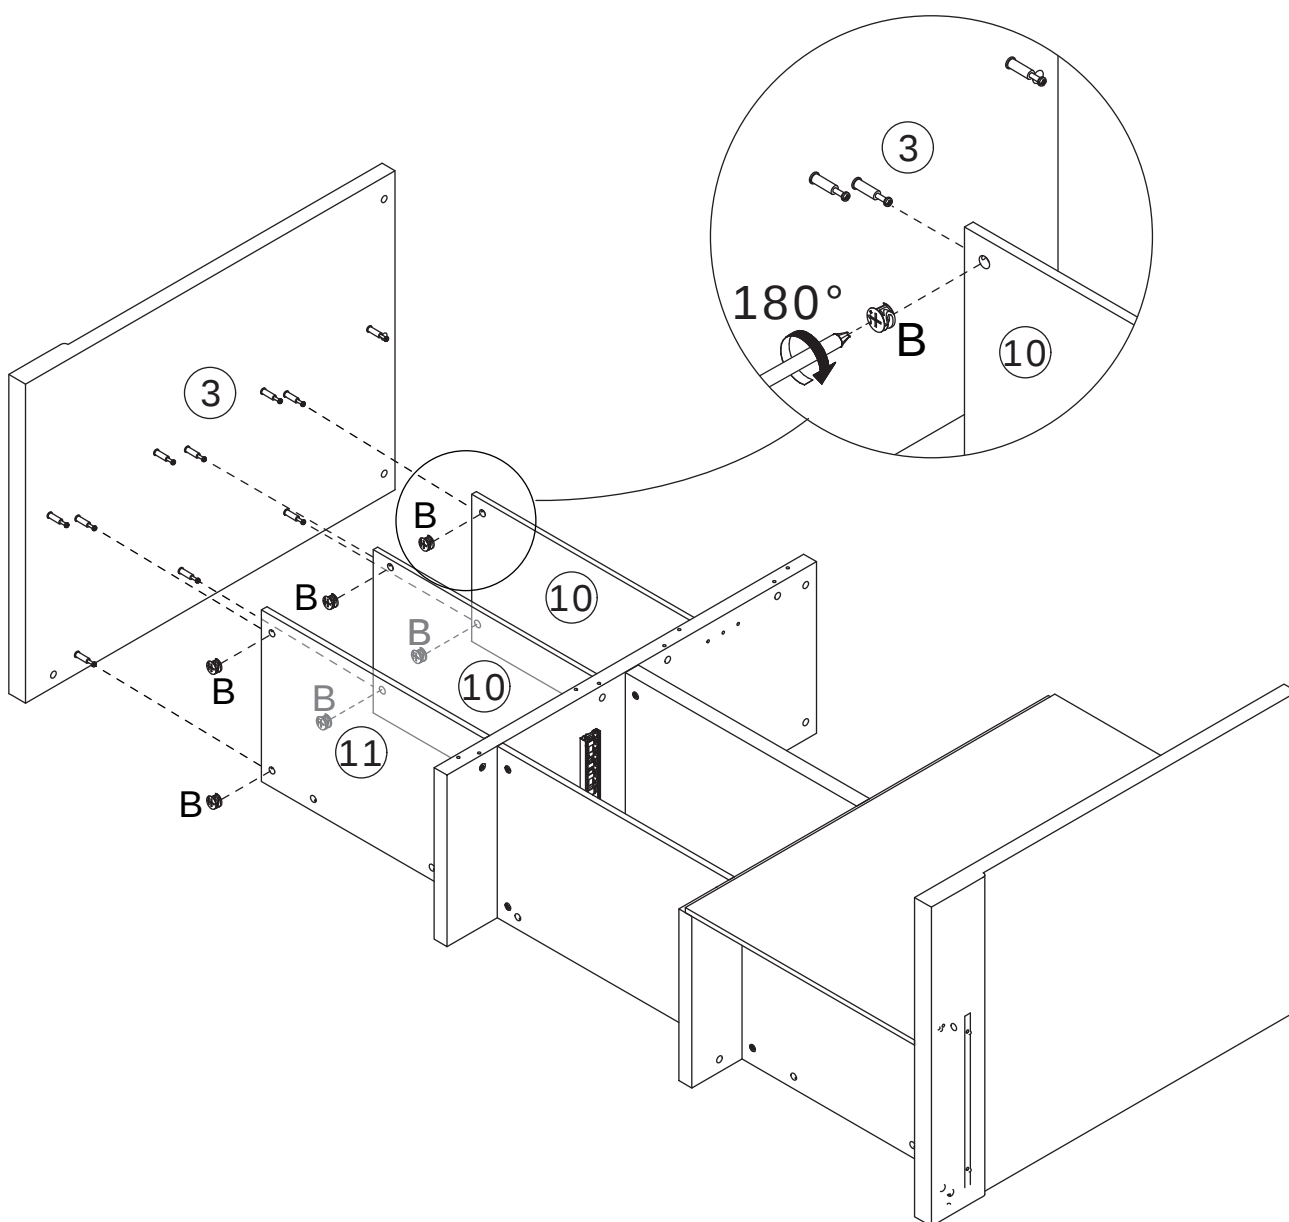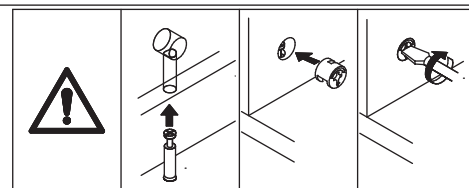

18

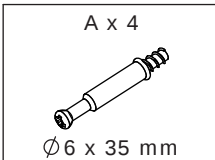  

  Screw eccentric rod (A) onto panel 7 as shown.

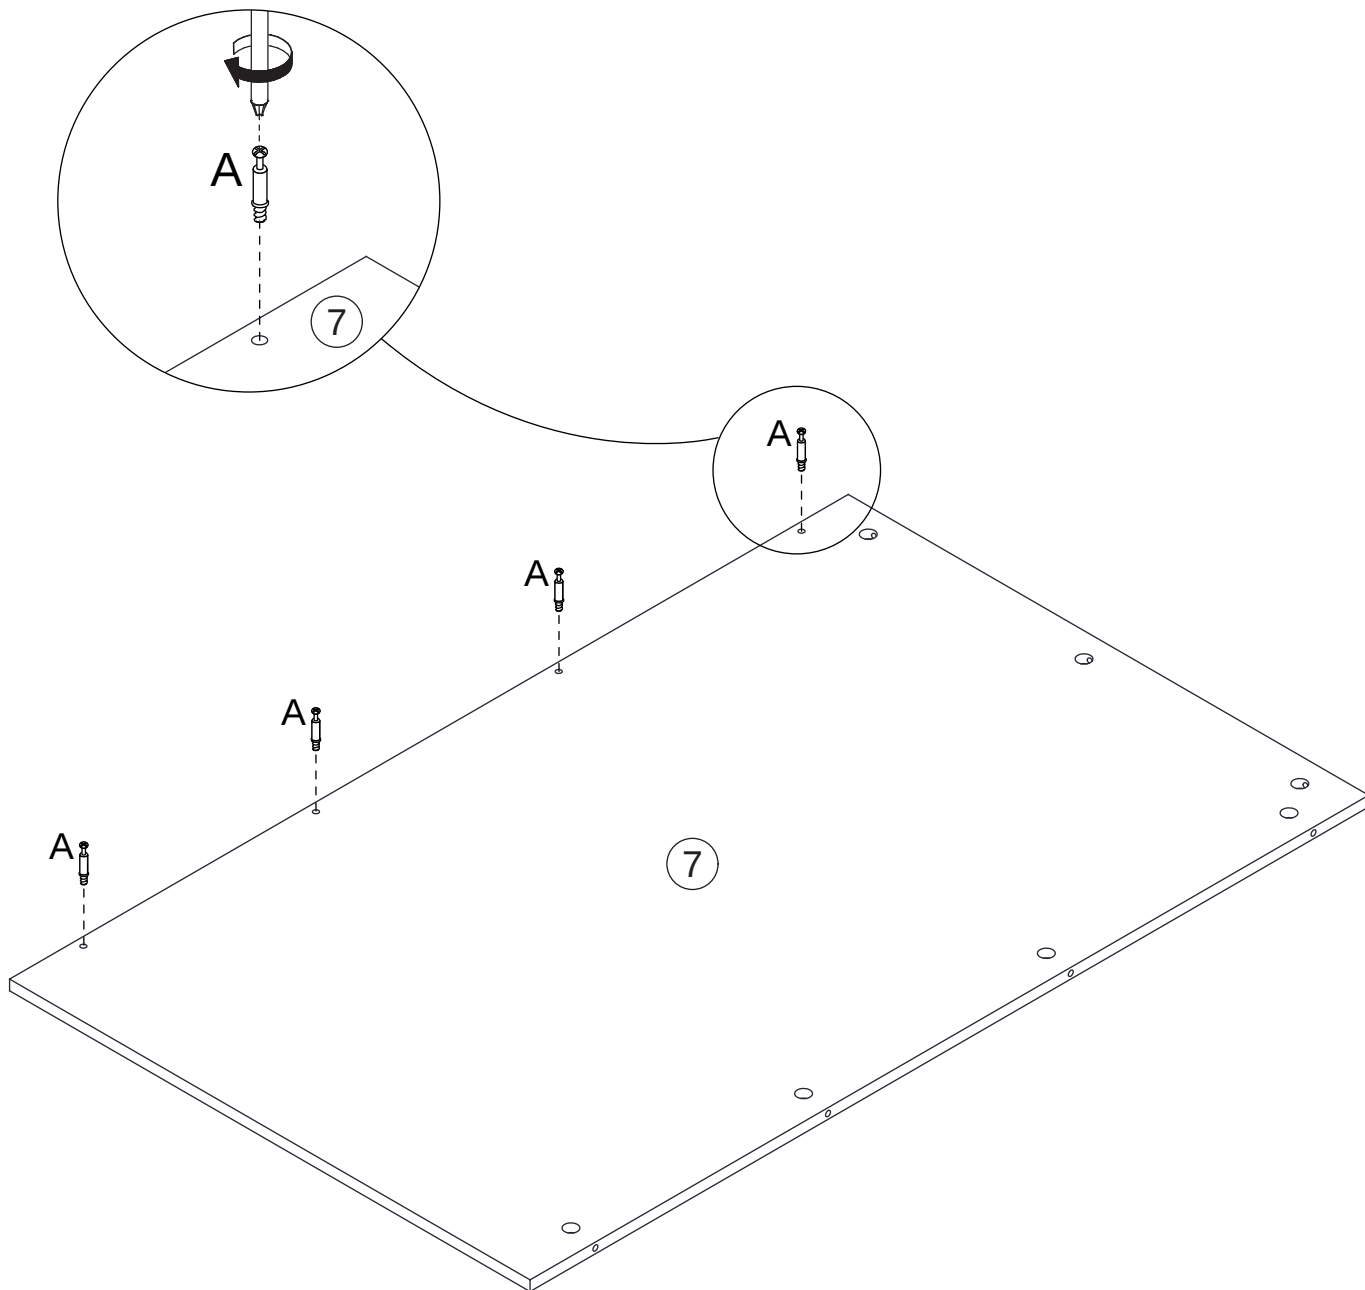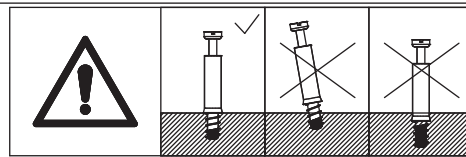


19

B x 4





 Ø 9.5 x 15 mm





Connect panel 7 to panels 3 and 5, tighten by turning cam lock (B) clockwise as shown.

 
 
Ensure that the arrows on panel 7 are facing in the direction shown in the diagram.

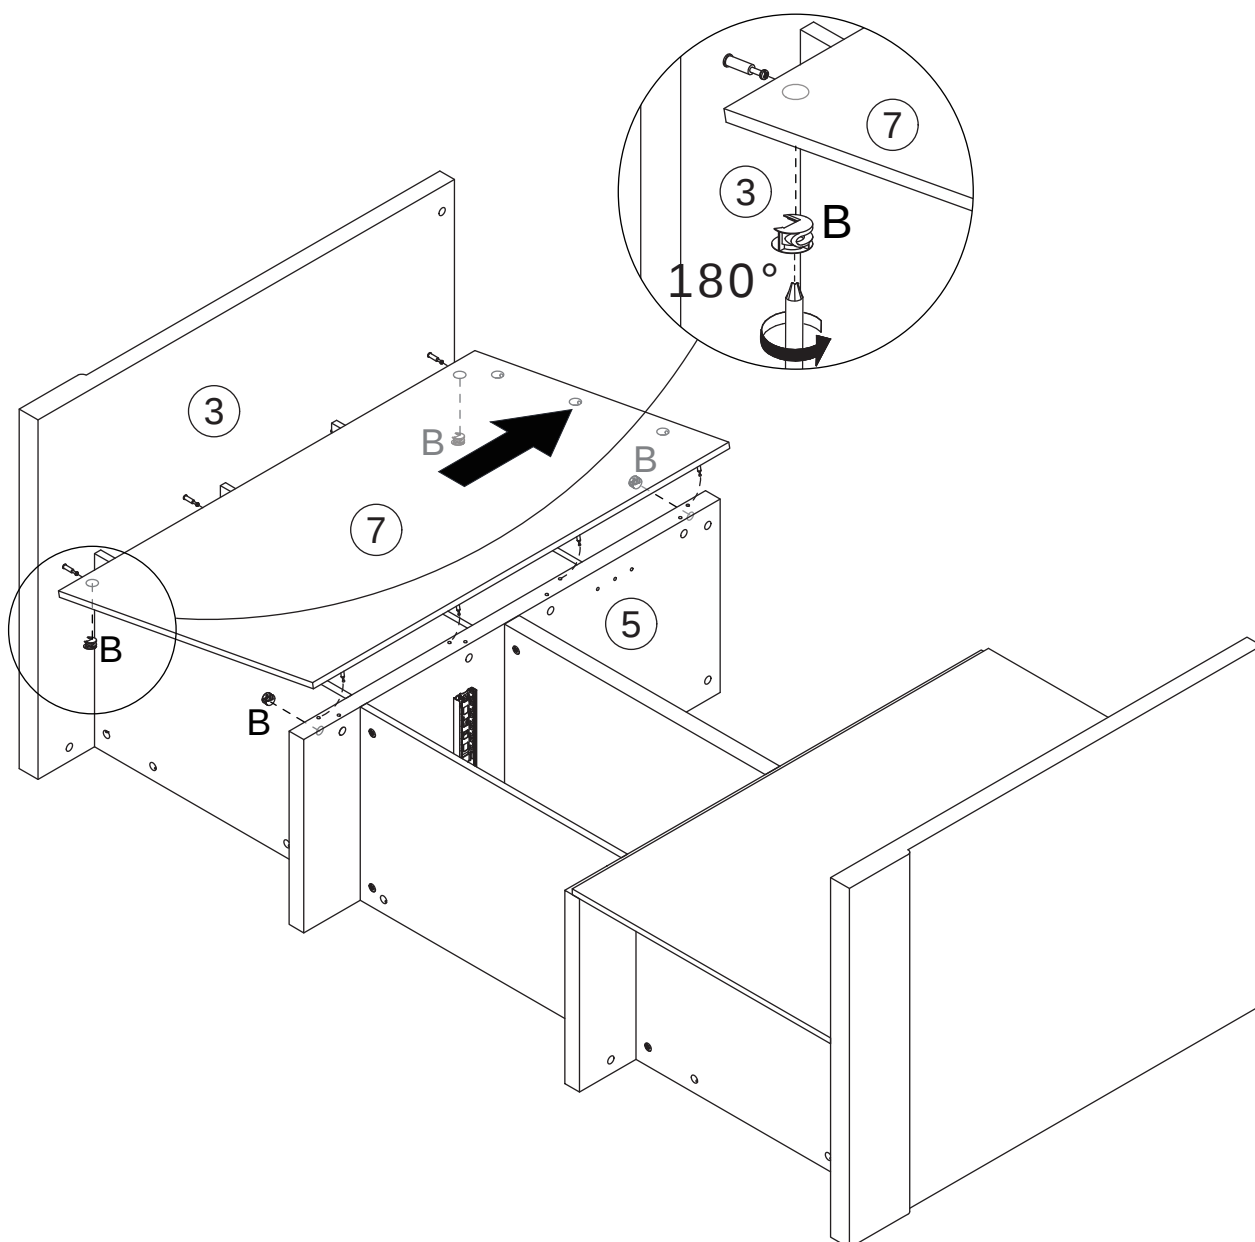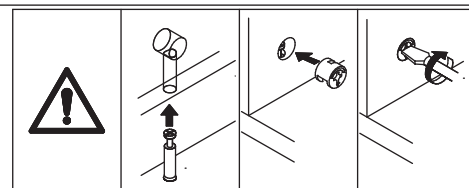



20

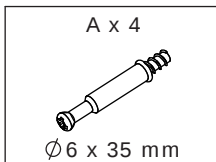  

  Screw eccentric rod (A) onto panel 8 as shown.


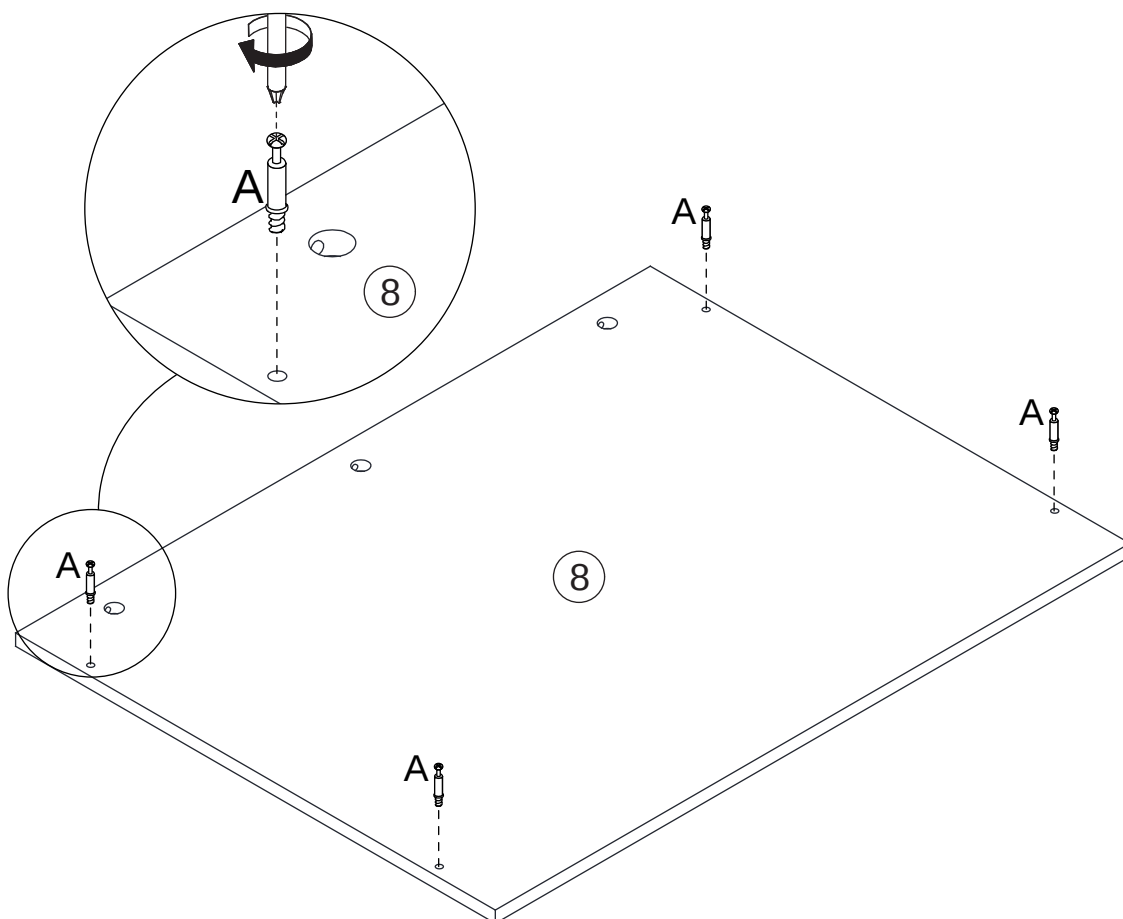
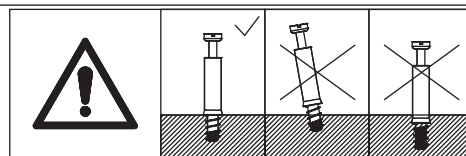


21

 
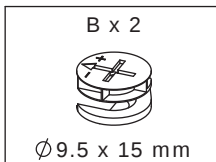 


Connect panel 8 to panels 4 and 5, tighten by turning cam lock (B) clockwise as shown.

  
 
Ensure that the arrows on panel 8 are facing in the direction shown in the diagram.

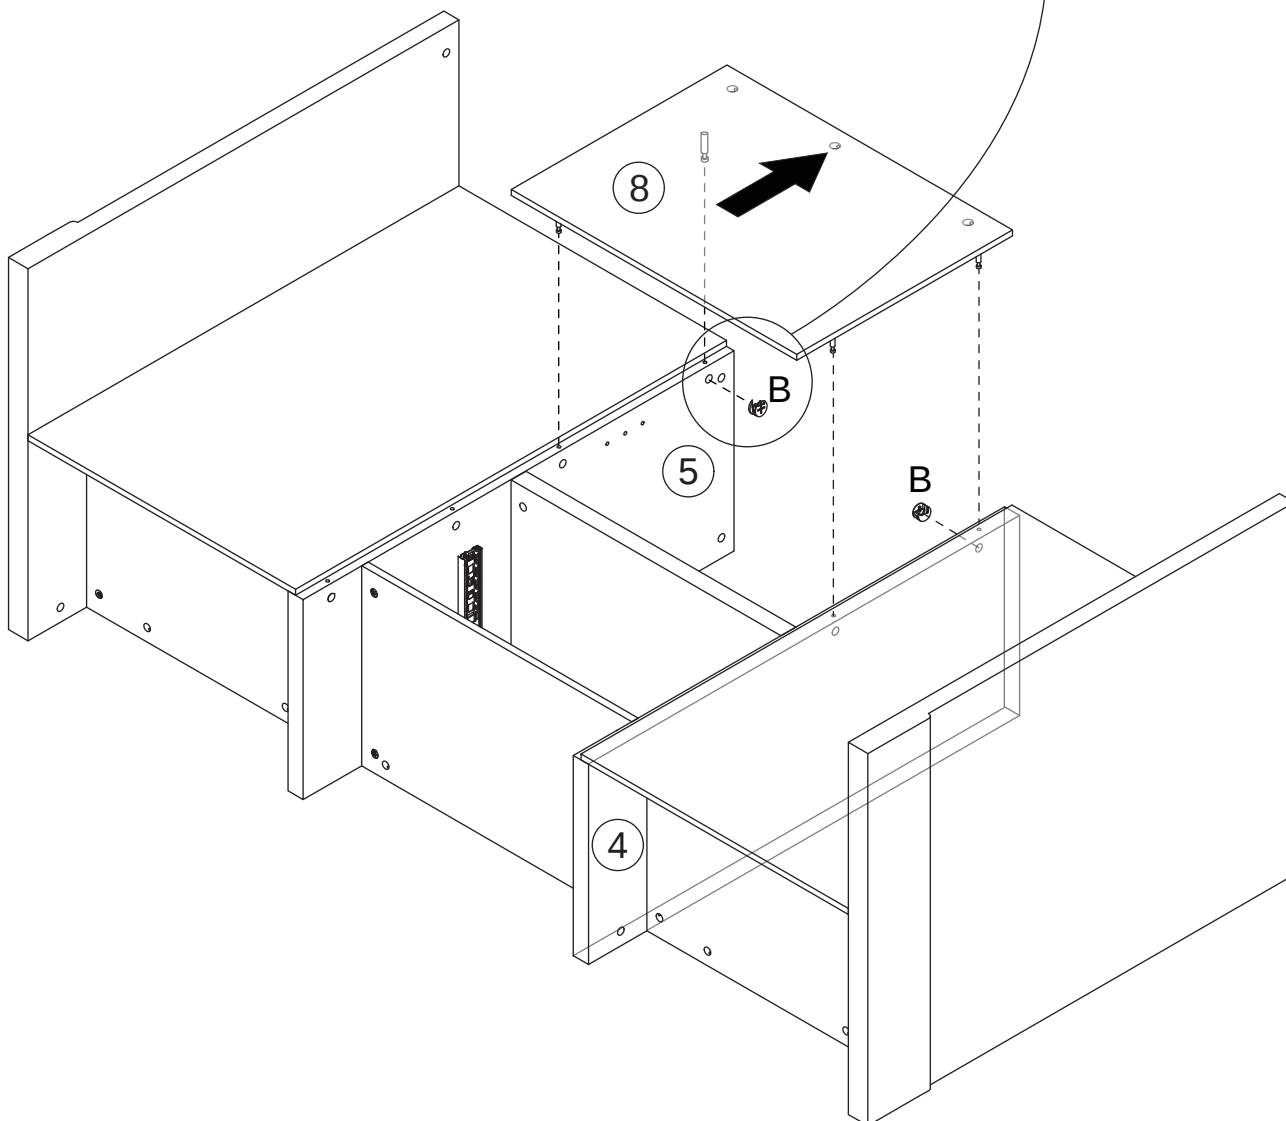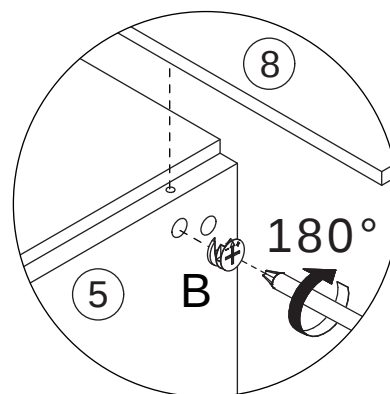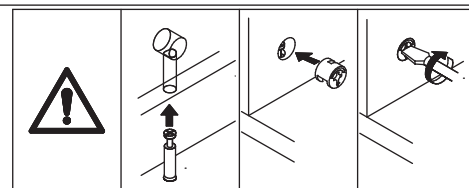



22

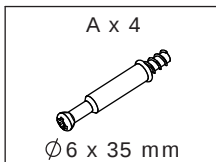  

 
 
Screw eccentric rod (A) onto panel 9 as shown.

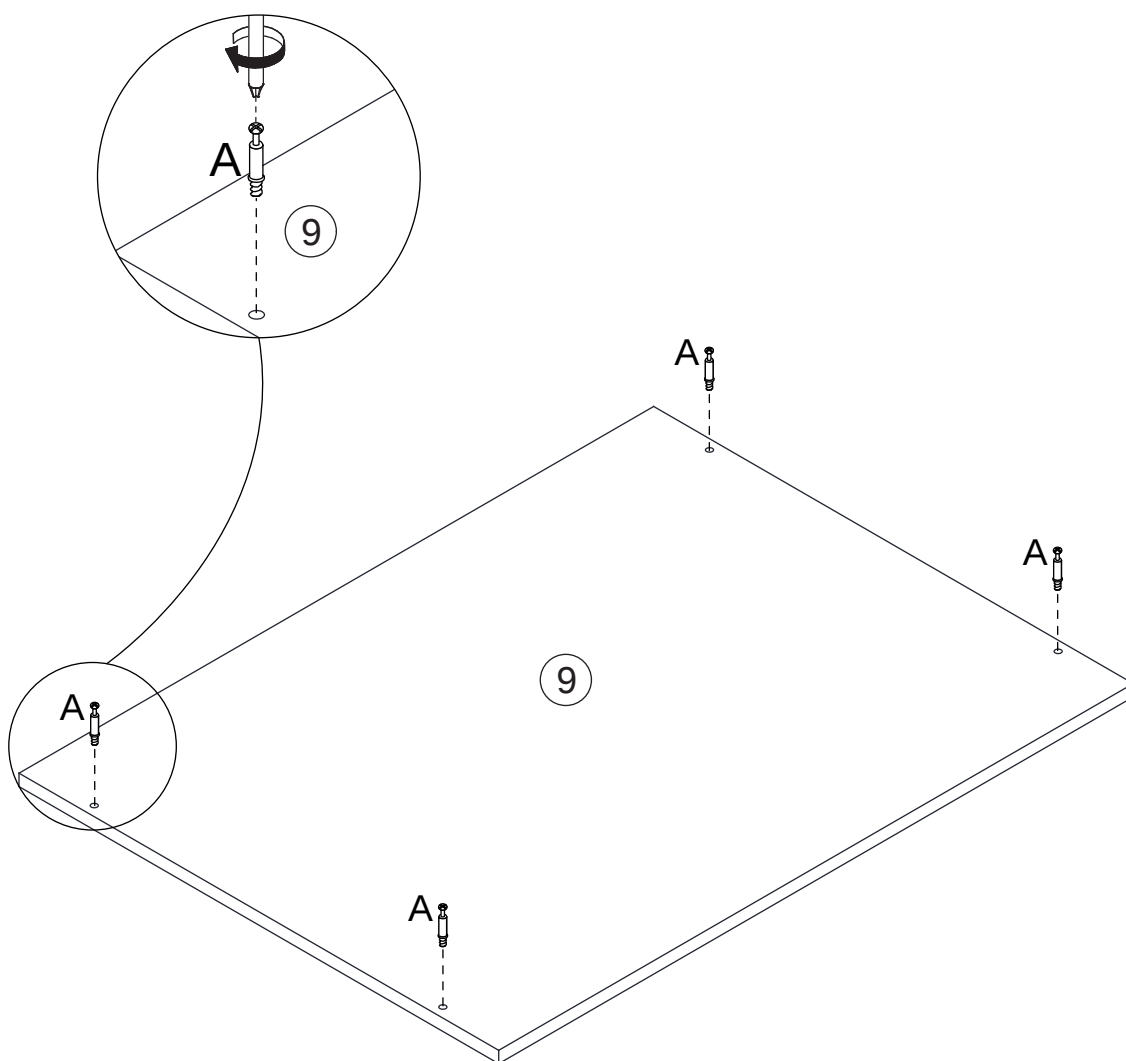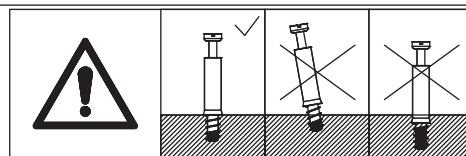

23

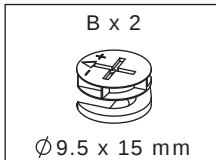  

  Connect panel 9 to panels 4 and 5, tighten by turning cam lock (B) clockwise as shown.

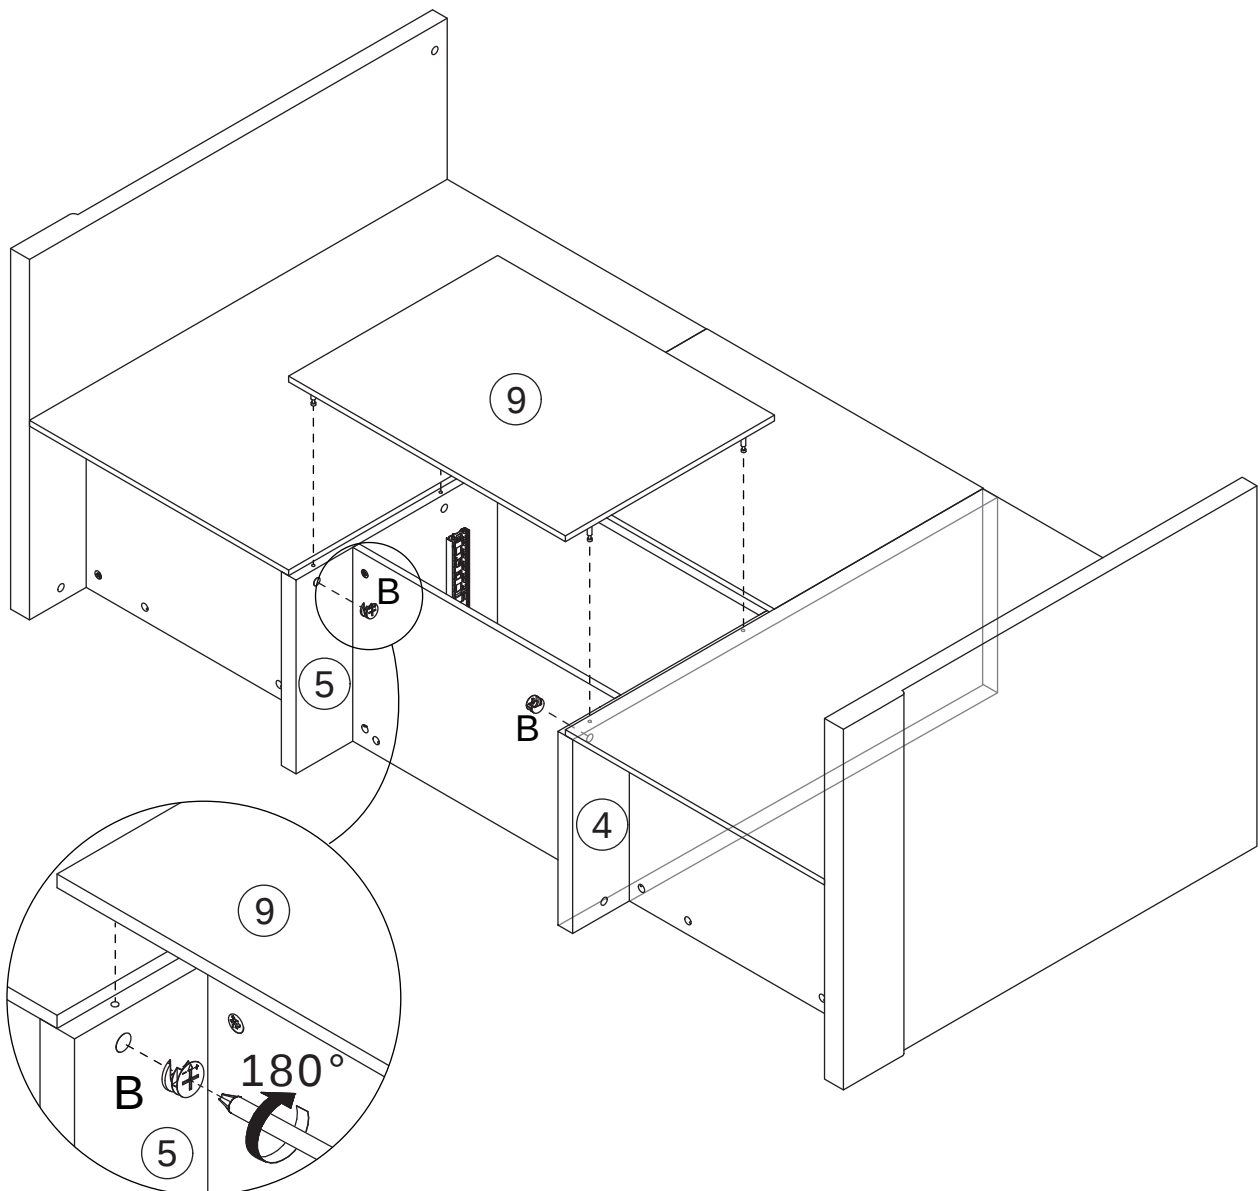
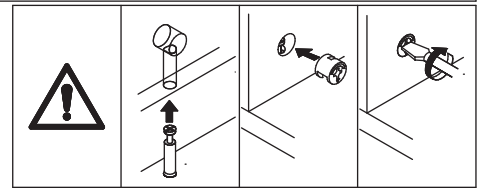


24

The assembled cabinet must be stood upright as shown.





  At least two people must work together to slowly stand the cabinet upright.

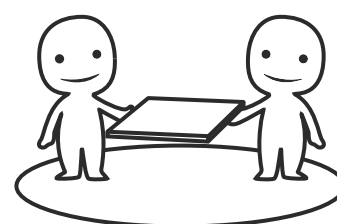
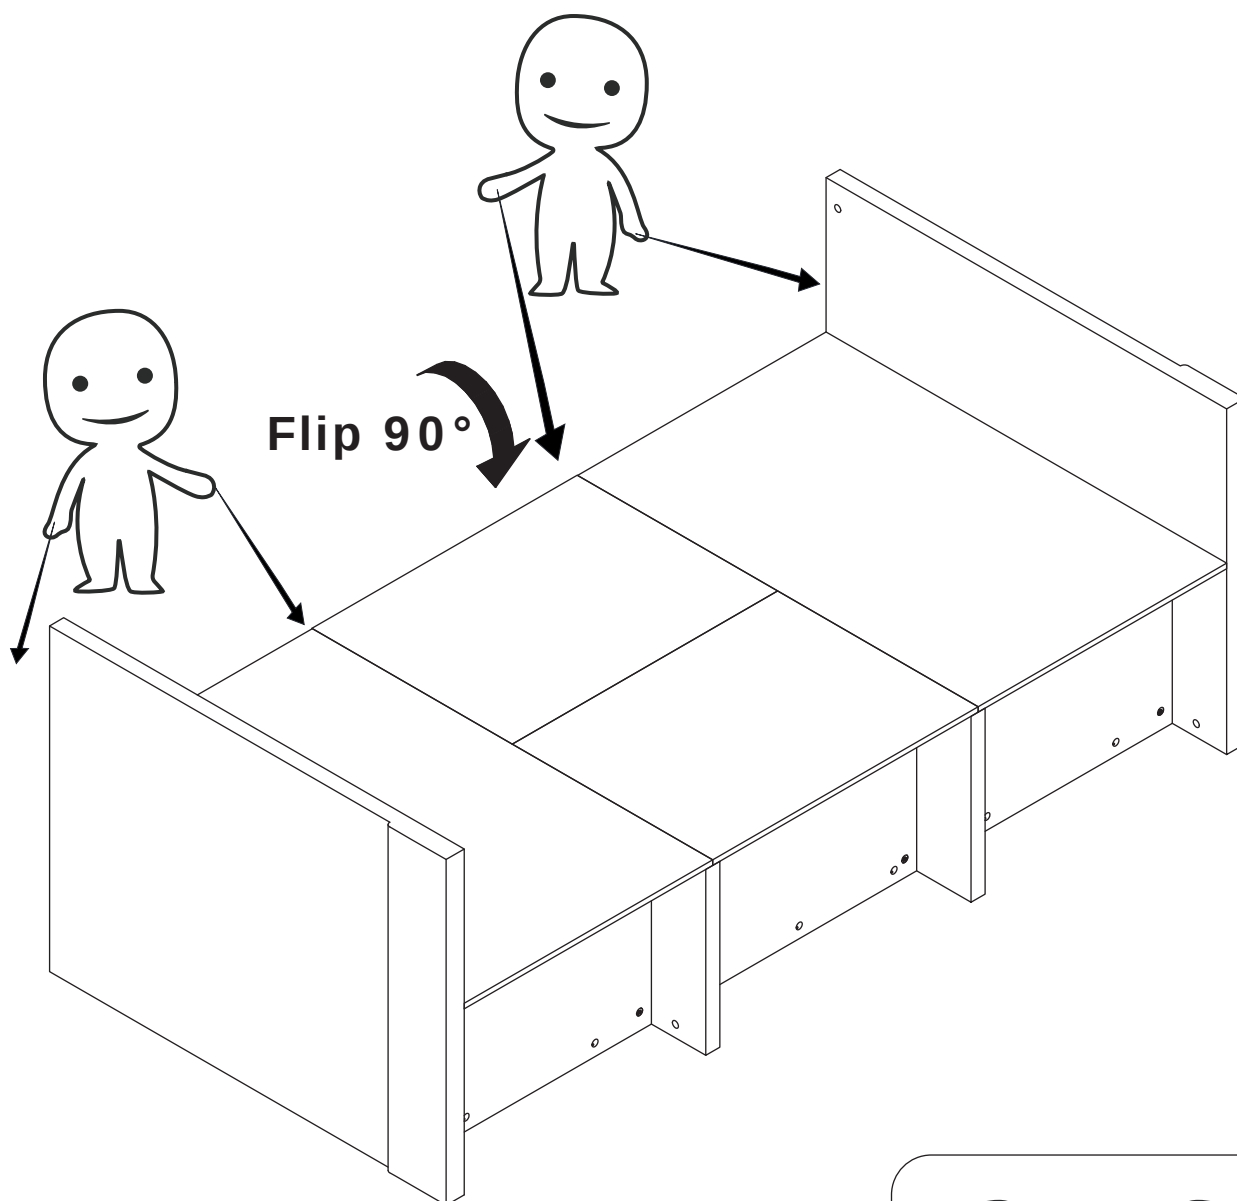


ASSEMBLED BY 2 ADULTS

 
 
25

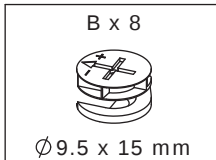

 
 
Tighten the cam lock (B) to secure panels 4, 5 and 7 as shown.

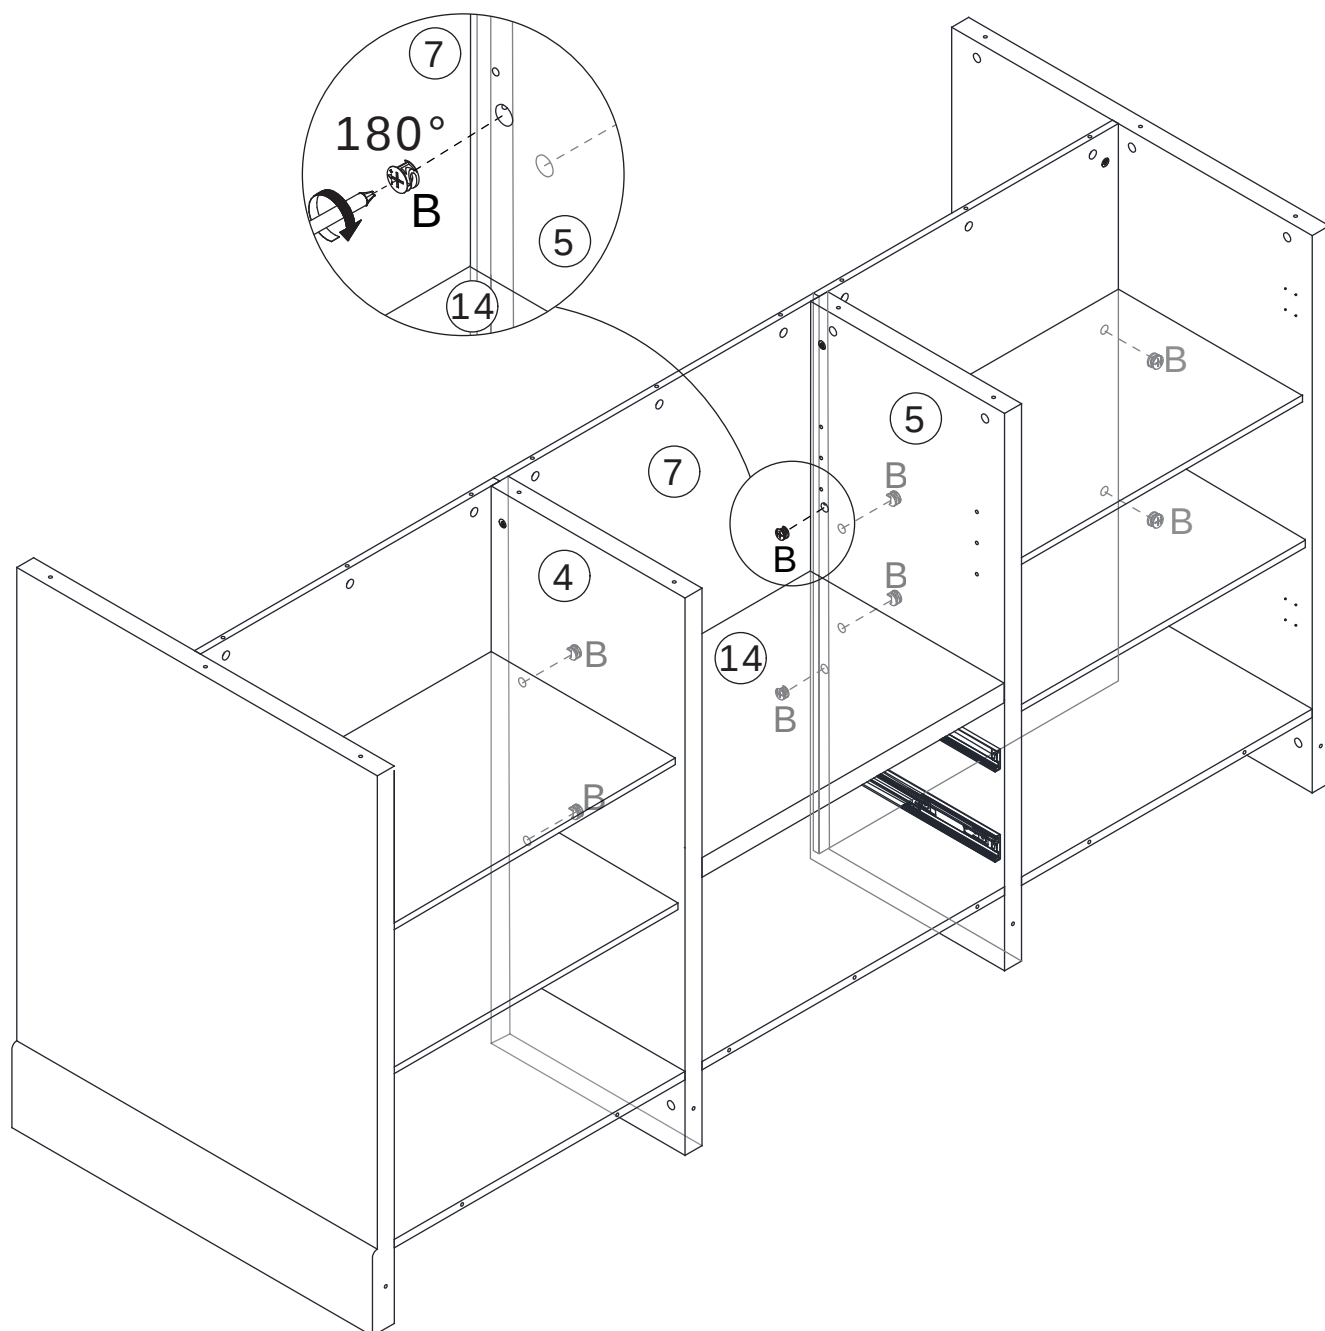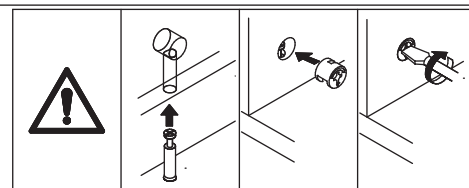



26

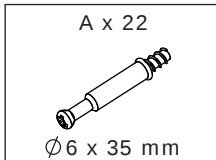  

 
 
Screw eccentric rod (A) onto panel 1 as shown.

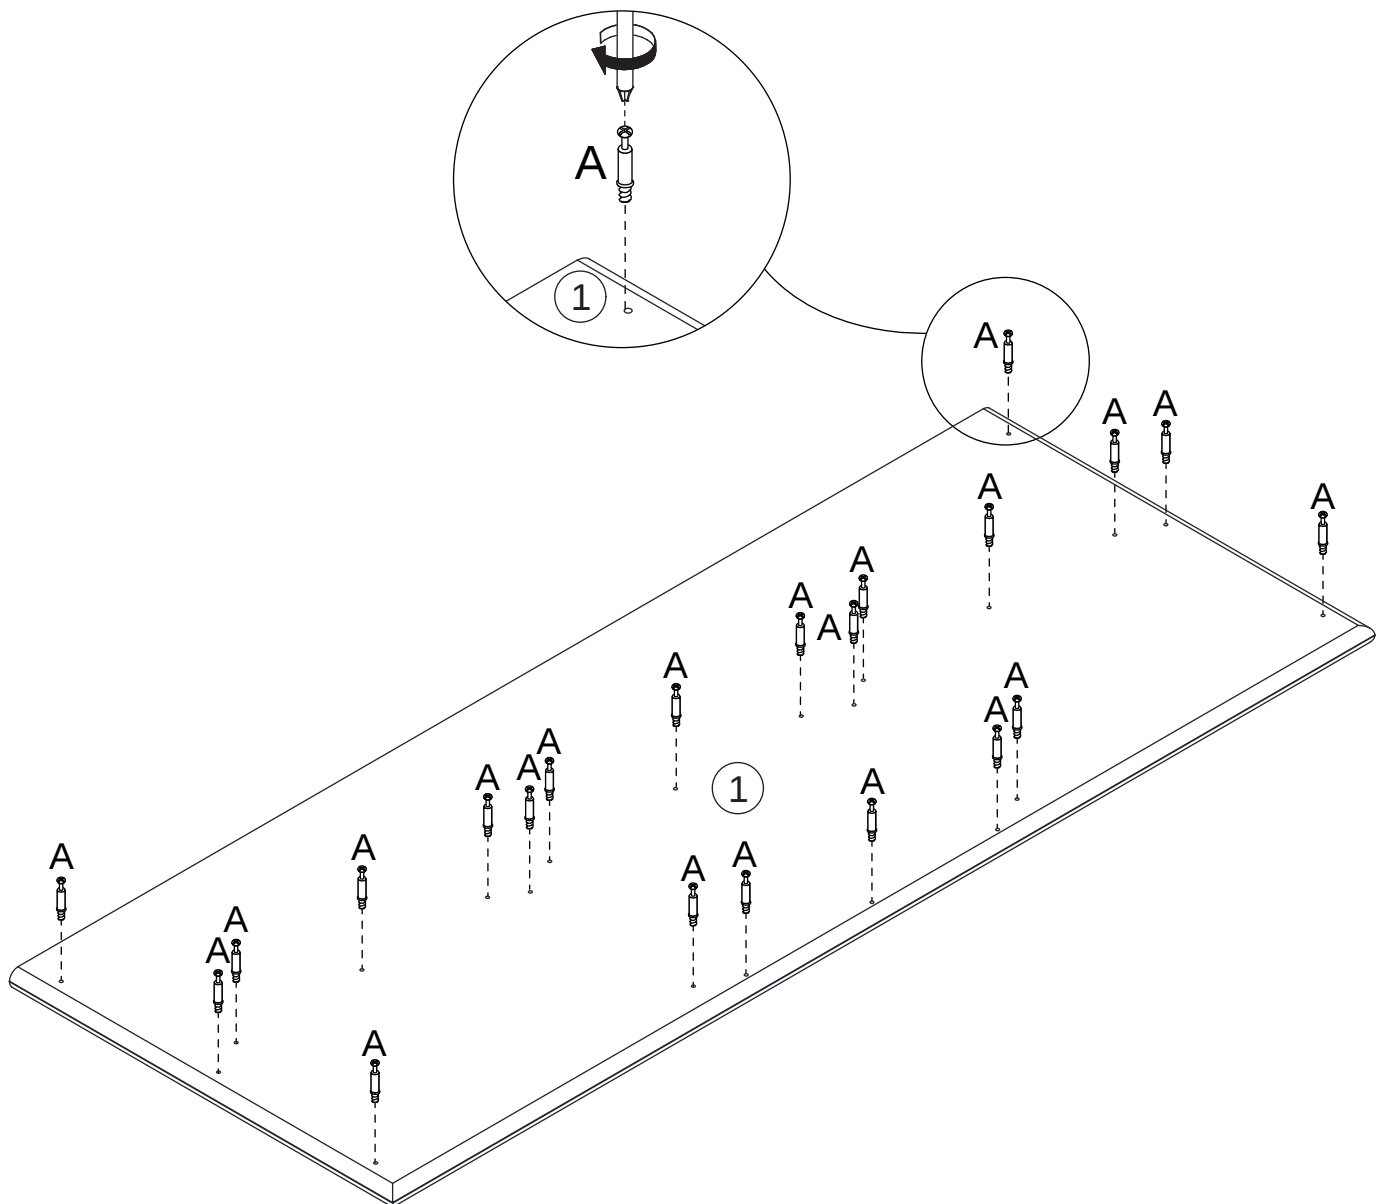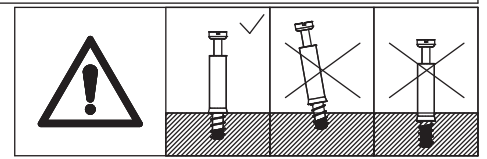



27

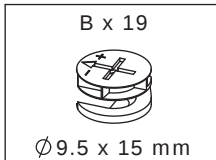  

 
 
Connect panel 1 to panels 2, 3, 4, 5, 6, 7 and 8, tighten by turning cam lock (B) clockwise as shown.

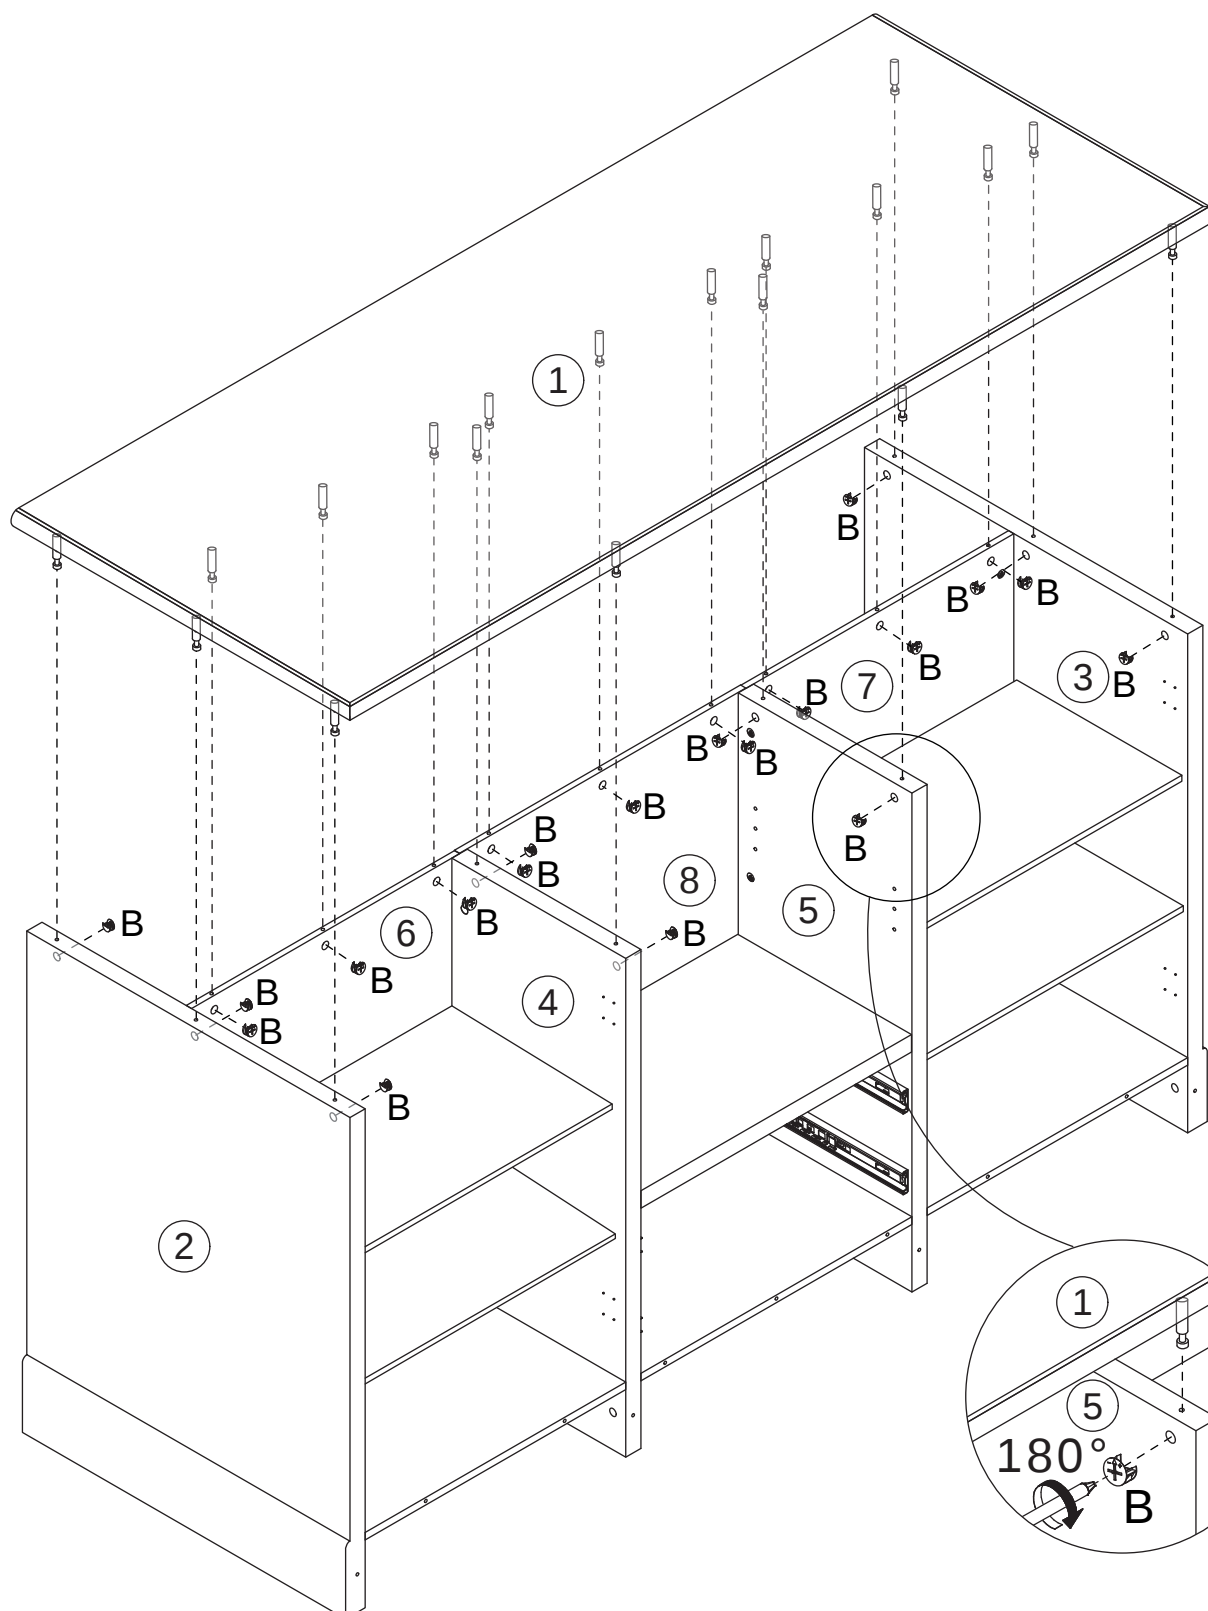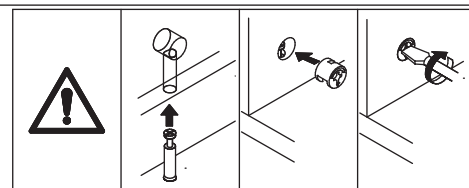

28

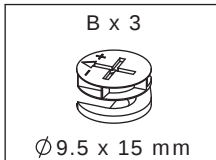  

 
 
Connect panel 12 to panel 1, tighten by turning cam lock (B) clockwise as shown.

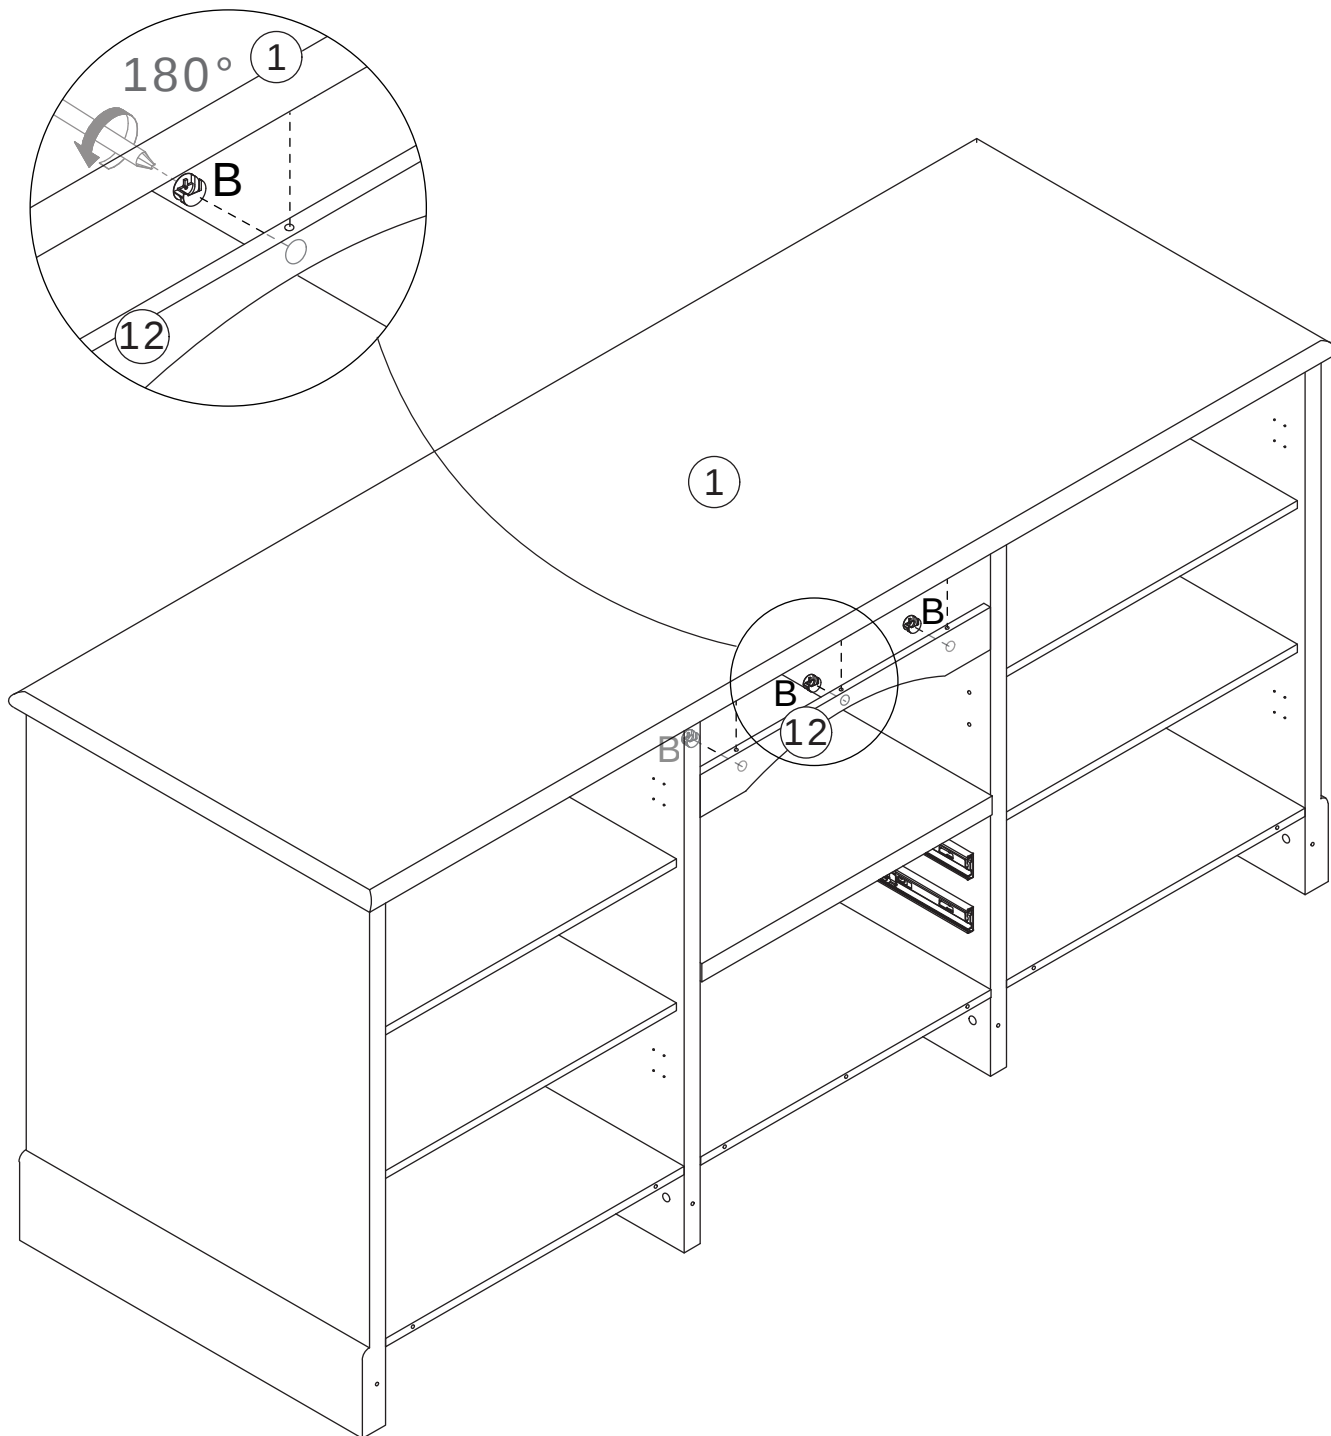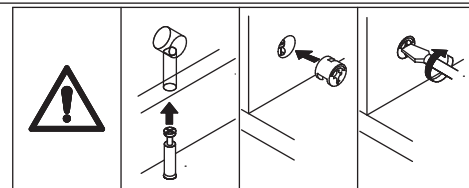

Lay the assembled cabinet flat as shown.





  At least two people must lower the cabinet slowly at the same time.

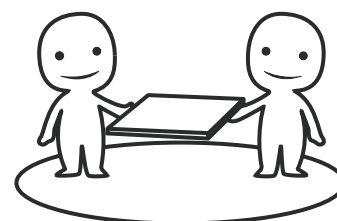
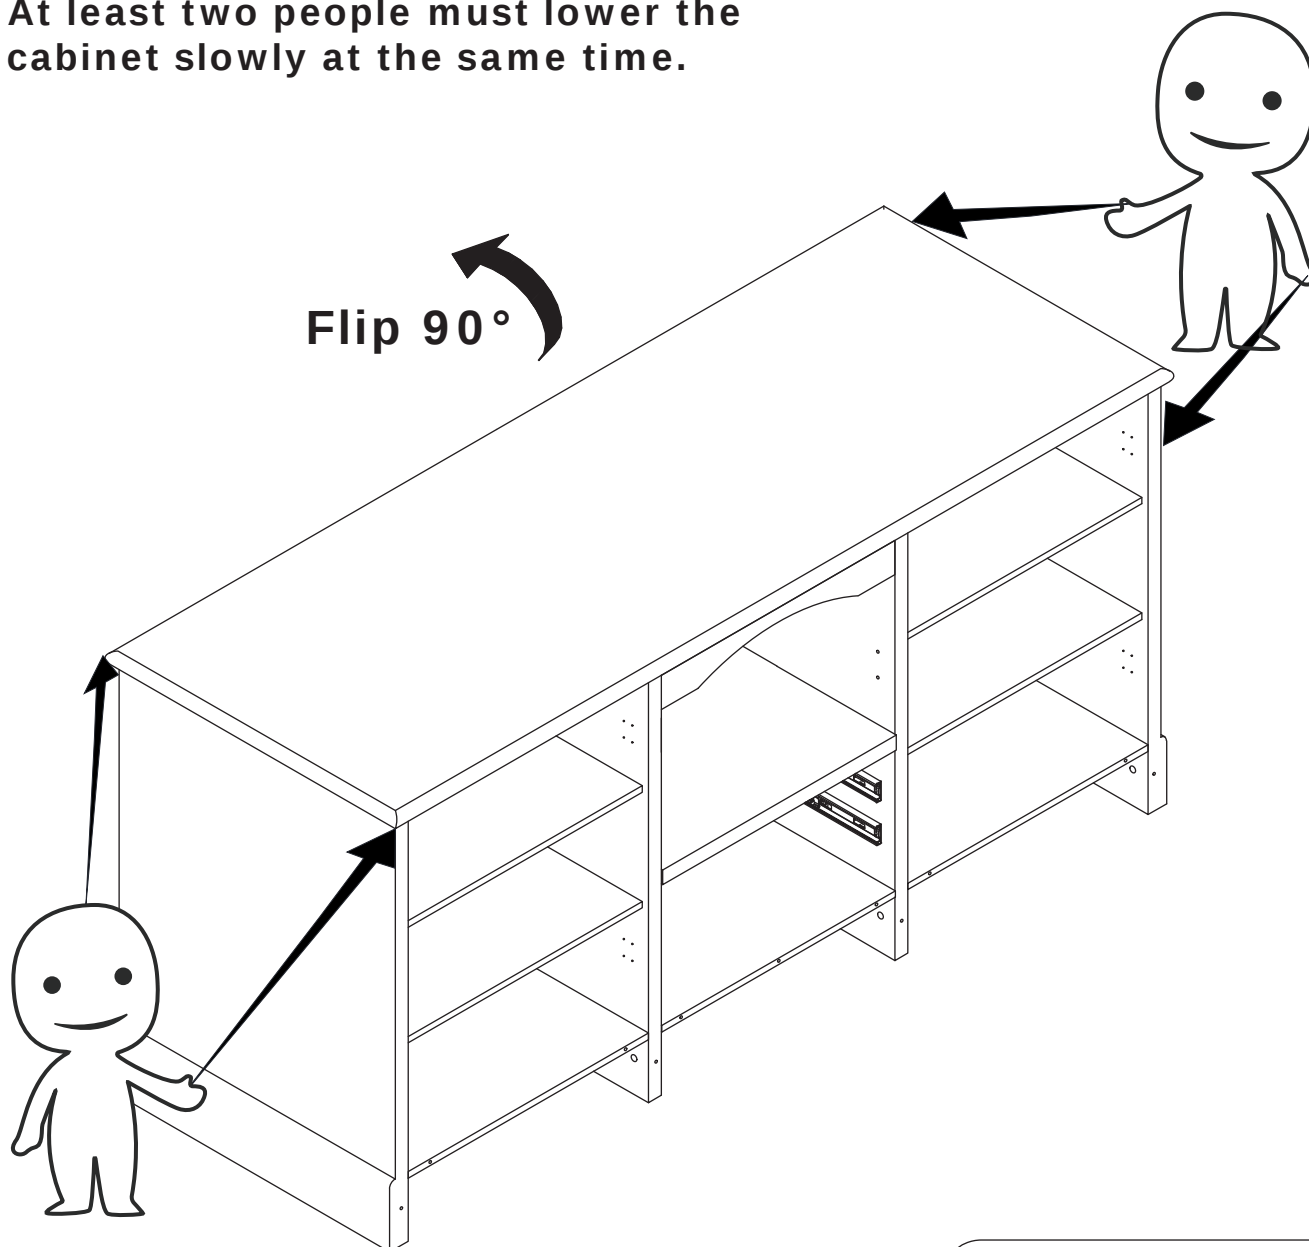


ASSEMBLED BY 2 ADULTS

  30

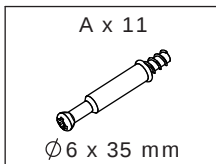

  Screw eccentric rod (A) onto panel 18 as shown.

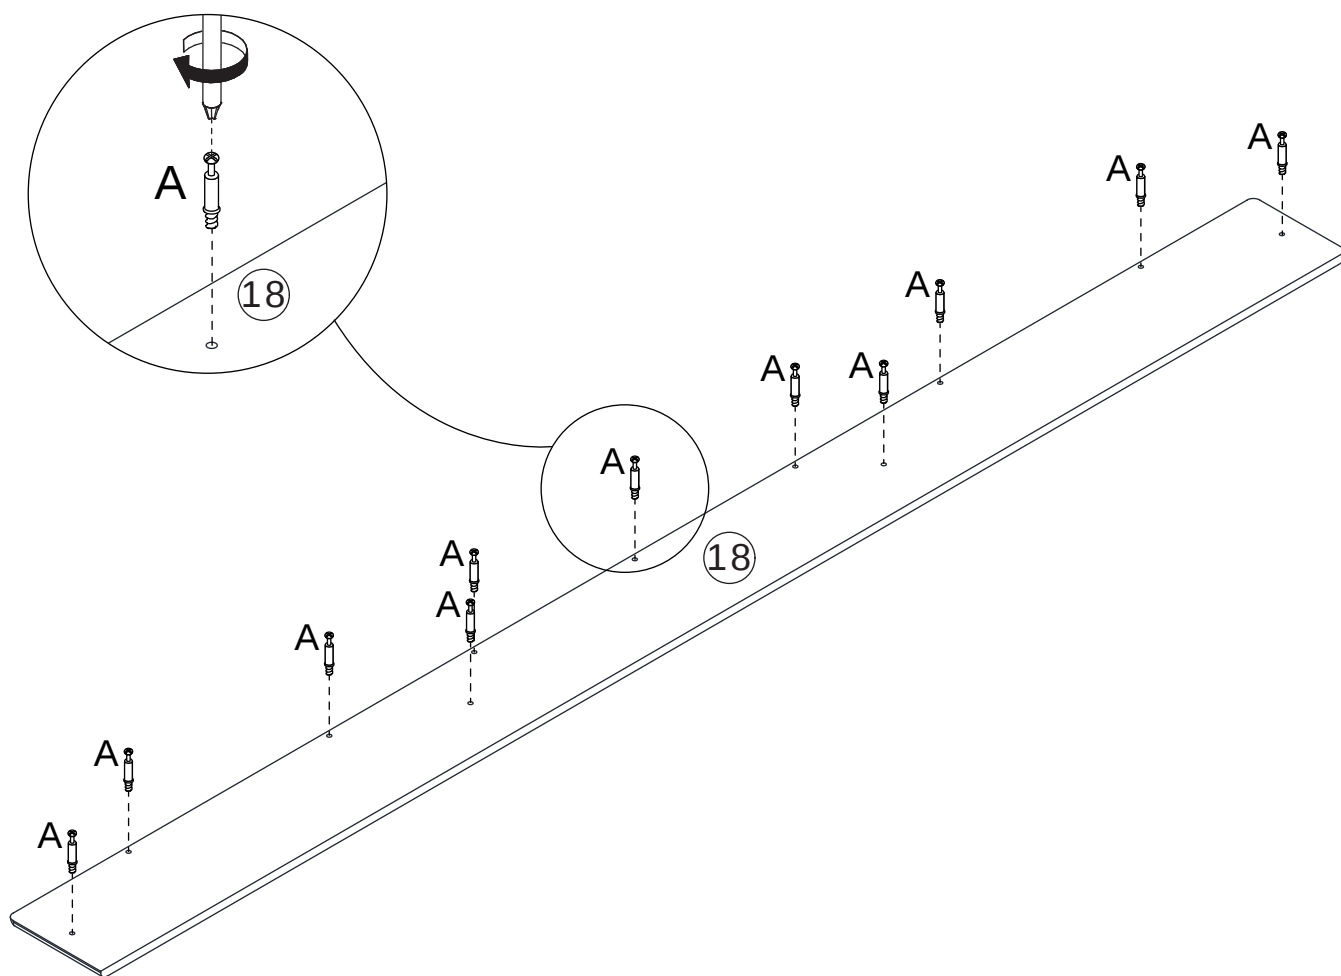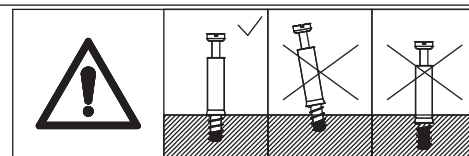


31



B x 11



 
Ø 9.5 x 15 mm



 
 
Connect panel 18 to panels 2, 3, 4, 5, 11 and 15, tighten by turning cam lock (B) clockwise as shown.

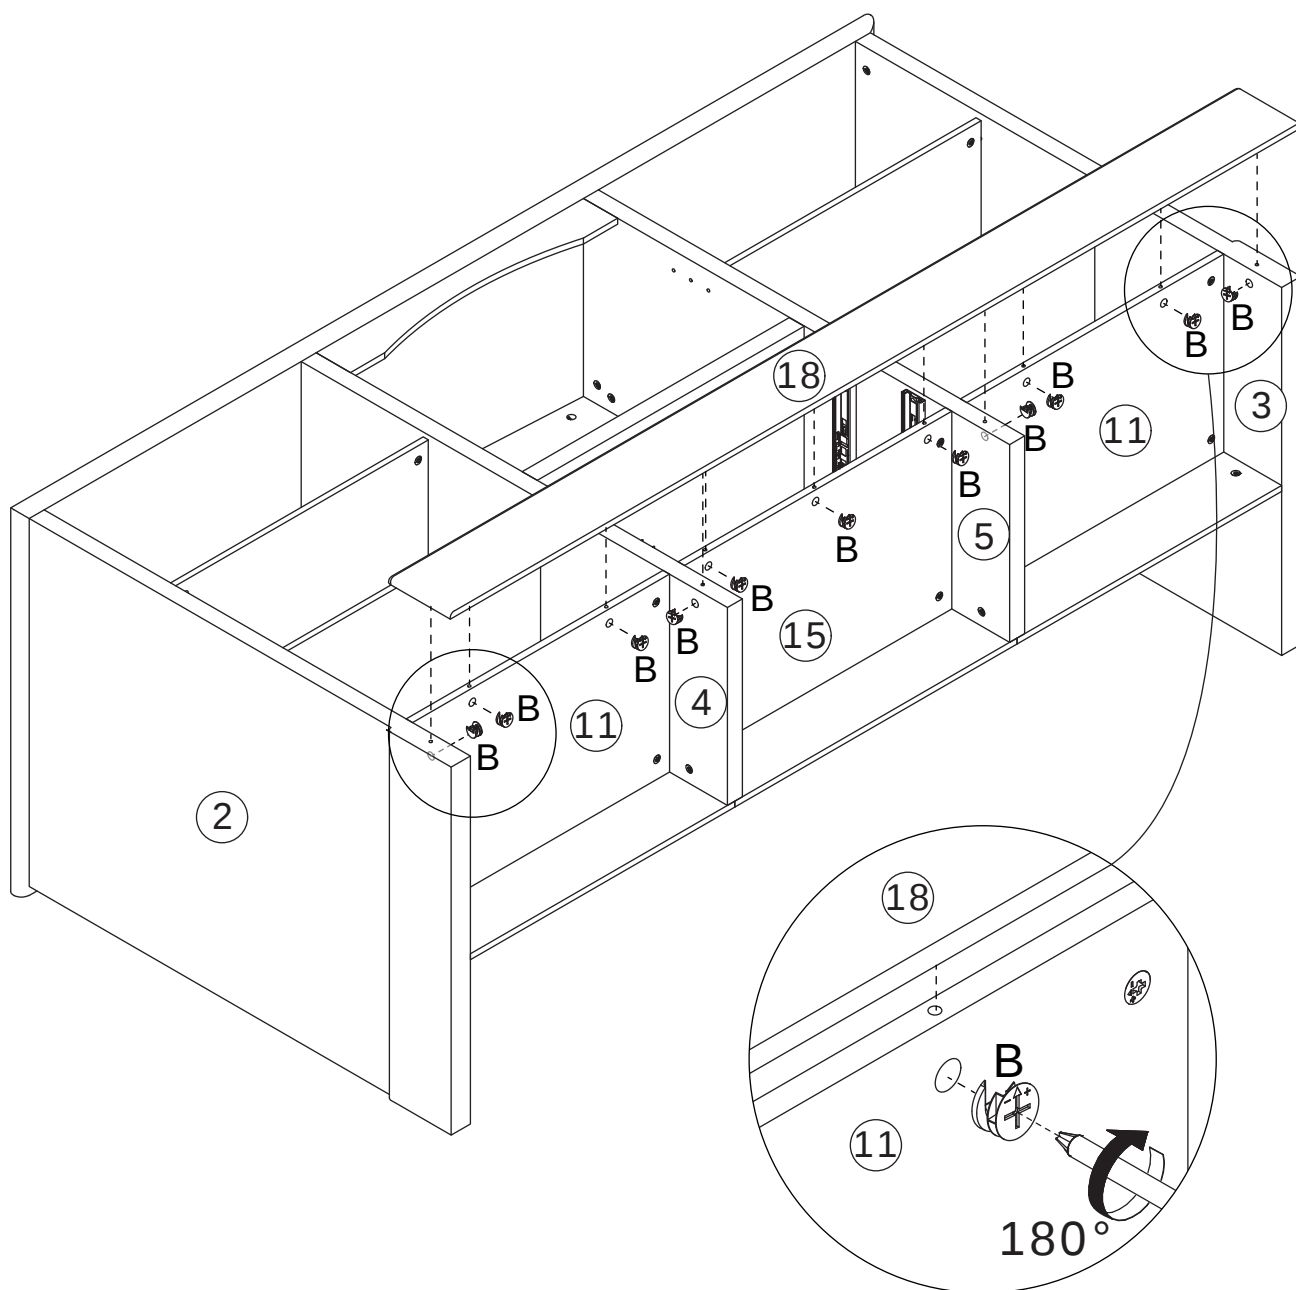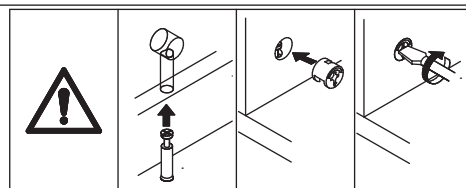



32

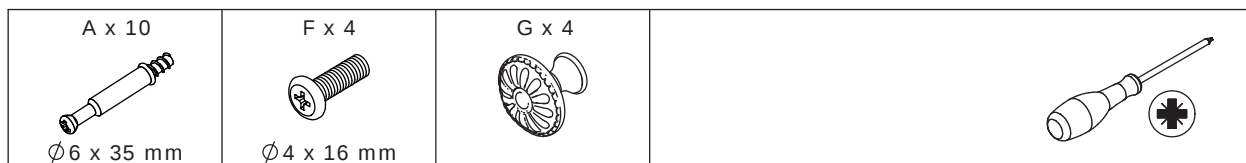 

  
Screw eccentric rod (A) onto panel 23.
Secure knob (G) to panel 23 using screw (F) as shown.

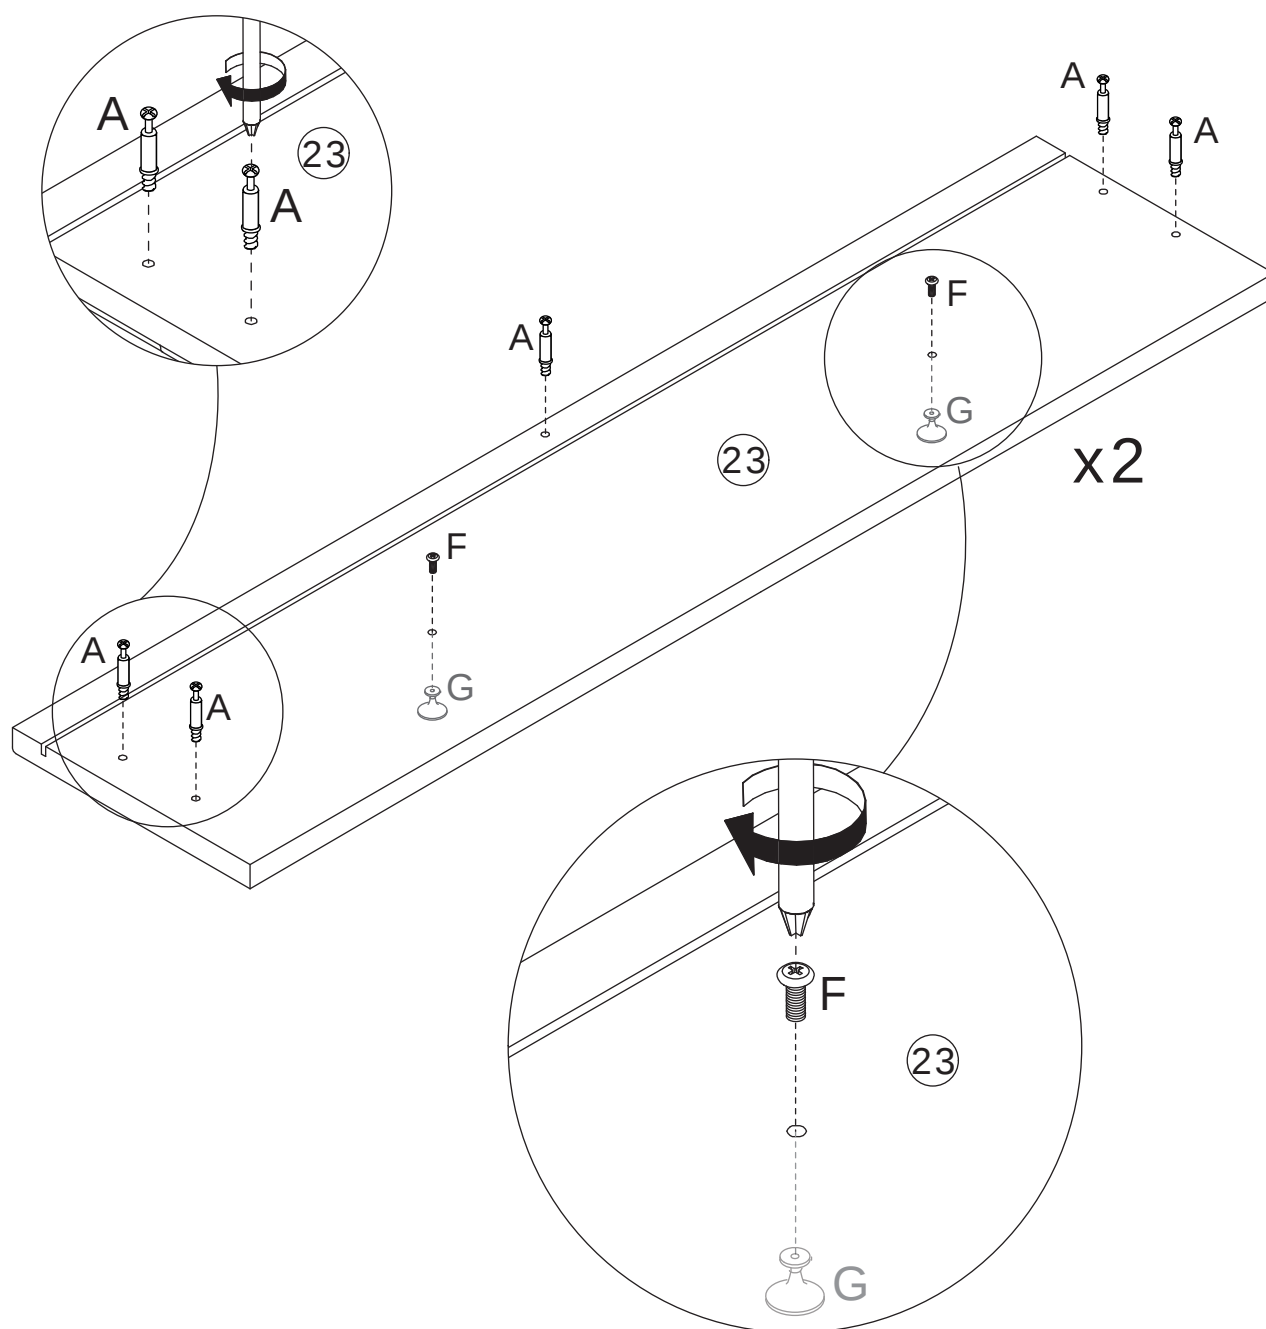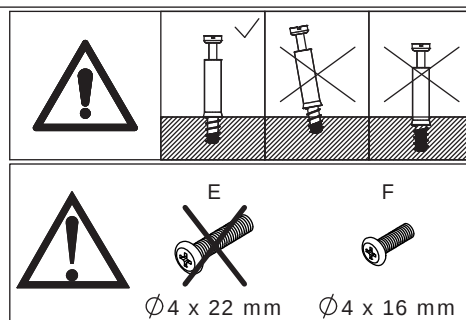


33

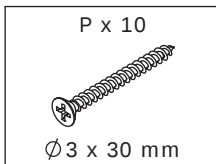  

 Connect panel 19 to panels 20, 21 and 24 and secure them using screw (P) as shown.

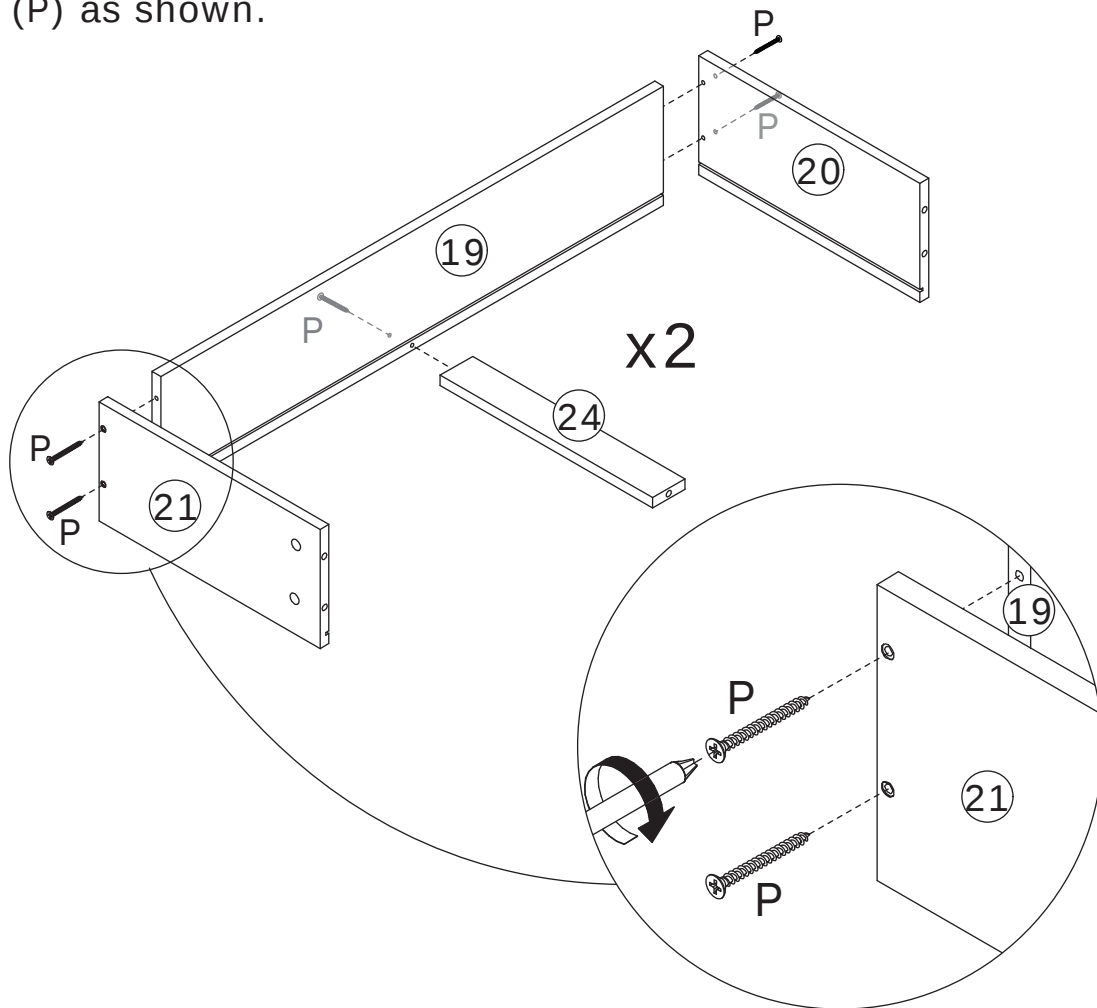

Insert panel 22 along the grooves.

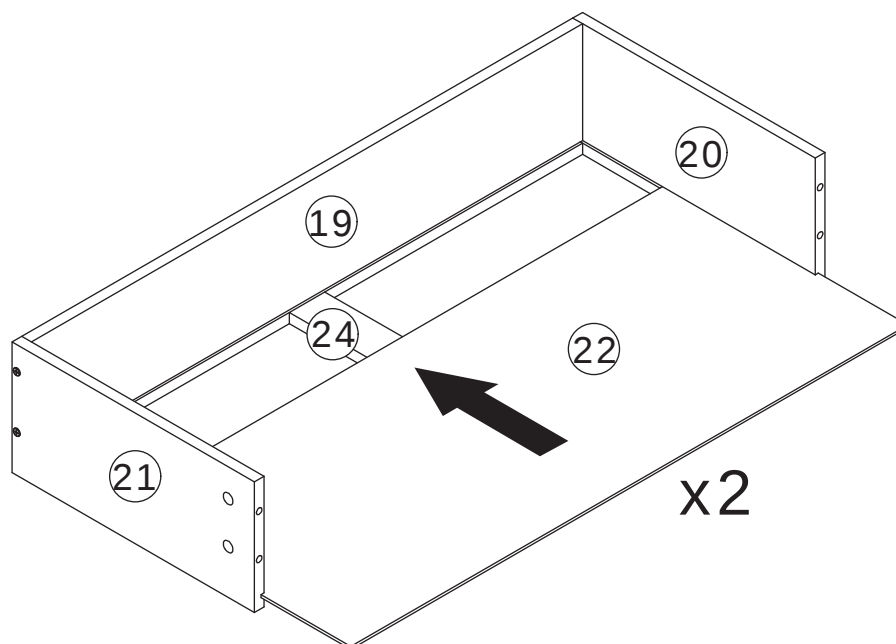 


34



B x 10



 Ø 9.5 x 15 mm



  Connect panels 20, 21 and 24 to panel 23, tighten by turning cam lock (B) clockwise as shown.

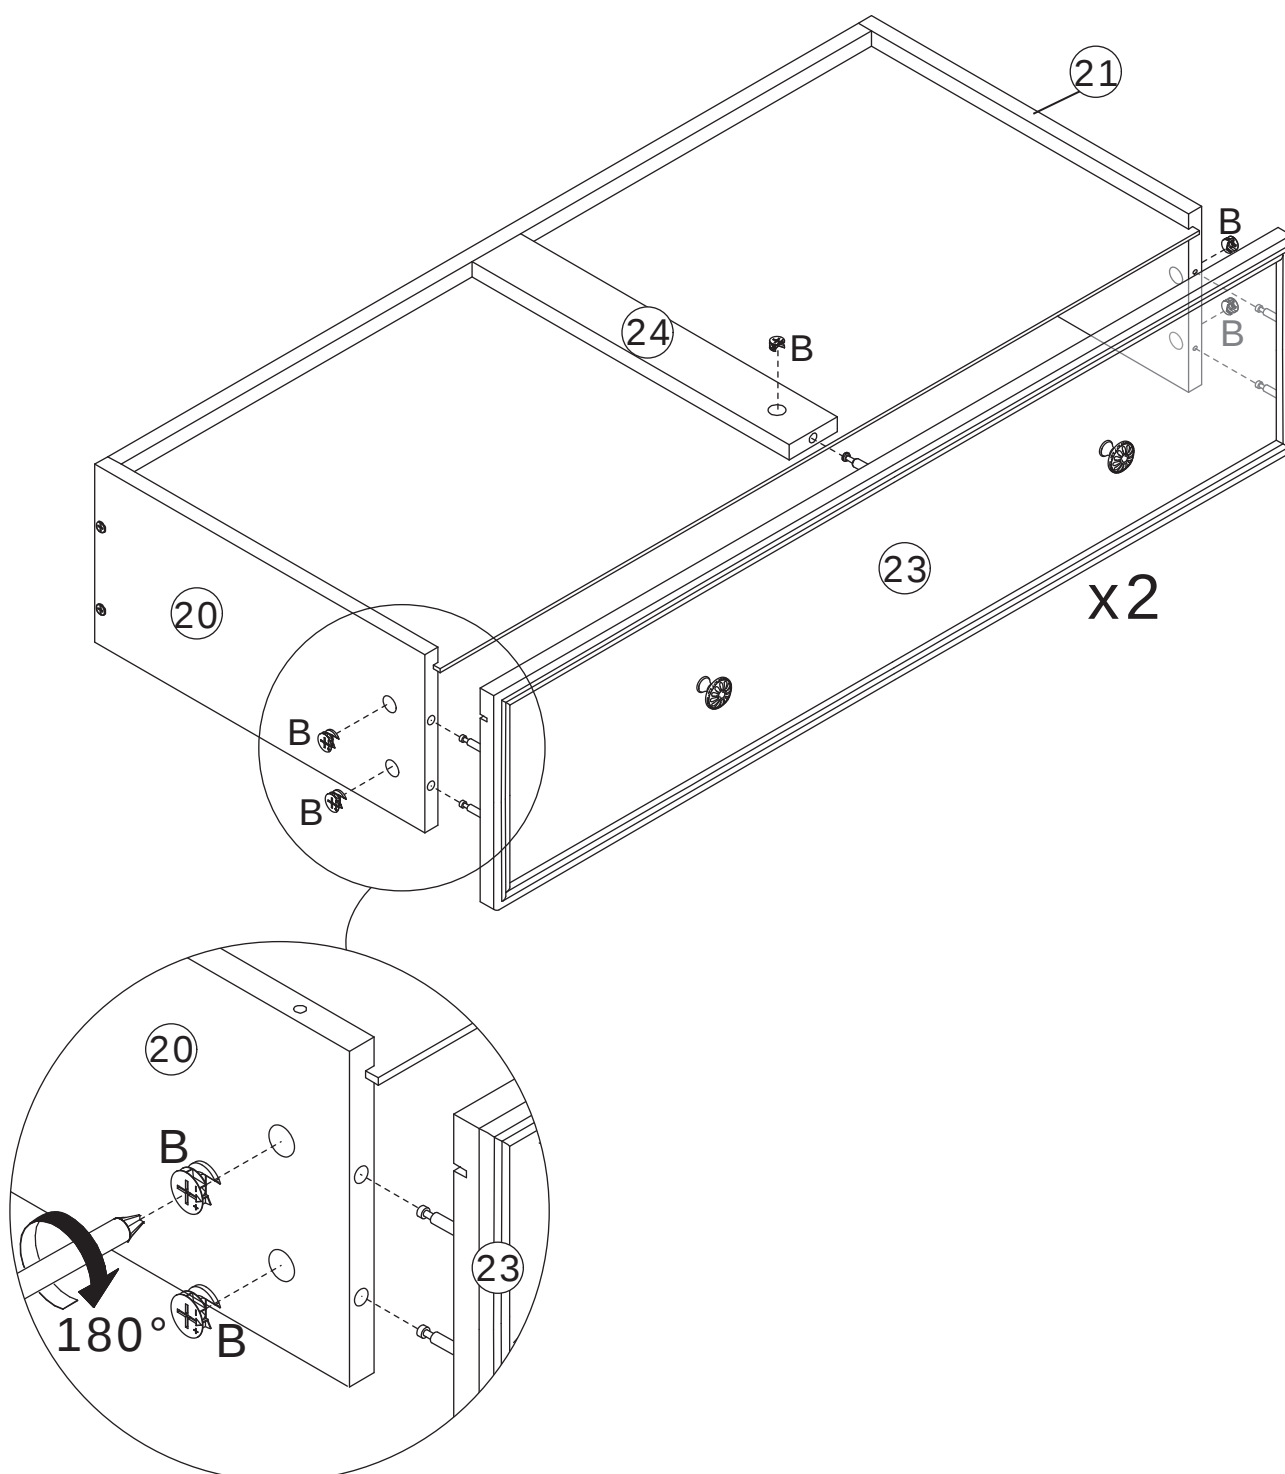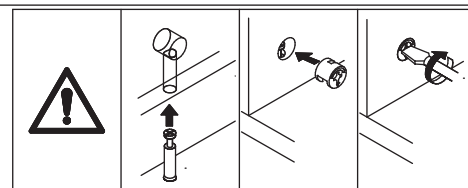



35

C x 12






Ø3 x 12 mm

  
J x 4



   
Secure slide rail (J) to panels 20 and 21 using screw (C) as shown.

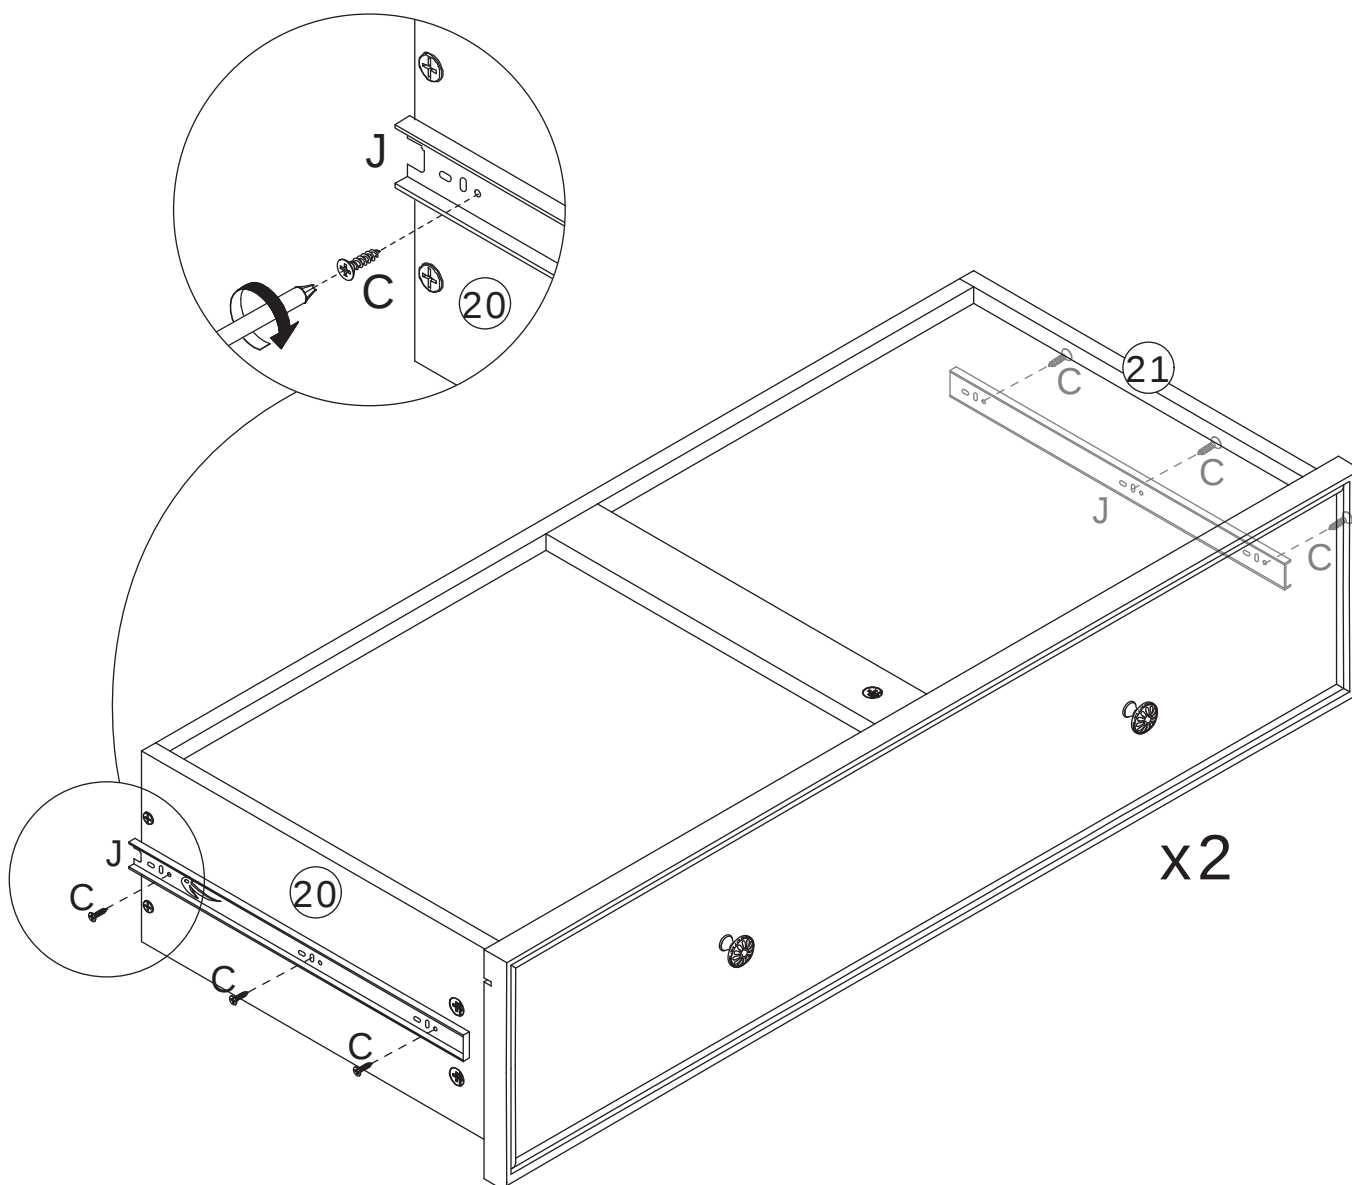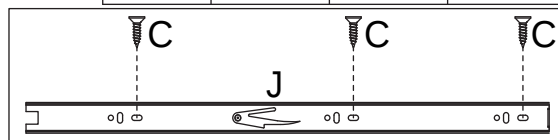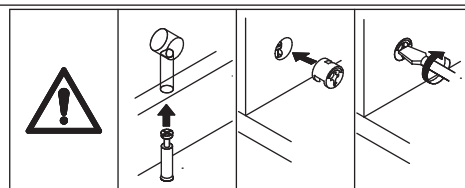


36

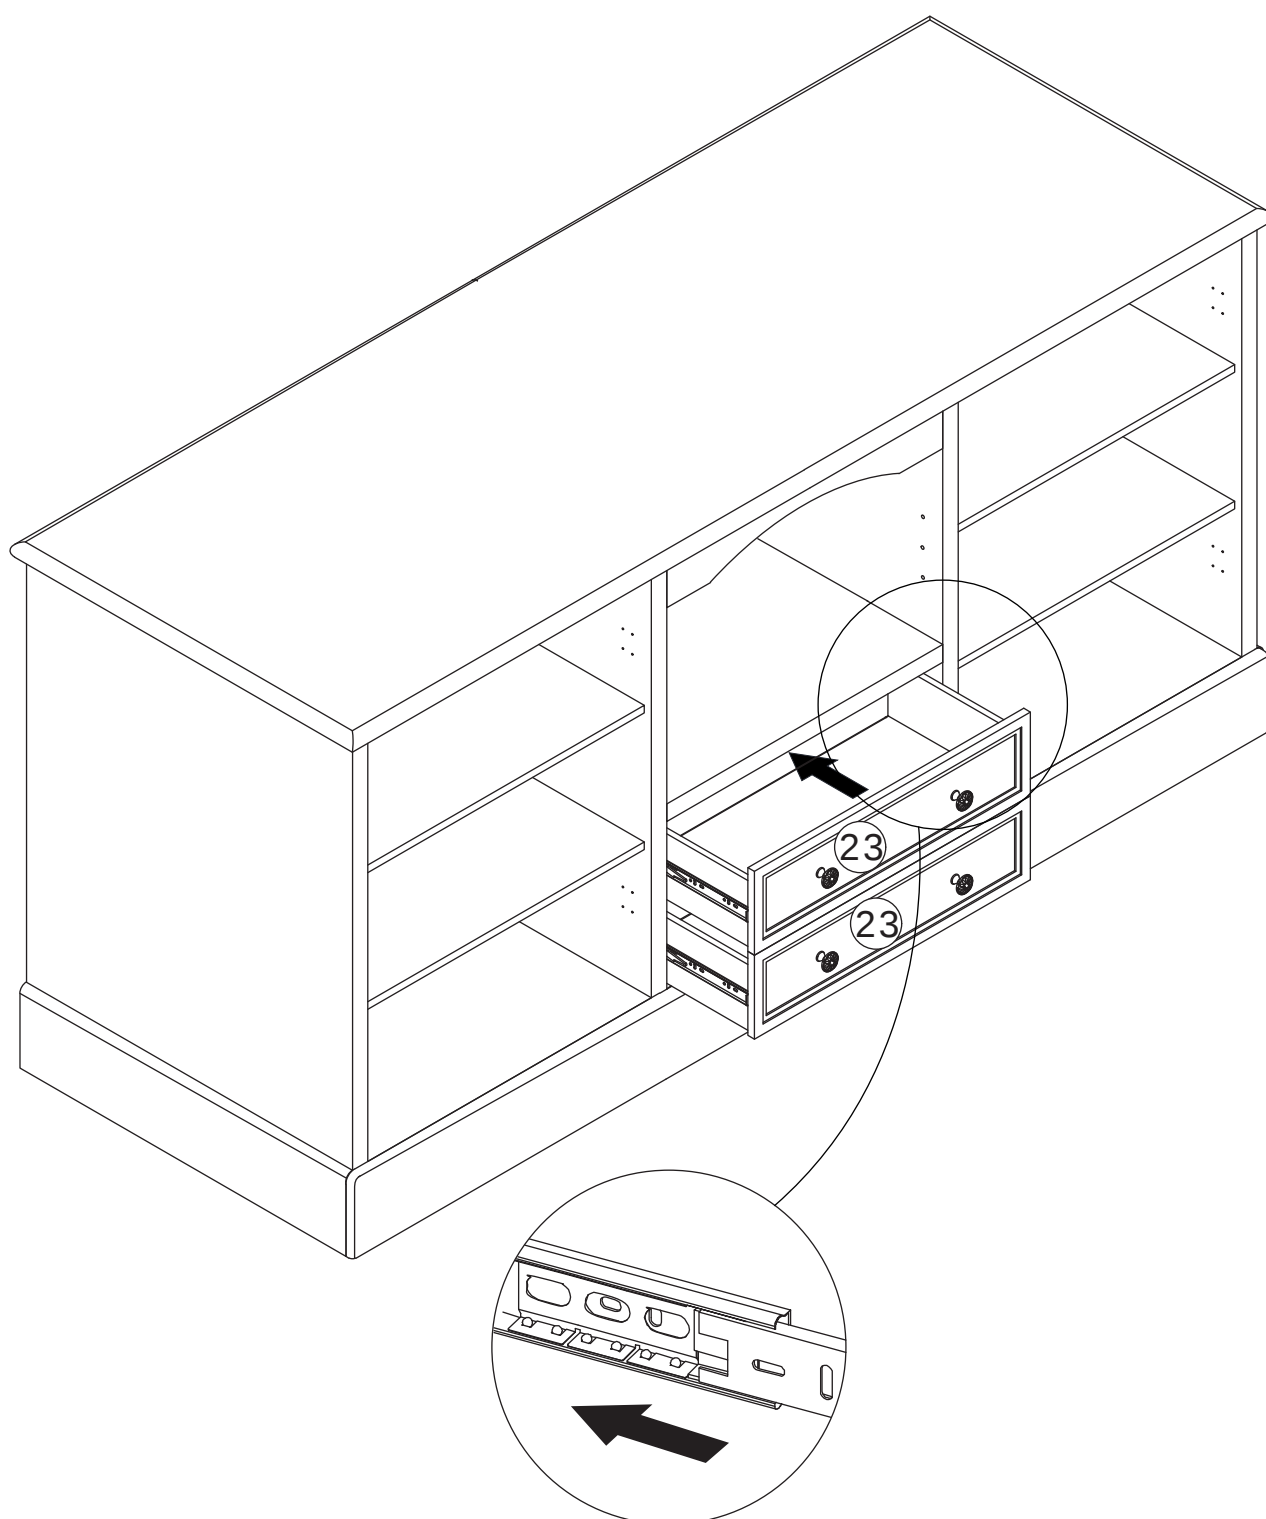 


37

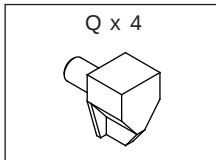 

 Insert pin (Q) to panels 4 and 5, then place panel 13 on the pins.


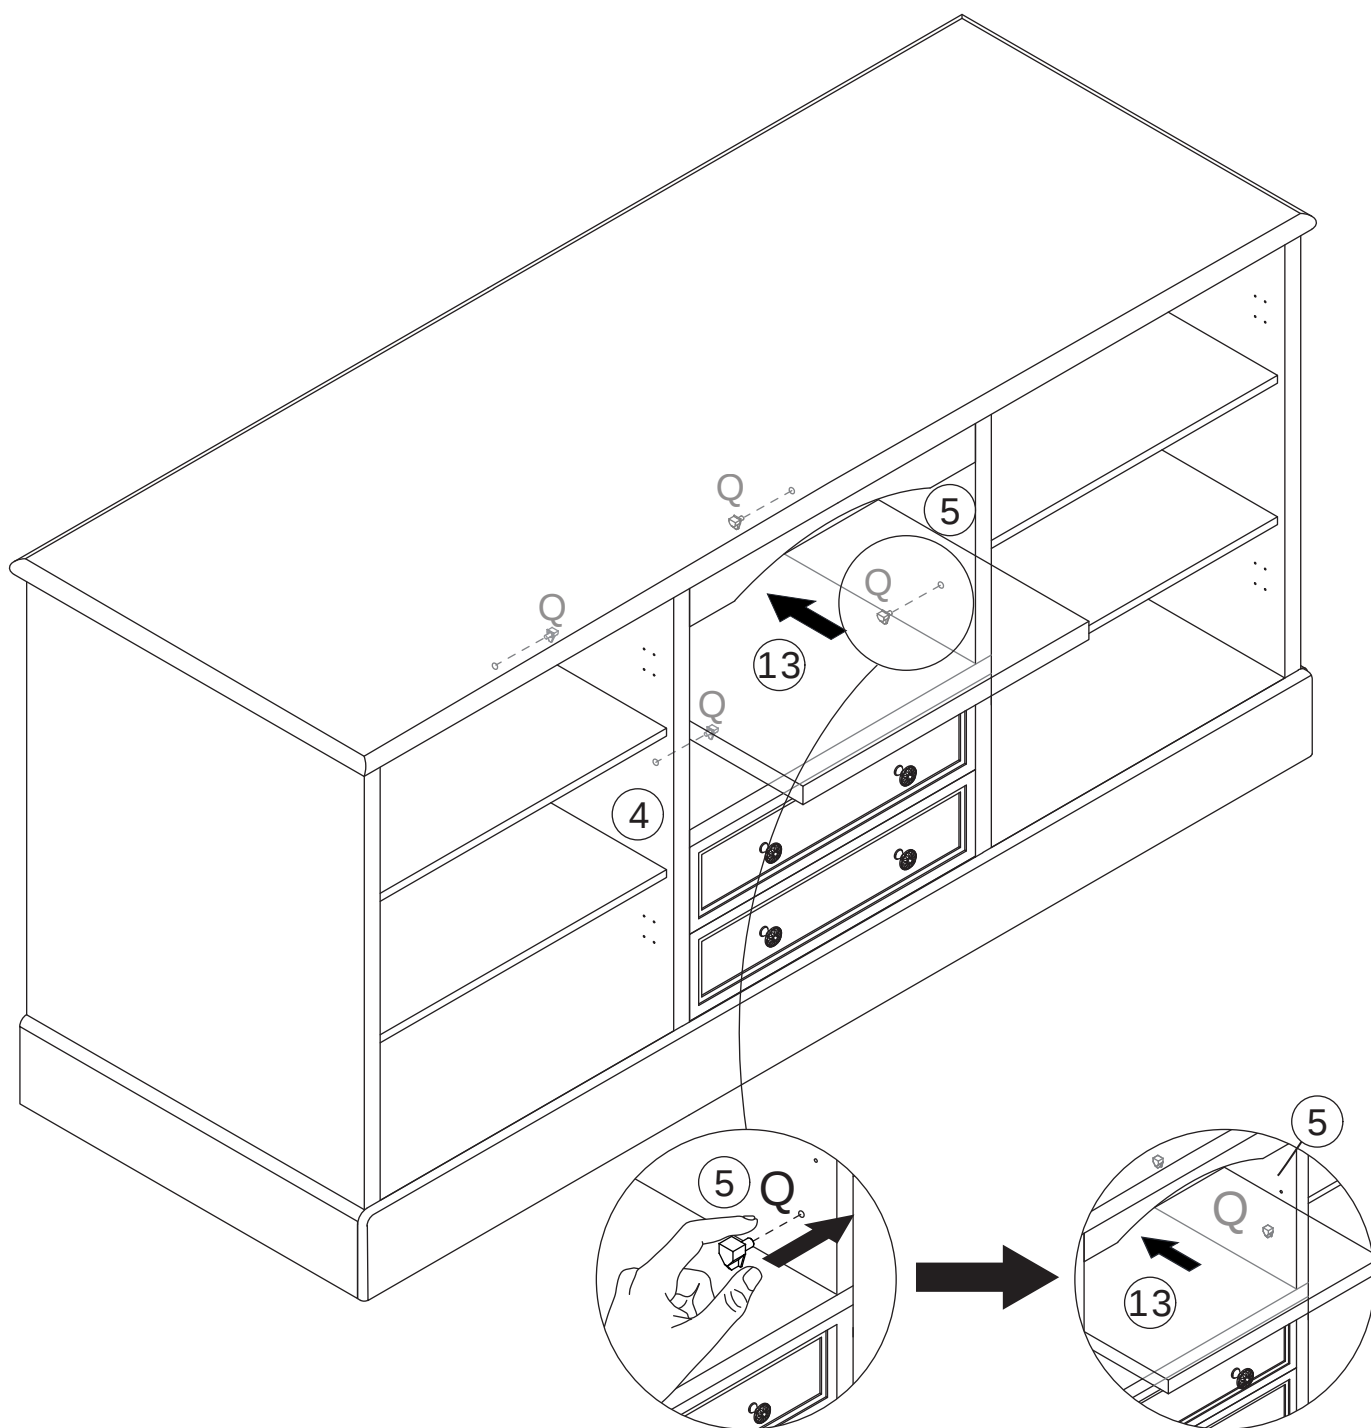


38

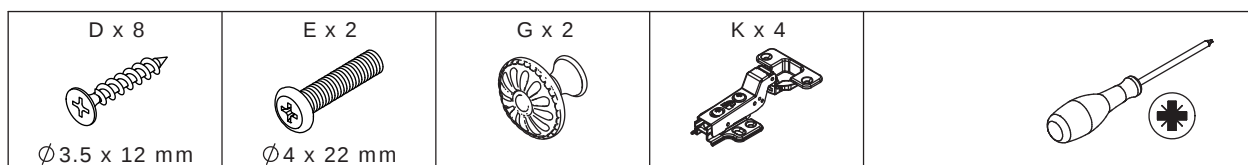 

Secure hinge (K) to panel 16 using screw (D) as shown.

  Secure knob (G) using screw (E).

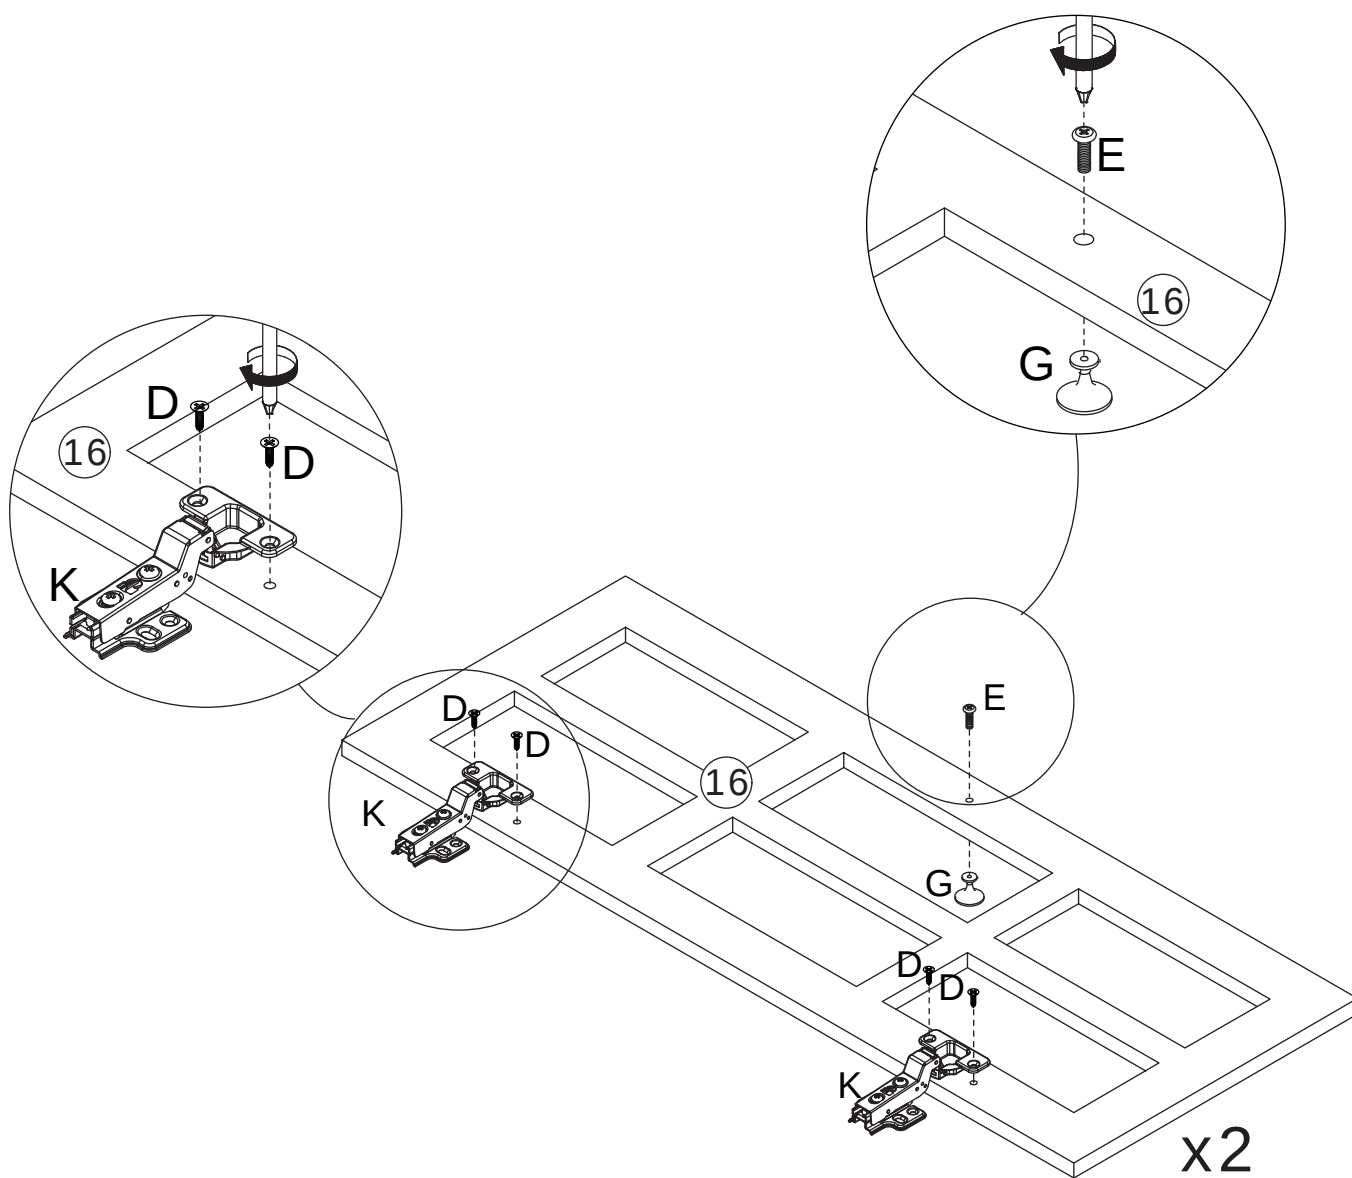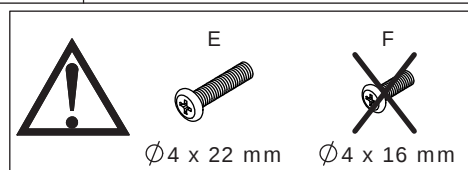


39


D x 16



 
Ø 3.5 x 12 mm



 Secure panel 16 to panels 2 and 5 via hinges using screw (D) as shown.


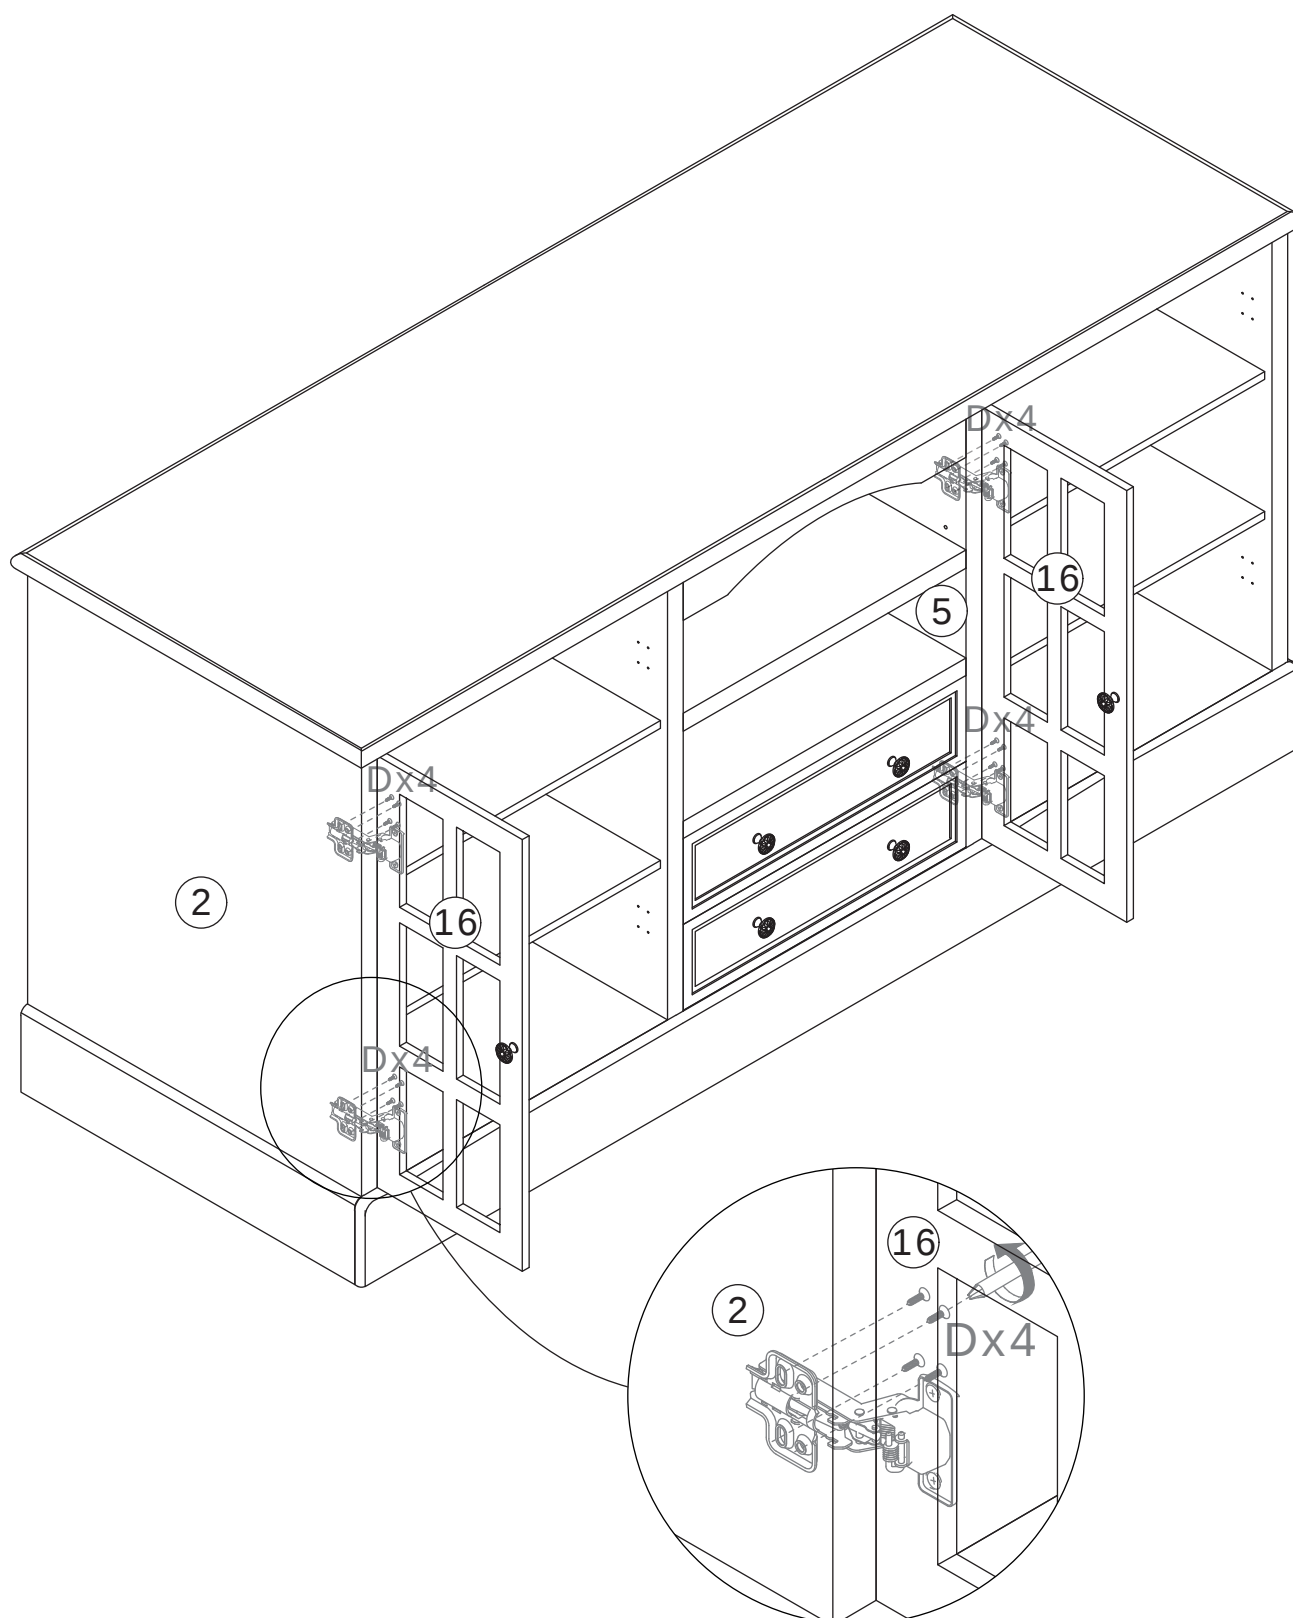


40

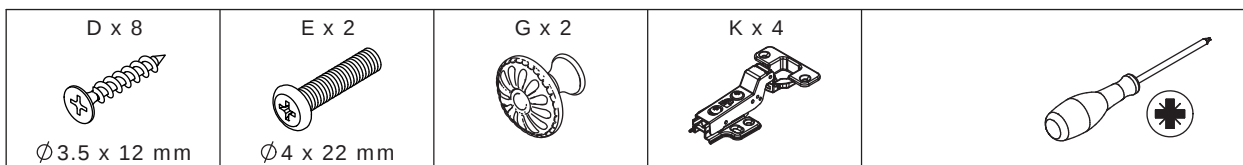 

Secure hinge (K) to panel 17 using screw (D) as shown.

  Secure knob (G) using screw (E).

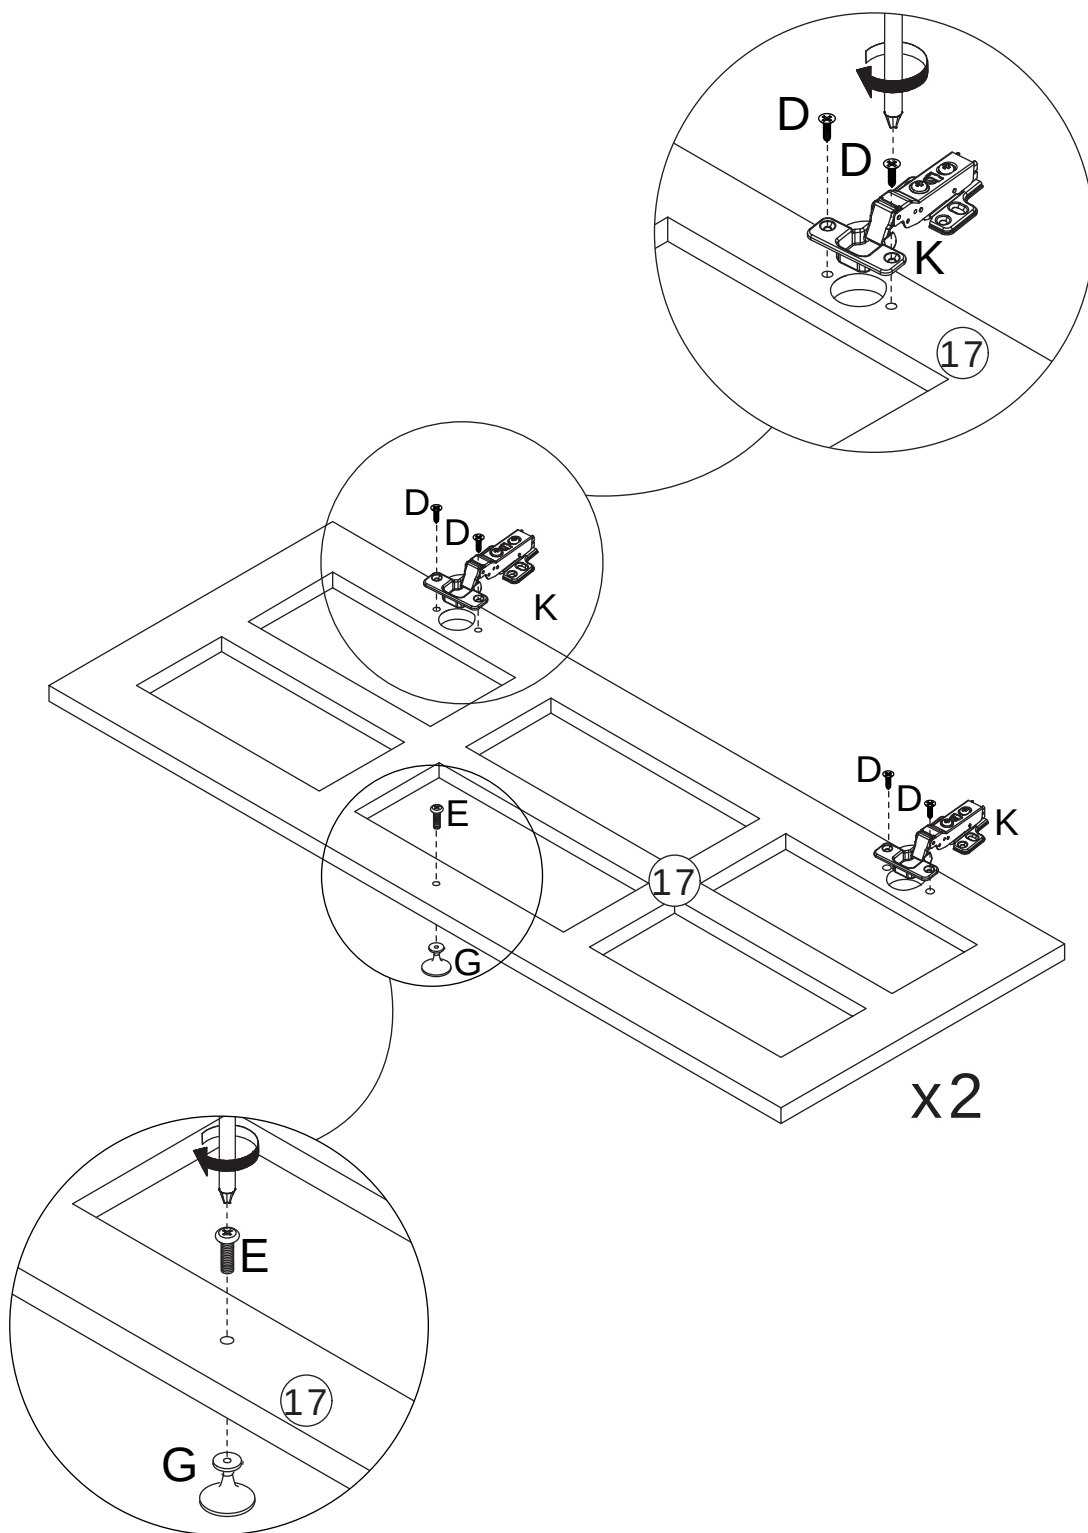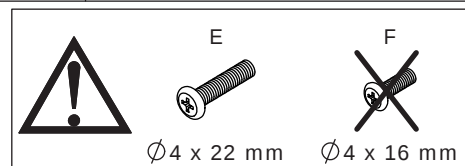


41


D x 16




 
Ø 3.5 x 12 mm



  
 
Secure panel 17 to panels 3 and 4 via hinges using screw (D) as shown.

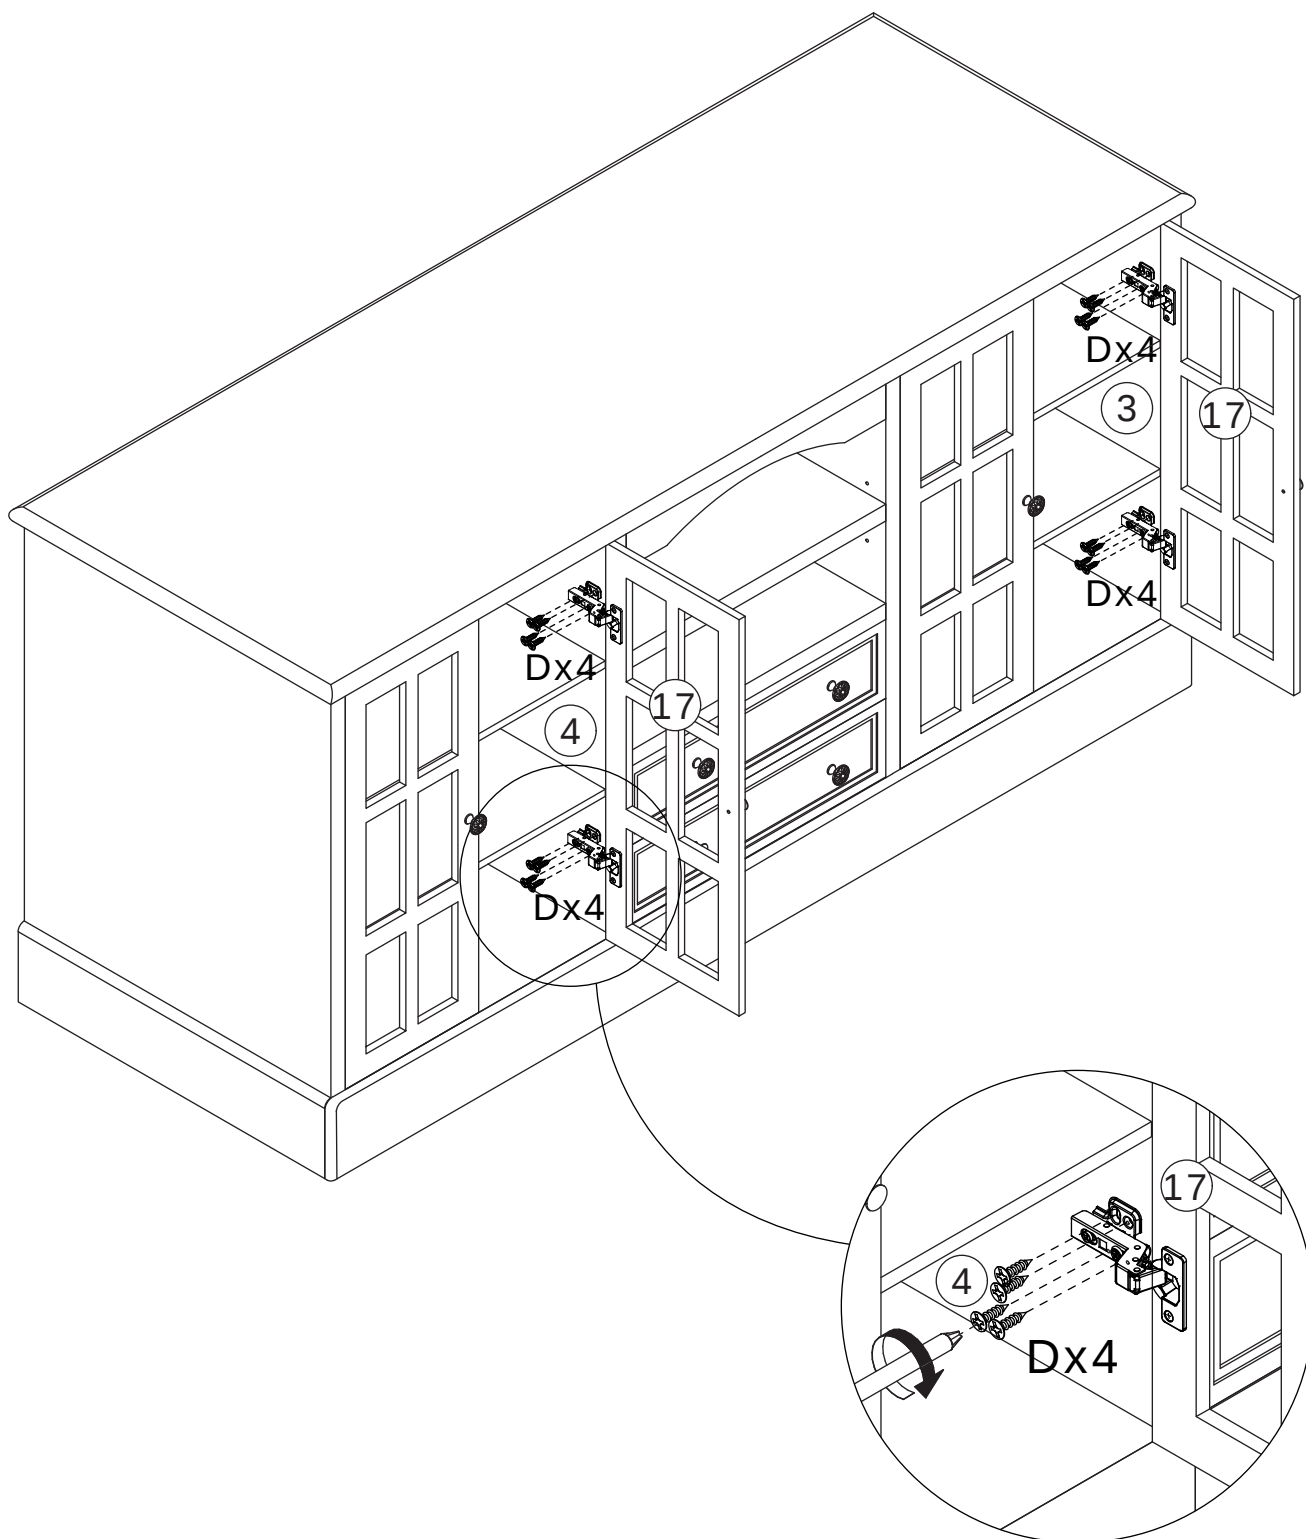

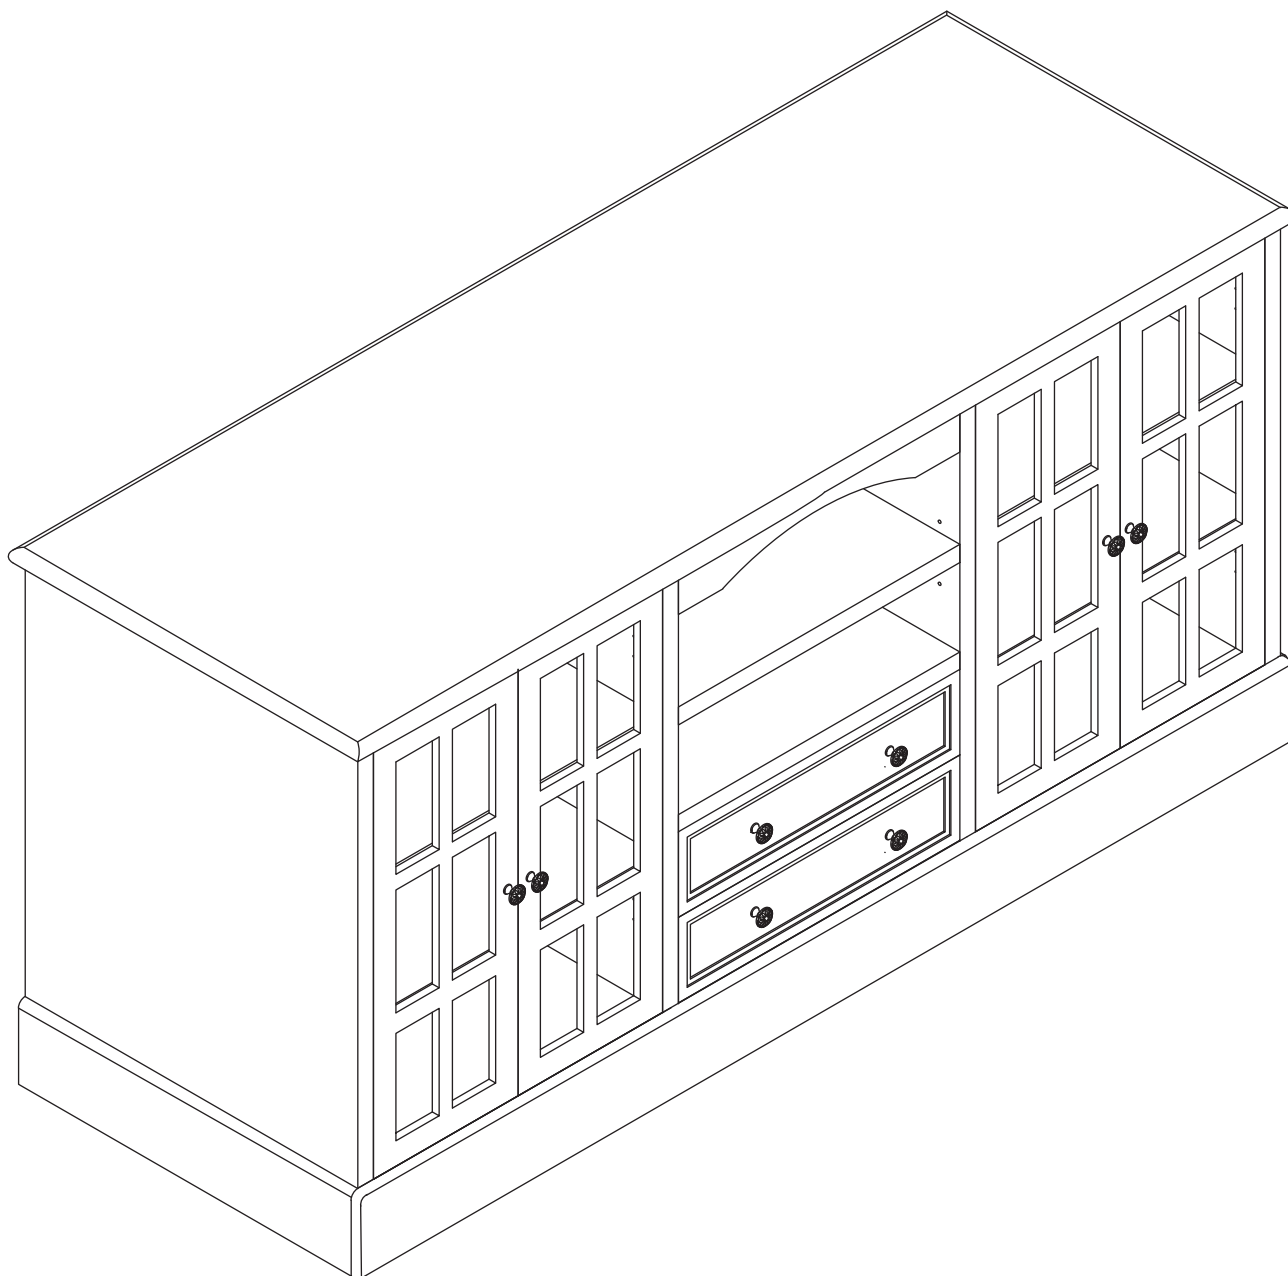



  If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

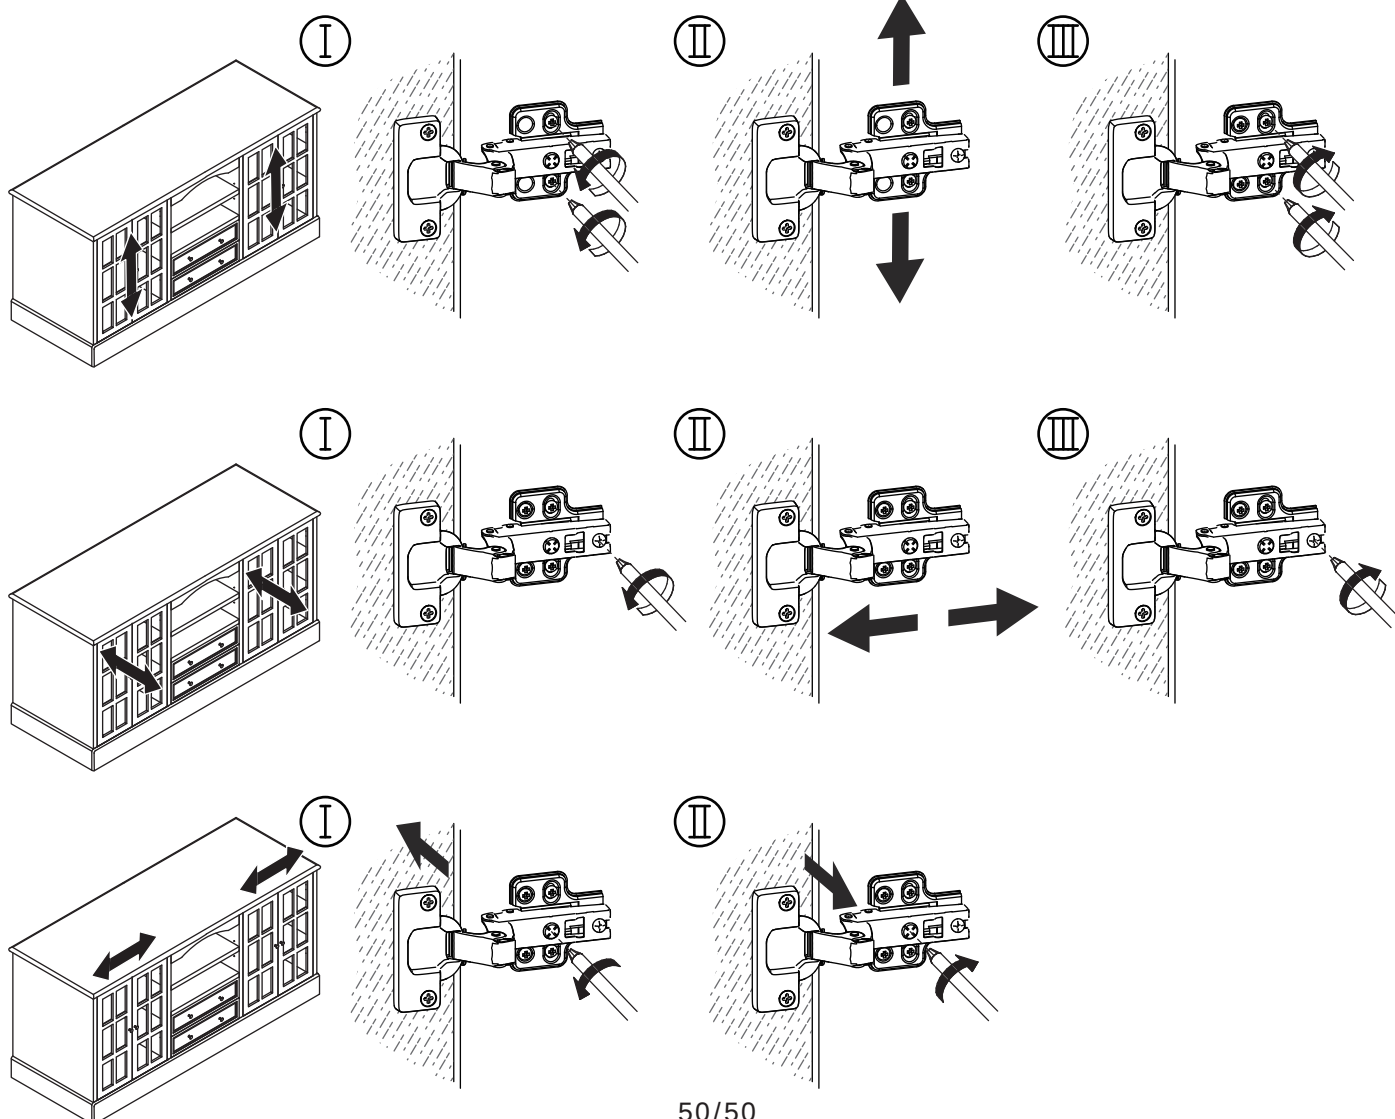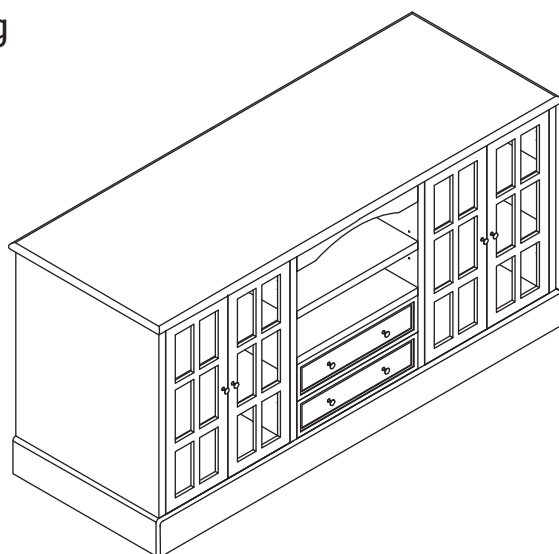

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.