 


G51000363

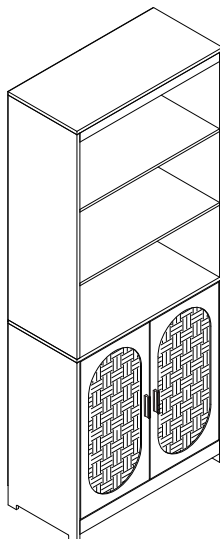

! WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

! ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

! WARNUNG



 
Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.


Dies ist ein dauerhaftes Etikett.

Nicht entfernen!


Hardware

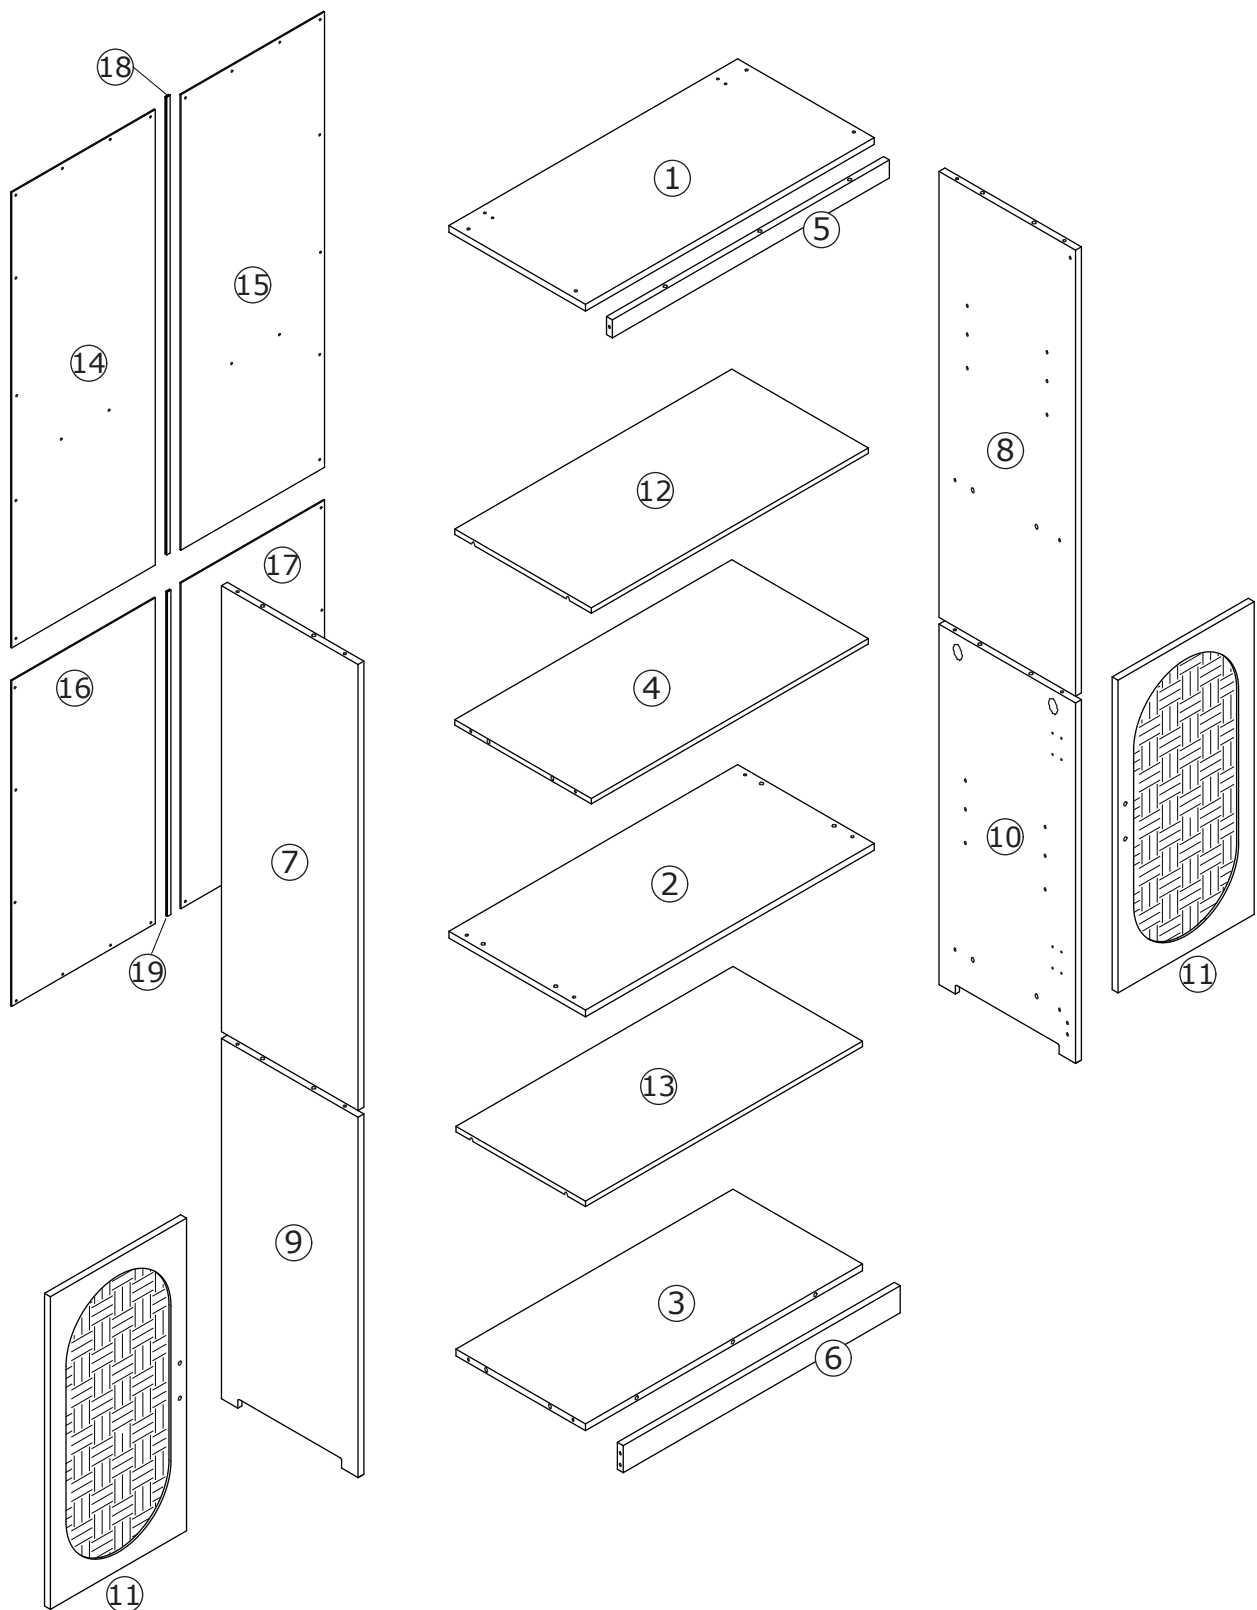

Panel list

 
A	x19+1	B	x19+1	C	x17+1	D	x10+1	E	x4	F	x24+2
											
				Ø6x30mm		M4x35mm		Ø6x50mm		M3.5x12mm	
G	x4	H	x40+4	I	x6	J	x4	K	x2	L	x8
											
		M3x14mm				M4x18mm					
M	x4	N	x2	O	x2	P	x4				
											
M4x12mm											

 1

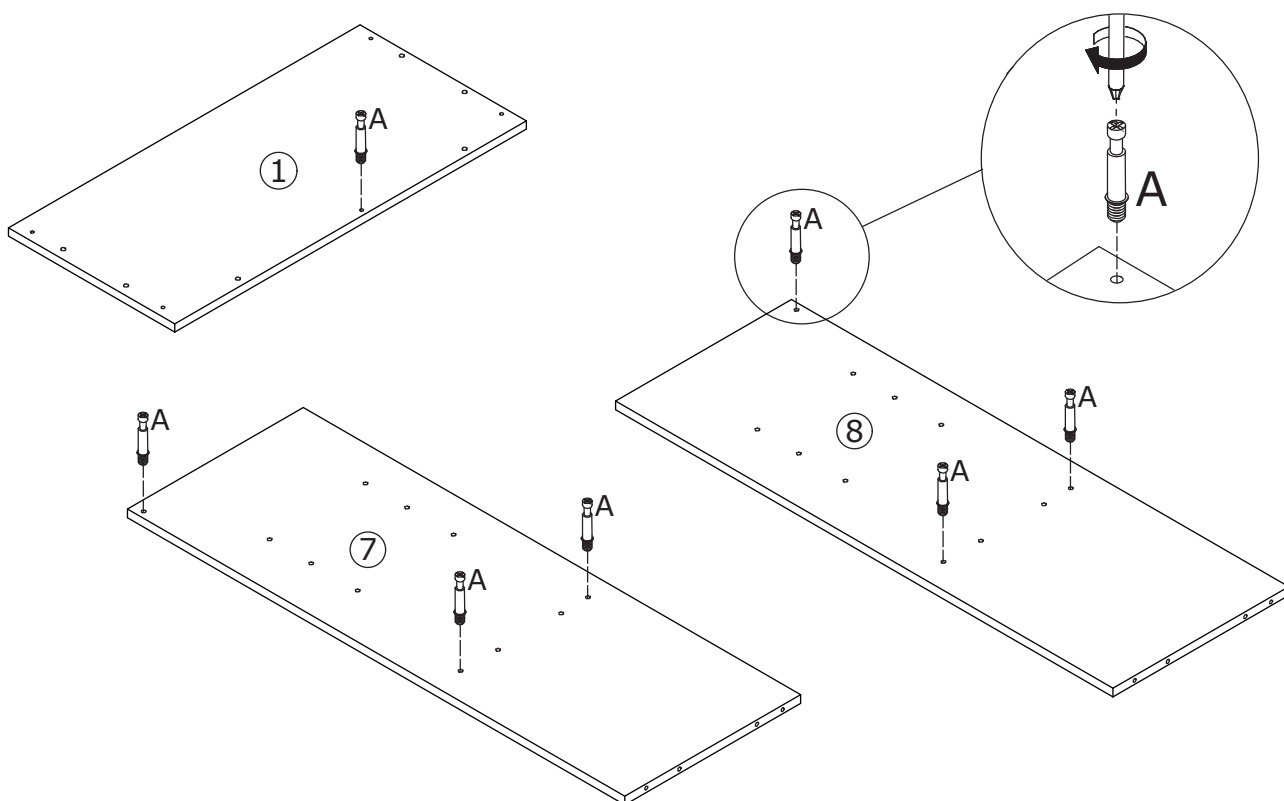


A	x7
	

 2

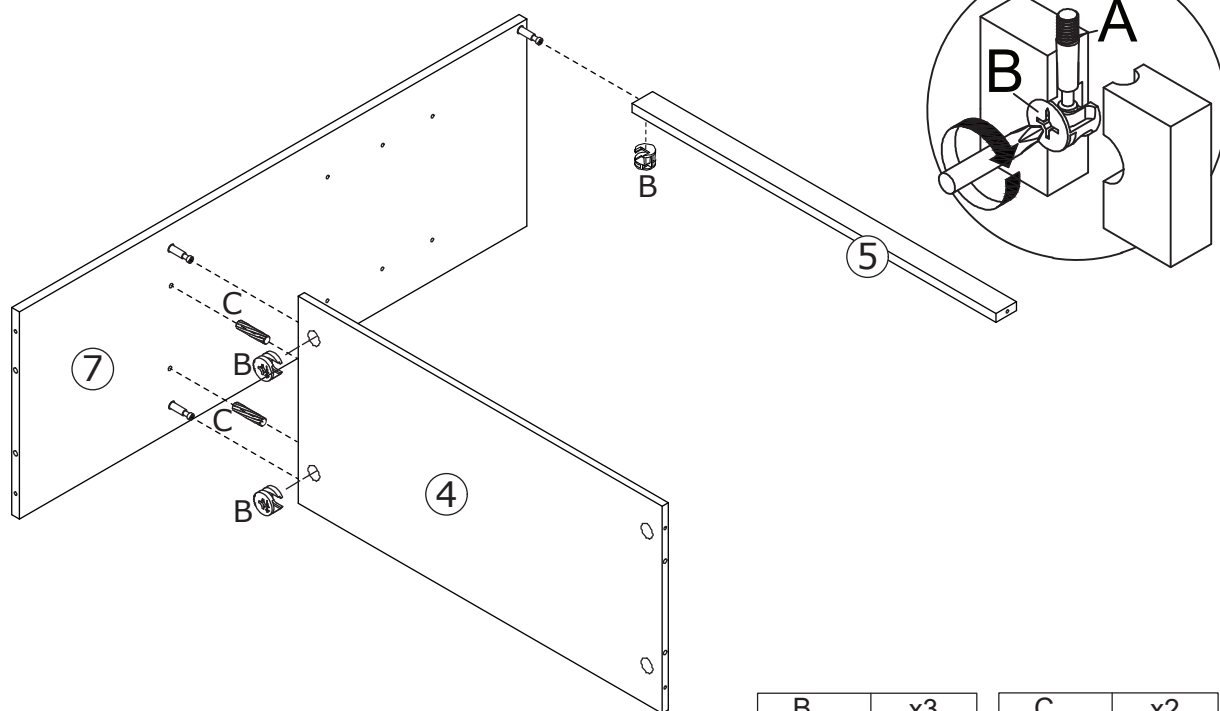


B	x3	C	x2
			

 3

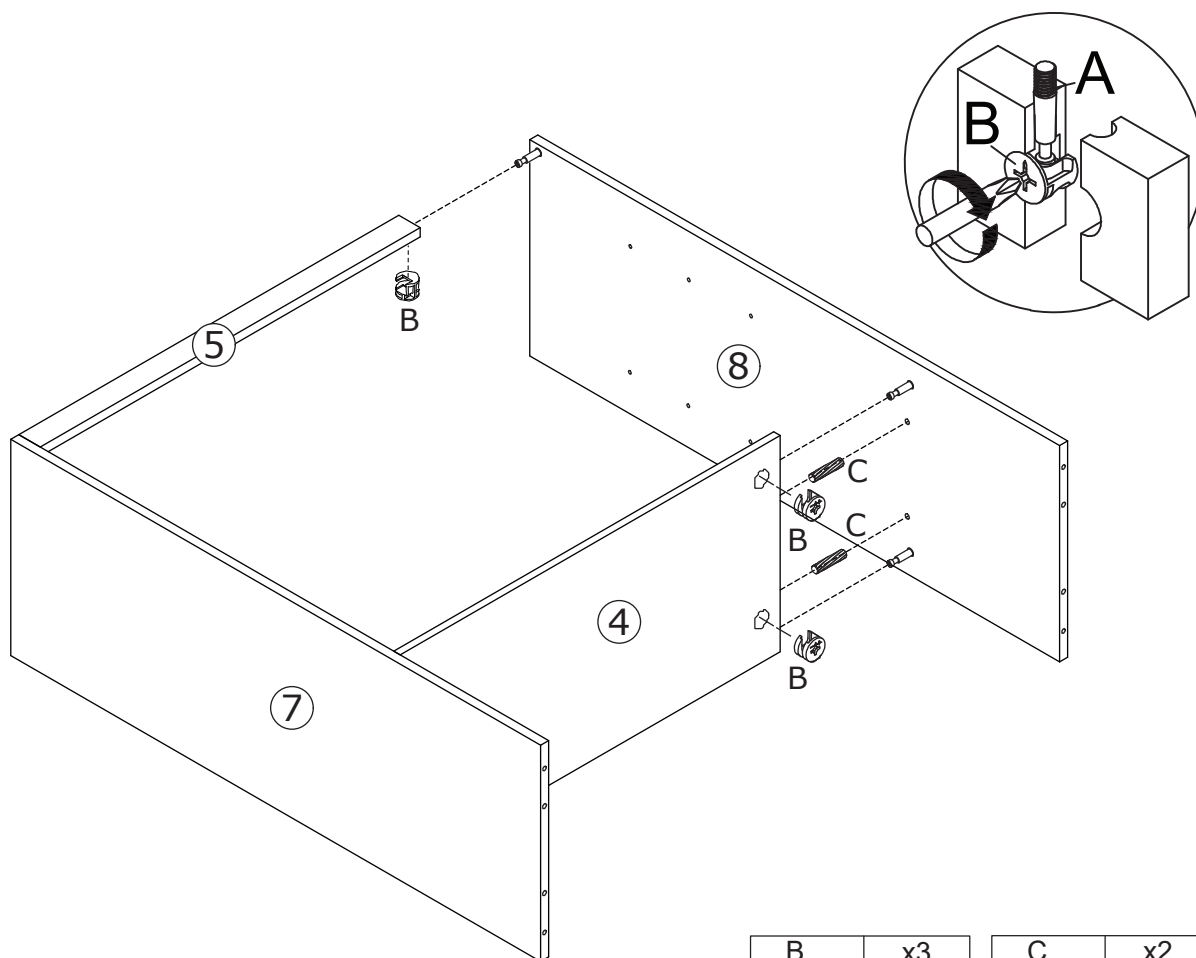


B	x3	C	x2
			

 4

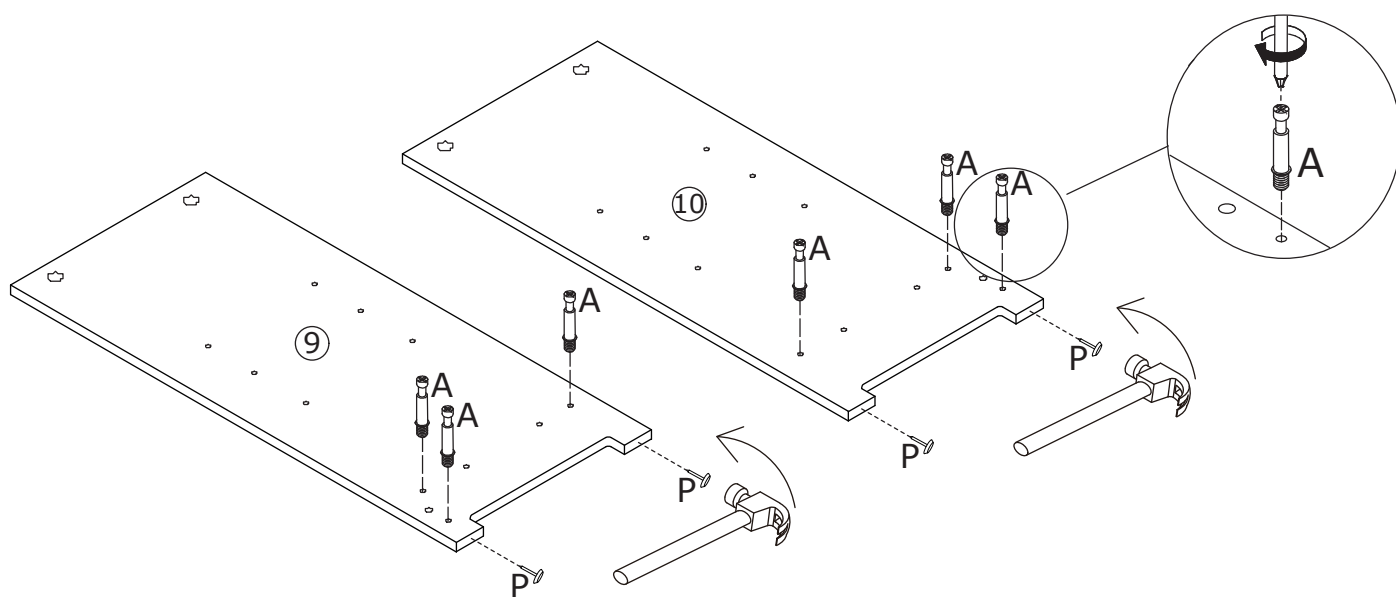



A	x6	P	x4
			

 5

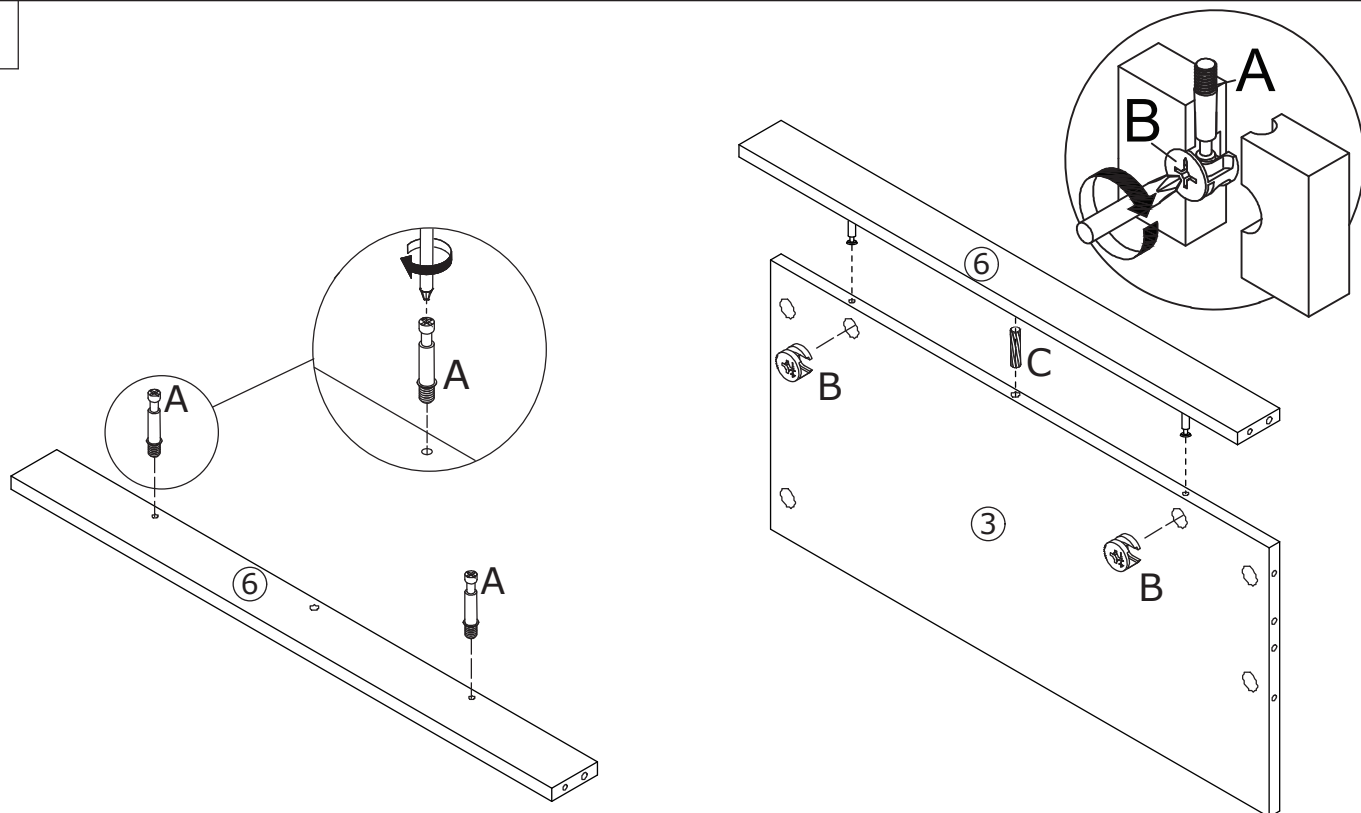

A	x2	B	x2	C	x1
					

 
 
6

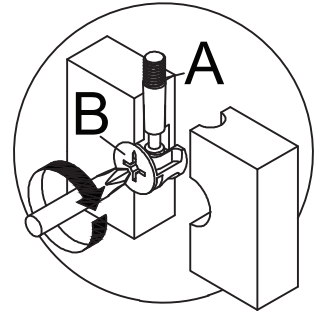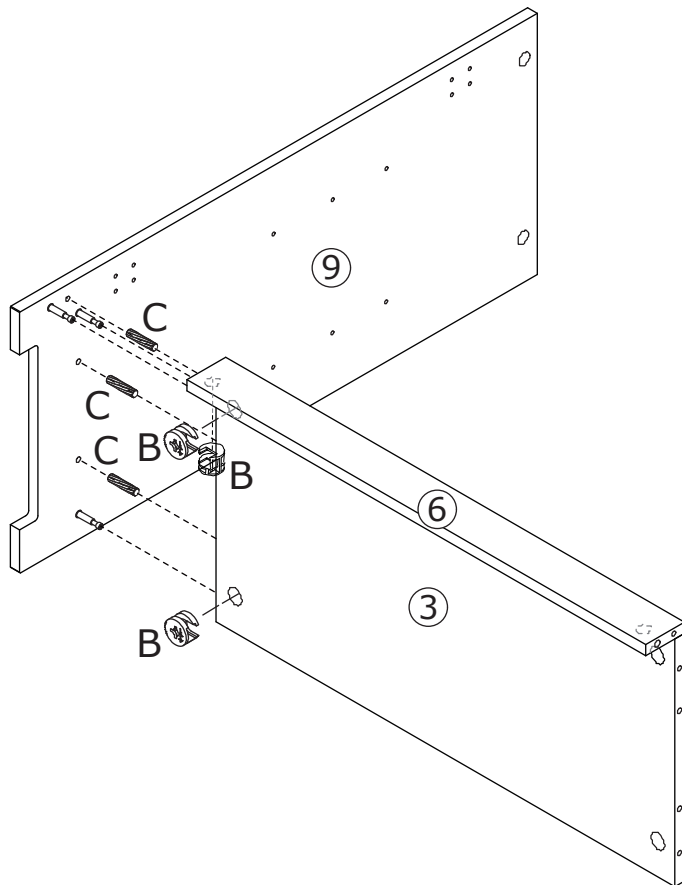

B	x3

C	x3

  
7

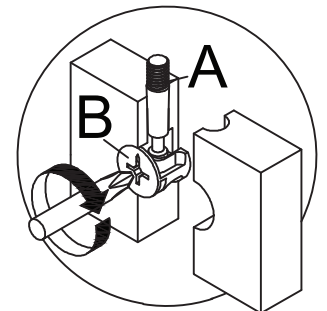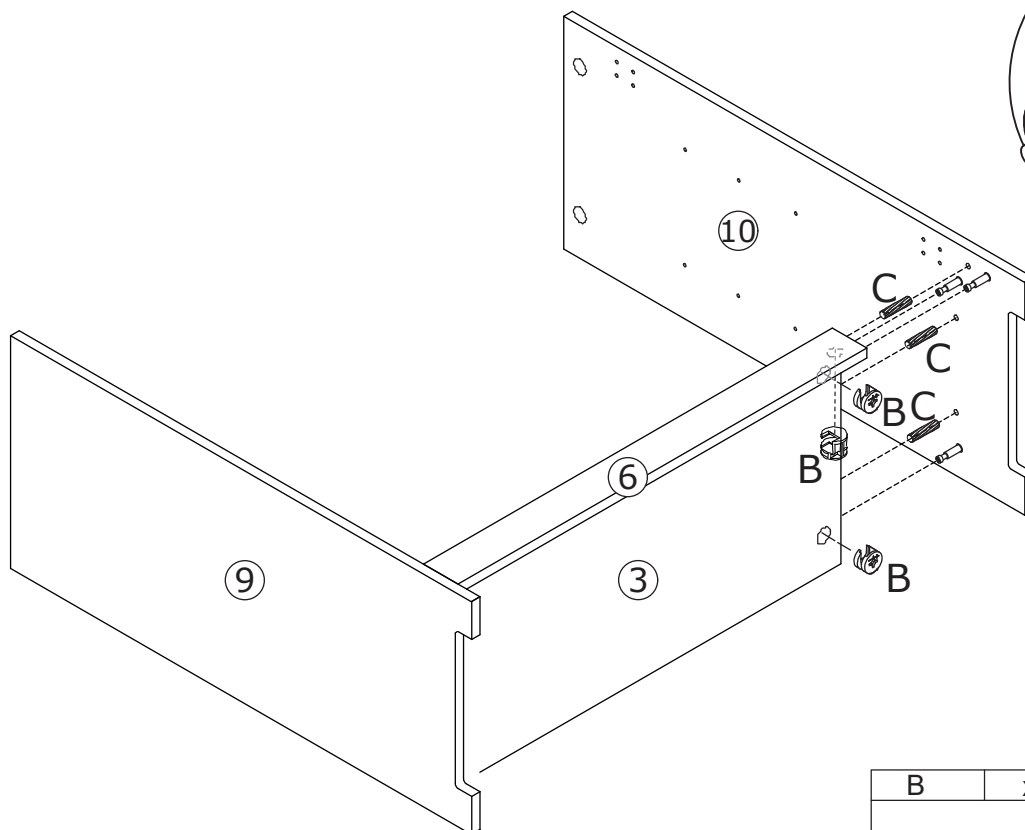

B	x3

C	x3

 8

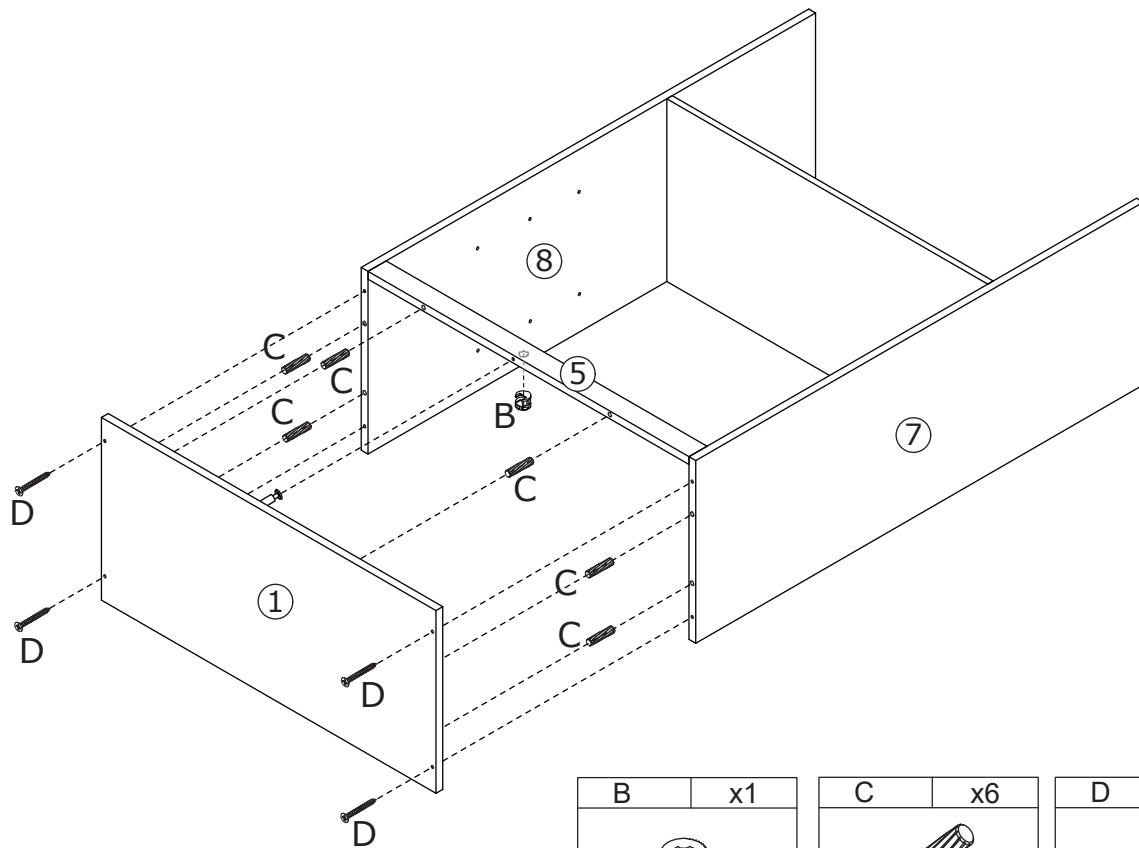


B	x1
	

C	x6
	

D	x4
	

 
9

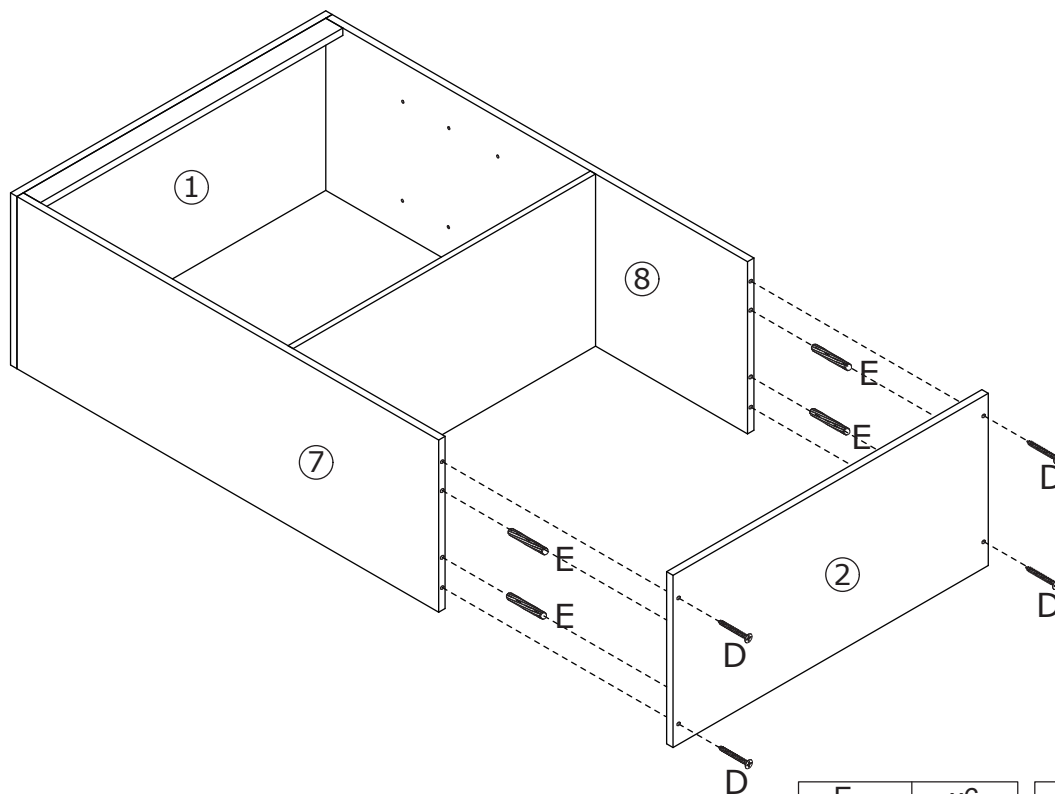

E	x6
	


D	x4
	

 10

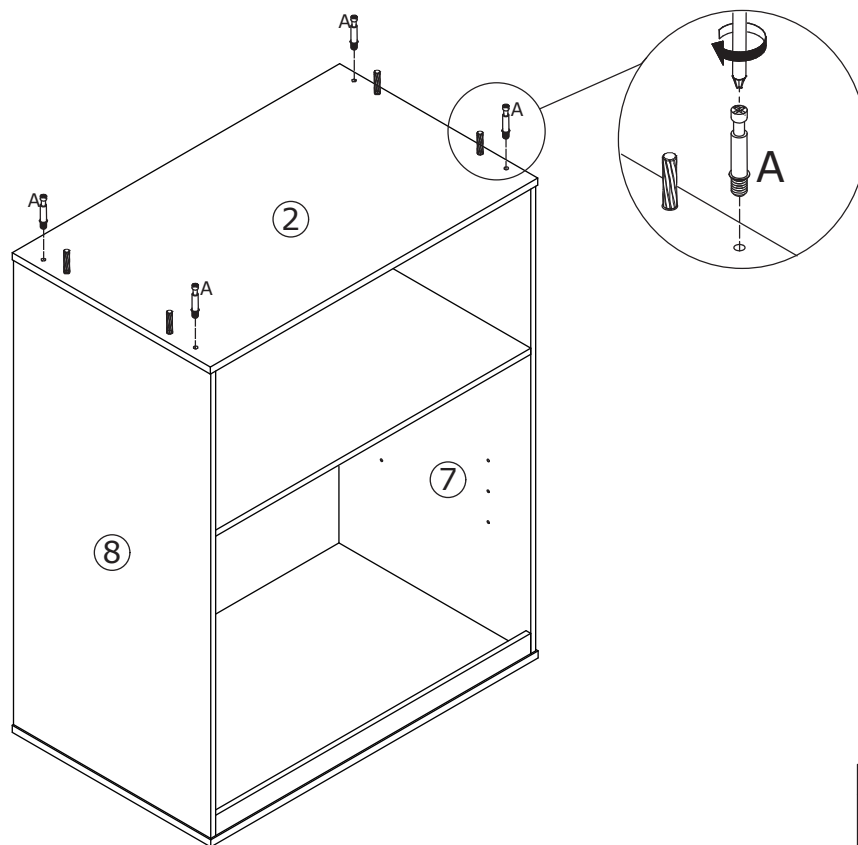


A	x4
	

 11

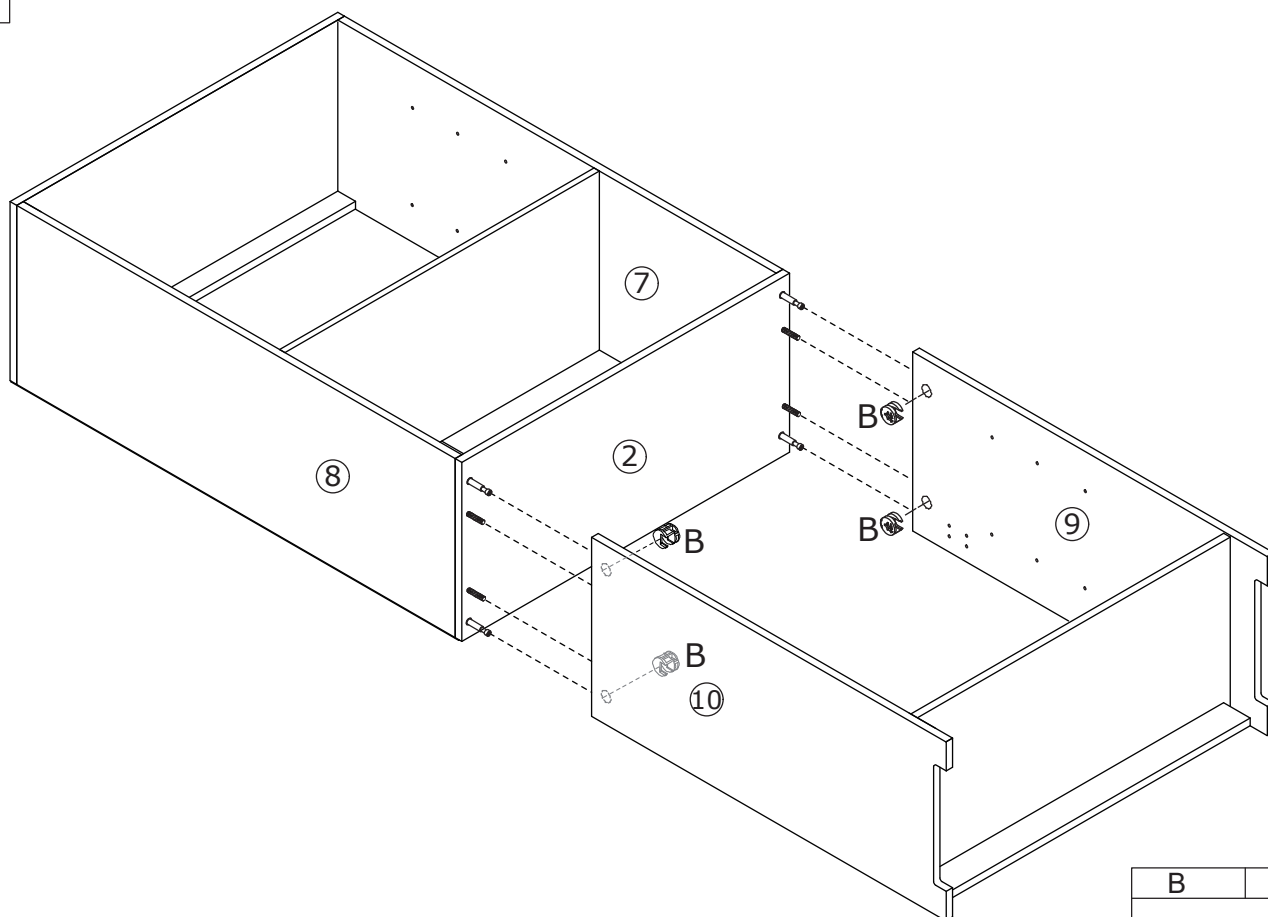


B	x4
	

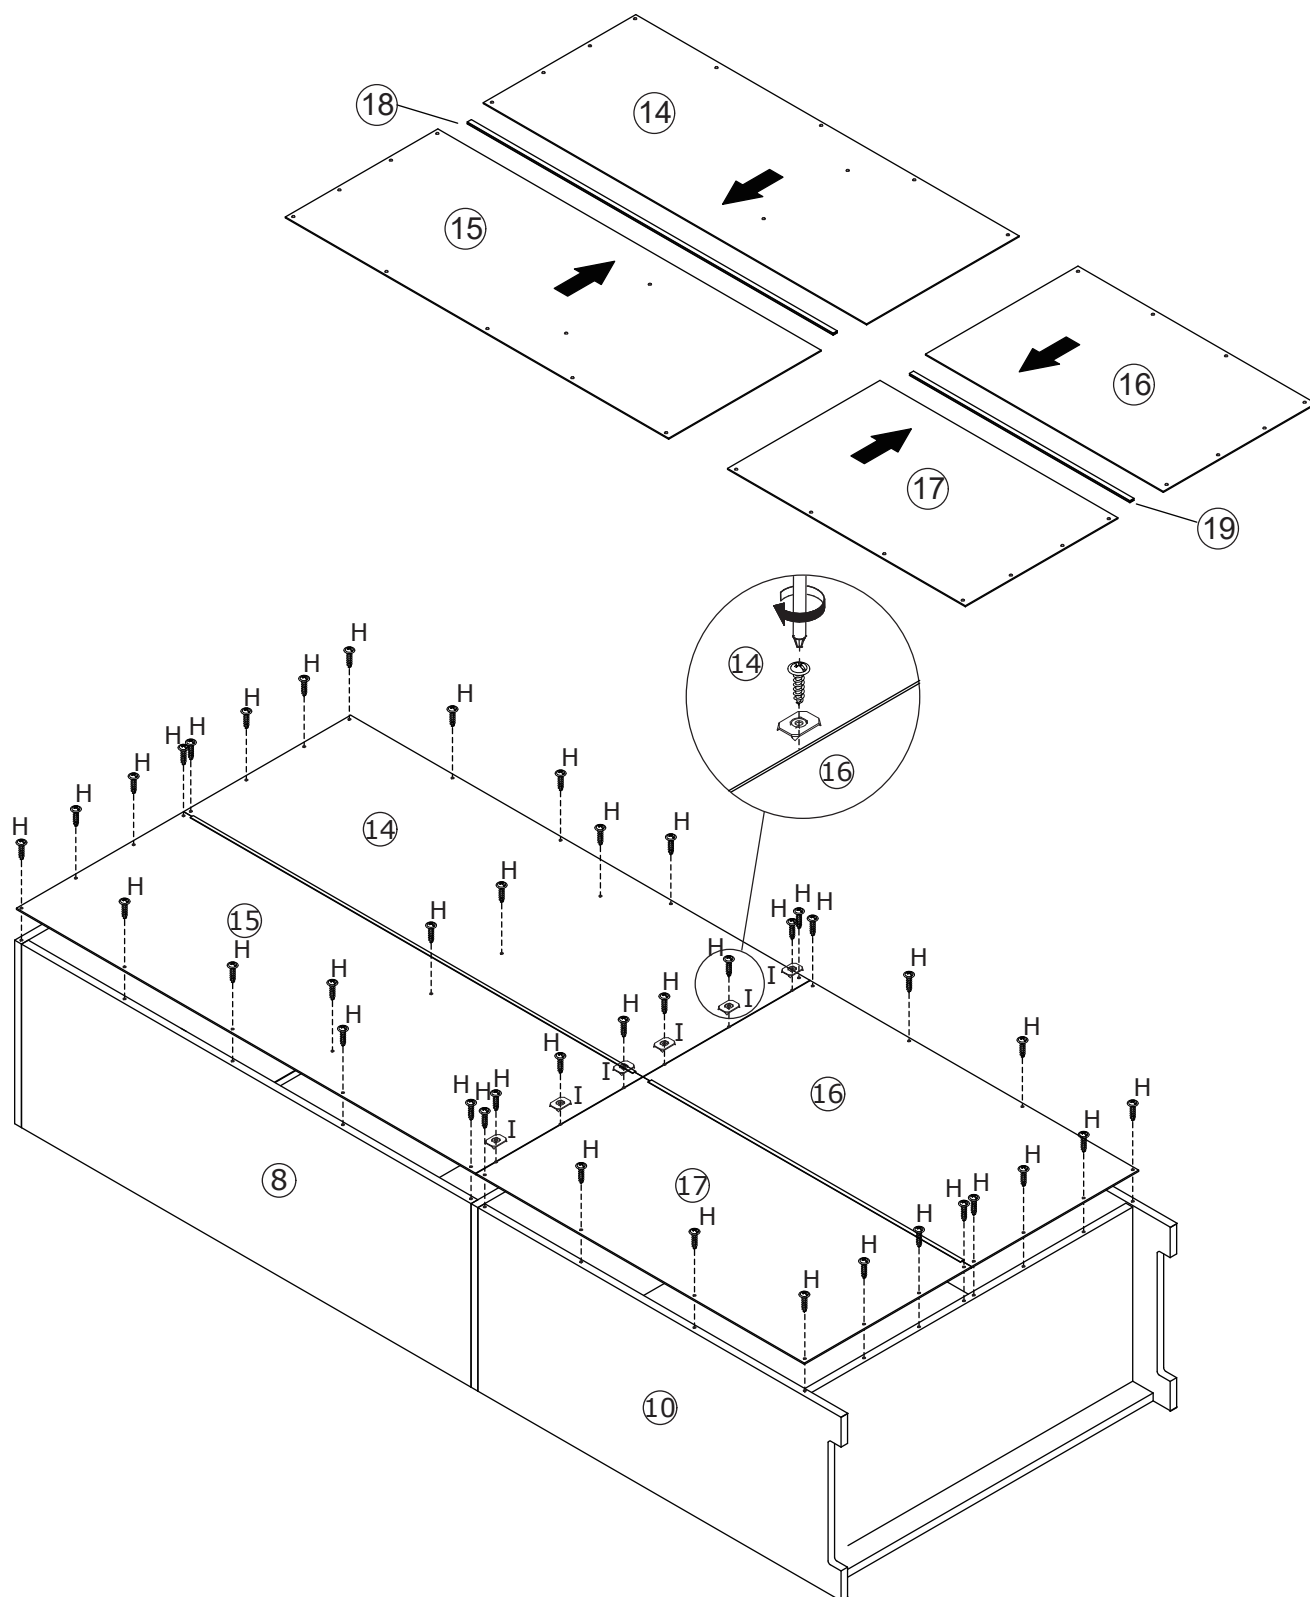 


H	x40
	

I	x6
	

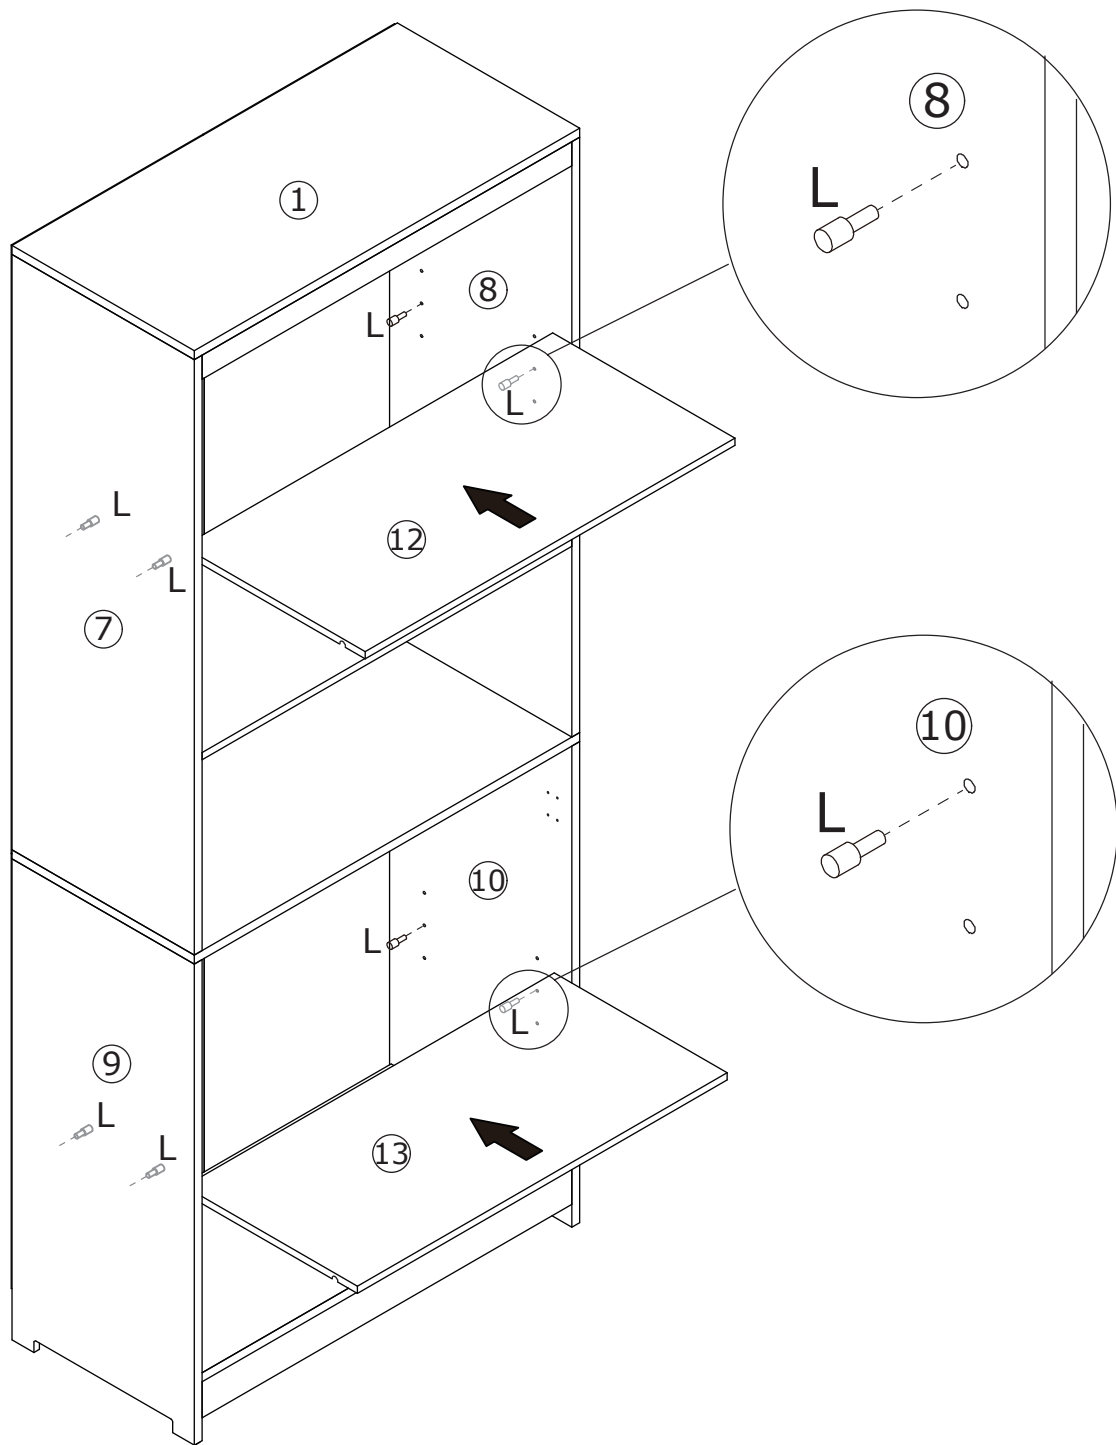 

L	x8

 
14

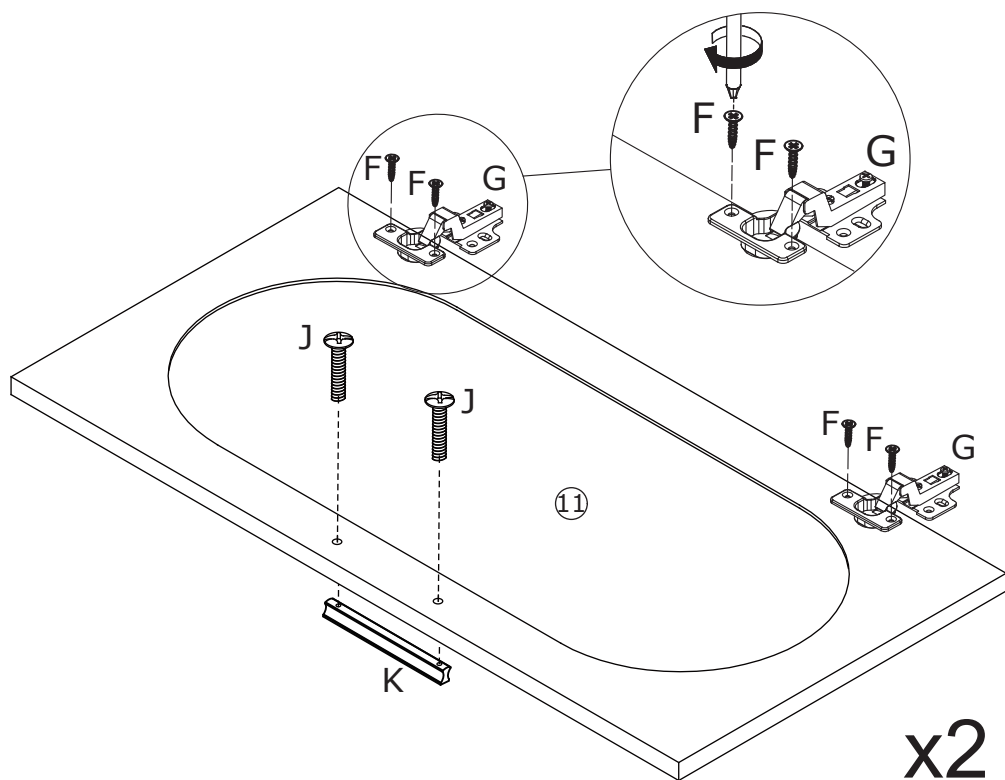



F	x8
	
G	x4
	
J	x4
	
K	x2
	

x2

 15

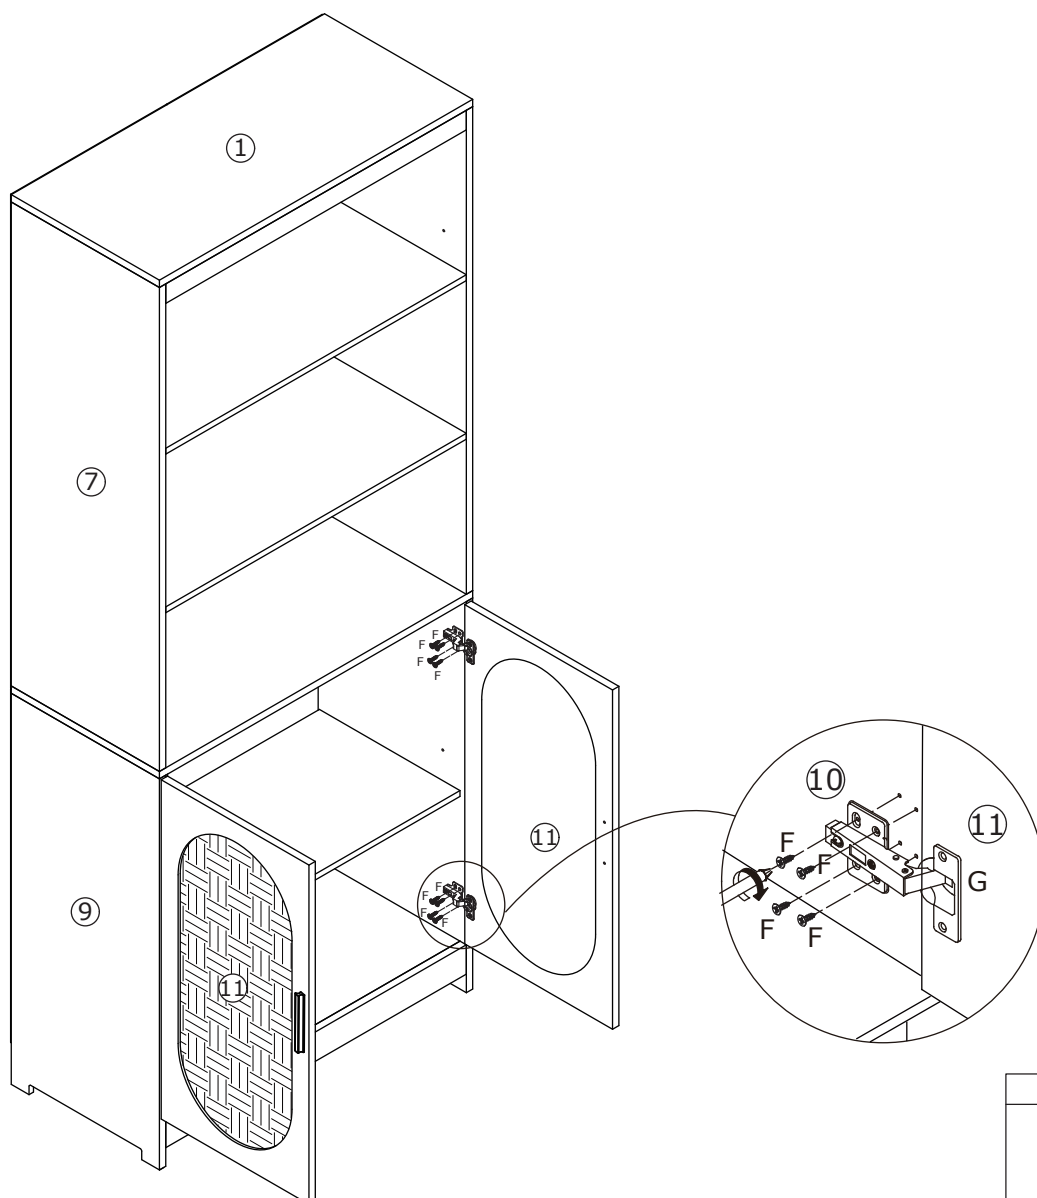


F	x16
	

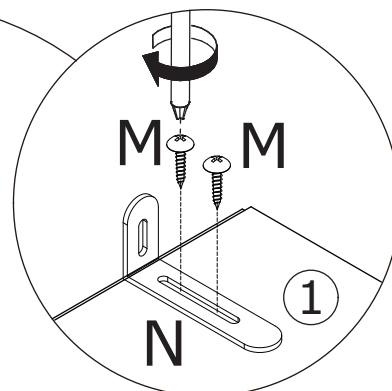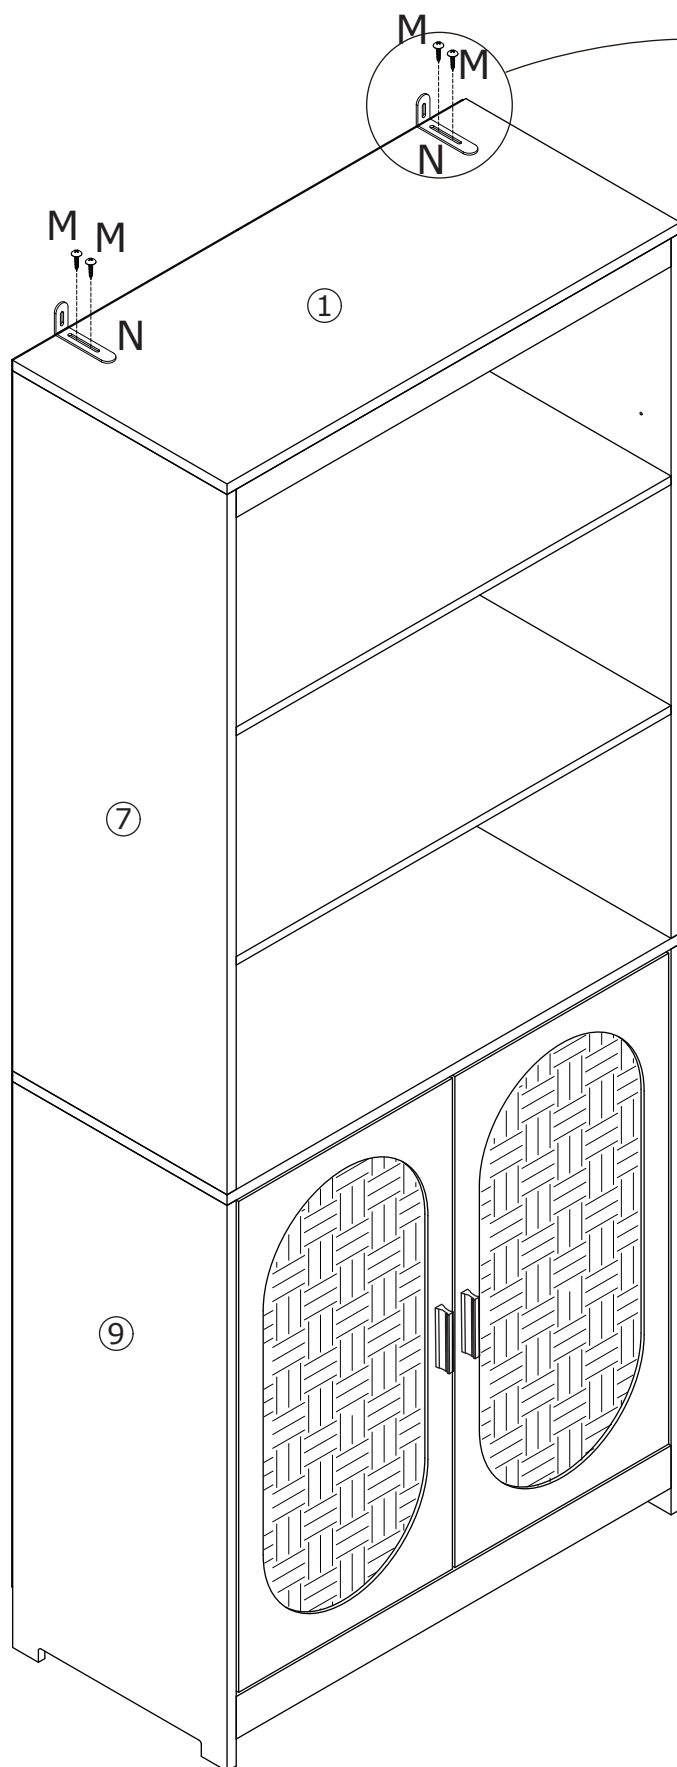  





M	x4

N	x2

 WALL

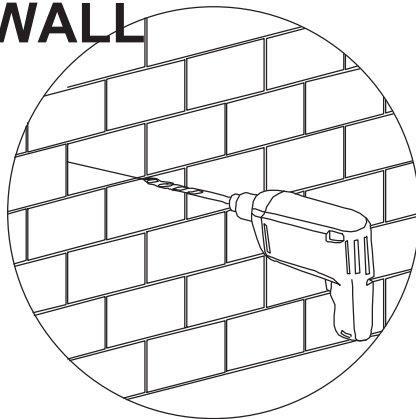


WALL

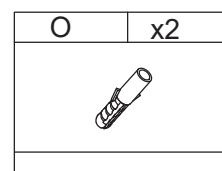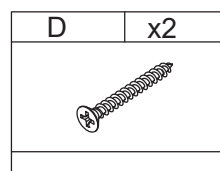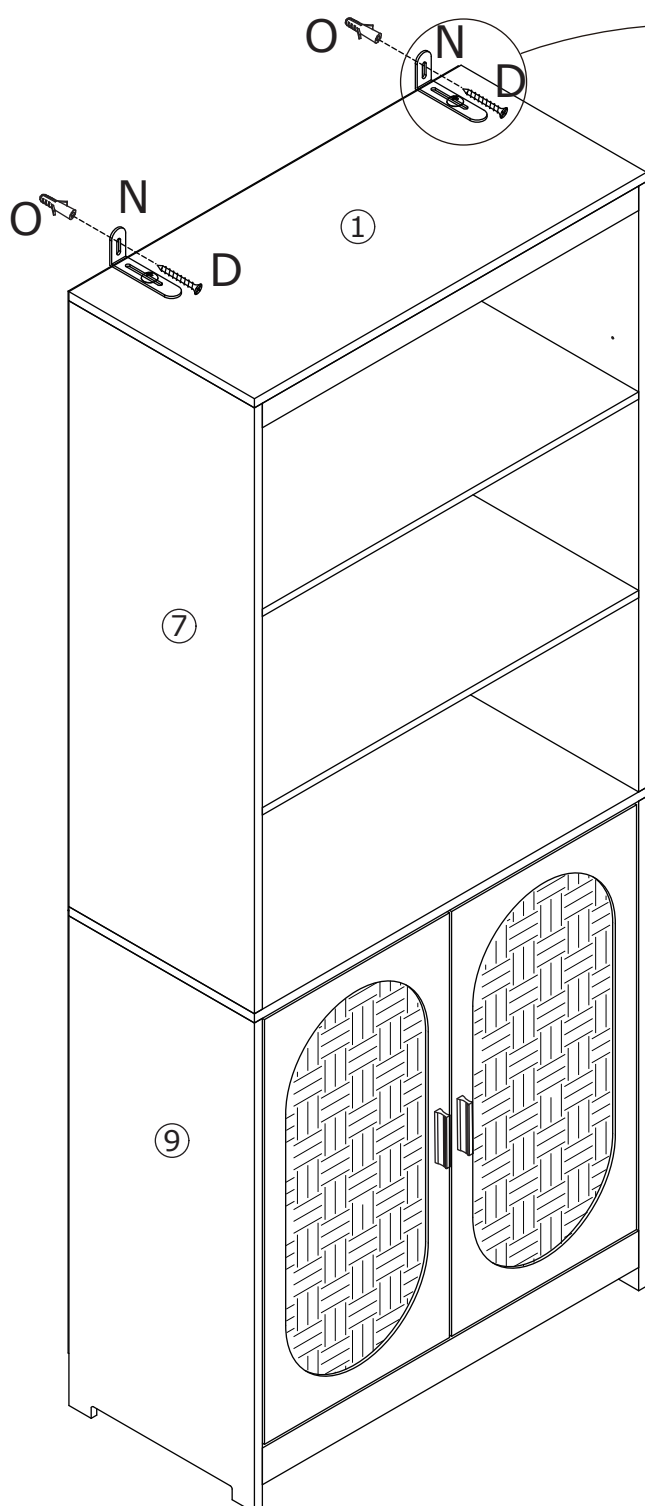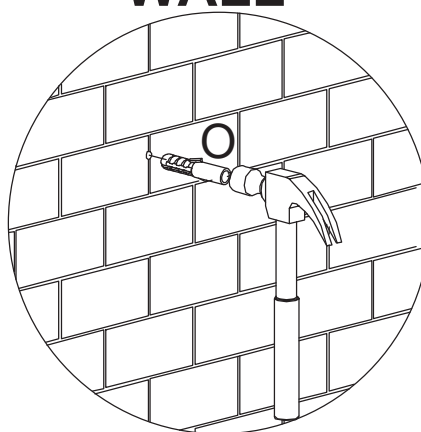    


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align.
Use the instructions below as a guide.

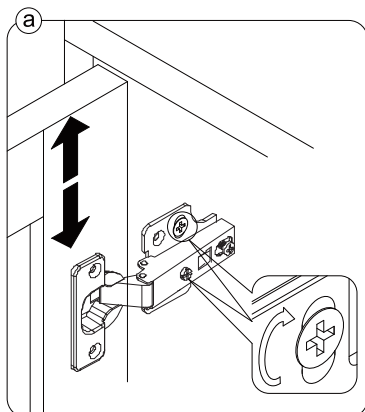

 
To adjust the door vertically loosen the screw as shown and move up and down as needed.

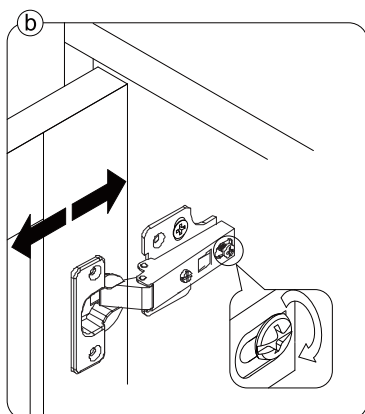

 To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

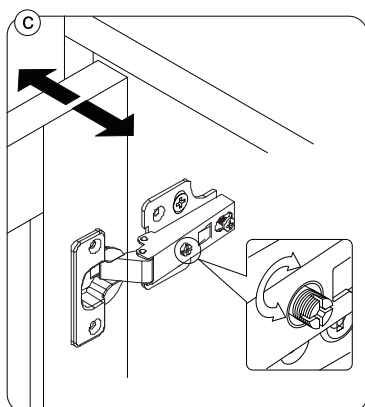

 To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

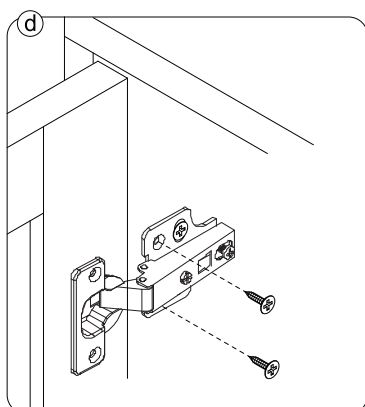

Please fix other screws.