


Assembly Instructions

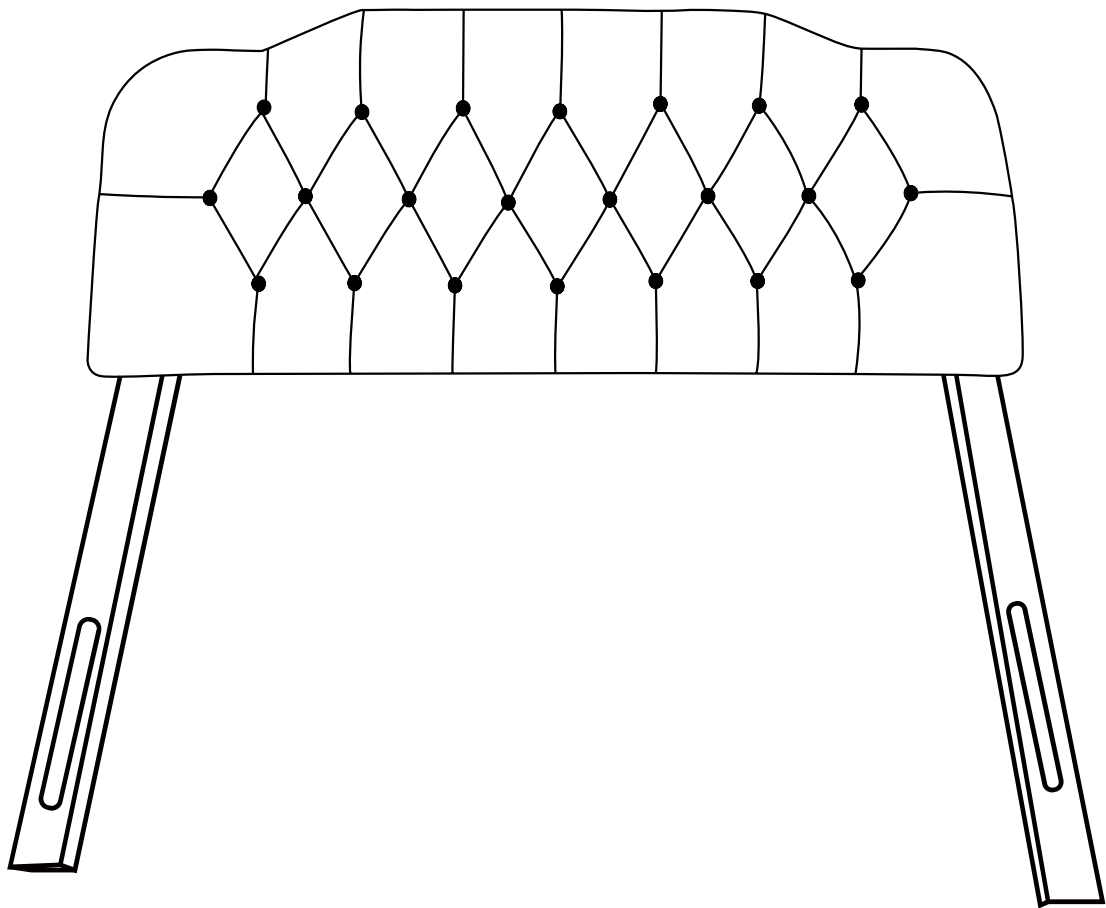

Before Assembly

Important Notes

Thank you for choosing our product.

Please read this section carefully before you begin assembly. Keep this booklet for future reference.

NOTICE

Package Check:

Before you begin, please take a moment to check that all parts are present and undamaged. We also suggest keeping the outer packaging until you've done so.

Returns:

Once opened, compressed cushions cannot be recompressed.

Returns are accepted only for items in original, unopened condition with the original packaging retained. If you wish to return the product, please use the return label provided by us. Do not return the product without prior authorization.

WARNING



Small parts and plastic packaging materials are included. Keep all hardware, tiny components, and protective bags out of reach of babies, children, and pets during and after assembly to prevent accidental swallowing or suffocation.

CAUTION

Assembly Safety & Tips:

- Due to the weight and size of the sofa components, we strongly recommend that at least 2 adults work together to complete the assembly to avoid personal injury or product damage.
- Assemble the product on a clean, scratch-free, flat surface (such as a carpet or the cardboard shipping box) to prevent damaging your floors or scuffing the fabric.
- Follow all assembly steps in order.
- Do not fully tighten screws immediately. Secure all screws to about 80% first, then perform final tightening once all parts are aligned.

Need Help?

Contact our support team if you experience any of the following:

- Outer box is damaged.
- Product is damaged, bent, or cracked upon opening.
- Parts, accessories, or assembly tools are missing.
- Instructions are unclear.
- Product has functional problems.
- Any other issue you are not satisfied with.

✉ **Customer Support:** xlmcustomerservice@gmail.com

Carton 1


Ensure all parts are present and undamaged before starting. We recommend keeping the outer packaging until you have confirmed that all parts are present and undamaged.

NOTE:

Open the Velcro on the back of the headboard and you will receive the accessories you need.


Part

A Headboard

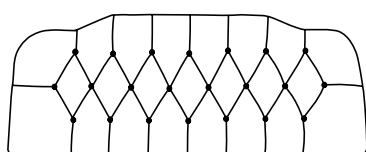


1x

B Wooden Leg

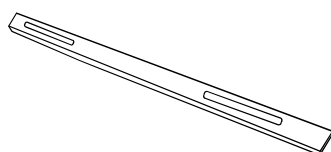


2x

 C Allen Key




1x

 D Bolt M8x35



10x


E Washer

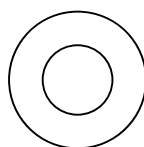

10x


Installation Steps

- STEP-1** Use part D (Bolt) and part E (Washer) to connect the parts B (two wooden legs) to the part A (headboard) (Tighten only 60% before installing all screws).

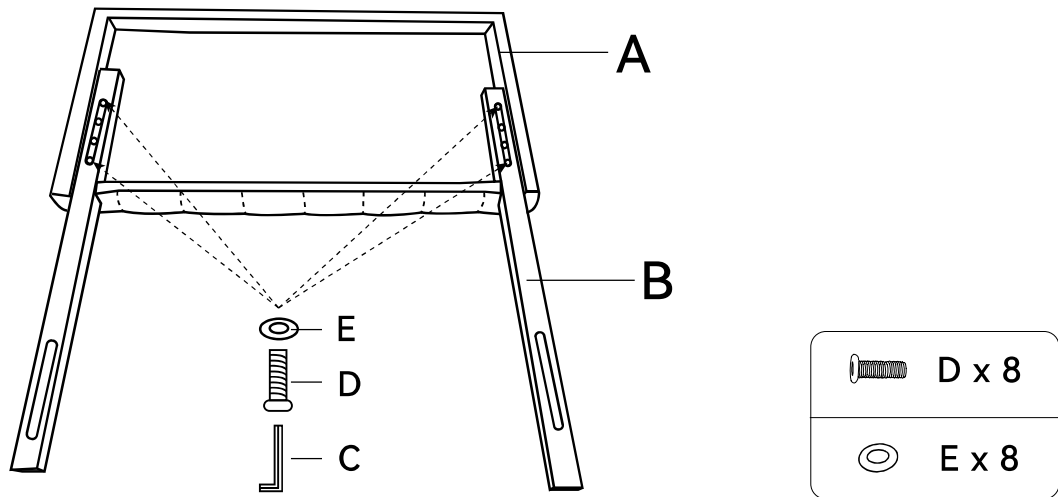

Tighten only 60% before installing all bolts.

COMPLETE

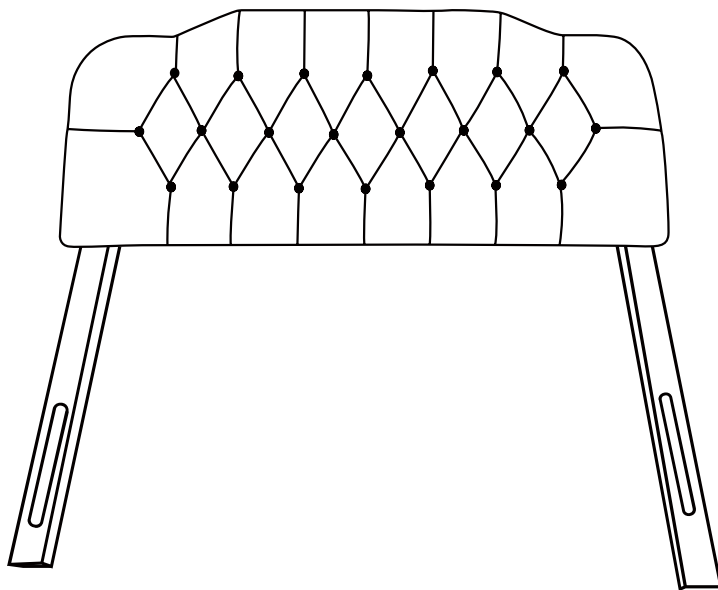

After Assembly

User Tips & Support

Frequently Asked Questions

1. What should I do if my shipment is damaged or the product is defective?

We are sorry for any inconvenience. Please contact us promptly and follow these steps:
Keep the original box (in case a return is needed).

Take photos of the damaged box, the damaged part(s) and the tracking number.

Send the photos to us so we can process a replacement or refund.

2. What should I do if a compressed product does not return to its original shape?

For safety during shipping, some products or cushions are packaged in a compressed form. We recommend allowing some time for the product to expand. Gently patting or fluffing the cushion can help speed up the process. If the issue persists, please contact our customer support team.

3. Return & Warranty Information

Returns:

If you are not satisfied with your purchase, you may initiate a return within **30 days** of receiving the product. Simply message us with your reason, and we will help facilitate the process. Please note that returns are accepted only for items in original, unopened condition with the original packaging retained.

All returns must use our provided return label and require prior authorization. Do not return the product without it.

Warranty:

We offer a 1-year manufacturer limited warranty for this upholstered sofa, effective from the date you receive your order.

During the warranty term, if any structural parts, hardware or original accessories arrive damaged or fail under normal household use, we will ship brand new replacement components completely free of charge with no extra cost.

Warranty Exclusions:

This warranty does not cover:

- Accidental damage, improper use, abuse, or man-made destruction;
- Normal wear and tear, stains, scratches, fading, and fabric aging over time;
- Damage caused by outdoor use, commercial use, or extreme environments;
- Unauthorized modification, disassembly, or self-repair of the product;
- Damage from improper installation, overloading, or pet damage.

Daily Care Instructions:

With proper care, your furniture will last for years. Please follow these guidelines:

- Keep the sofa away from direct sunlight, or use curtains/blinds to reduce exposure.
- Clean regularly with a dry, soft cloth or a vacuum with a soft attachment.
- For stubborn stains, gently blot with a soft cloth dipped in warm water and mild soap, then dry with a clean cloth.
- Avoid excessive rubbing, as it may damage the weave or cause discoloration.
- Place felt pads under the sofa to prevent floor scratches. A rug underneath also adds protection and style.
- Distribute weight evenly on the cushions over time for optimal care.
- When moving the furniture, always lift it rather than dragging it across the floor. Dragging can damage legs, joints, and flooring.
- Keep sharp objects away from the fabric or leather surface to prevent snags, tears, or scratches.

NOTICE

PERIODIC STRUCTURAL CHECK:

Daily use can cause connection joints to loosen over time. For long-term stability and safety, periodically check and retighten all bolts, screws, and hardware connectors every 3 to 6 months.

WARNING

PROHIBITED MISUSE:

Do not stand, jump, or sit on the armrests or backrest of this sofa. The product is designed for sitting purposes only. Improper use may cause the furniture to tip over, break, or result in personal injury.

NO POWER TOOLS:

Do not use high-torque power drills to assemble this product. Power tools can easily strip the hardware threads, split the inner wooden frame, or tear the fabric. Use the provided hand tools only.

How do I contact you if I encounter problems?

Just send us a message or email us at:

✉ xlmcustomerservice@gmail.com

We aim to respond within 24 hours.

Thank you for choosing us. We look forward to welcoming you back soon!