


# Assembly instruction

## Lean back to adjust the reclining angle

---

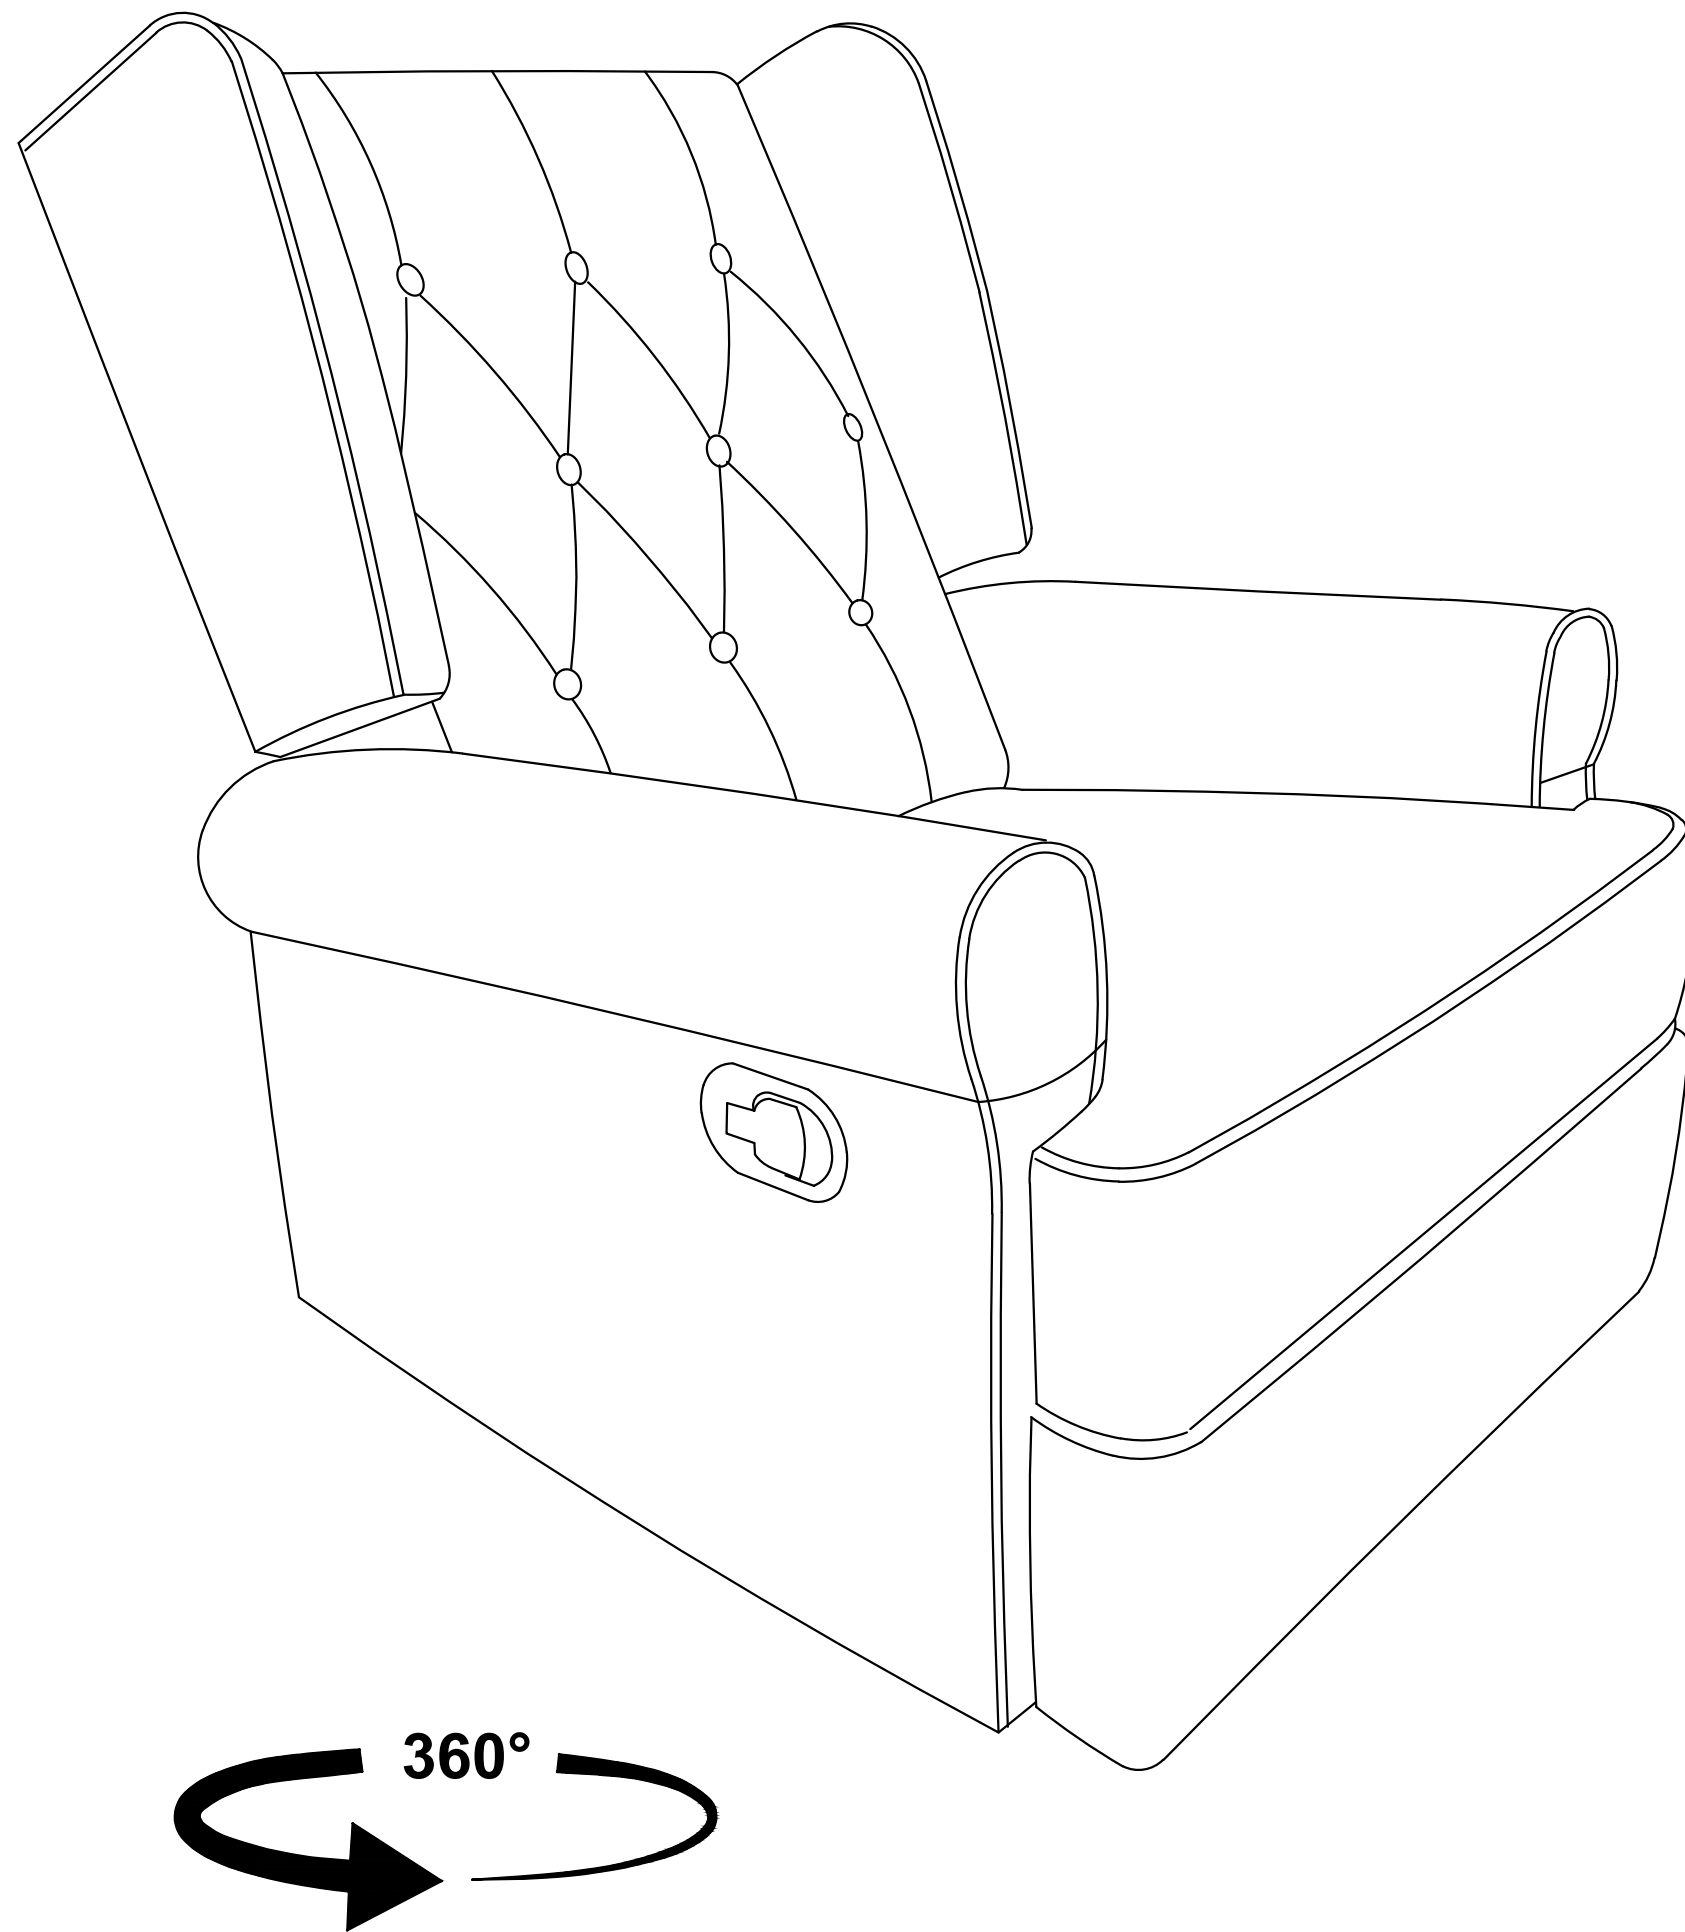

## Important Safety Instructions

---

When using an appliance, basic precautions should always be followed, including the following:

1. Do not use outdoors.
2. When moving the back, please ensure that there are no people, pets, or obstacles nearby, otherwise accidents such as collisions or crushing may occur.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.

## Maintenance Instructions

---

### TO STORE:

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric.

### TO CLEAN:

1. Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
2. Do not use abrasive cleaners, brushes, gasoline, kerosene, glass / furniture polish, paint thinner or water hotter than 120° to clean the unit.








## Warning

---

1. Do not stand on this chair. Do not use this chair as a step ladder.
2. Use this chair only for seating one person at a time.
3. Do not use this chair unless all bolts, back, and legs are firmly secured.
4. Check all bolts, arm, back and legs on a regular basis.
5. This chair should not be use with damaged or missing parts. Contact an authorized service provider to repair or replace parts damaged or missing.
6. Failure to follow these warnings could result in serious injury.


Component List

NOTICE:  
The wings are placed in the under the chair bottom. Please take the wings with care.

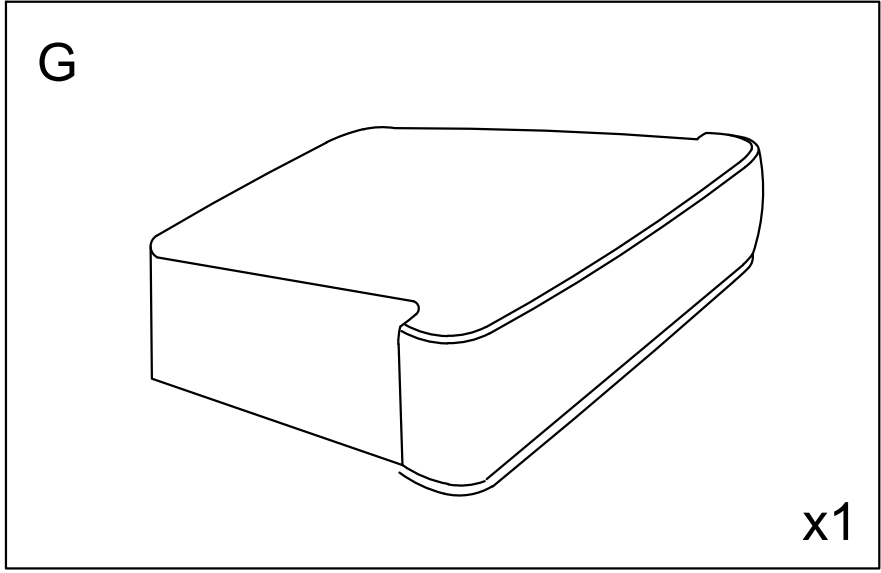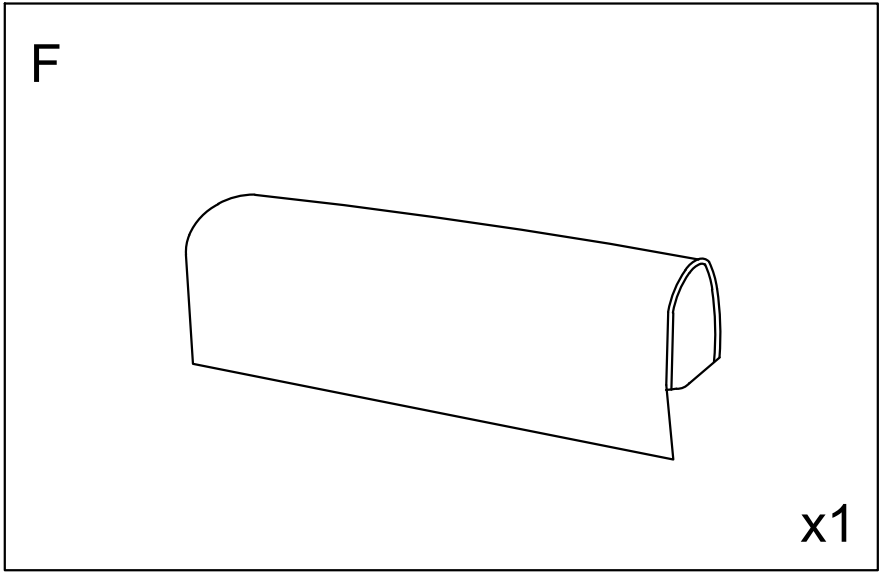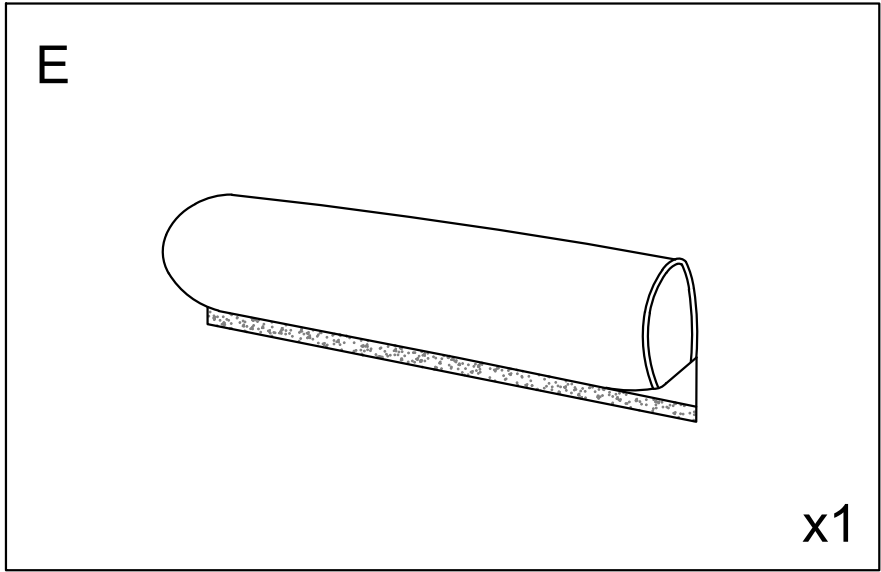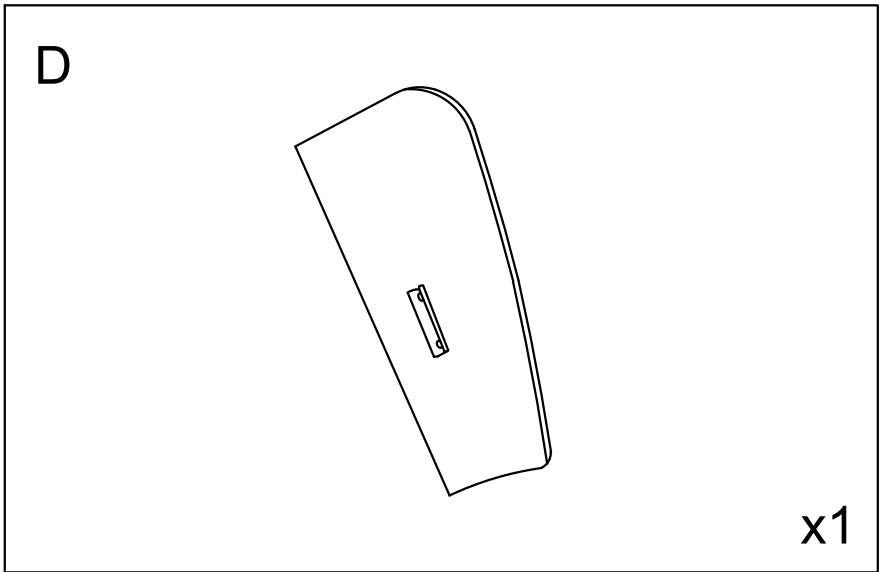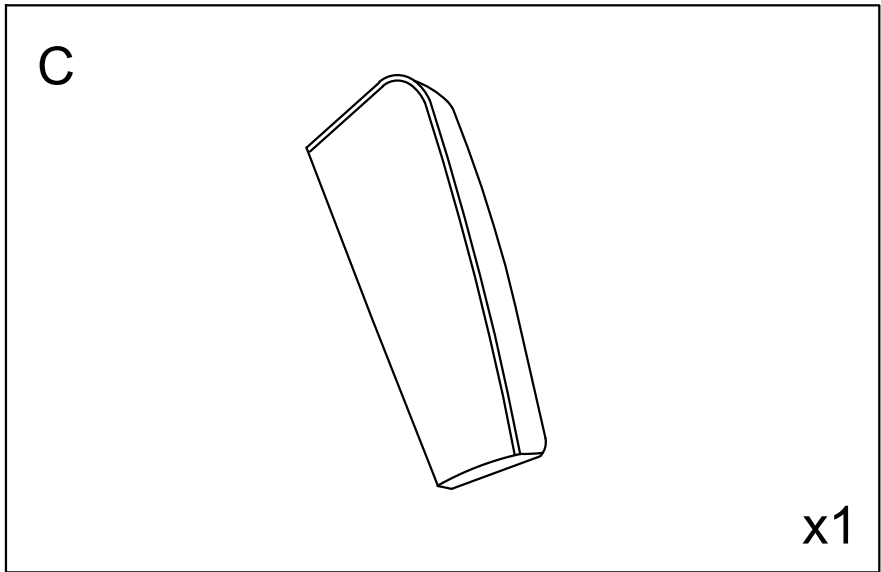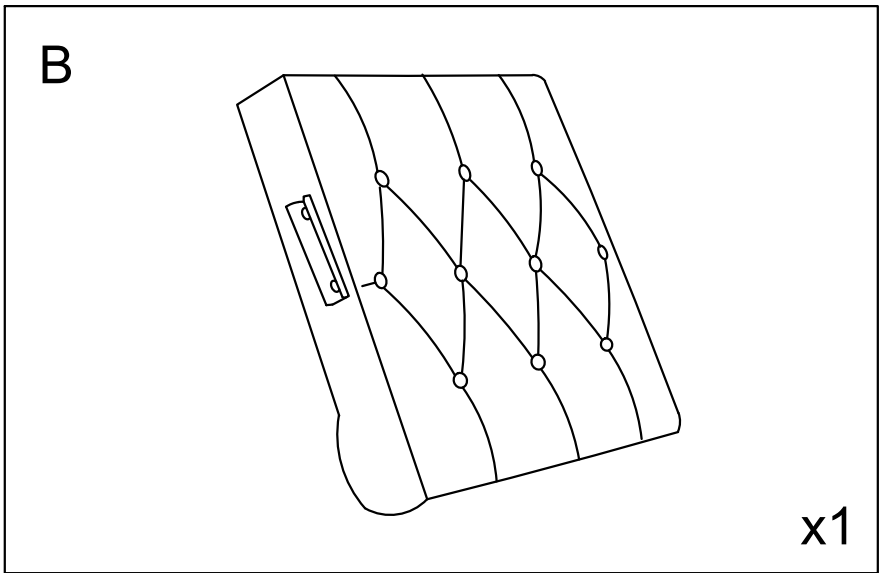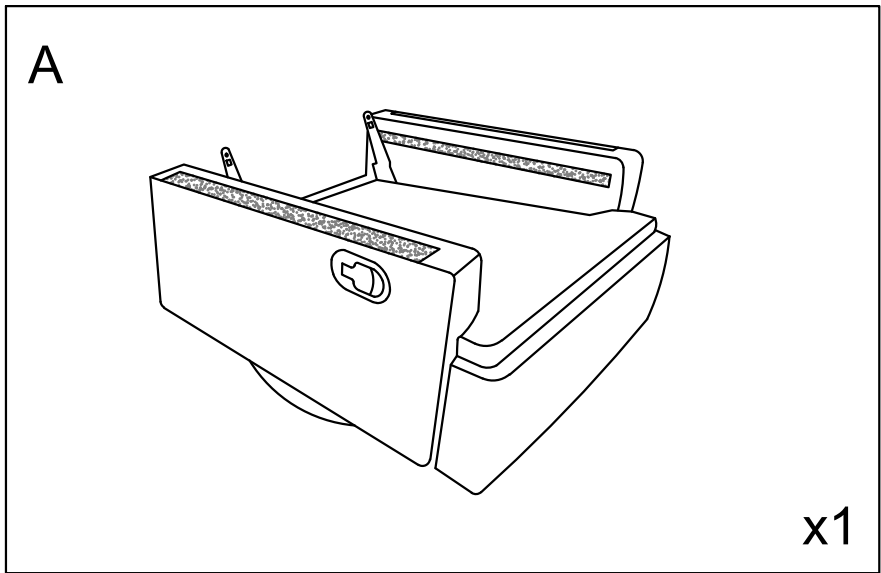


Assembly Instructions

1  
Open the Bottom box, remove Cardboard Paper (see sketch as shown below) before assembly.

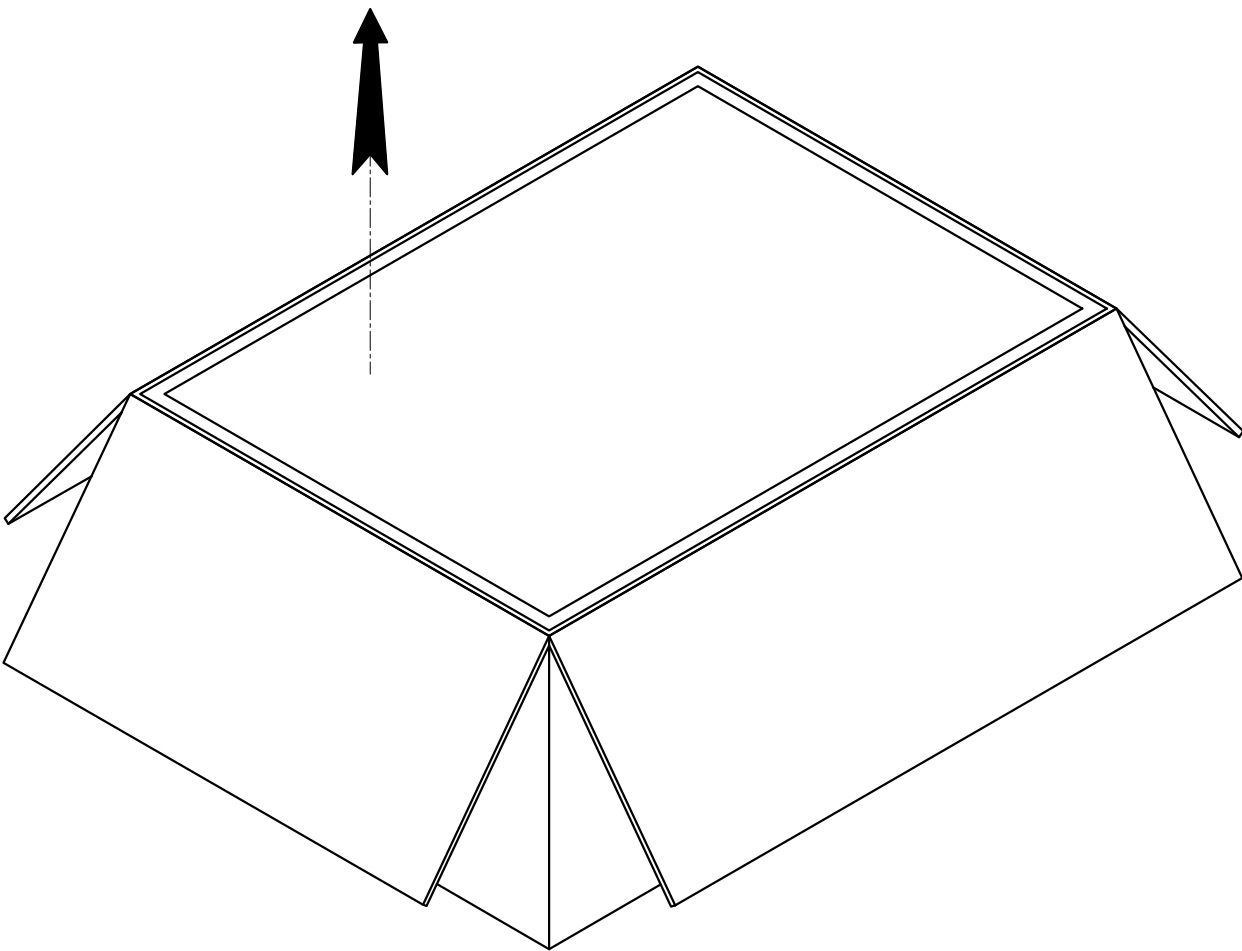


2  
Take the Arm top (E / F) in the chair bottom

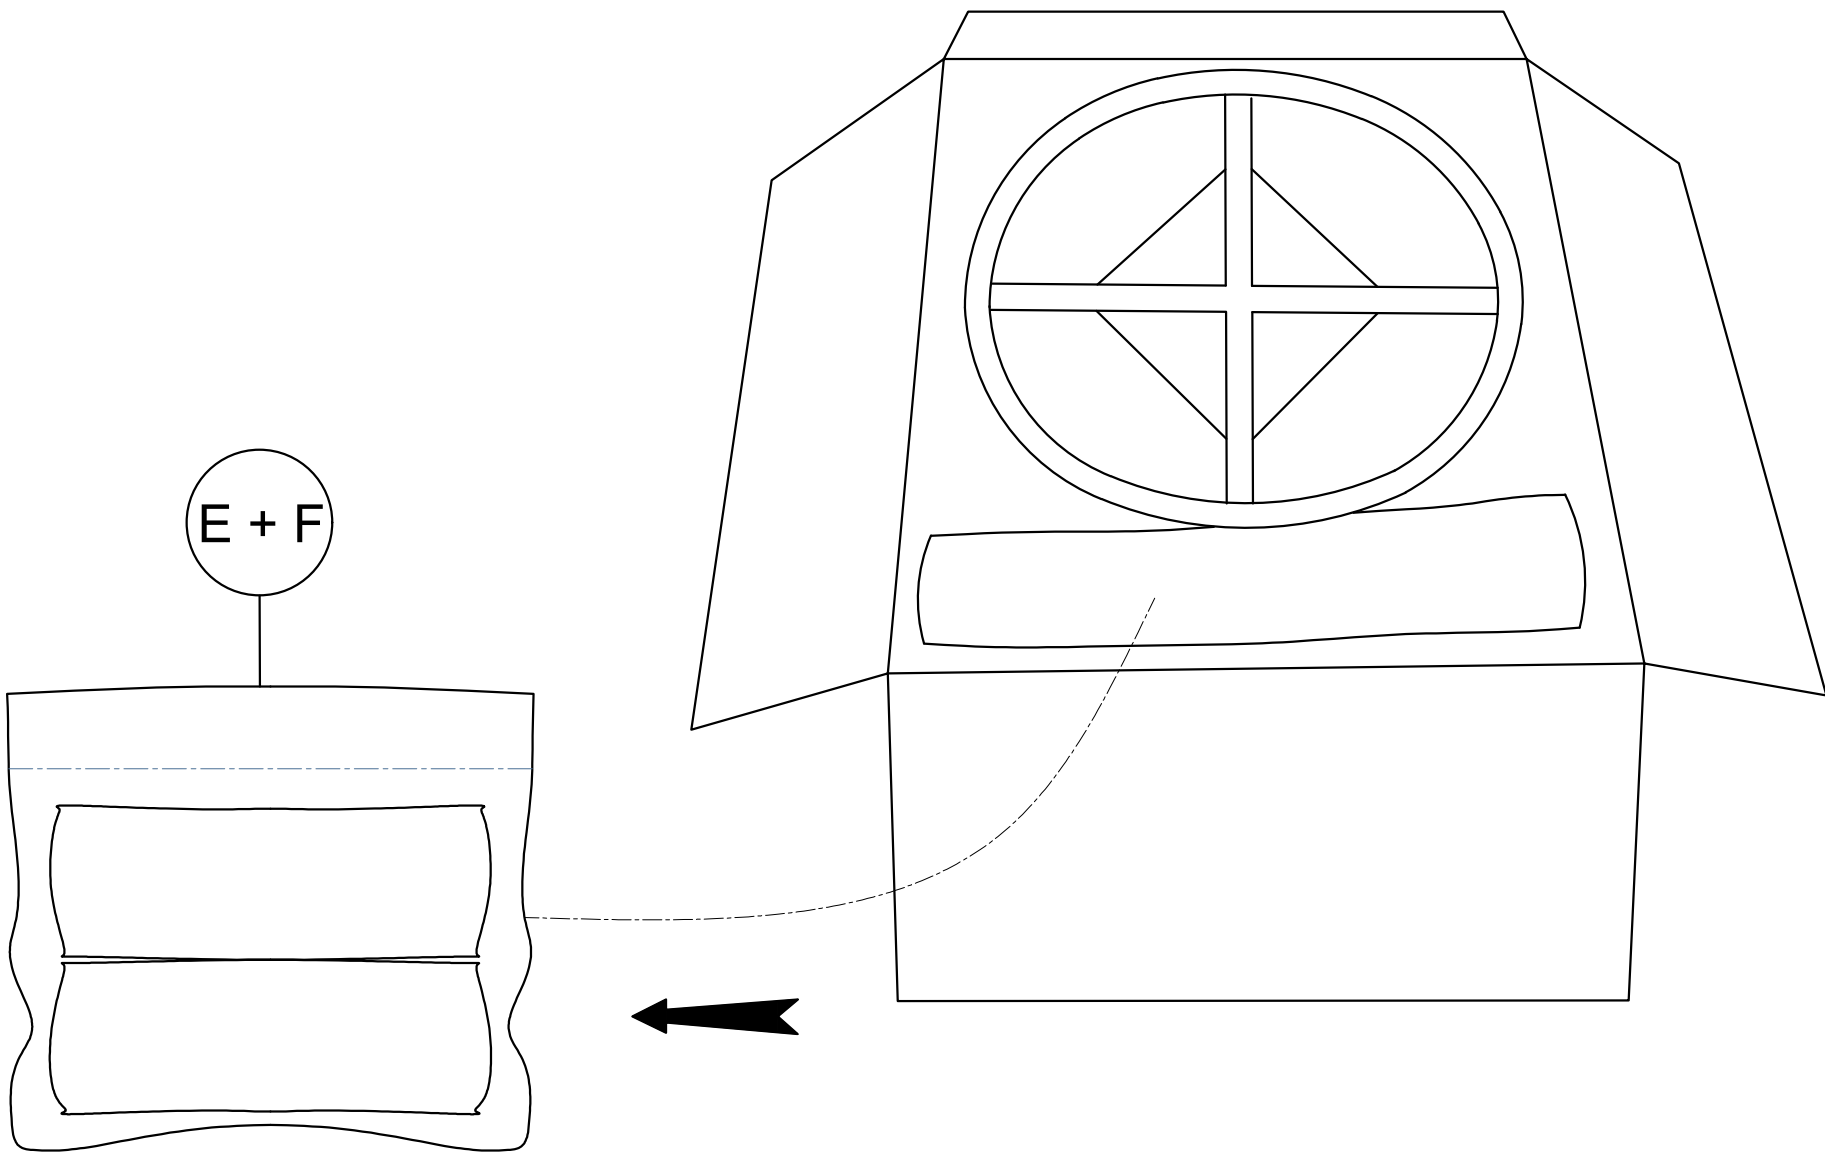


3

Turn over 180° the box and remove the box

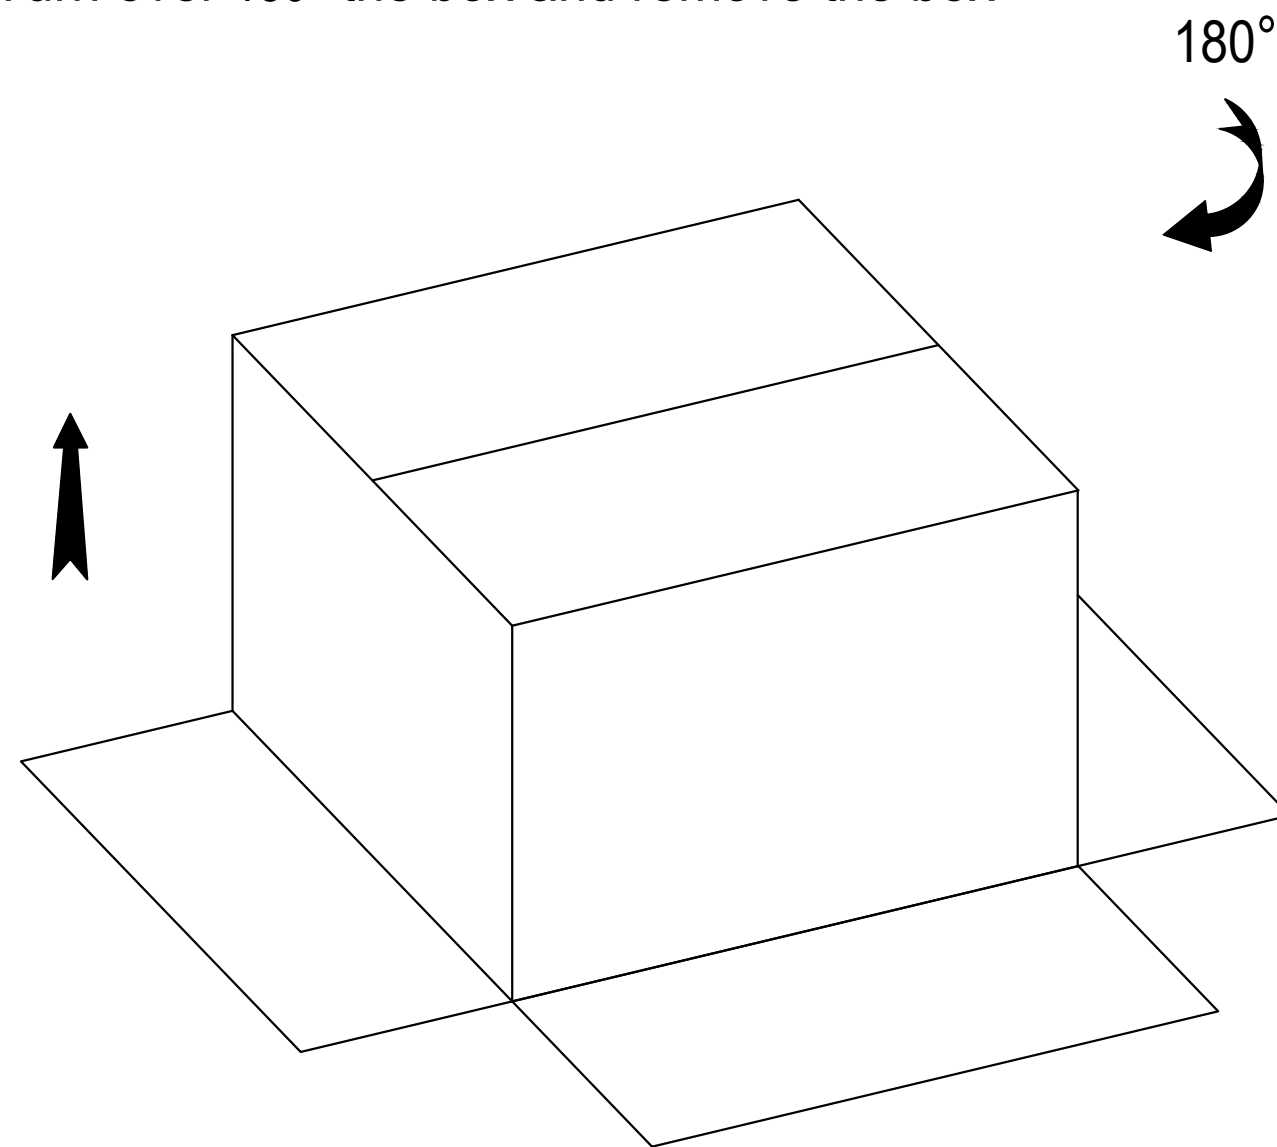


4

Take the Seat Cushion (G) and backrest (B) from the chair

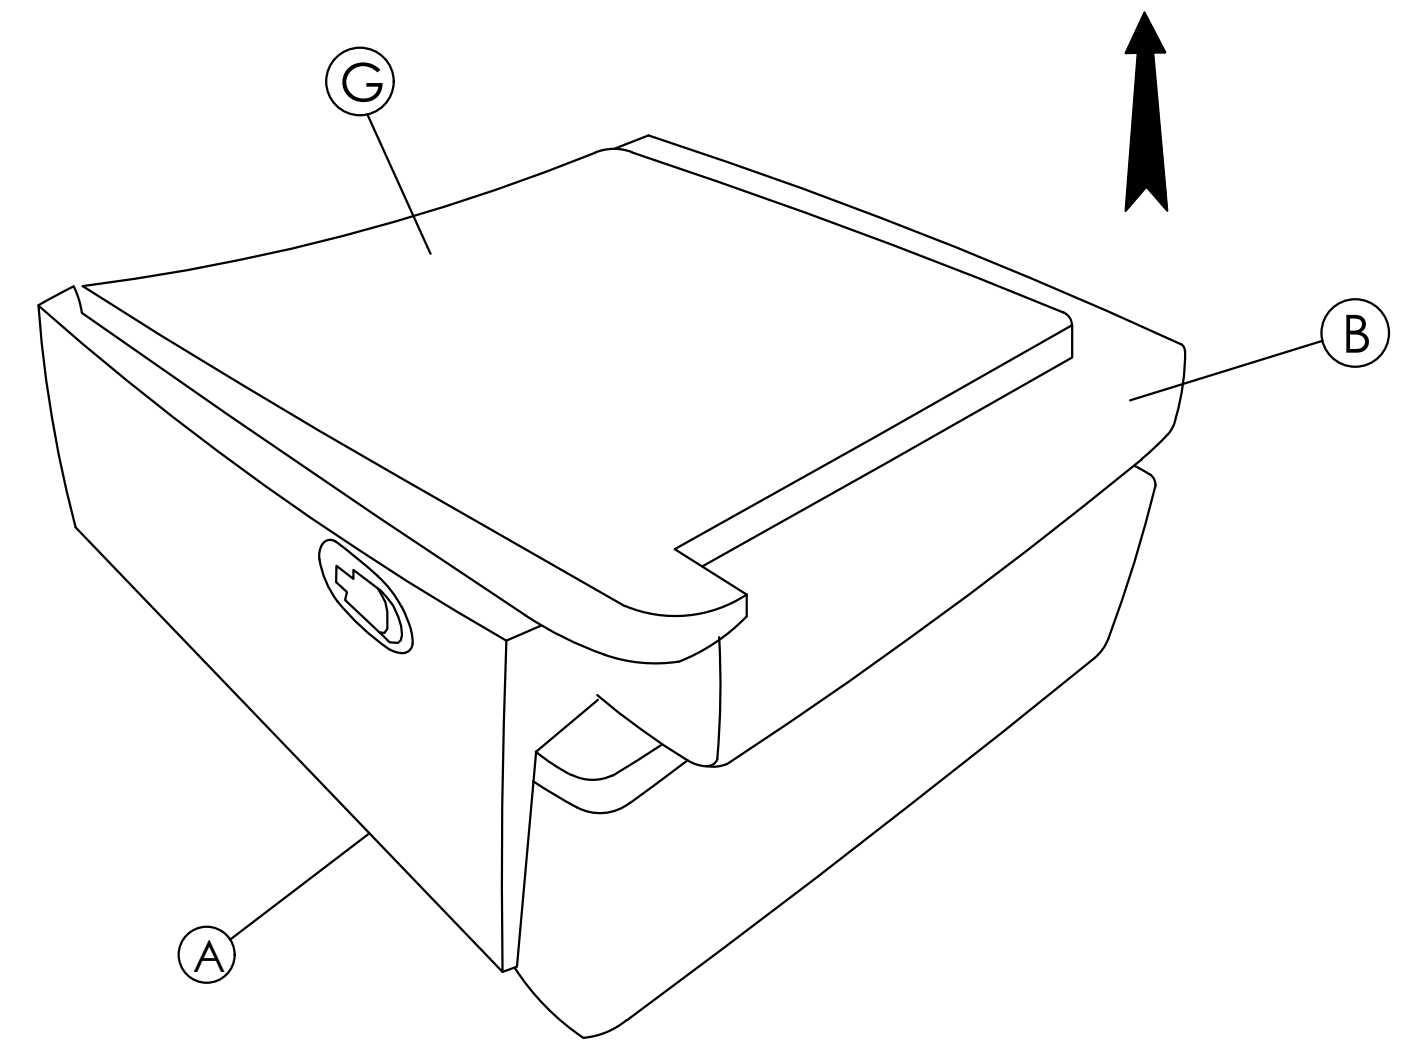


5

Pull out control cluster and take the Wings (C + D) under the chair bottom

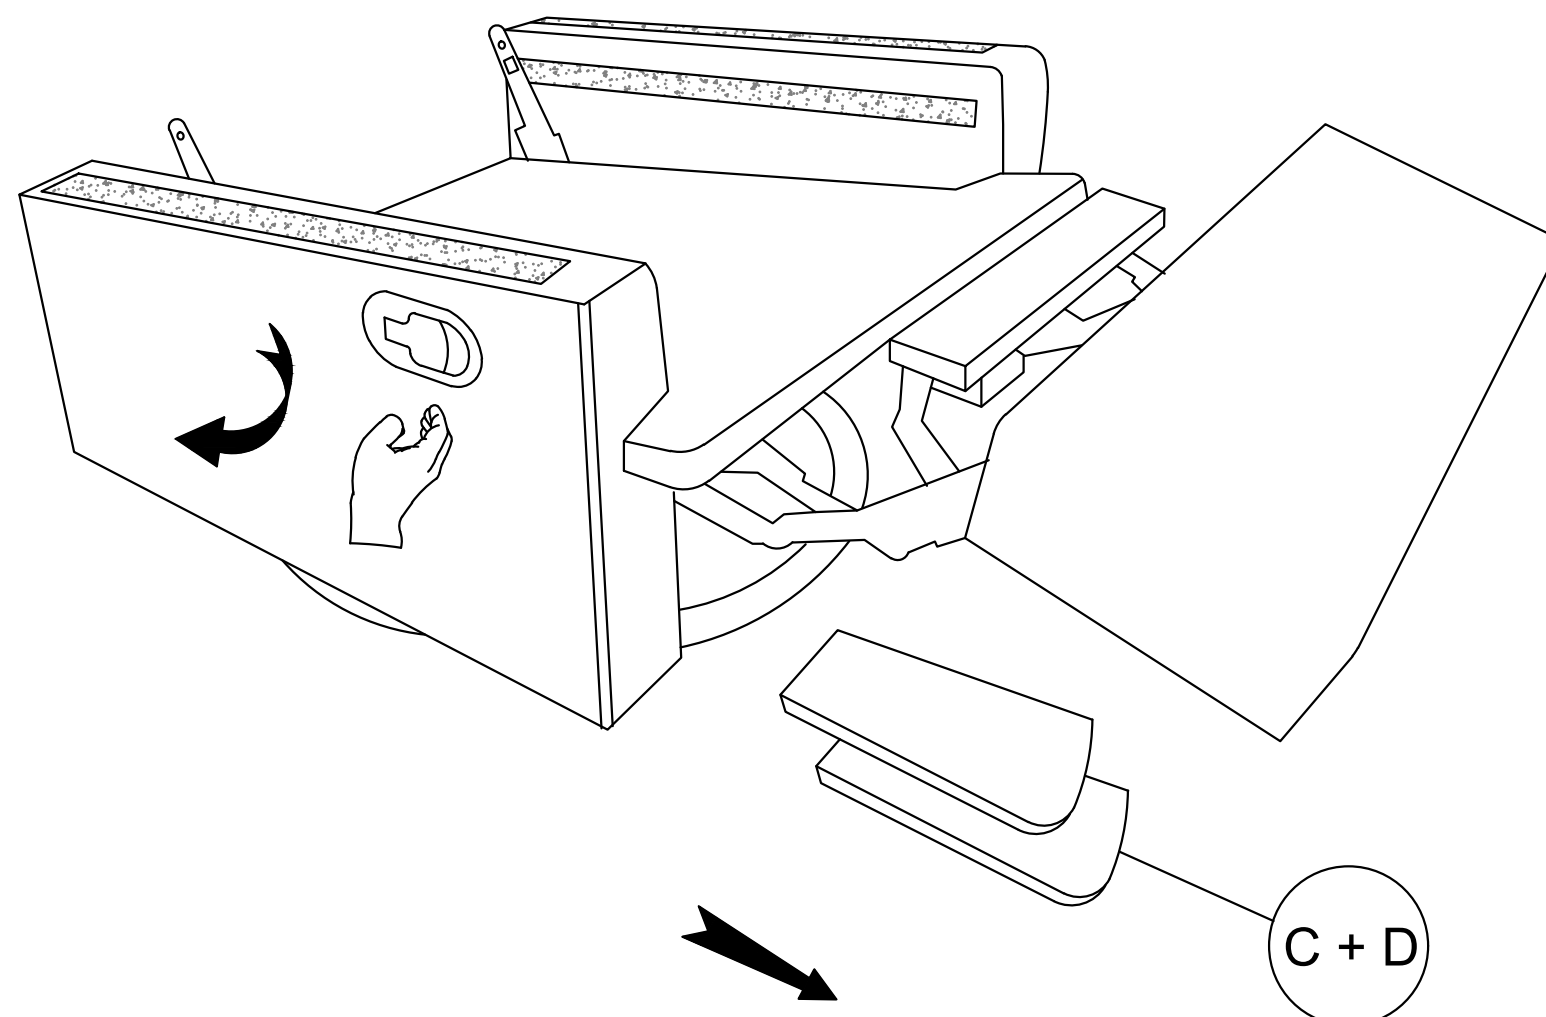


6

Open the Seat Cushion (G), and Arm top (E + F) by suitable tools.  
Note: vacuum packed product need 48 hours to bounce back.

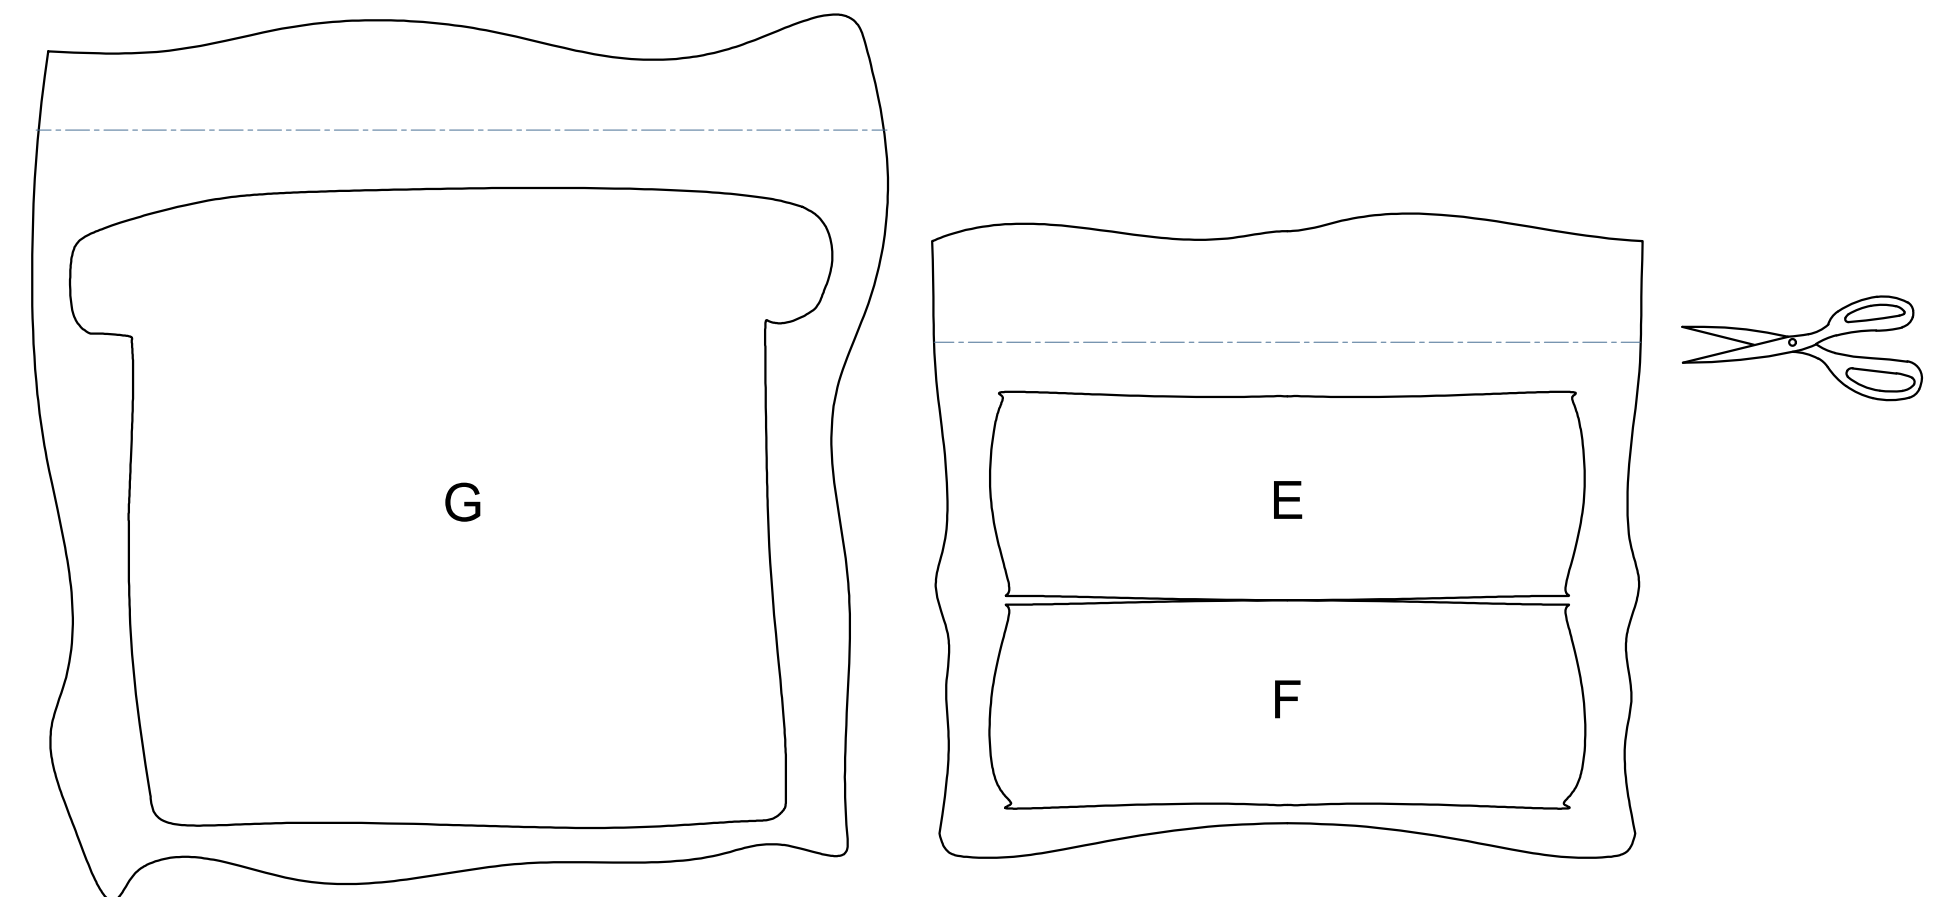

7


Insert the Left (E) / Right (F) Arm top into the Arm  
Attach the Velcro

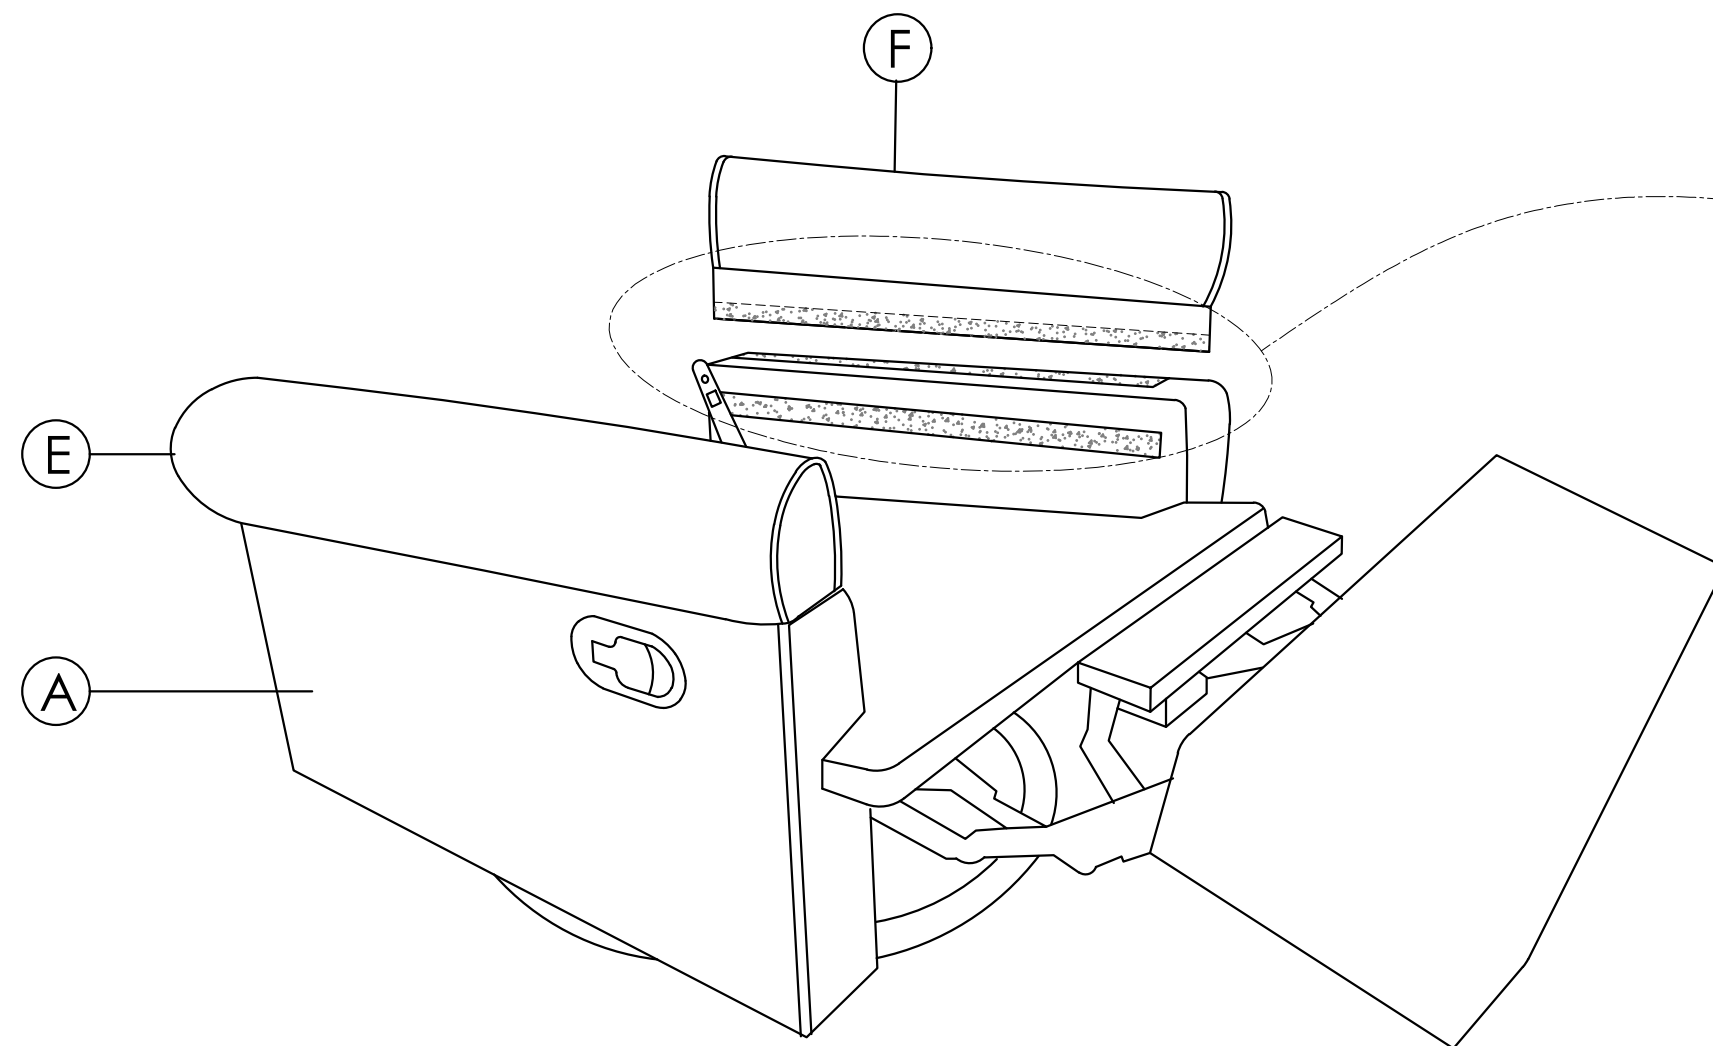

8


Insert the Seat Cushion (G) into the Seat  
Attach the Velcro

VELCRO

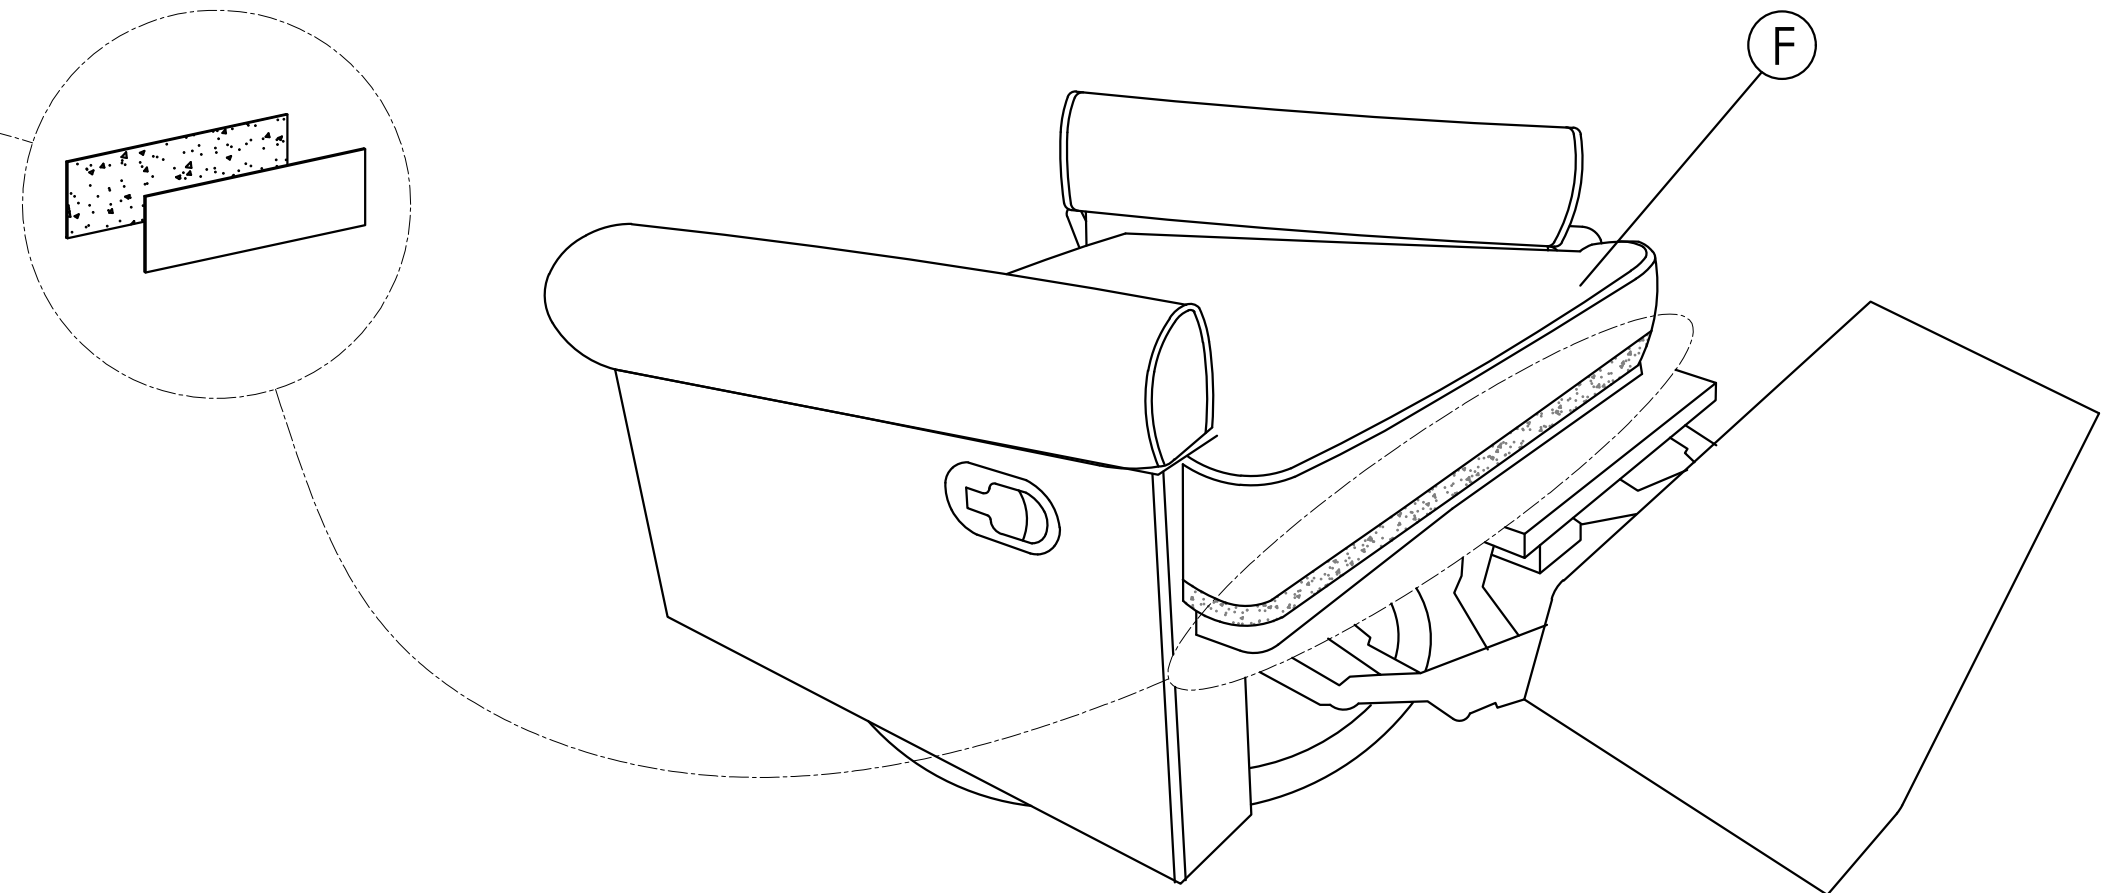


9

Closed the Footrest

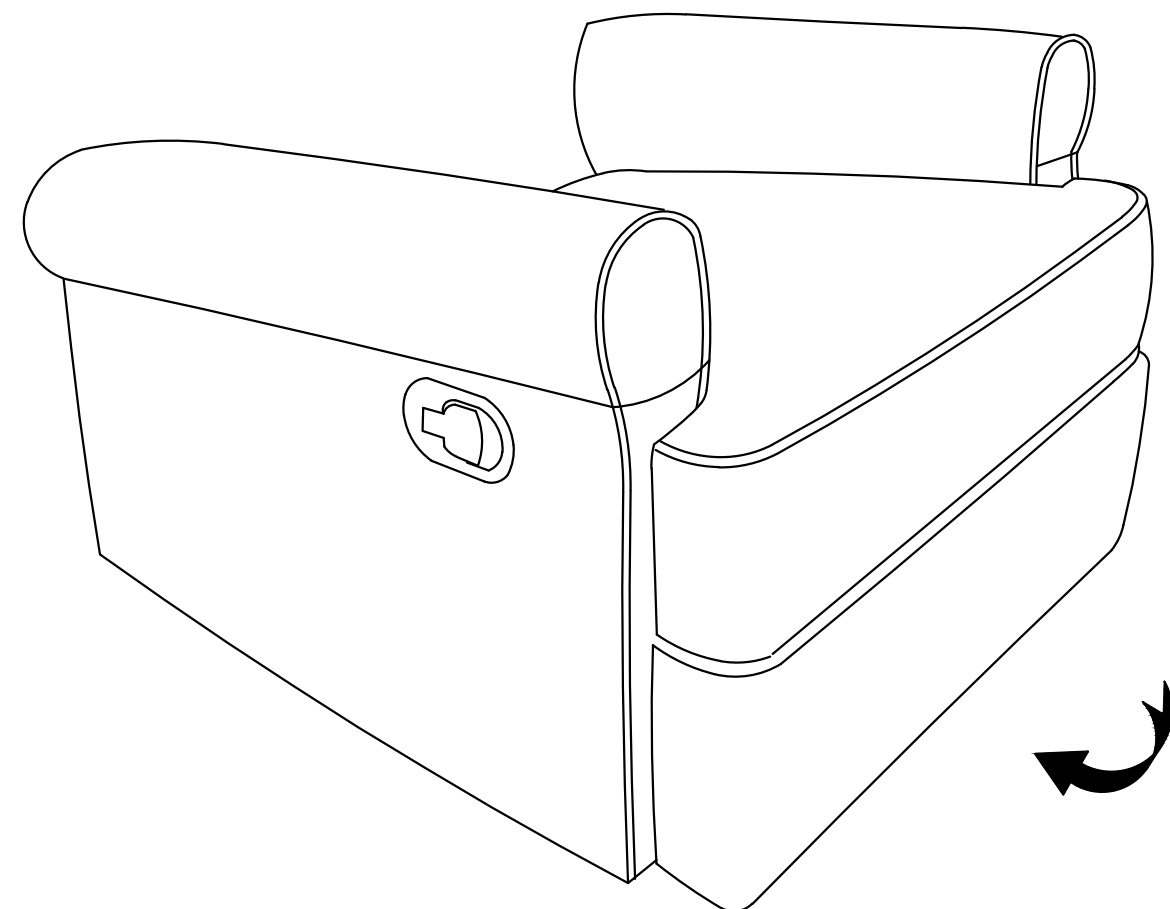


10

Get the Backrest (B) into the Seat (A). Gently push down until the back locks into position.

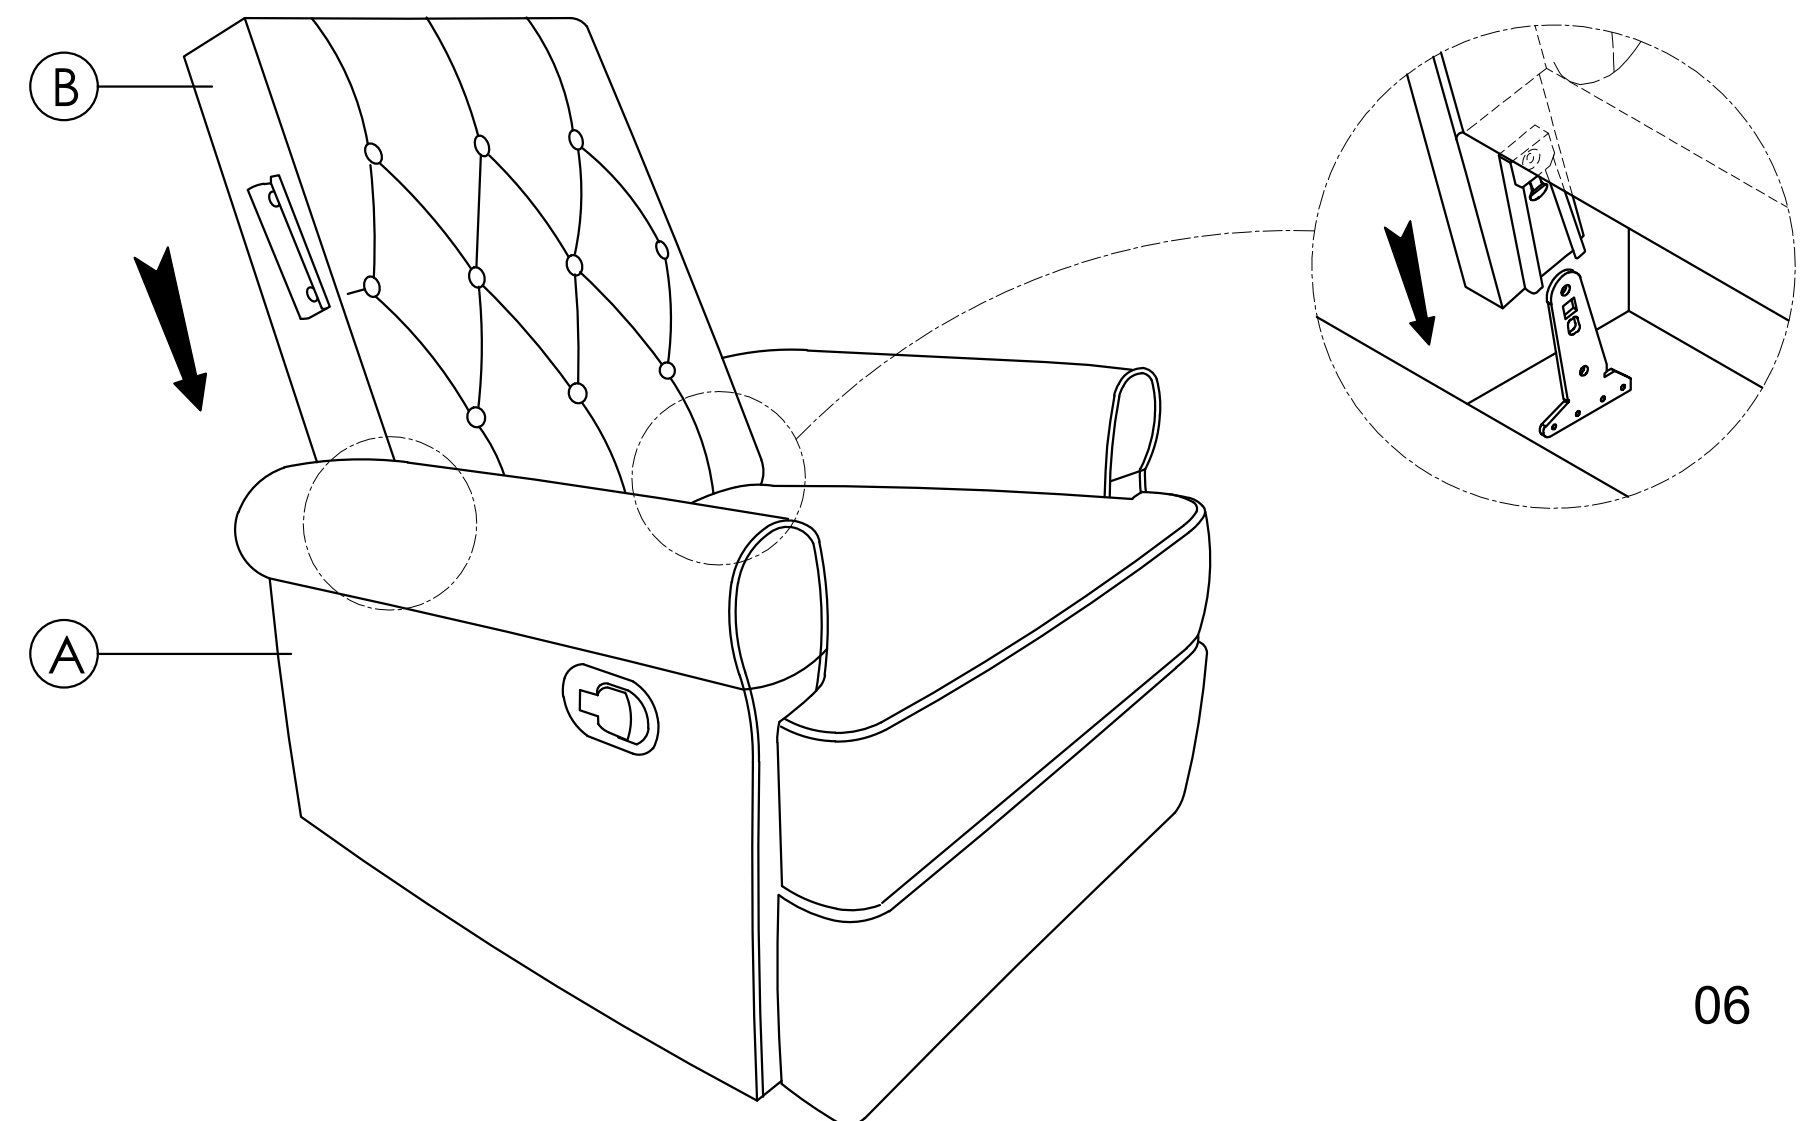


11

Insert the Left (C) / Right (D) wing into the Backrest (B), gently push down until the wings locks into position.

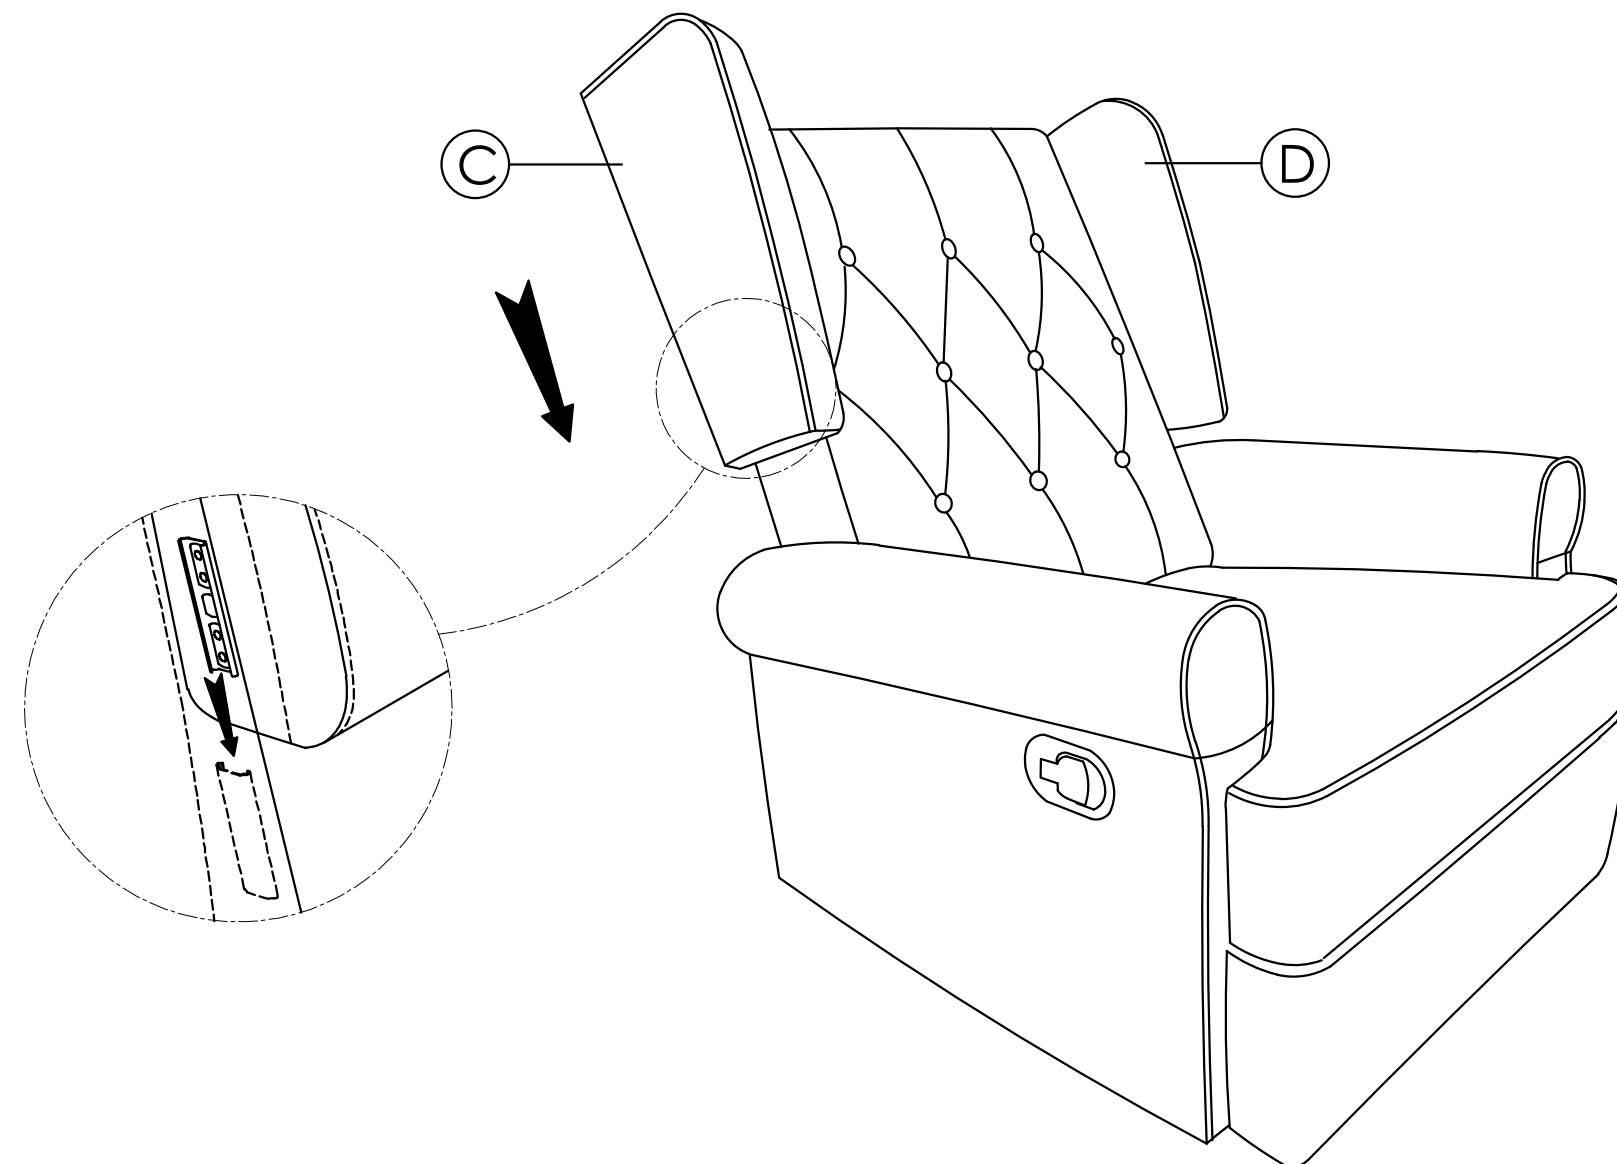

12

Attach the Velcro patch to the bottom of the seat.

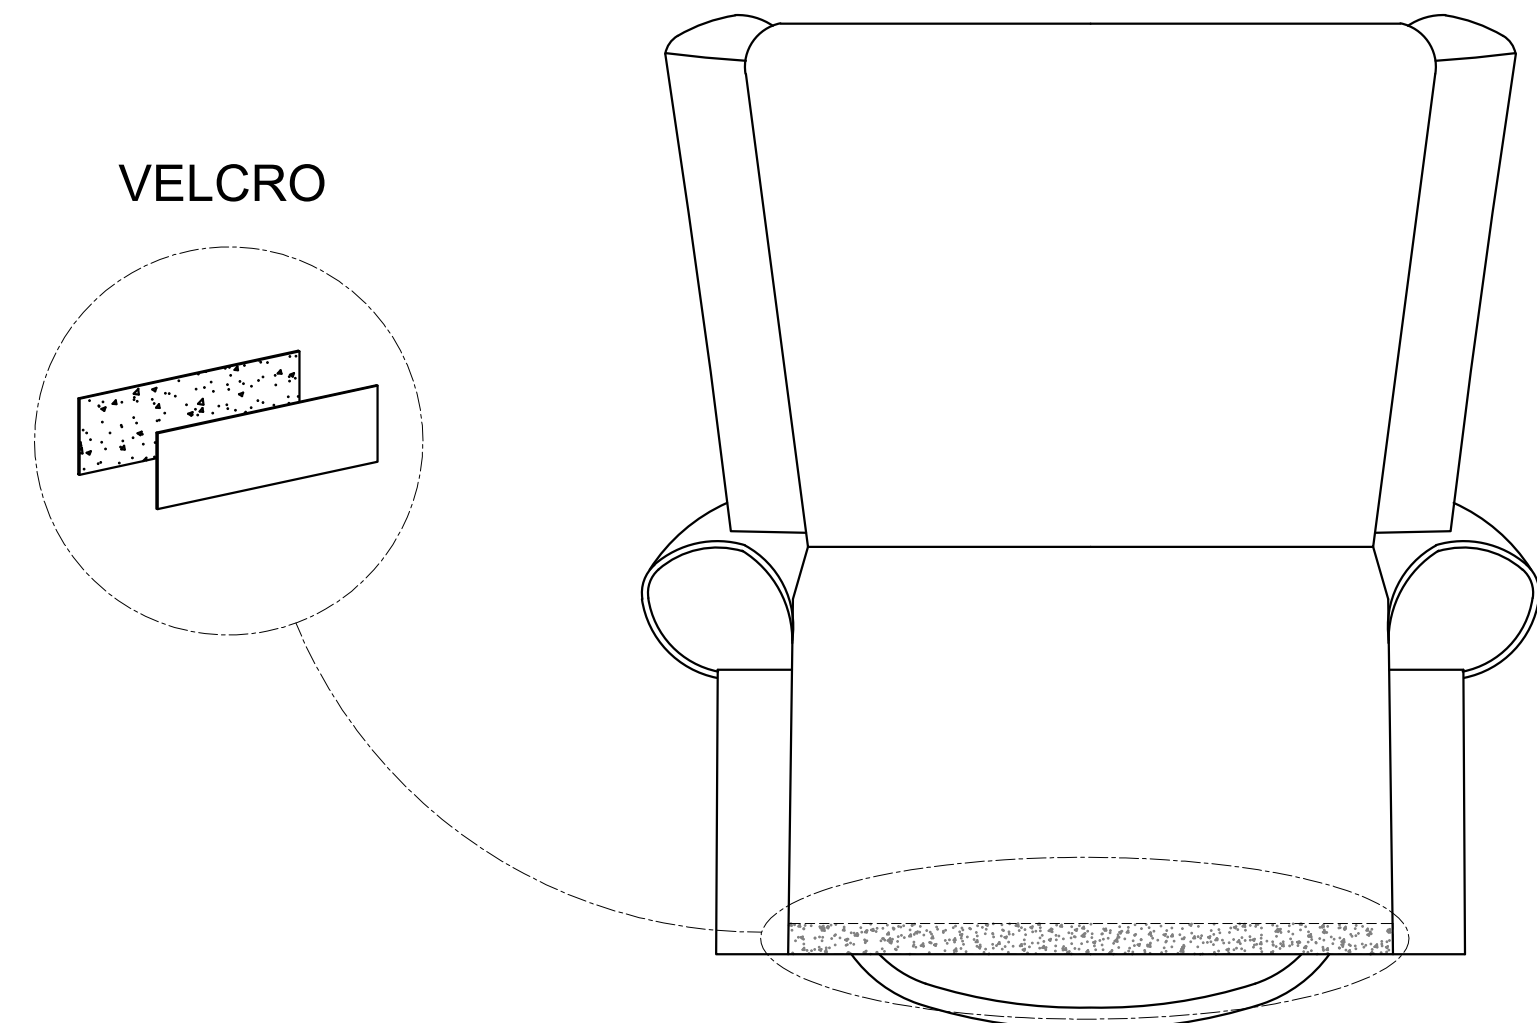

13

Pull the control lever to recline the backrest.  
Chair can rotate 360°

