

Thank you for purchasing our inflatable product. Please carefully review the included contents before use, which consist of one inflatable, one tether, one stake, and a power supply with input of 120V 60Hz and output as indicated on the adapter.

GENERAL INSTRUCTIONS

1. Remove all contents and discard plastic fasteners and tags from packaging.
2. Connect the adapter to the fan and then plug it into a standard wall outlet.
3. The fan will immediately begin to inflate the product.
4. Once the product is fully inflated, zip the base of the fan closed.
5. Use the included ropes & ground stakes to secure the base of the product to the ground.
6. Ensure all stakes are properly inserted into the ground to prevent the product from shifting or being blown away.
7. To deflate, first unplug the adapter. For faster deflation, unzip the zipper after unplugging the adapter. Do not unplug by pulling on the cord.

This power unit must be installed in a vertical or floor mount position for proper use.

SAFETY GUIDELINES

1. Always follow all safety instructions when using electrical products.
2. Keep the product out of reach of children and do not play with it.
3. Use the product only indoors unless it is specifically marked for indoor and outdoor use. If used outdoors, connect it to a Ground Fault Circuit Interrupting (GFCI) outlet and contact a qualified electrician if one is not provided.
4. Do not mount or place the product near sources of heat or use it for permanent installation.
5. Do not secure wiring with staples or nails, or let lamps rest on the supply cord or any wire.
6. Unplug the product when leaving the house or retiring for the night, or if left unattended.
7. Use the product only for its intended purpose and do not hang objects from cord, wire, or light string.
8. Do not cover the product with any material when in use, or place it against fabric or carpeting.
9. Keep the product at least 10 feet away from a pool and do not use it in a bathroom.
10. Read and follow all instructions provided with the product.

INFLATABLE TROUBLESHOOTING CHECKLIST

If your inflatable is not inflating, consider the following possible issues:

1. Ensure that the power source is enabled and the cord is properly plugged in.
2. Check that the zipper is securely fastened to prevent air from escaping.
3. Before using the product, inspect the air blower for blockages caused by leaves, branches, or rocks obstructing the fan's air intake. If any blockages are found, remove them before operating the product.



NOTE: Once the fan is unplugged and stops blowing, your inflatable will deflate.

The LED lights inside the inflatable are designed to last longer than traditional bulbs and are not replaceable

FREQUENTLY ASKED QUESTIONS (FAQs)

1. Can I leave my inflatable running continuously?
Yes, you can, but we recommend turning it off when leaving the area or before retiring for the evening.
2. How should I clean my inflatable?
Simply wipe it clean with a damp cloth and allow it to dry completely before storing. Use mild detergent if needed.
3. Why does my inflatable deflate when I unplug it?
Your inflatable requires power to remain inflated, so it will deflate when unplugged.
4. What's the best way to store my inflatable?
Store it in a bag, box, or another container in a cool, dry place.

READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions may result in electrical shock, fire, and/or serious personal injury.

1. ELECTRICAL PRODUCT WARNING

Keep this product away from children. It is not recommended for children under 14 years of age. Precautions should be observed during handling and use to reduce the risk of electrical shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid hazards.

2. ADULTS NOTE

Periodically examine this product for damage to the cord, housing, or other parts that may result in the risk of fire, electrical shock, or injury. If the product is damaged, do not use it.

3. DANGER

Do not immerse this product in water; wipe clean with a damp cloth. Immersing this product can result in electrical shock.

4. REMOVE ALL PLASTIC FASTENERS AND TAGS

These are part of the packaging and should be discarded.

5. FOR INDOOR AND OUTDOOR USE

This item is not a toy. It is for decorative purposes only.

6. FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

7. RISK OF ELECTRIC SHOCK

When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

8. RISK OF FIRE

Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician. If the connector of this driver does not properly fit into the connector of the lighting string, do not modify the product and discard the product if the connector is damaged.

9. NOT FOR USE WITH WEATHERPROOF RECEPTACLES

This product is not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

10. SAVE THESE INSTRUCTIONS

This manual contains important safety operating instructions for power units.