


INSTALLATION INSTRUCTIONS

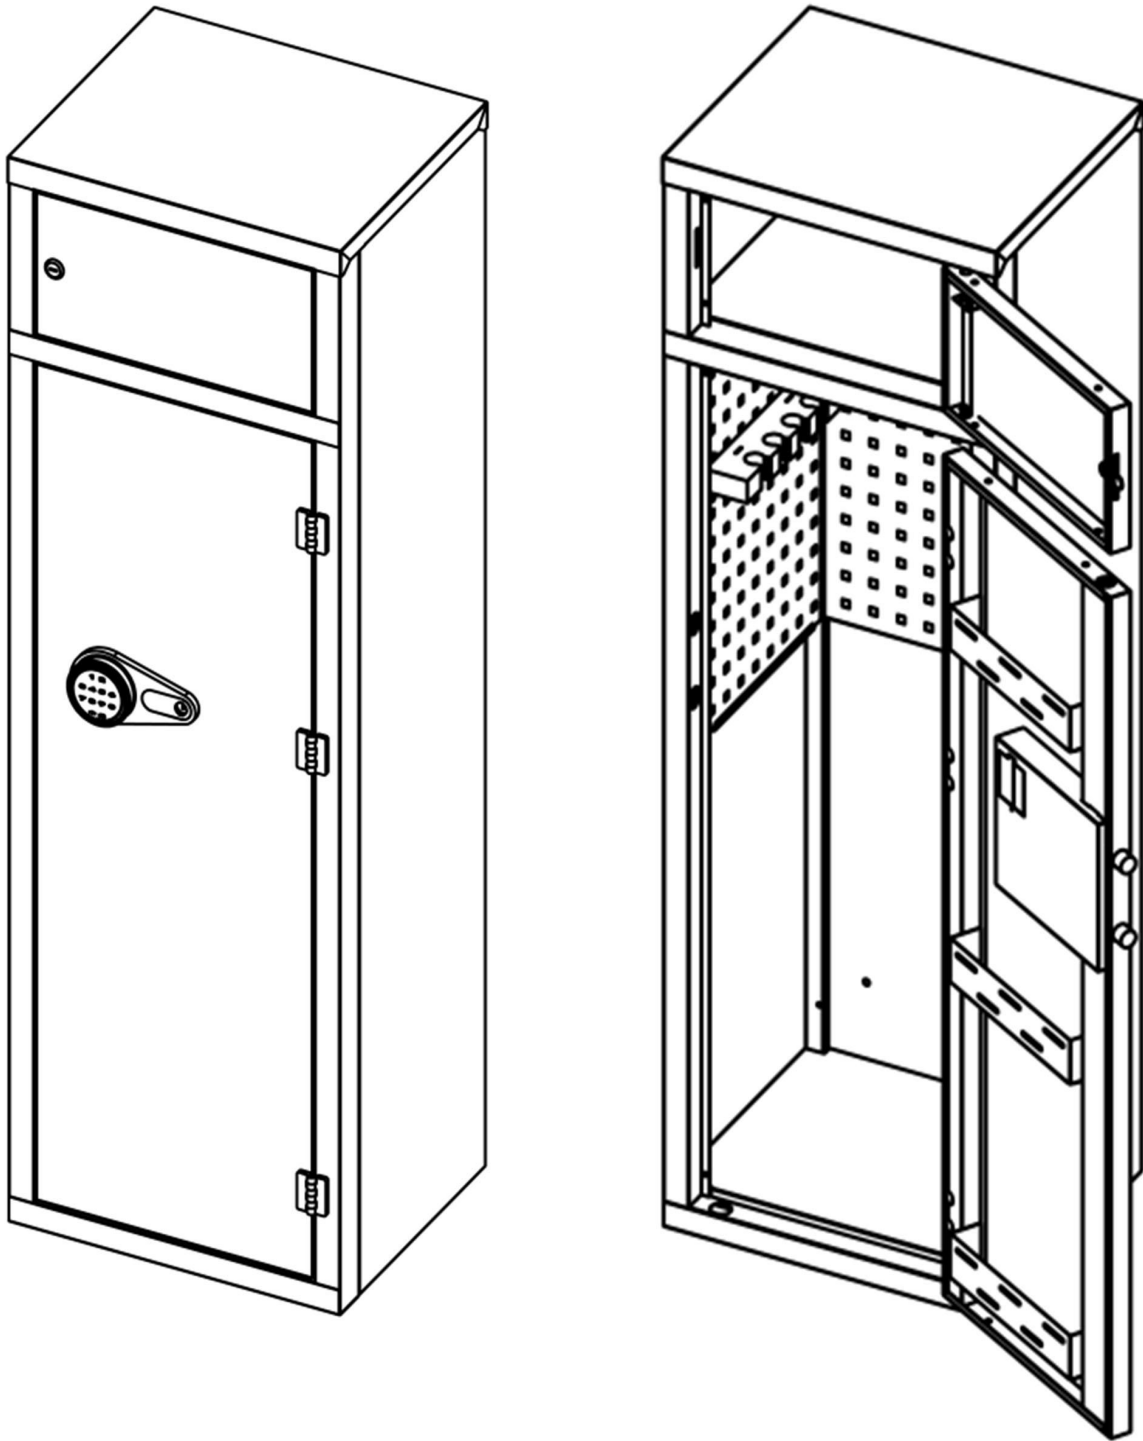


Hi friend, thank you for purchasing me, we finally meet! I am happy to be your guardian. It is my responsibility and my pleasure .Please keep children away from firearms equipment and to keep your firearms safe.

After you received me, please take a few minutes to read the instruction manual so that you can use me better. If you have any questions, please contact my seller, they are always there. Please do not put the emergency opening accessories in the gun cabinet to avoid unnecessary trouble!

Installation video link : <https://www.youtube.com/watch?v=te9f0bV00AA>

INSTALLATION INSTRUCTIONS

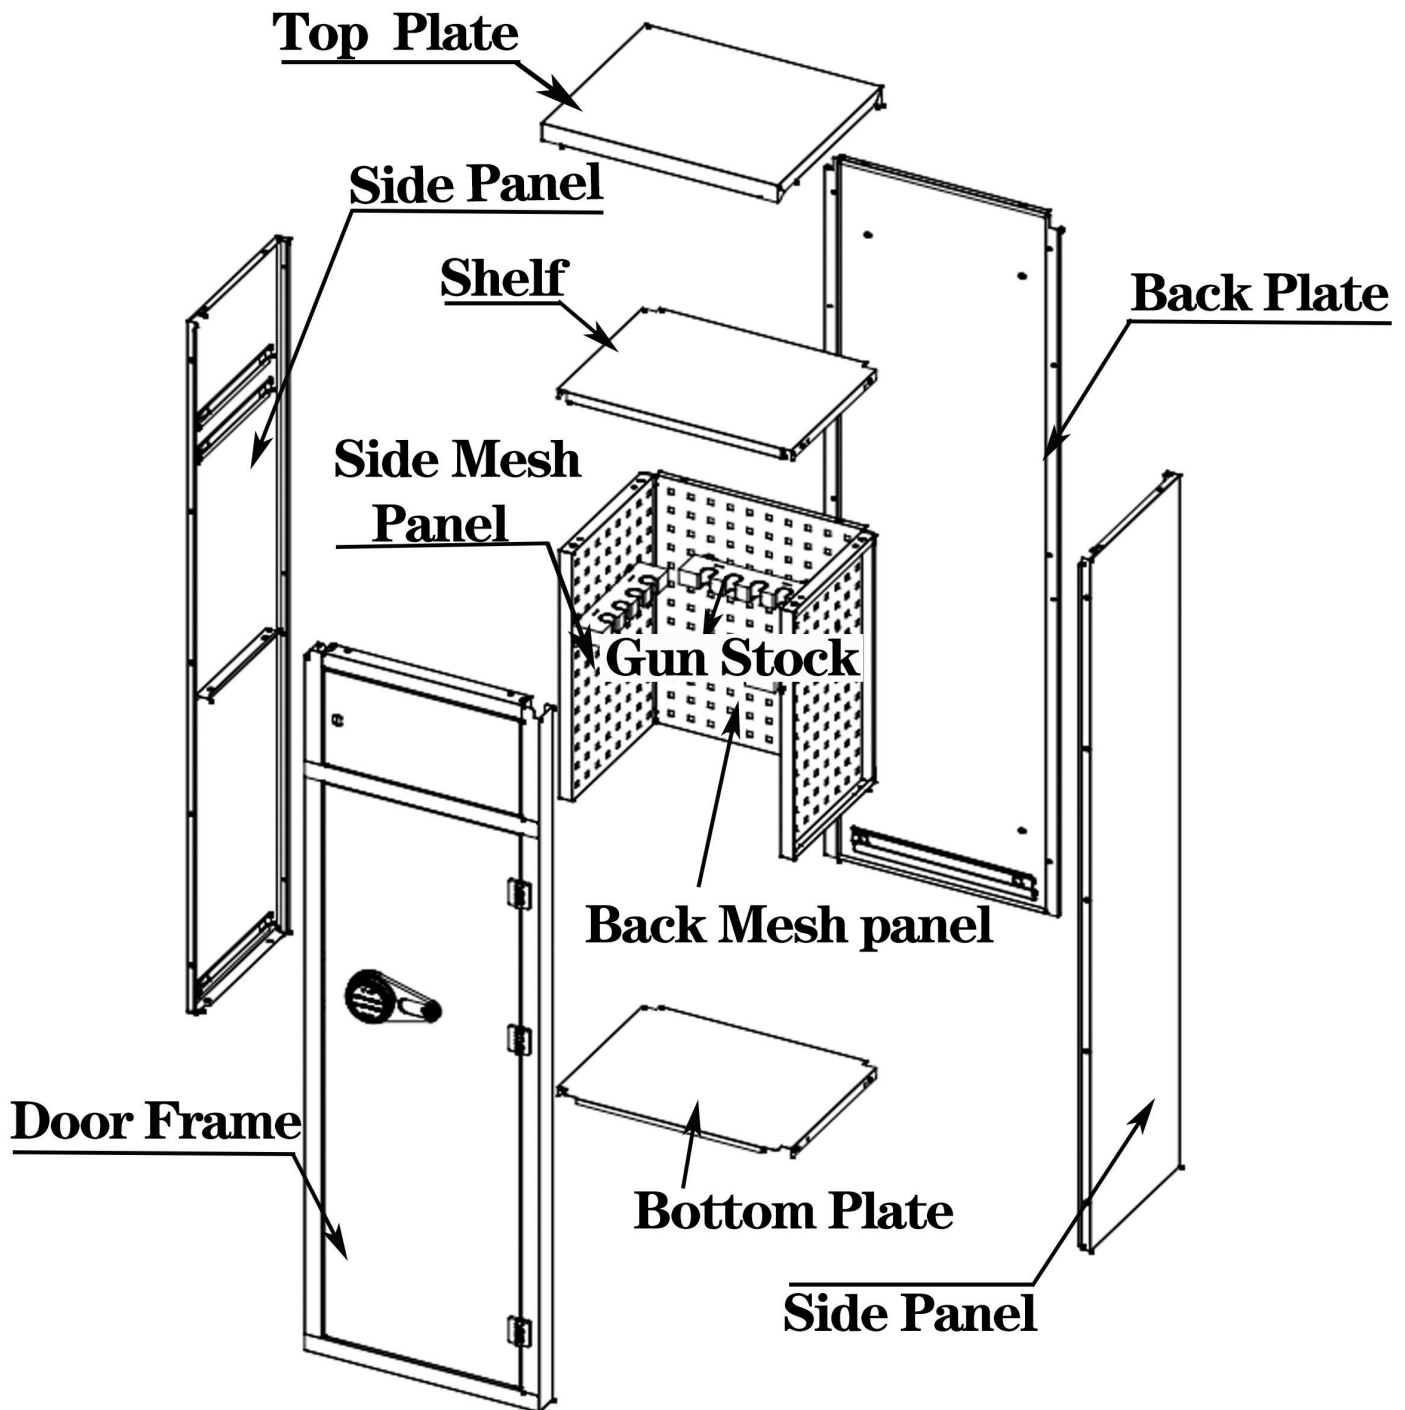

 



 

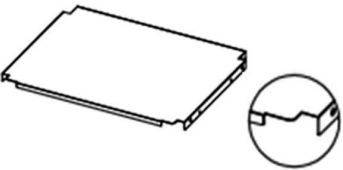



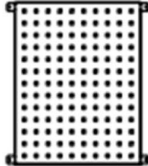

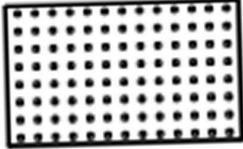





NOTE:

- Please read the complete assembly instructions carefully before assembling the gun cabinet.
- Check the materials to make sure they are working correctly and are not damaged.
- Gun cabinets should be assembled on a flat surface.
- Refer to the illustrations to identify the parts and accessories of the gun cabinet.

⚠ Please do not put the emergency key and external battery box in the safe!

INSTALLATION INSTRUCTIONS


PARTS LIST

Door Frame		1	Gun Stock		3
Back Plate		1	Self-tapping Screw		18
Side Panel		2	Cross Head Screw		6
Bottom Plate		1	Rivets		10
Top Plate		1	Adjustable Foot		4
Back Mesh		1	Screwdriver		1
Side Mesh		2	Key		2
Shelf		1	Glove		1
Gun Mount		3	Expansion Bolt		4

INSTALLATION INSTRUCTIONS


STEP 1

 x 3

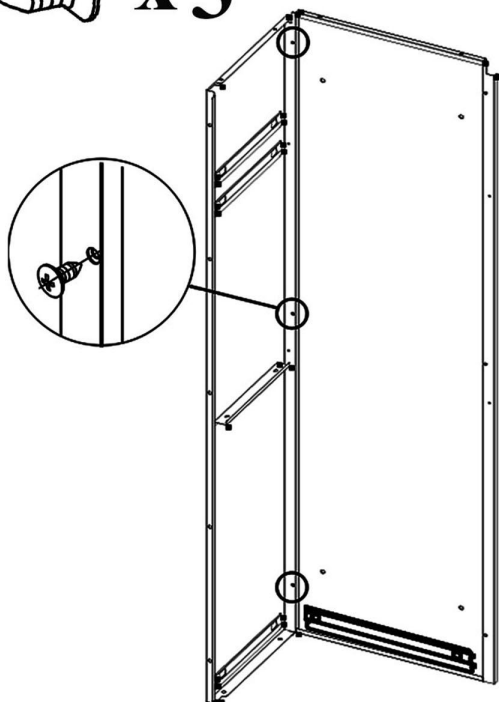


STEP 2

 x 3

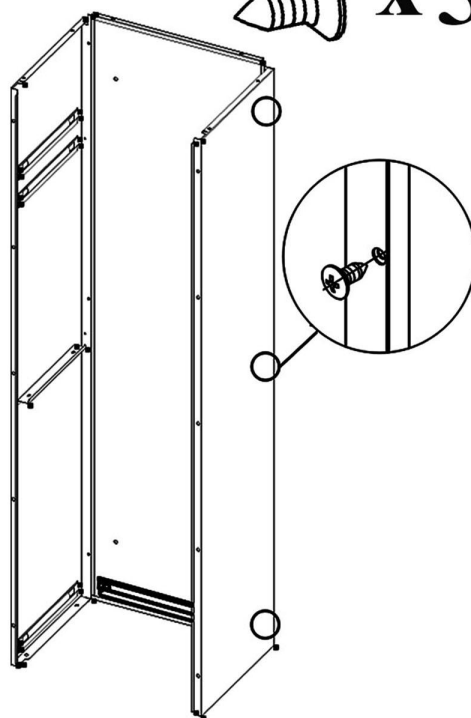


STEP 3

 x 10

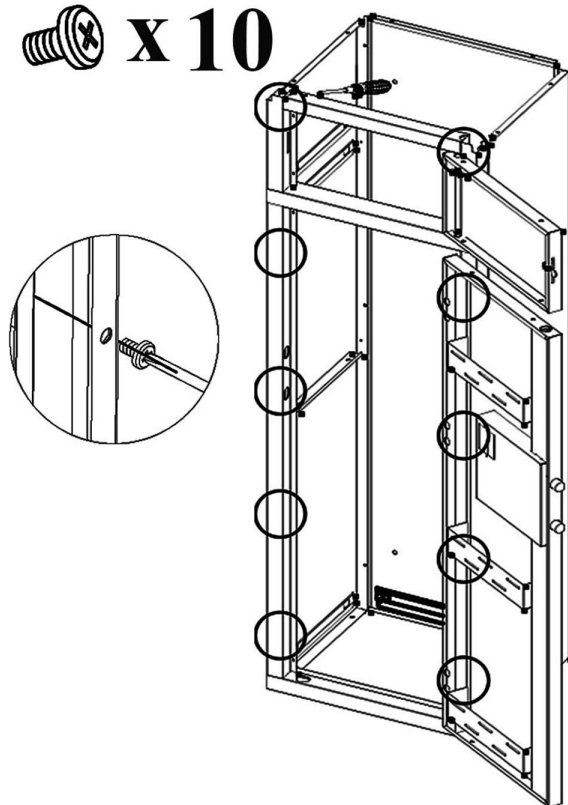

STEP 4


 x 4

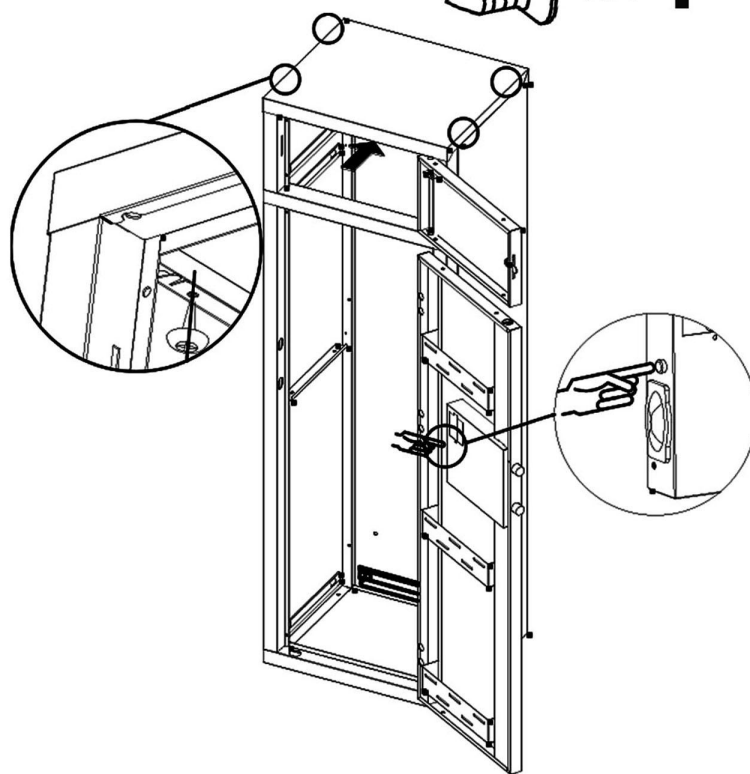

INSTALLATION INSTRUCTIONS


STEP 5

 x 10

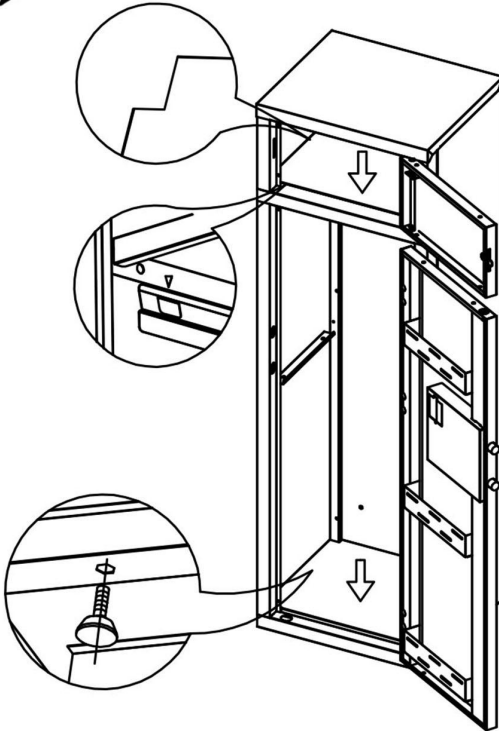


STEP 6

 x 4

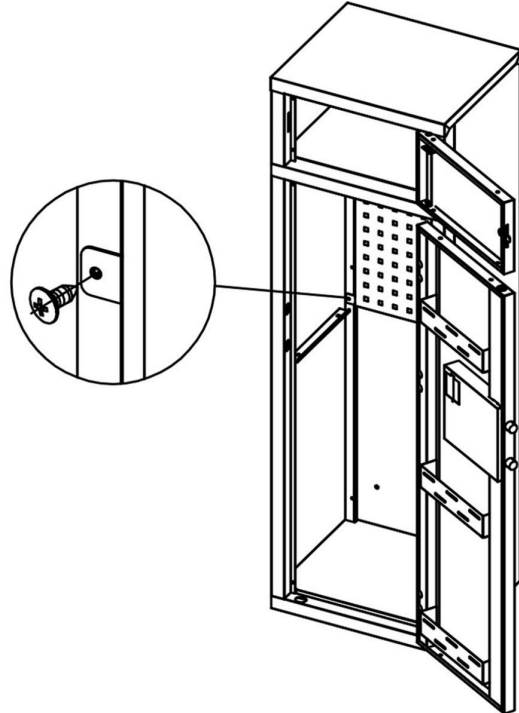


STEP 7

 x 10

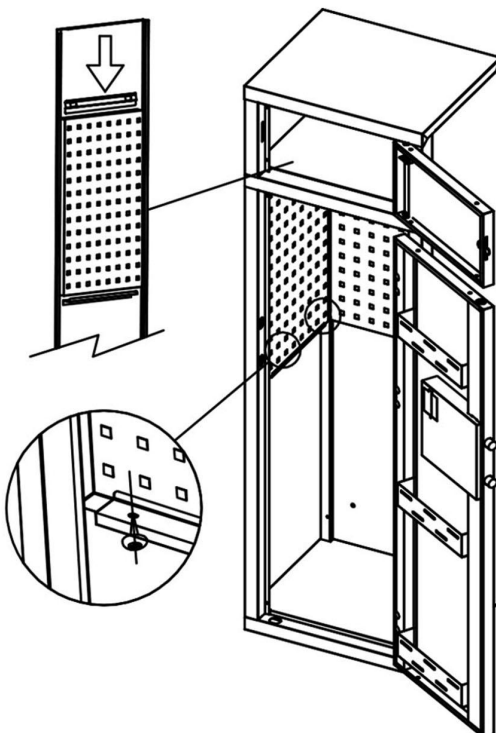

STEP 8

 x 6

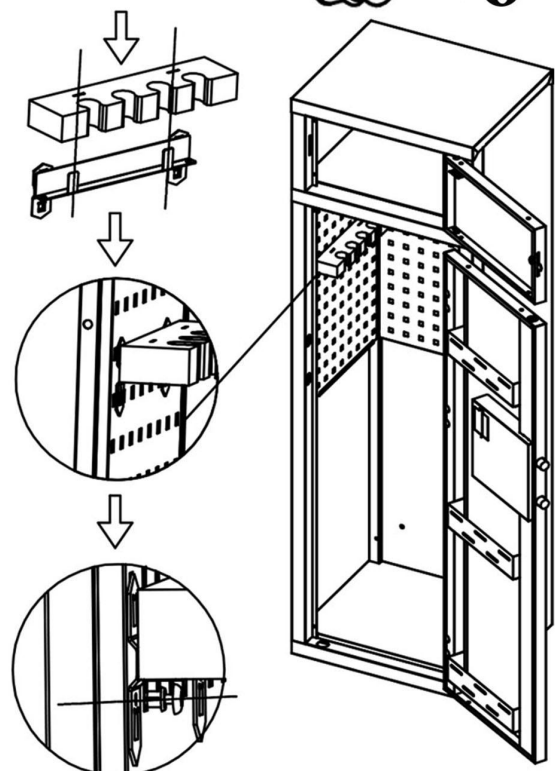

INSTALLATION INSTRUCTIONS

WARNING



SAFETY TIPS

Not safely reinforced before installation, tipping can cause serious injury to children and adults. Children or adults tipping over the gun cabinet can result in death or serious injury. Children should not be playing near the gun cabinet at any time.


TIPES

1. Factory code: 1234.
2. Management password can be left blank or customized.
3. The buzzer will sound a "beep" whenever a password is entered.
4. If there is a pause during operation, or if there are no subsequent operation for 10 seconds, the system will automatically return to standby mode.

FIRST TIME OPEN

FIRST TIME OPEN

1. Slide the keyhole cover upward.
2. Insert the key into the keyhole and rotate counterclockwise.
3. Turn the handle clockwise to open the gun cabinet

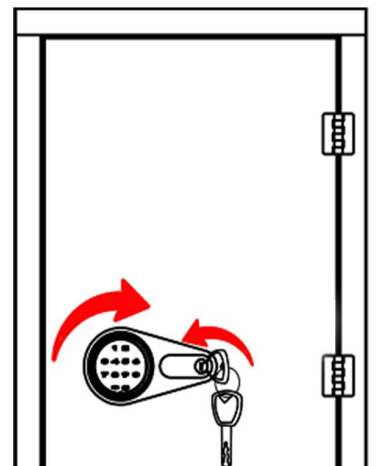

SET PASSWORD(3-8 DIGITS)

Press the setting button to hear the "beep" sound and see the green light illuminate. Enter a password of 3-8 digits, then press #. Upon hearing the "beep" sound again, re-enter the same password and press # to confirm. A prolonged "beep" sound indicates successful password setting.

Note: During the password setup process, if you hear a series of "beep beep beep" sounds and see the red light flashing, it indicates setup failure. Please retry the operation.

INSTALLATION INSTRUCTIONS

OPEN THE GUN CABINET

Press "#" key, see the green light on, the keyboard is awakened, enter 3-8 digits password, press "#" to confirm, hear a long string of buzzer tones, at the same time, the green light remains on, indicating that the password is correct, the electromagnet is activated for 6 seconds.

Indicates that the door is opened successfully.

Note: If you enter the wrong password, it will sound "beep beep", and the red light will flash. Need to re-enter.

SOUND OFF/ON FUNCTION

1: How to turn on the mute function: Press the "#" key and see the green light illuminate, the keyboard is awakened, enter "33#".

2: How to turn off the mute function: Press the "#" key and see the green light illuminate, the keyboard is awakened, enter "66#".

SYSTEM LOCKOUT FUNCTION

After entering the wrong password three times consecutively, the red light will continue blinking, and the system will be locked for 20 seconds. During this time, the combination lock will not be able to perform any operations.

LED LIGHT ILLUMINATION

When the correct password is entered to unlock the door, the LED lighting will be on for 30 seconds.

UNDERVOLTAGE INDICATION

During operation, if you hear the buzzer sounding "beep" five times accompanied by the red light flashing five times, it indicates low battery voltage and suggests replacing the batteries. (It is recommended to use four alkaline 5 batteries).

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

- 1.The gun cabinet can be mounted on the wall
- 2.Use the appropriate drilling tool depending on the type of wall (wood, tile or concrete) on which the gun cabinet is to be installed. Aim carefully at the installation location to open the hole.(Please verify the location and distance of the reserved holes before drilling)
- 3.Take out the expansion screws from the gun cabinet accessory kit to fix it to a safe position.Mounting holes are based on the actual model

SECURITY AND COMPLIANCE

- 1.Please read the manual carefully before using the gun cabinet.
- 2.To reduce risk, the gun safe must be mounted on the wall to ensure security.
- 3.Please keep the keys carefully.Do not put the keys into the gun cabinet, otherwise the emergency key will not be able to open the safe after the battery runs out.
- 4.For the security of your property, you need to change the original factory password.
- 5.Do not place the product in an unsafe height to avoid falling, damaging the product or injuring others.
- 6.Do not spill liquid on the control panel, otherwise it may damage the internal electronic components and make them not work properly.
- 7.Please do not disassemble the product by yourself. Unprofessional disassembly and installation may damage the circuit and affect its performance.

Mounting Holes

~Actual model may vary