


Ember Glow[®]

Assembly Instructions



3ft & 5ft Pop-Up Christmas Snowman

LED6537+LED10233

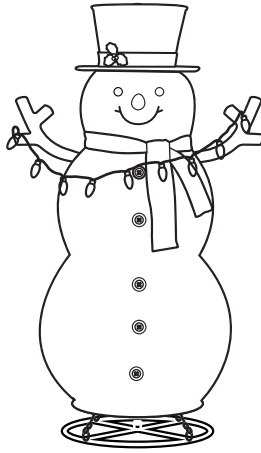

SNOWMAN FAMILY

- This product is designed for outdoor use and should only be assembled outdoors.
- It is not intended for permanent installation or continuous use.
- Always unplug the product when not in use or when left unattended.
- Confirm that your power supply voltage matches the product specifications.
- Discontinue use if any parts are missing, damaged, broken, or worn. Resume only after repairs are completed or replacement parts are installed.
- Use this product only as directed in the manufacturer's instructions. Improper use may void the warranty.




CAUTION

- Do not plug into a wall outlet until the item is fully assembled and all lights are securely connected.
- Do not use during extreme weather conditions.
- This product contains glitter. Assemble outdoors only to avoid property damage and difficult cleanup.
- Avoid contact of glitter with eyes or face to prevent irritation or injury.
- Keep away from all heat sources, including fireplaces, stoves, and heaters.
- Always use the provided stakes to secure the reindeer properly.
- Do not attach wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or any objects from the cord.
- Unplug before replacing or removing bulbs.
- Replace burned-out bulbs promptly with bulbs of the same rating.

Package Contents

1

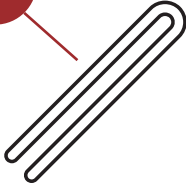

STAKE
X 6

2



LIGHT HOOK
X 2

A




SNOWMAN BODY
X 1

B




BASE STAND
X 1

C

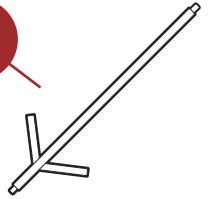


TOP POLE
X 1

D

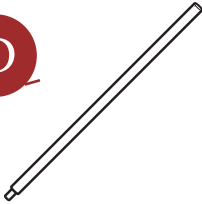

BOTTOM POLE
X 1

E

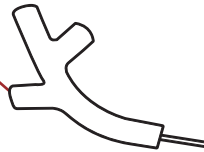

RIGHT ARM
X 1

F



LEFT ARM
X 1

G




SCARF
X 1

H




STRING LIGHTS
X 1


Product Assembly

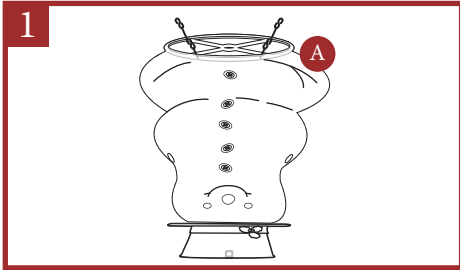


Locate the **part A snowman body** and turn it upside down with the snowman's hat on the ground.

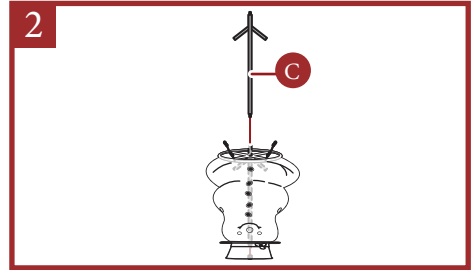


Insert the **part C top pole** through the bottom opening of the **part A snowman body**. Insert the top of the pole into the opening in the snowman's hat, then thread the lower end of the pole through the metal ring in the center of the snowman body.

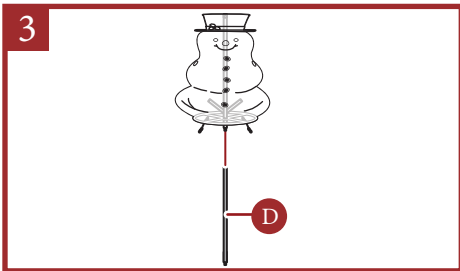


Flip the **part A snowman body** upright and insert the **part D bottom pole** into the **part C top pole** through the metal ring in the snowman's bottom.

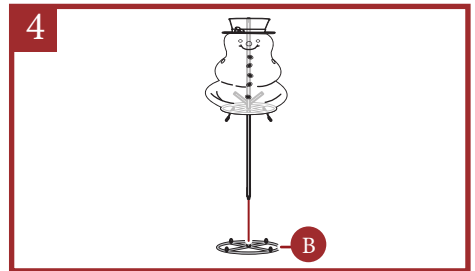

Insert the **part D bottom pole** into the **part B base stand**.

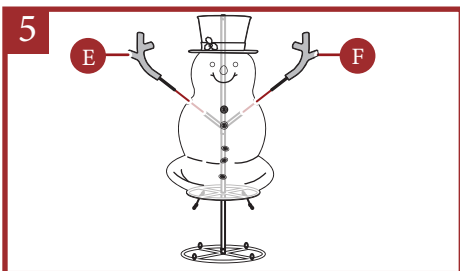

Locate the openings on either side of the **part A snowman body** and insert the **part E & F arms**. Connect the arms to the branches of the **part C top pole**.

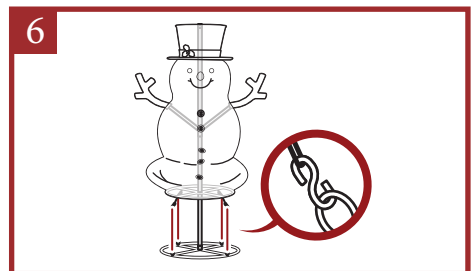


Use both hands to grip the hooks at the bottom of the **part A snowman body** and pull downward to the **part B base stand**, secure the hooks.

Product Assembly



Wrap the **part G scarf** around the snowman's neck.

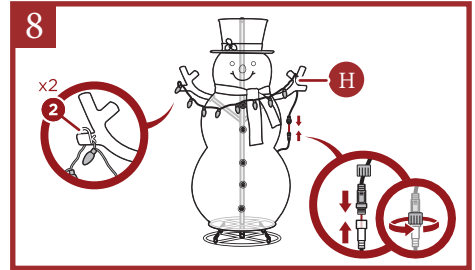

Attach the **part 2 light hooks** to the **part H string lights** and drape the lights over the snowman as desired. Locate the white plug on the **part A snowman** and connect it to the black plug on the **part H string lights**.



Secure the snowman figure to the ground with six **part 1 stakes**. Plug into a wall outlet to turn on the lights.

Light Bulbs

Bulb Type(s)	Bulb Size	Wattage	Voltage	What if 1 bulb breaks?
Fairy	5 mm	0.04 W	3 V	The entire string of lights up to that point will shut off.



Warning

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.

Product Warranty Information

RETURN POLICY/GUARANTEE

We personally inspect each piece before we ship to guarantee quality. Damaged or flawed items **MUST** be reported within 48 hours of receiving your shipment or the claim will not be honored. If the items you have ordered through www.florabunda.us are damaged in transit, please reach us with thru our [Contact US](#) page. For faster service please add your Order ID# and someone will get back to you within 24 business hours to let you know how we can proceed.

Returning an Item

If there is nothing wrong with the quality of your order and you simply decide you no longer want it, contact us within 48 hours of receiving it with the following information:

Order Id #, product name/number, reason for return and contact details.

We will then provide you with a returns authorization number (RA), but are unable to provide a return label.

Please send returned items to

Ember Glow Returns

8545 Pecan Ave,
Rancho Cucamonga, CA 91739

We ask that you email us your tracking number to ensure a speedier refund.

Once the product is received complete with original packaging and RA Number, we will provide you with a refund as quickly as possible; in busy times, this process can take slightly longer but will not be longer than 30 days. Refunds will be credited to the original purchaser's credit card, minus a \$3 restocking fee. The restocking fee covers the costs of the box, credit card transaction charges and taxes on postage.

We strongly recommend that you arrange for proof of delivery on returned items as we cannot accept responsibility for parcels lost in transit. Please note that proof of postage is not proof of delivery.



Question about your product? We're here to help. Visit us at:

<https://florabundaus.com/contact>

Email: info@florabundaus.com

Tel: (909) 987-8819