 


014-HG-41830  
Astorga TV Stand

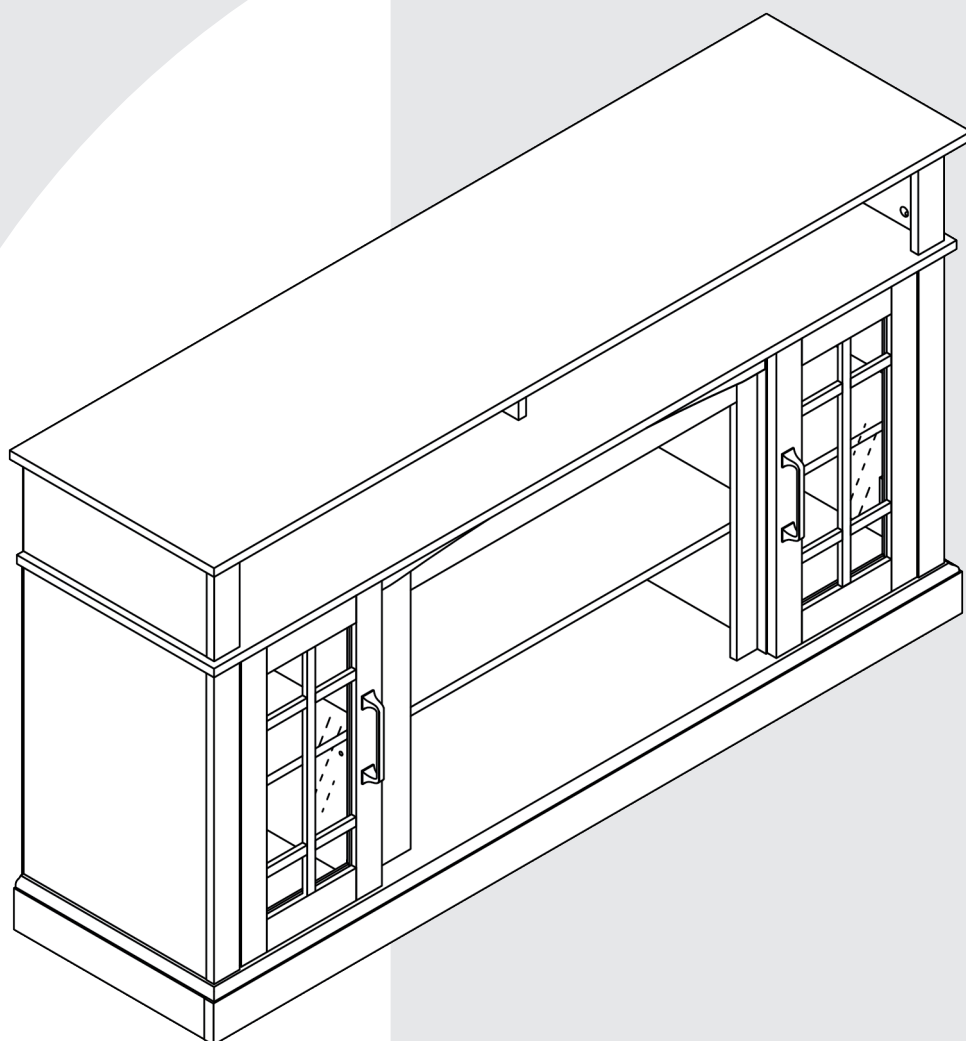

**Belleze®**

Instruction  
Manual



 
Scan to view  
online tutorial  
or visit  
[www.belleze.com](http://www.belleze.com)

## Read Before Assembly

The instruction booklet contains **IMPORTANT** safety information. Please read it in full and keep it for future reference.





### WARNING!

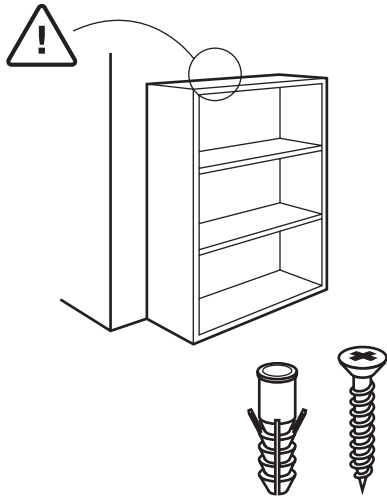

- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.
- Different wall materials requires different type of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or local hardware store and seek professional advice.
- Only place items that is within the recommended size and weight limit of the furniture.
- Items placed onto the furniture must be resting on a support surface without hanging over the edges.
- Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and / or injuries.



## CAUTION!

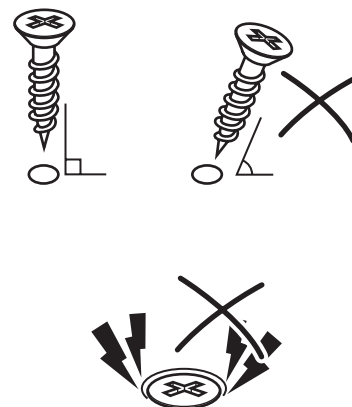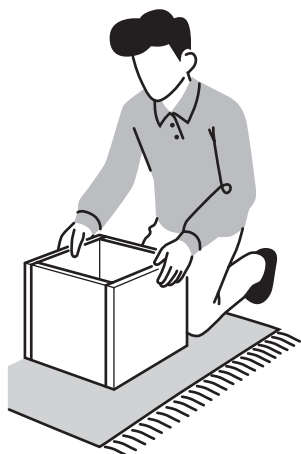  

- Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.
- When assembling the furniture, keep pets and children away from the assembly area.
- Ensure the product is fully assembled before use. If you are missing any hardware or parts, do not use it until you have restored the missing parts.
- This furniture requires 2 people for assembly.
- Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.
- There are small components used in the construction of the furnitures. Loose items, plastic bags, and packaging films should be kept away from pets or children to avoid choking hazard or suffocations.
- Read this instruction manual prior to assembly and familiarize yourself with the various steps.
- Install all hardware perpendicular to the opening unless otherwise specified.
- Hand tight all hardware and careful not to over-tighten to avoid damaging the product.

## Assembly Symbols



- Follow sequential order.



- Build specified number of parts.



- Flip part as indicated.



- Rotate part as indicated.



- Choose your own assembly options.



- Pay attention to the part orientation.



- Leave bolts or screws partially tighten.



- Fully tighten bolts or screws.



- Level the furniture on the ground.

 


Estimated Time for Assembly


**120 mins**




Weight Capacity Limitations are as Follows:

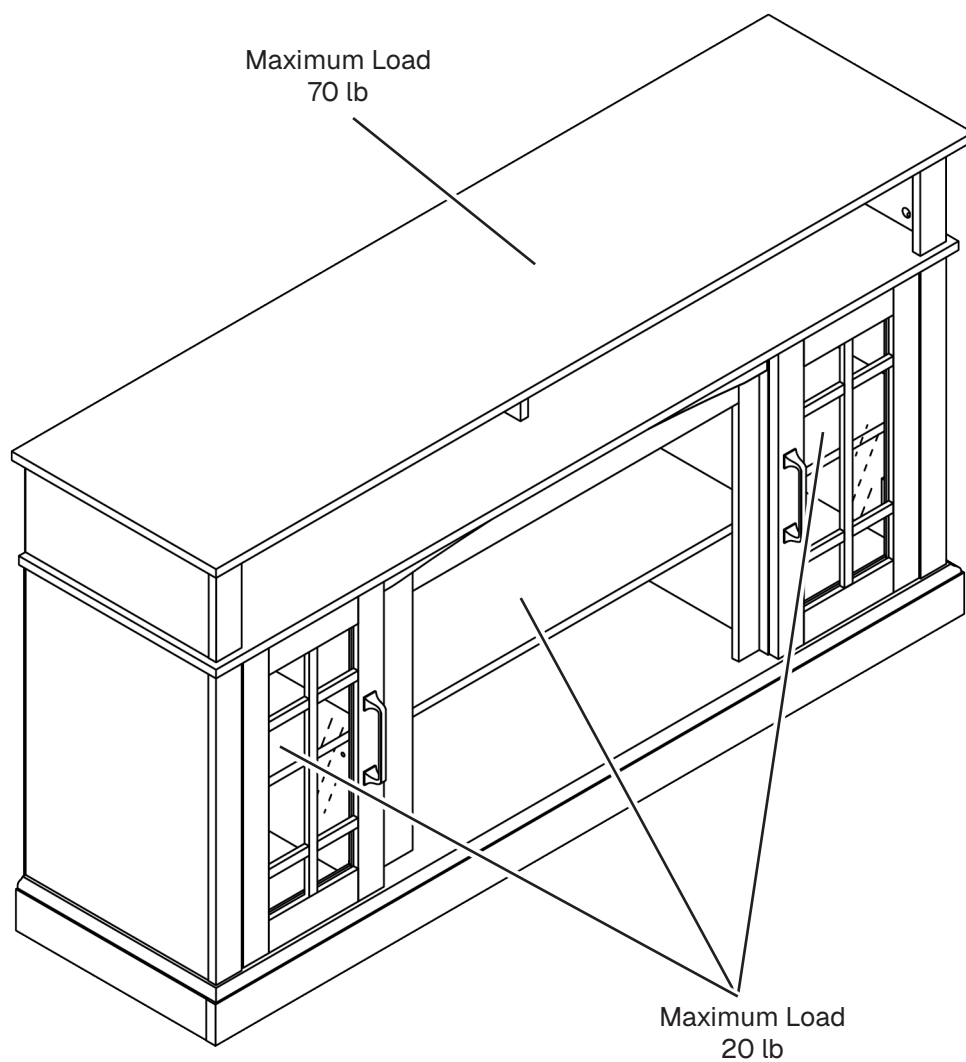


## Tools Needed

 

• Philips Screwdriver

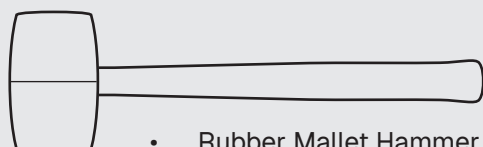 


• Rubber Mallet Hammer

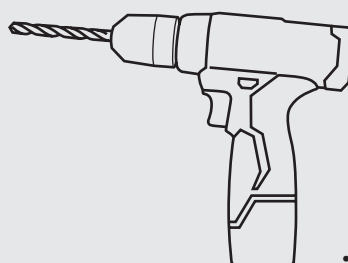 

• Electric Drill


## Package Contents

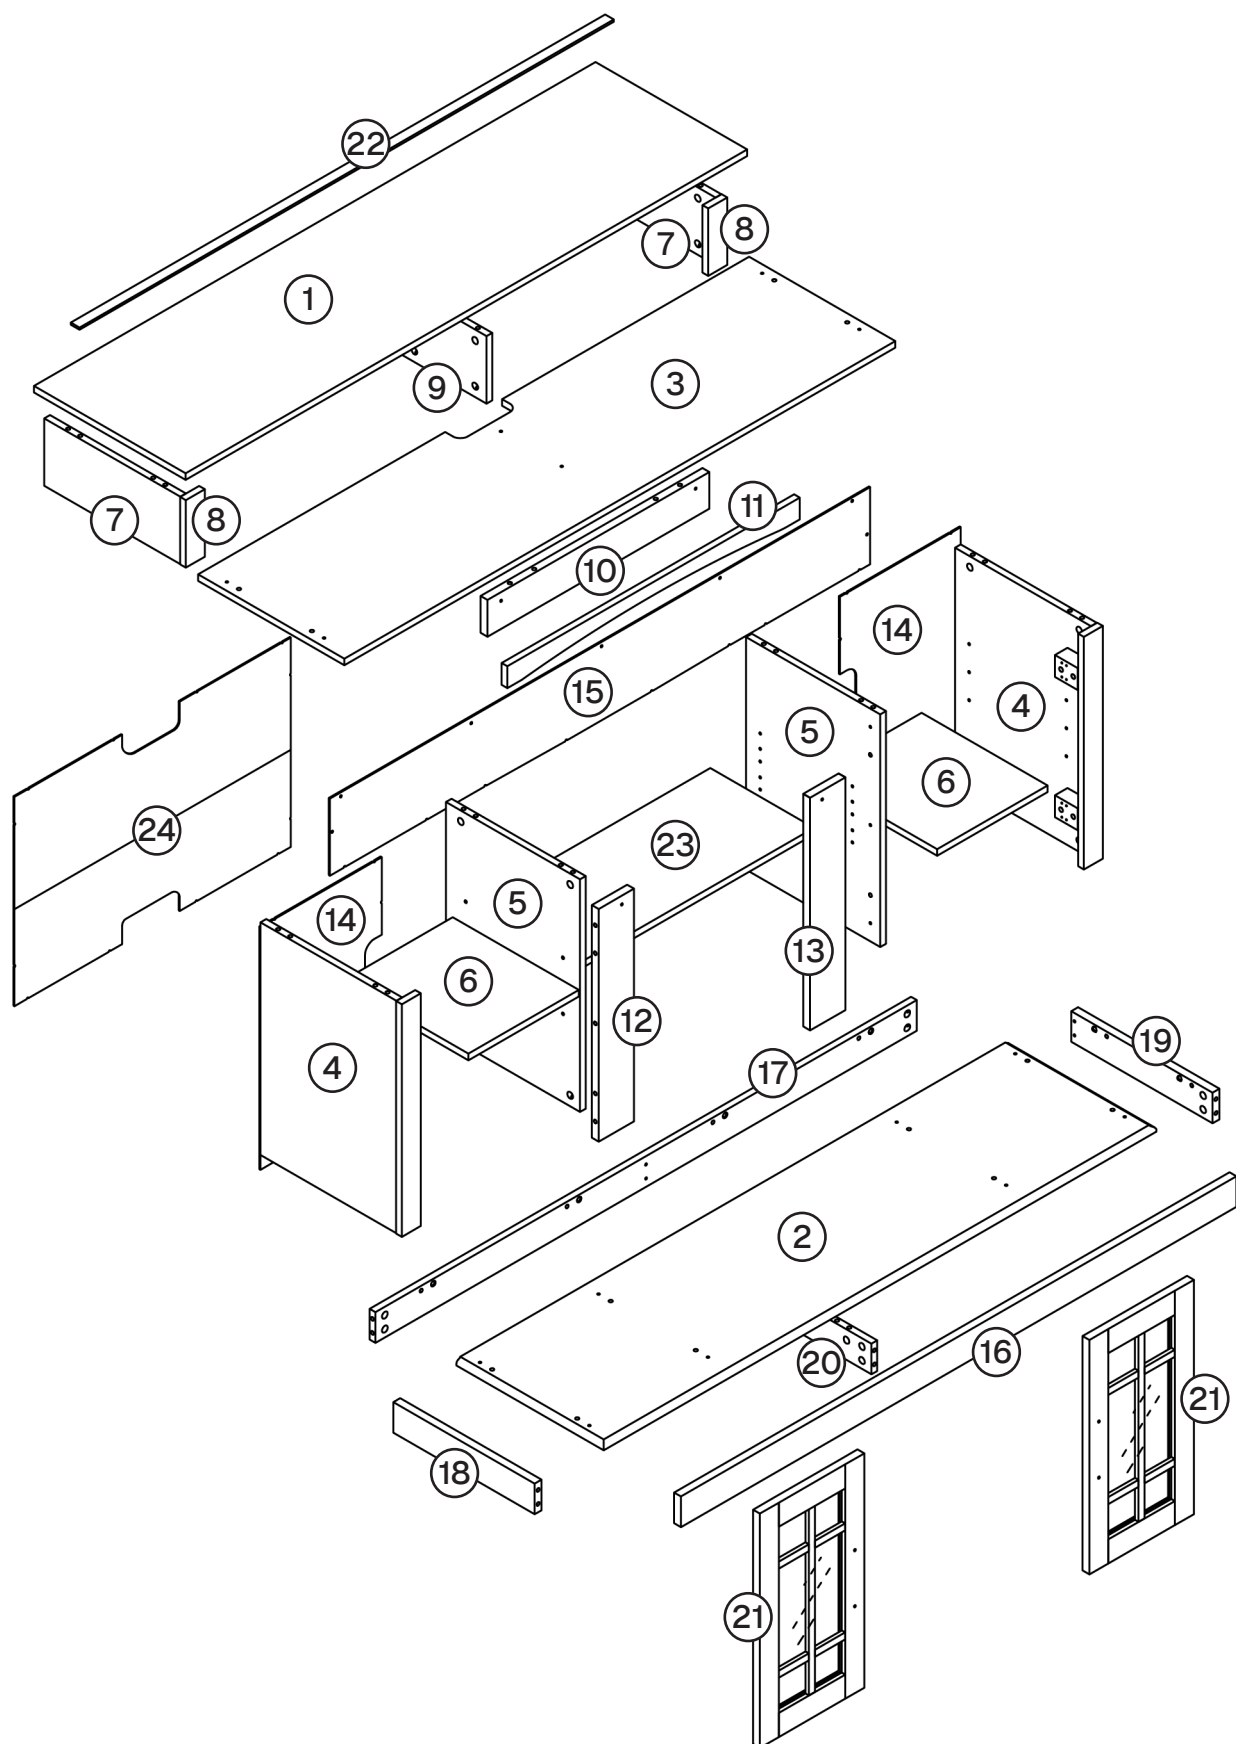 

## Package Contents

| CODE | DESCRIPTION                | QTY |
|------|----------------------------|-----|
| 1    | Top Panel                  | 1   |
| 2    | Bottom Panel               | 1   |
| 3    | Upper Shelf Panel          | 1   |
| 4    | Bottom Lateral Panel       | 2   |
| 5    | Bottom Medial Panel        | 2   |
| 6    | Side Shelf Storage Panel   | 2   |
| 7    | Upper Lateral Panel        | 2   |
| 8    | Upper Support Strip        | 2   |
| 9    | Upper Medial Panel         | 1   |
| 10   | Crossbar                   | 1   |
| 11   | Decoration Arch            | 1   |
| 12   | Left Surround Panel        | 1   |
| 13   | Right Surround Panel       | 1   |
| 14   | Bottom Side Back Panel     | 2   |
| 15   | Upper Back Panel           | 1   |
| 16   | Front Base Panel           | 1   |
| 17   | Back Base Panel            | 1   |
| 18   | Left Base Panel            | 1   |
| 19   | Right Base Panel           | 1   |
| 20   | Center Base Panel          | 1   |
| 21   | Cabinet Door               | 2   |
| 22   | Top Garnishing Strip       | 1   |
| 23   | Center Shelf Storage Panel | 1   |
| 24   | Center Back Panel          | 1   |

 
## Package Contents

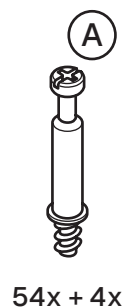


54x + 4x



 
54x + 4x

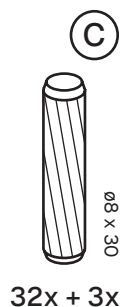

32x + 3x

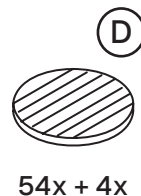 


54x + 4x

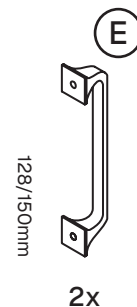 

2x



 
4x

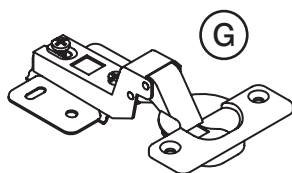


4x



 
24x+2x

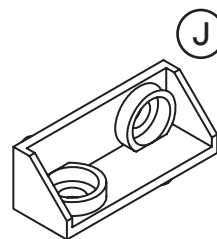


12x+1x

 


1x

 

24x + 2x

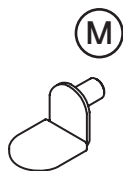 


12x+1x

 

4x



 4x

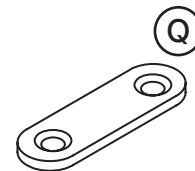

2x



37x+3x



 
2x



2x





2x



2x





# 01

  Base panels

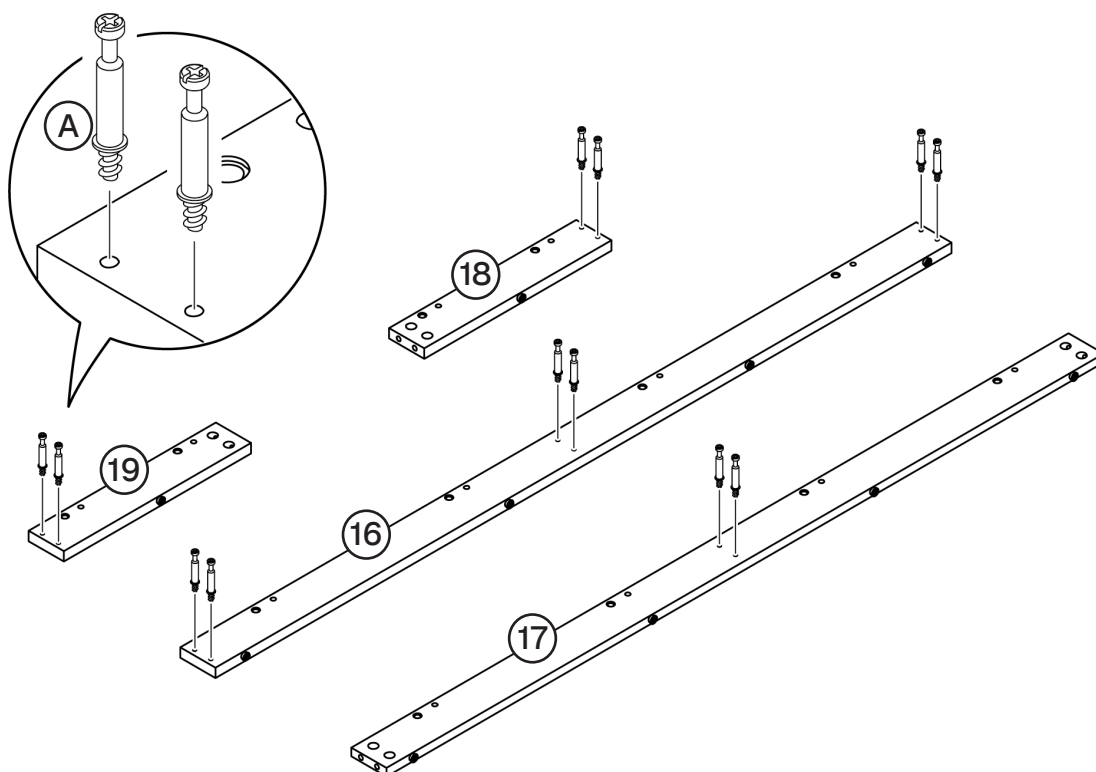

# 02

    Attaching corner connectors

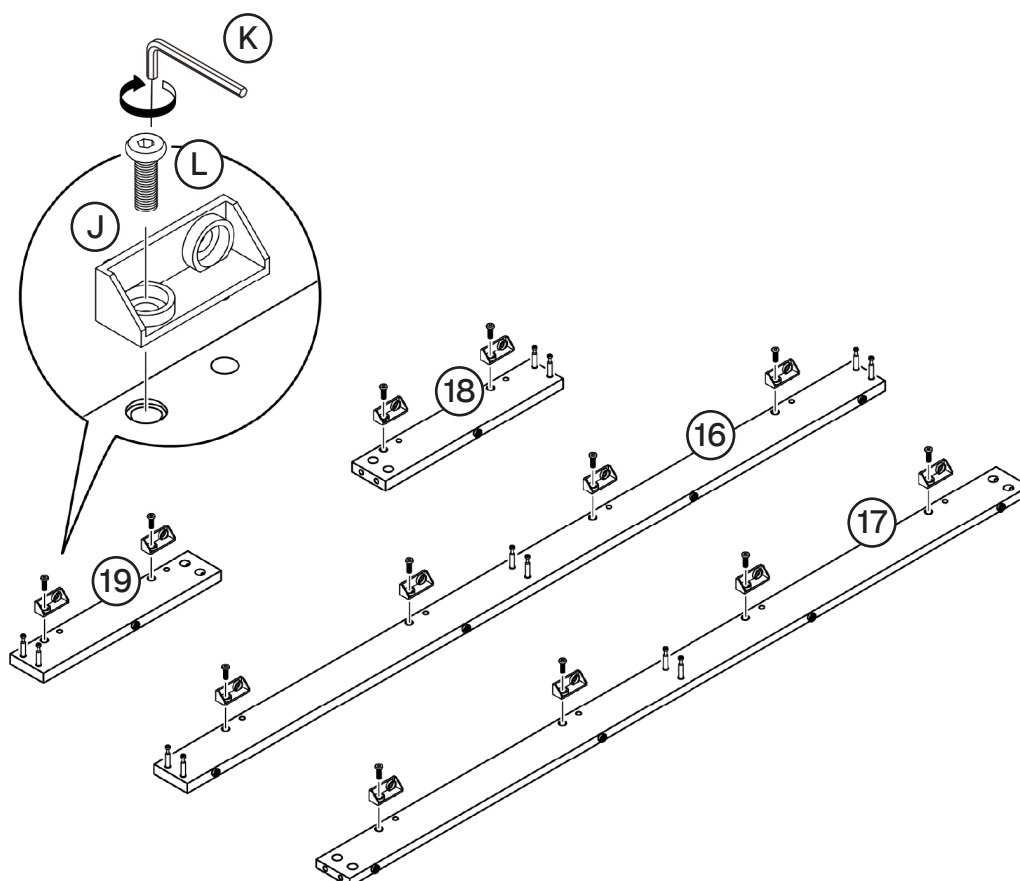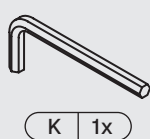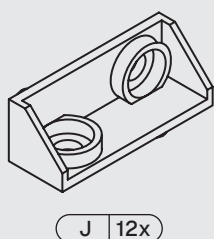


## 03 Assembling the base frame



B 6x



 D 6x

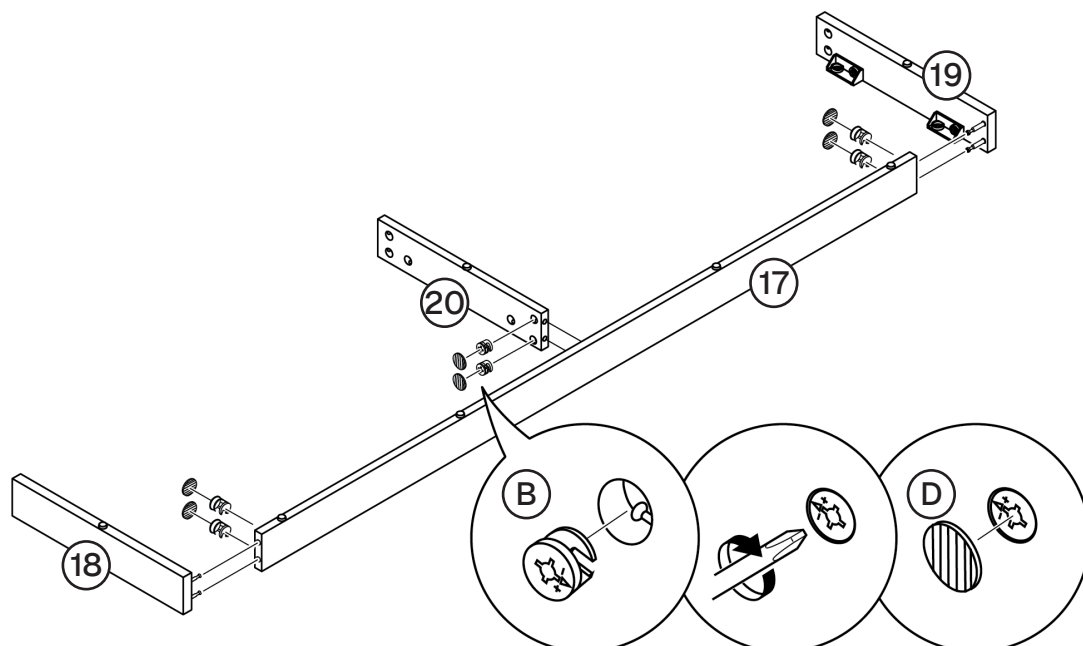


## 04 Assembling the base frame



B 6x





 D 6x

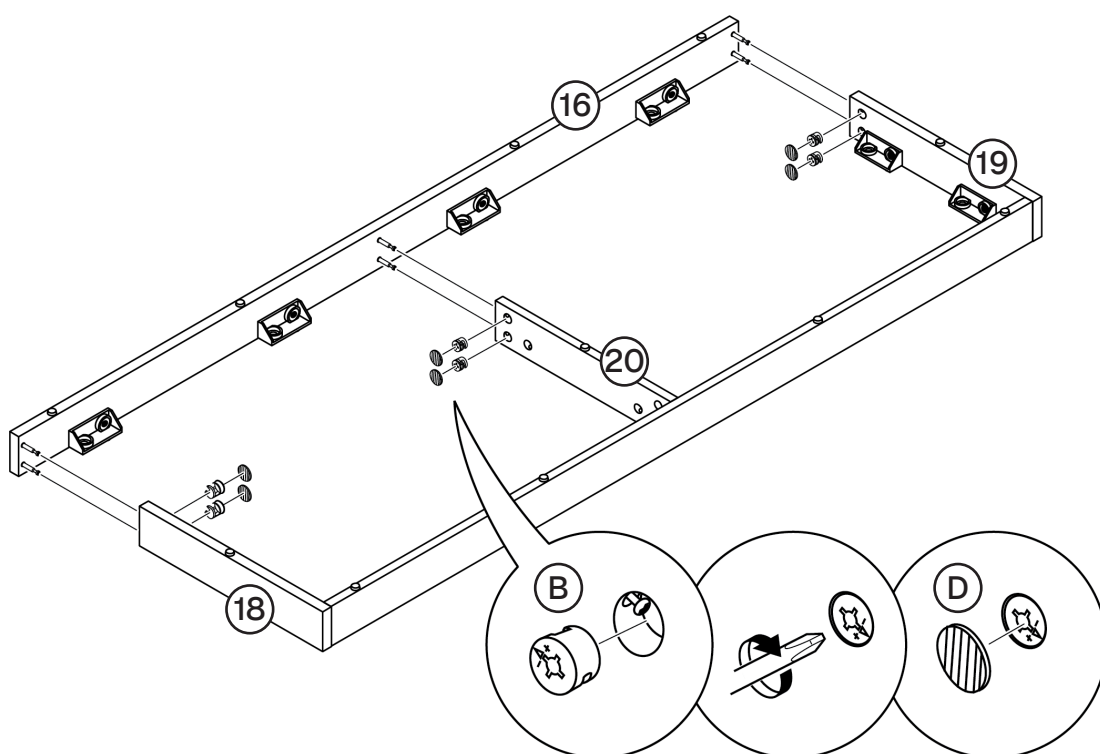



## 05

  Attach cam bolts to the underside of the bottom panel (2).

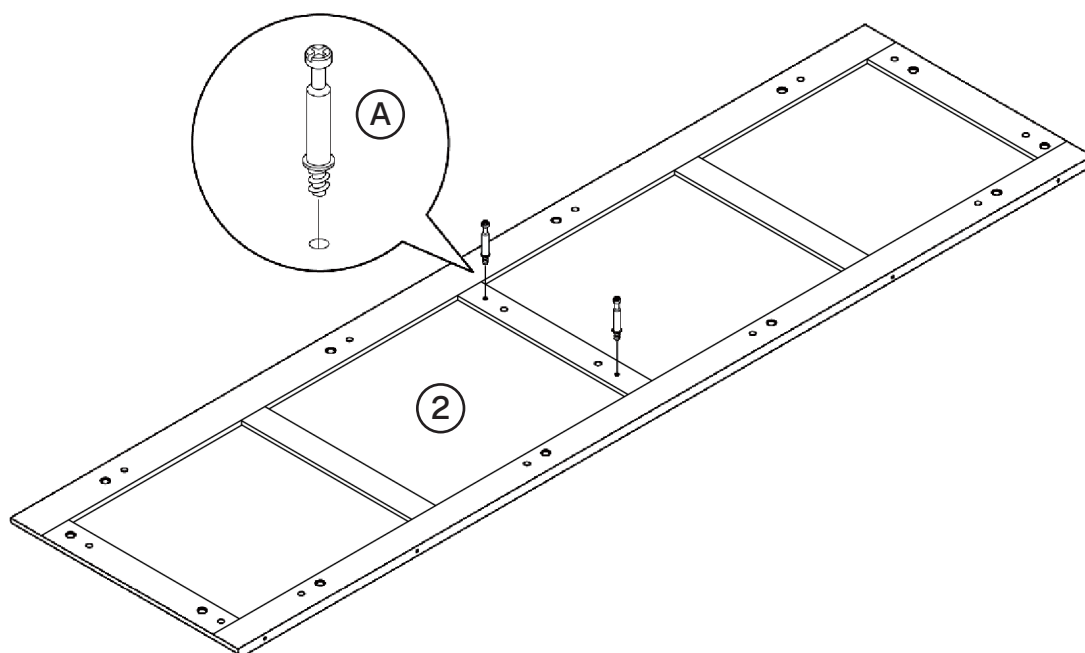

## 06

  Insert wood dowels to the underside of the bottom panel (2).

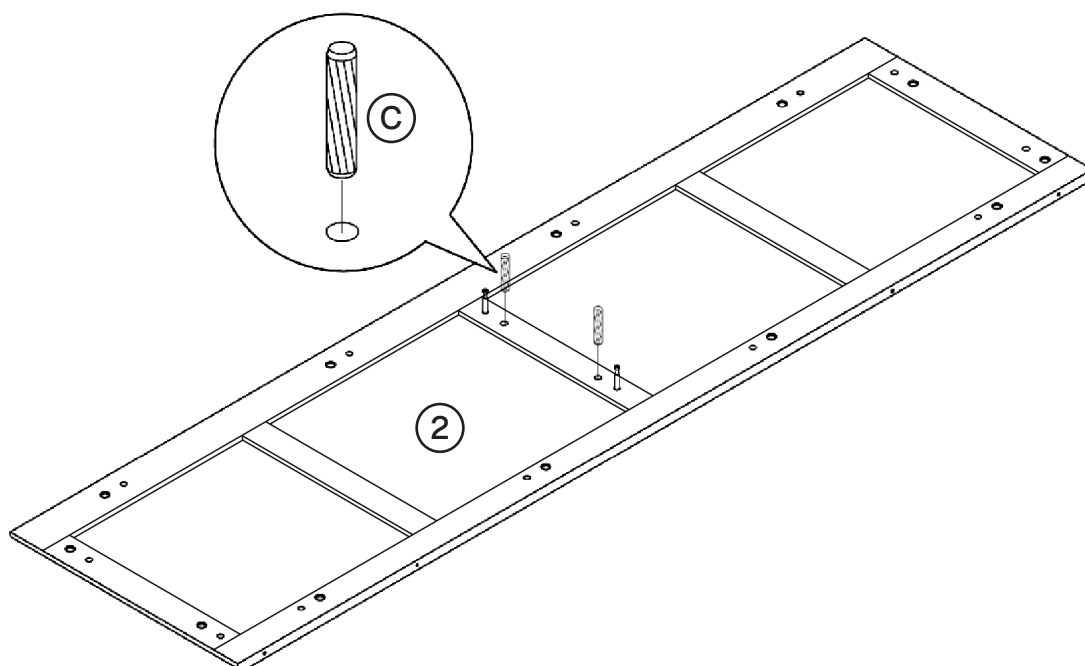


# 07

Assemble the base assembly to the underside of the bottom panel (2).



 L 12x

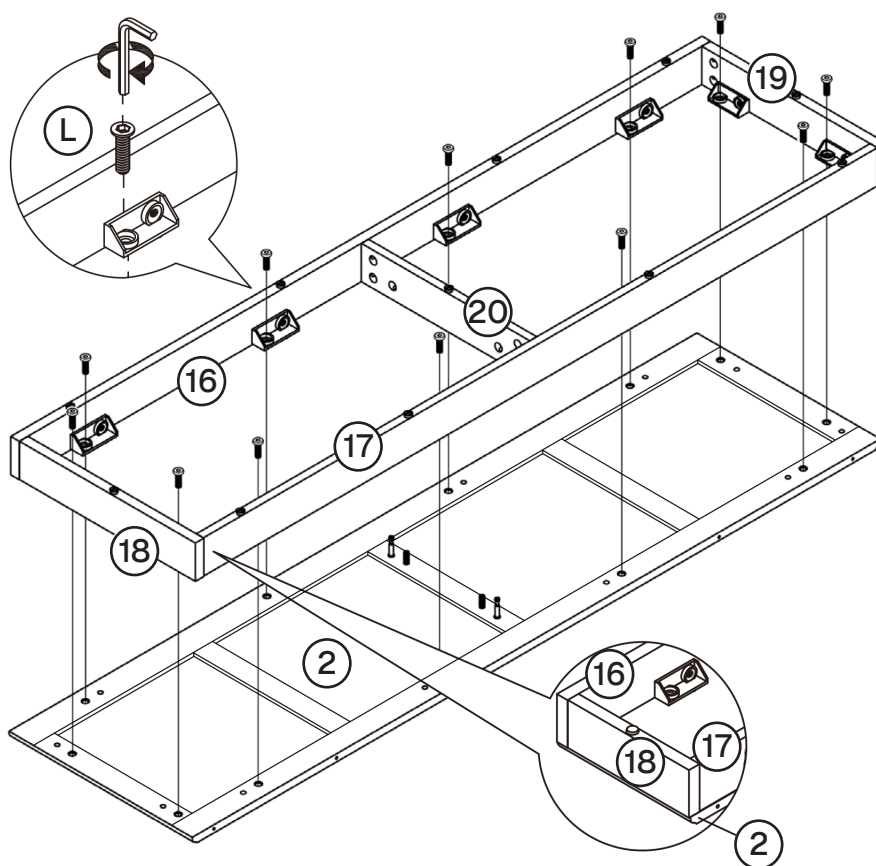

# 08

 
Secure the center base panel to the bottom panel.



B 2x




D 2x

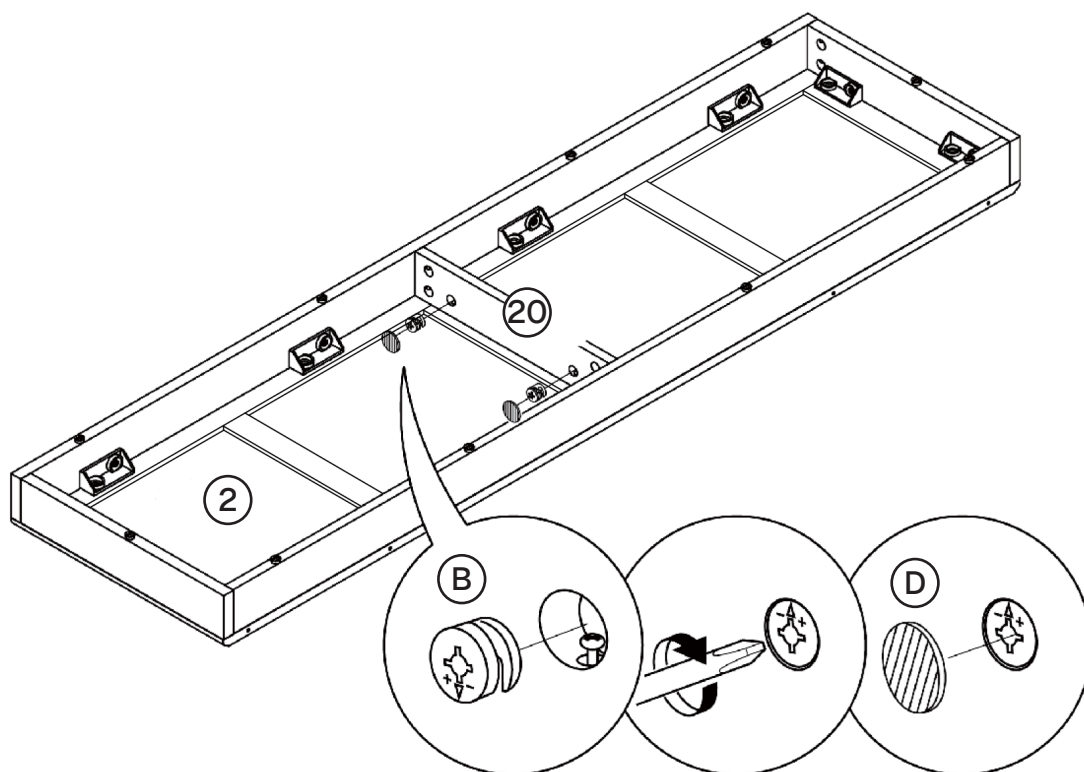

## 09 Top panel



 
A 6x

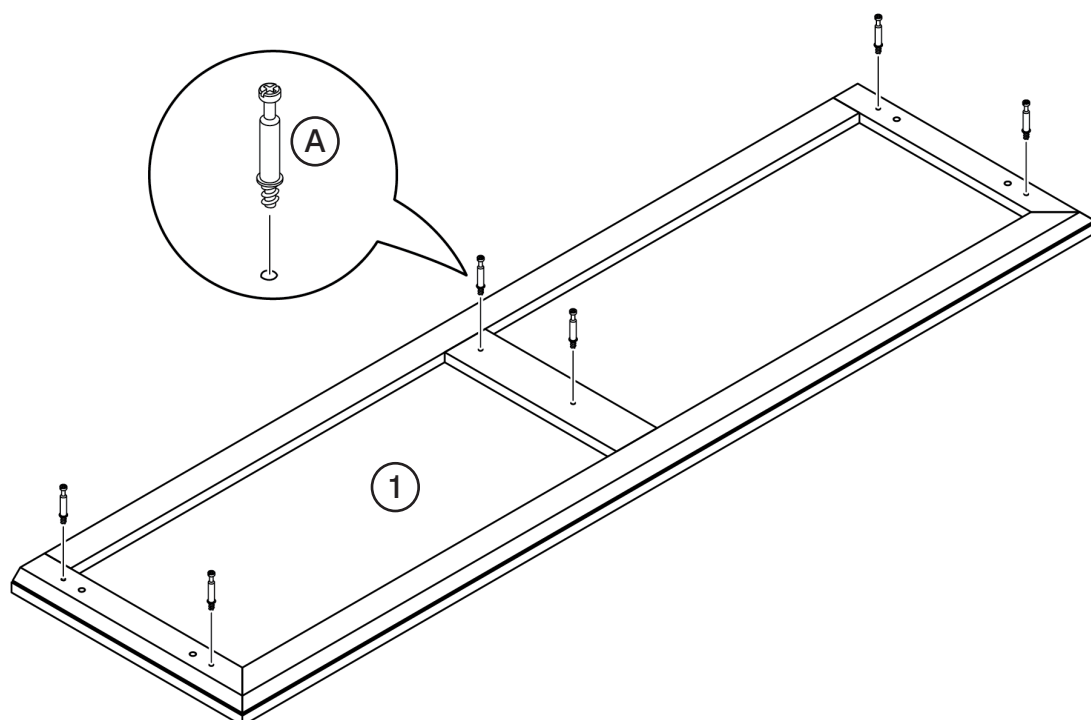

## 10 Bottom panel



 A 8x

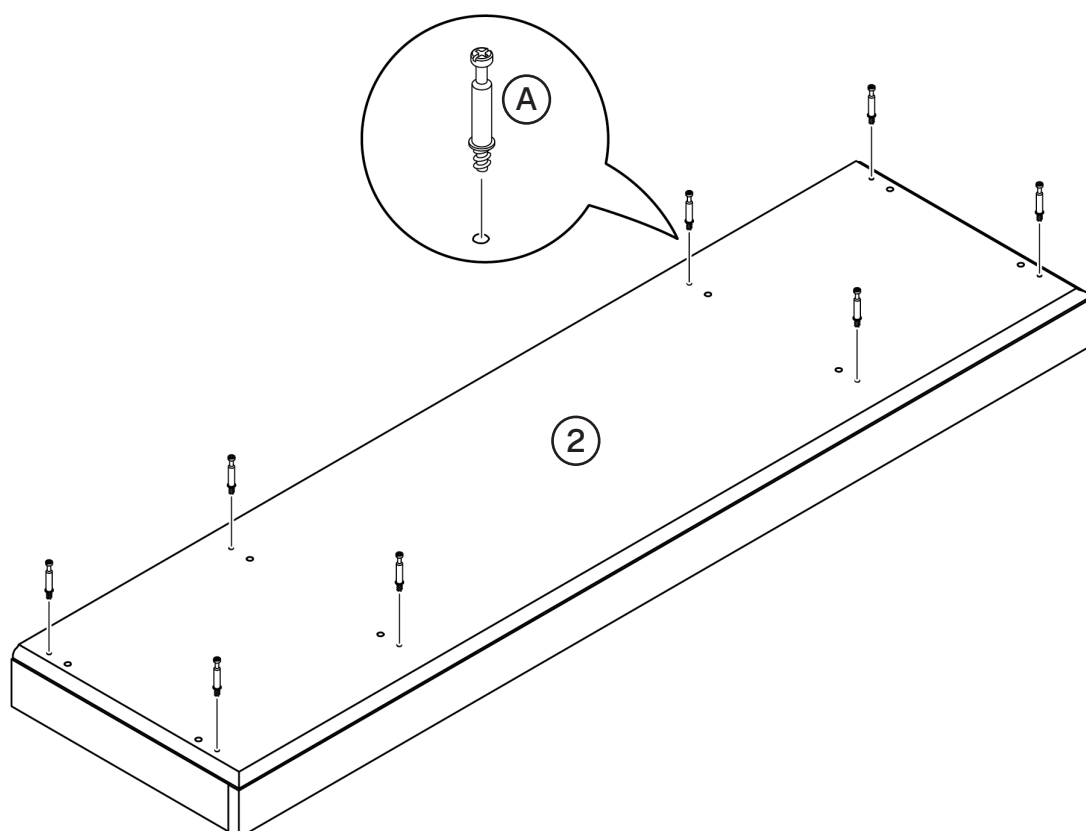


# 11

Bottom medial panels, crossbar, and surround panels



 C 14x

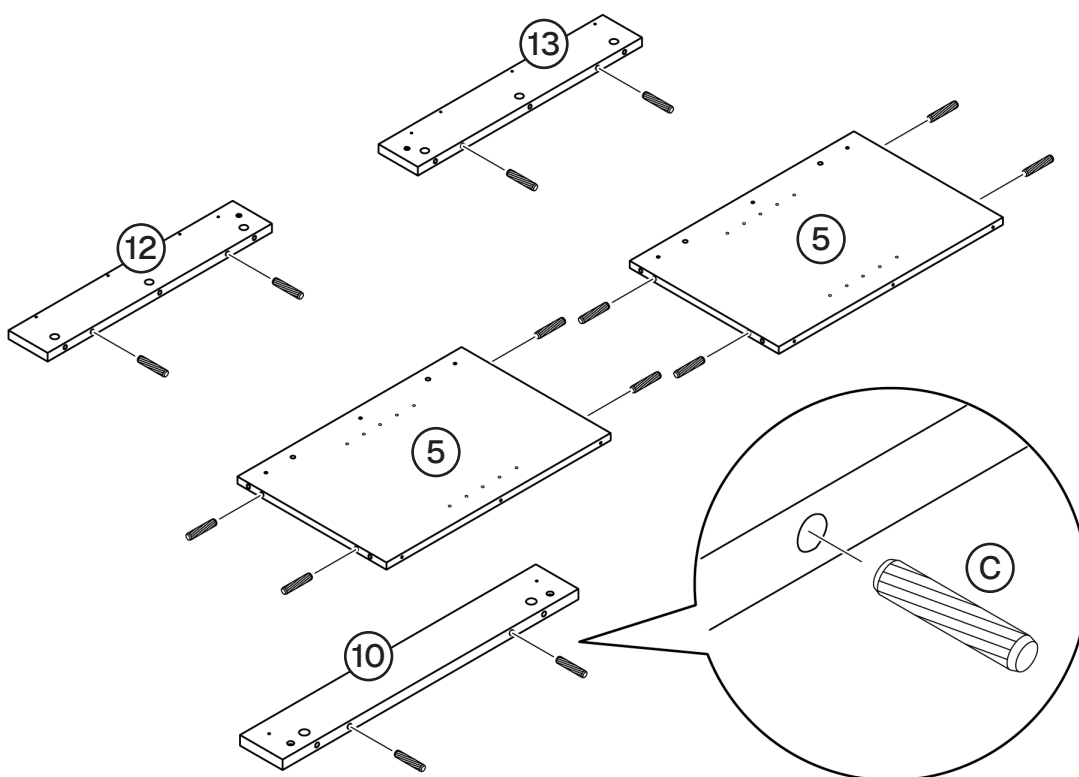


# 12

Bottom medial panels



 A 6x

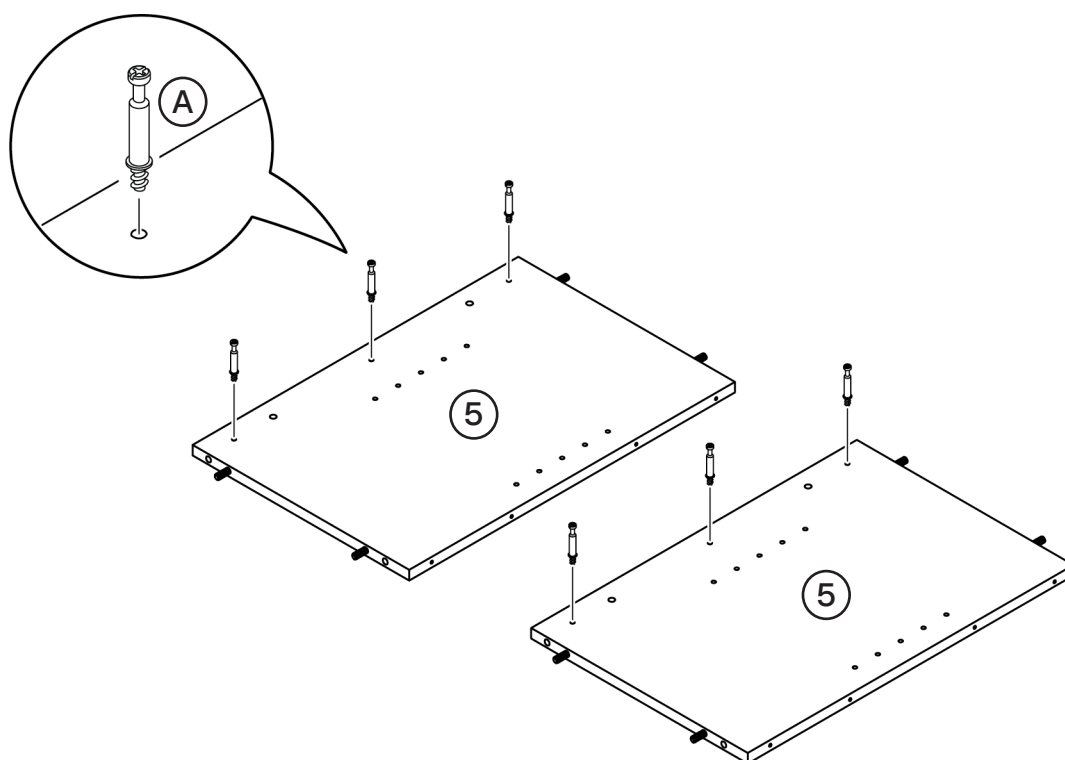

# 13

 
## Attaching surround panels to bottom medial panels



B 6x



D 6x

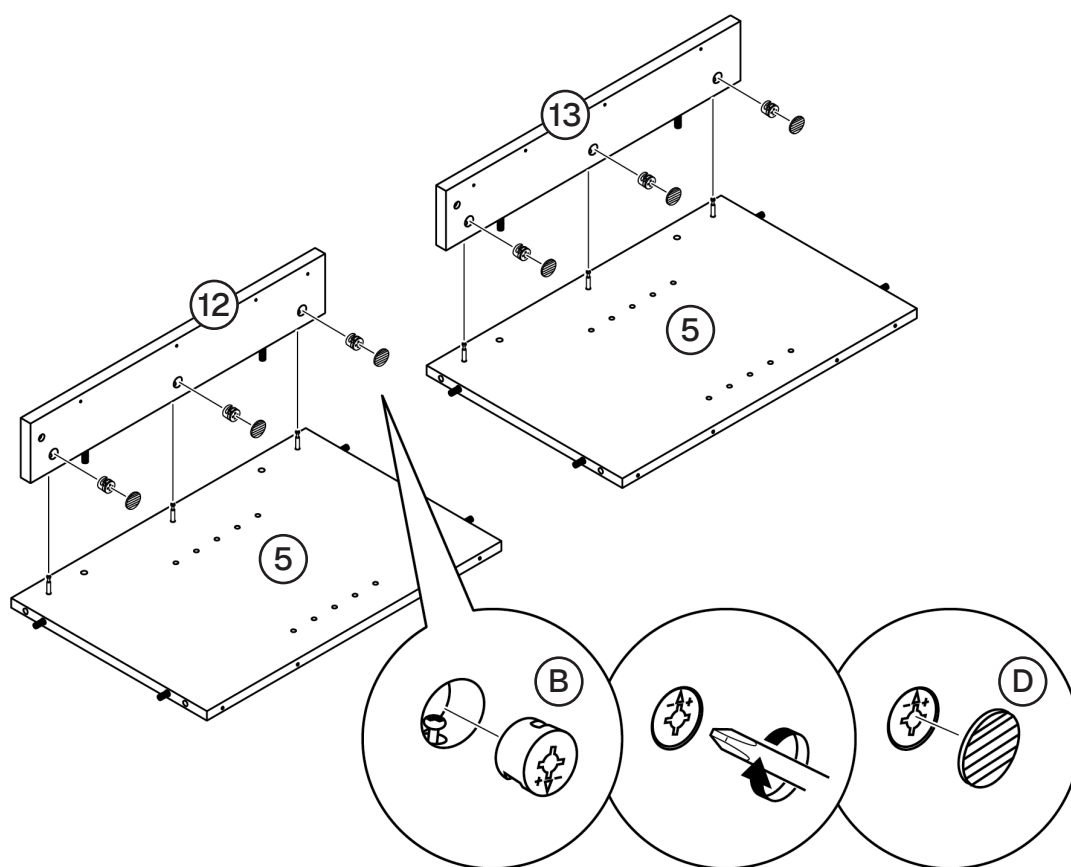


# 14

## Attaching decoration arch to crossbar



 N 2x

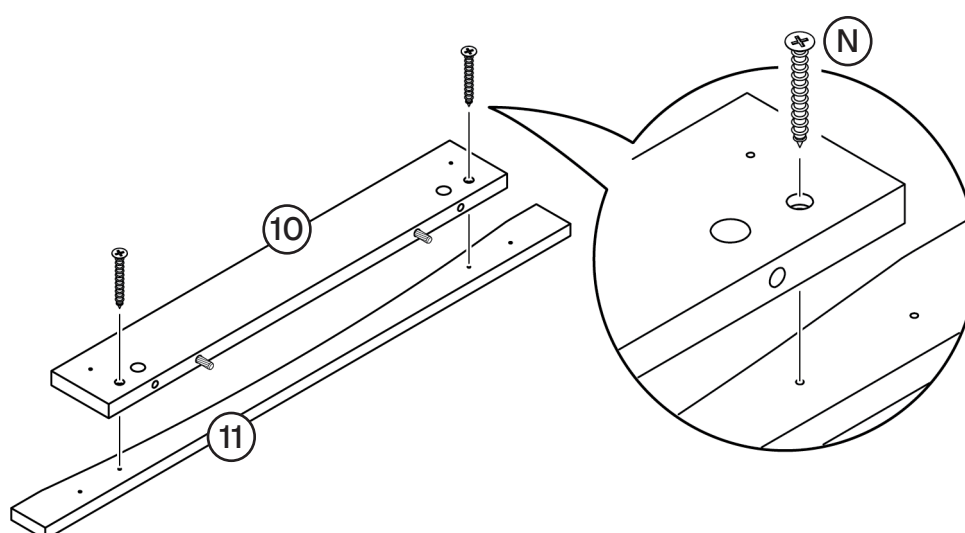


# 15


Assemble crossbar between surround panels



 O 4x



Q 2x

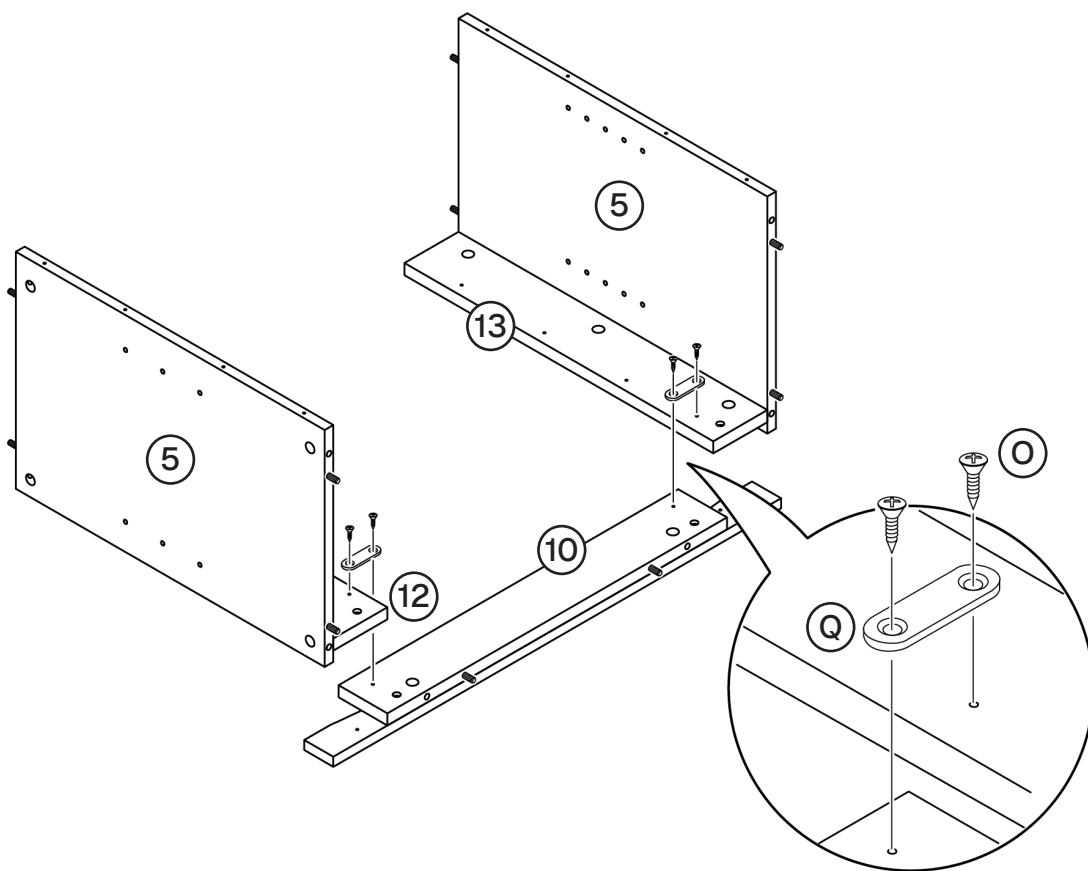 


# 16

Secure surround panels to decorative arch



 N 2x

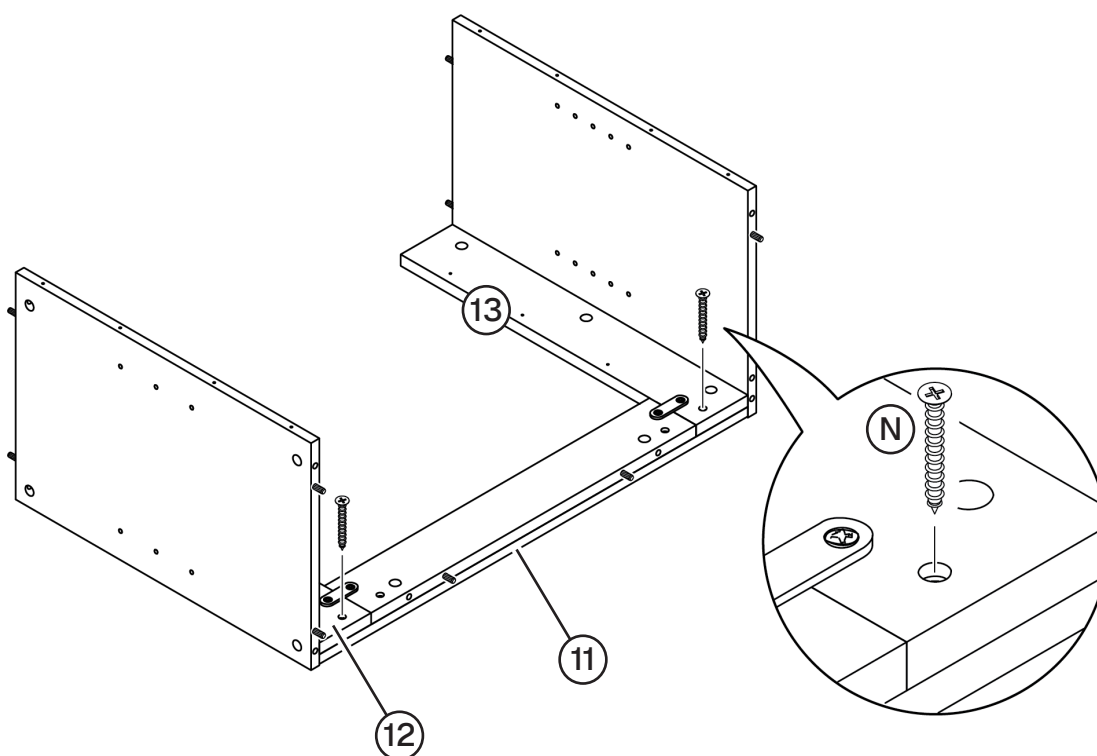

# 17

 
## Attaching fireplace mantel on bottom panel



B 4x



D 4x

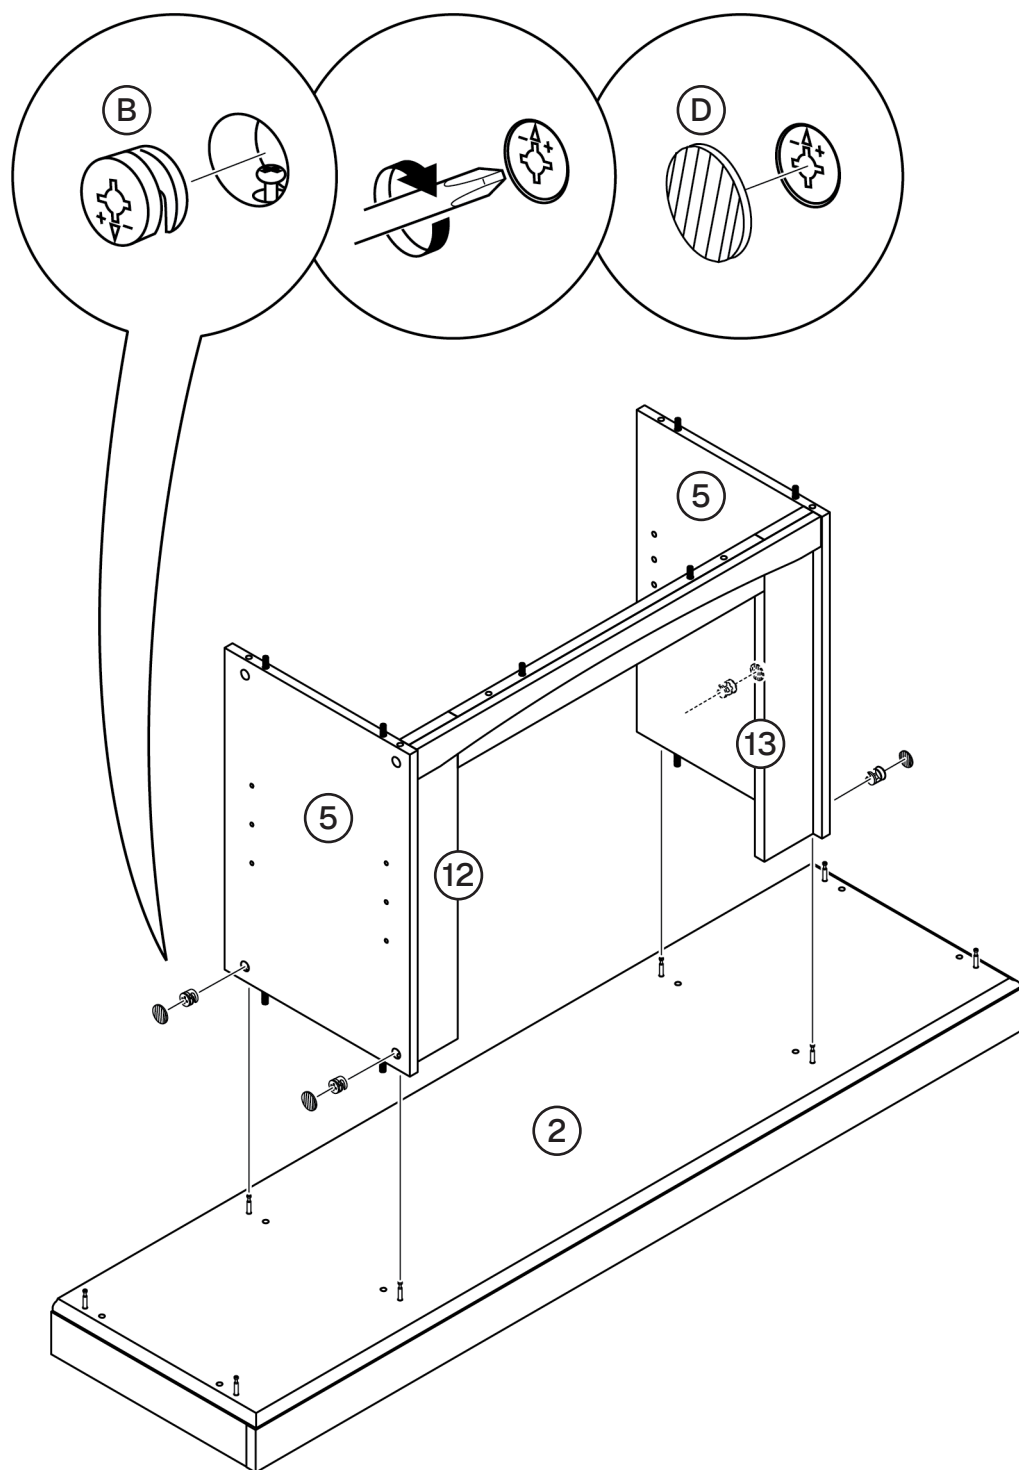


# 18

Bottom lateral panels



 C 8x

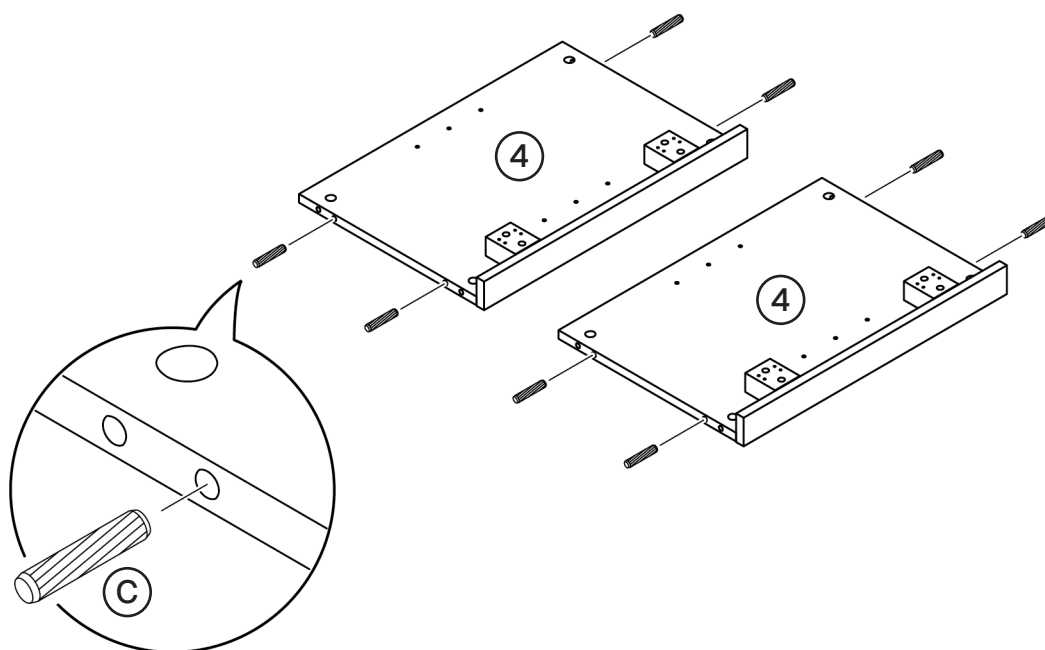

# 19

 
Attaching lateral panels



B 4x




D 4x

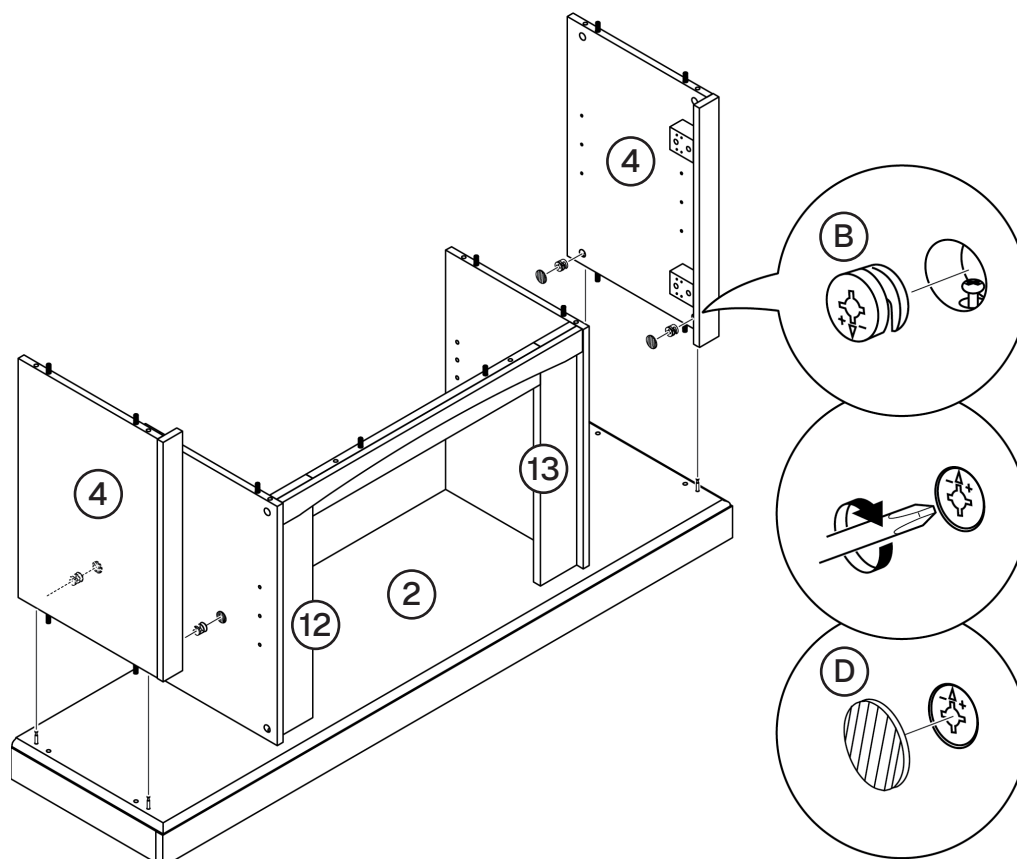

## 20 Upper Shelf Panel



 A 10x

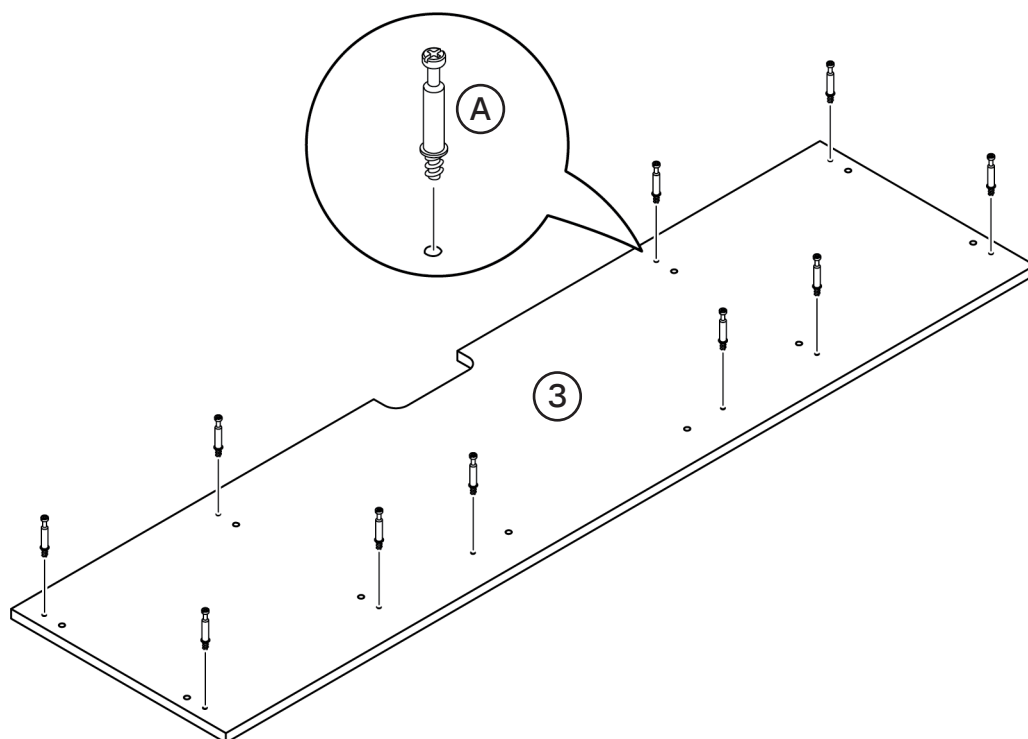


## 21 Attaching upper shelf panel



B 10x



 
D 10x

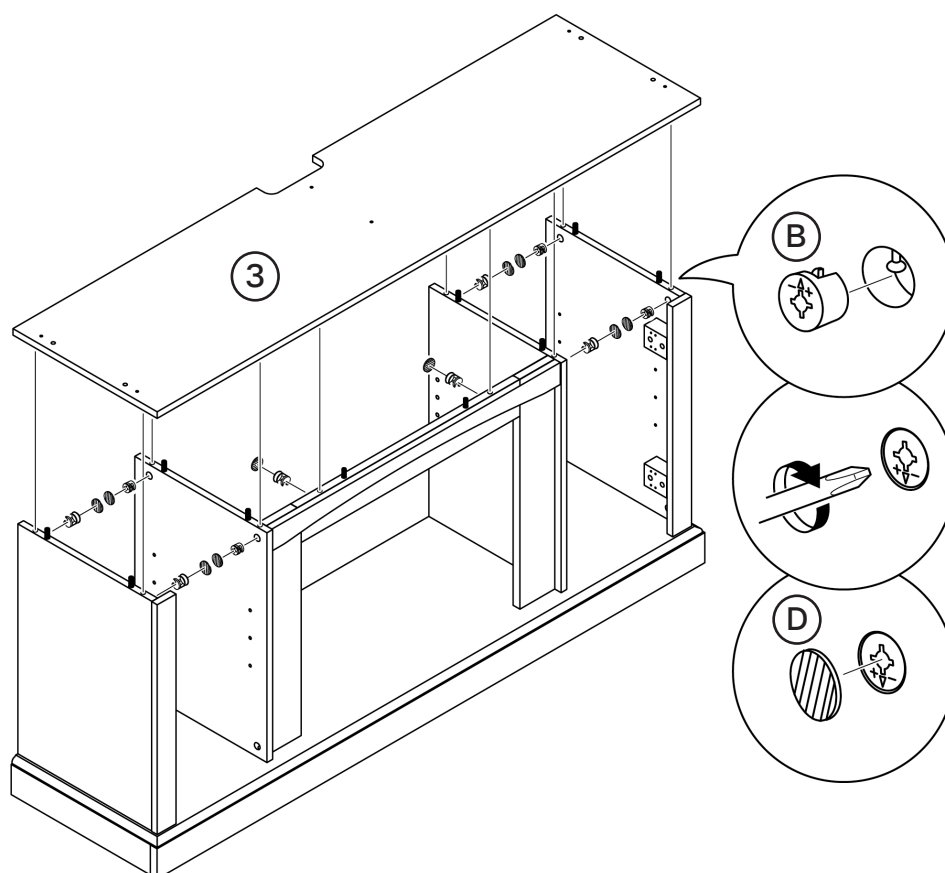

## 22 upper shelf panel



 
A 6x

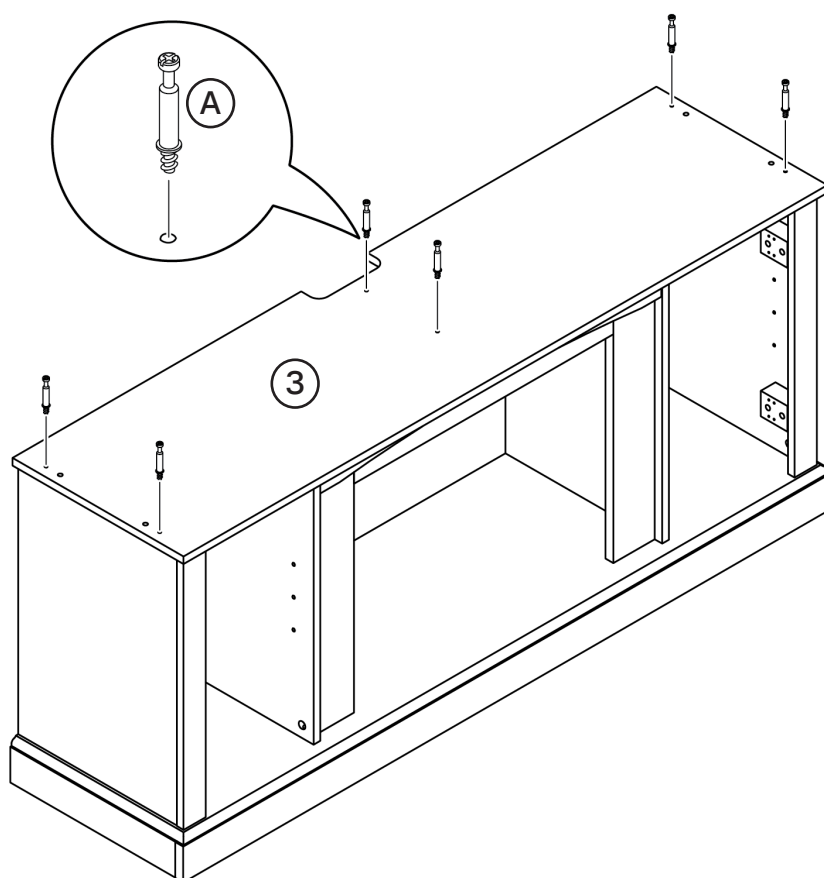


## 23 Upper support strips




 
A 4x

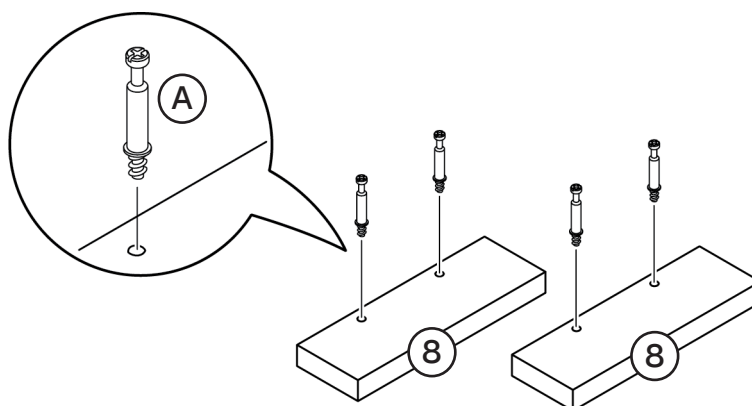

## 24 upper lateral panels

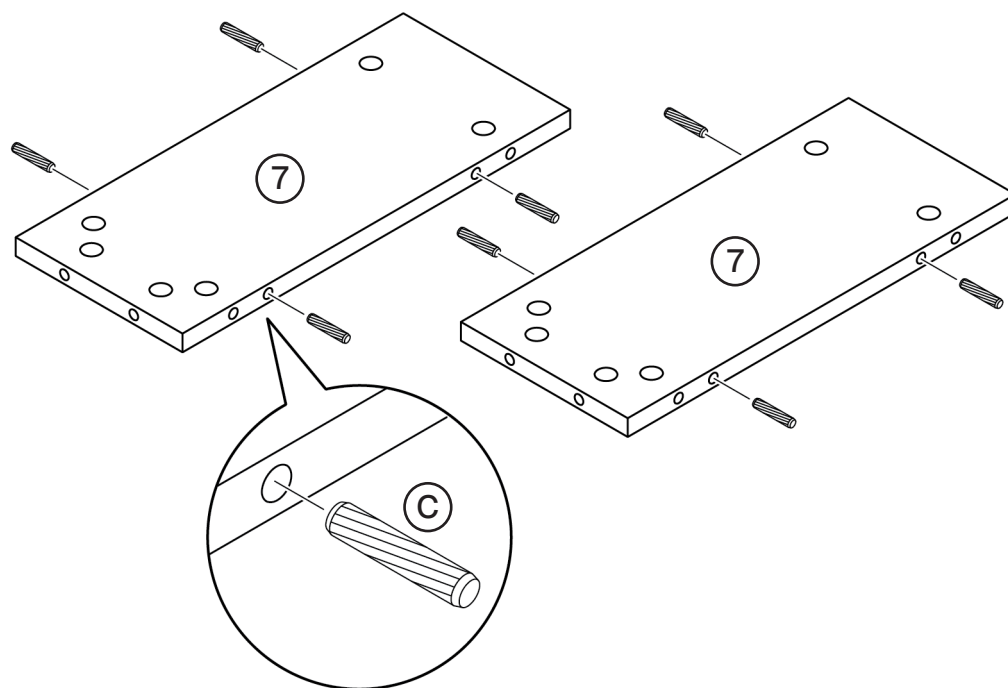 

## 25 Assembling upper support strips to upper lateral panels

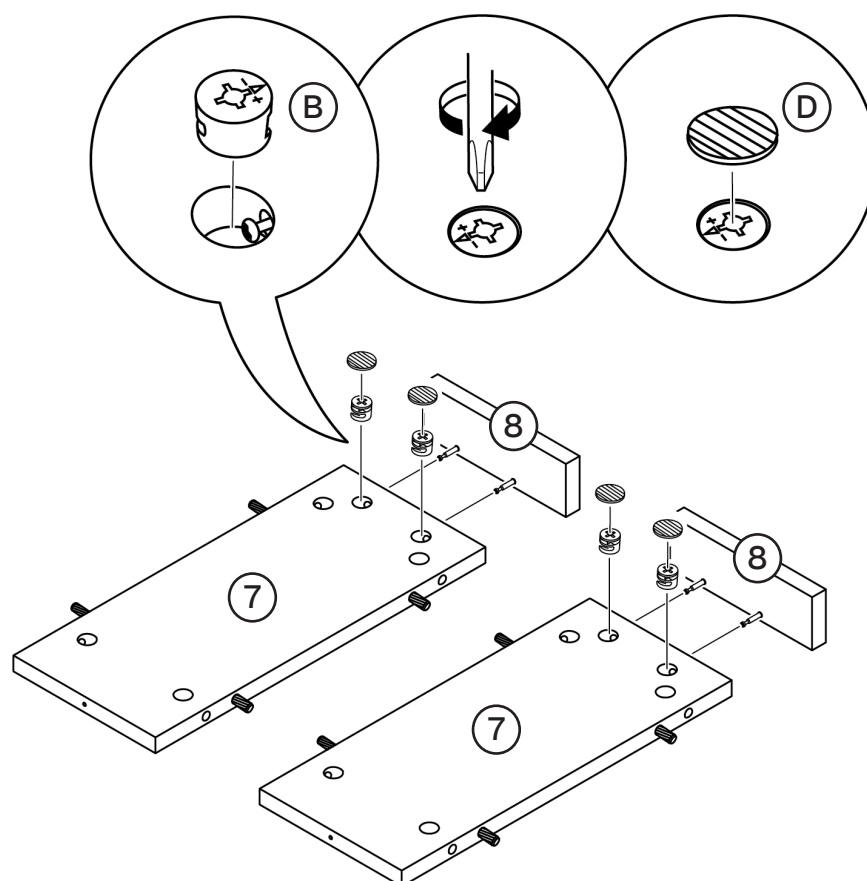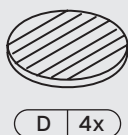  

# 26

 
Attaching upper lateral panels and upper medial panel



B 6x



D 6x

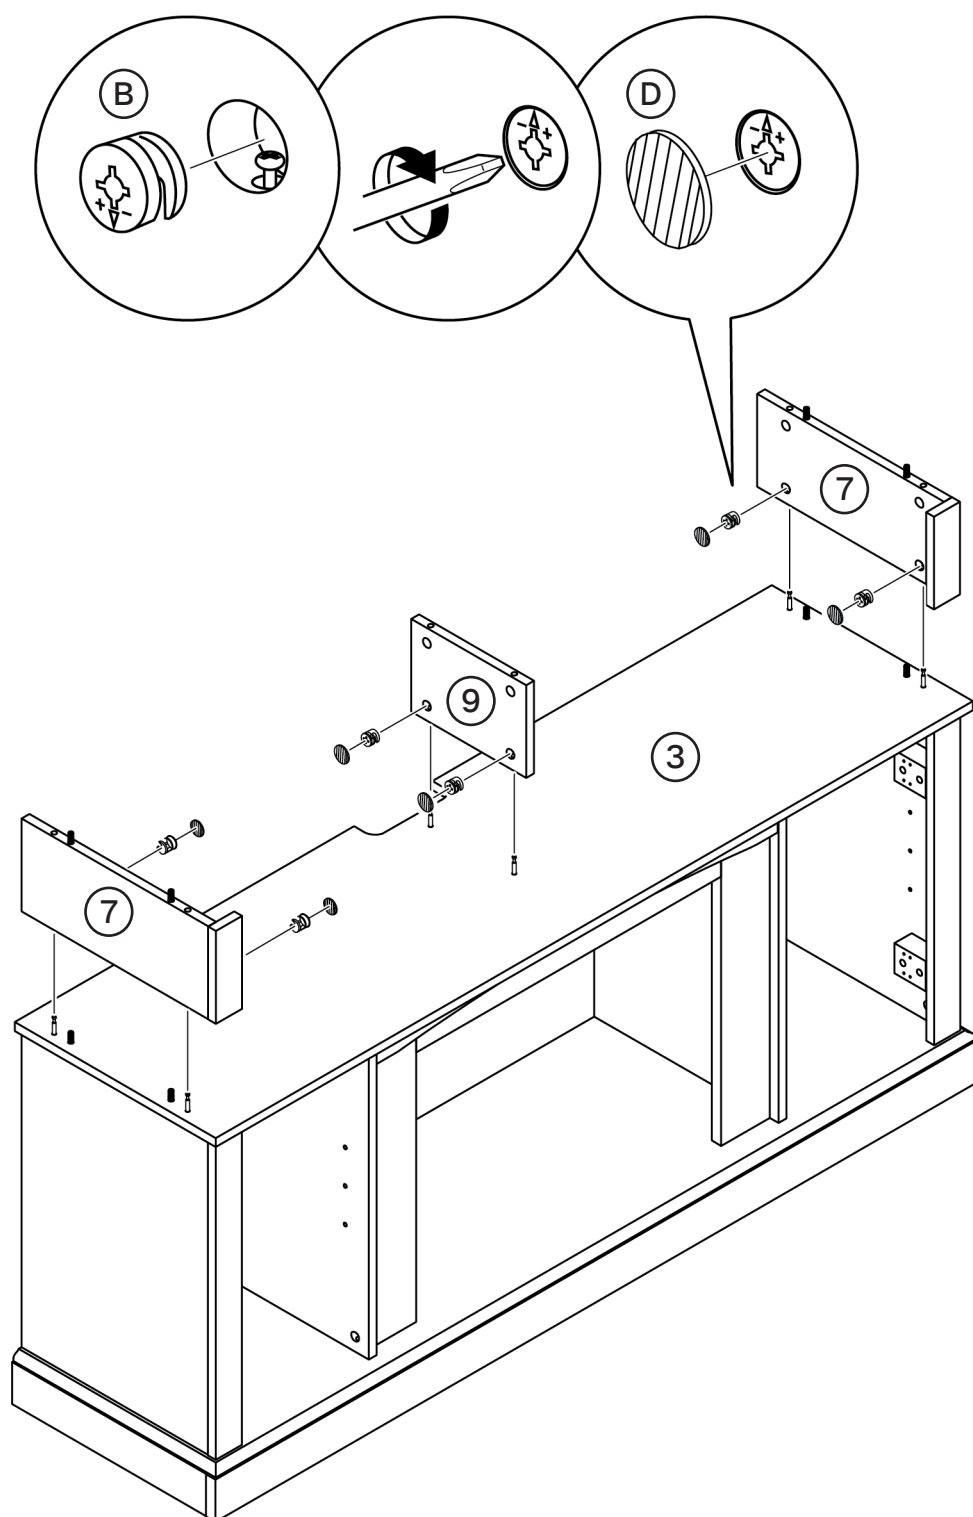

# 27

 
Attaching top panel





B 6x





D 6x

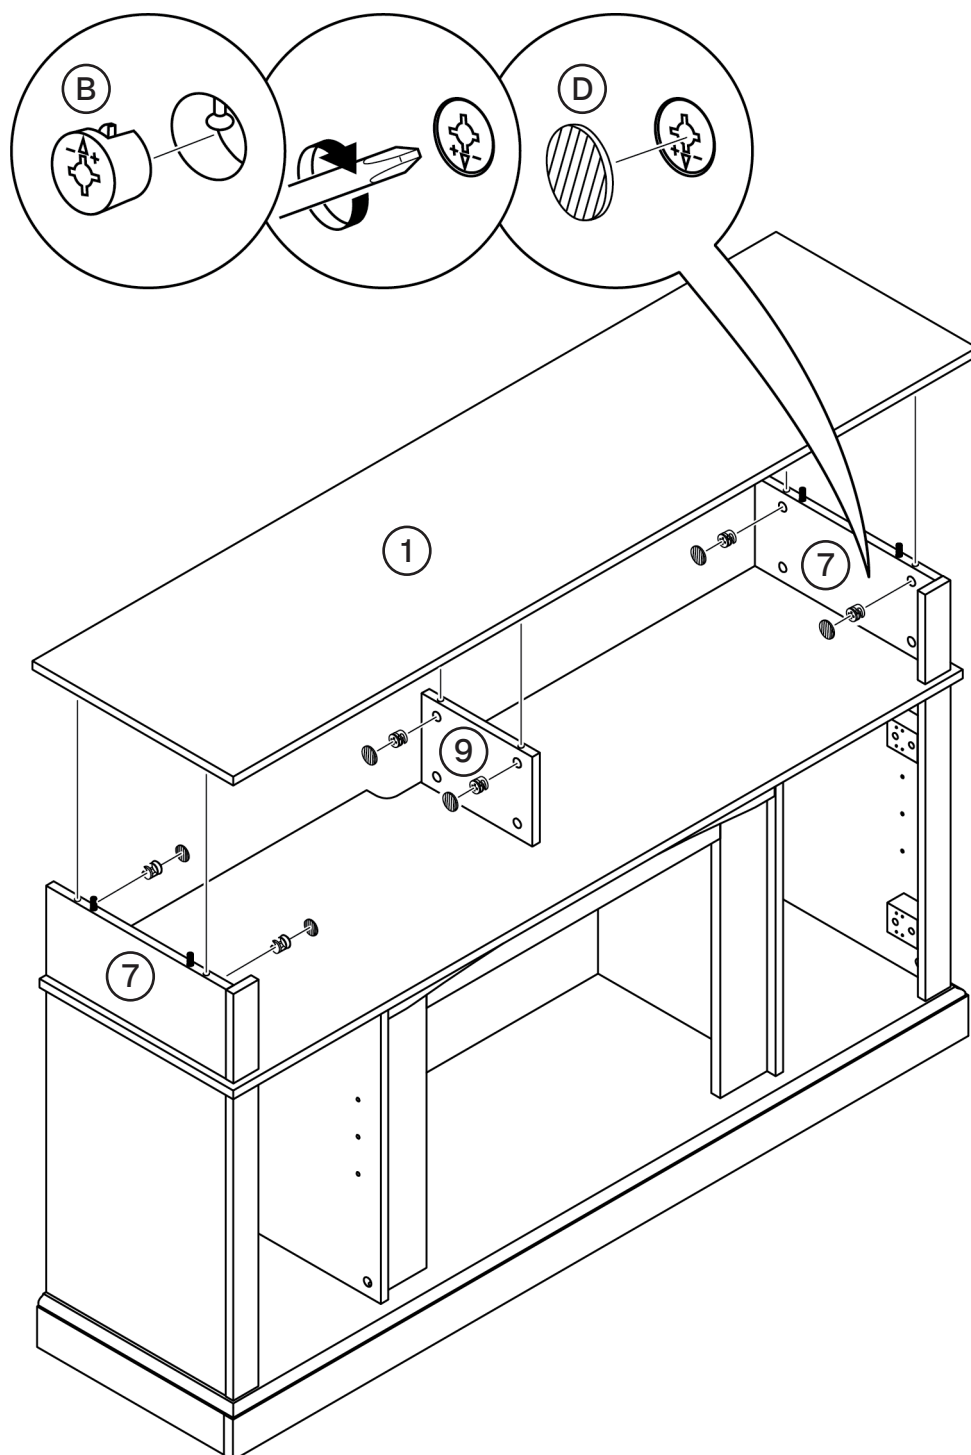

**A** TV Stand

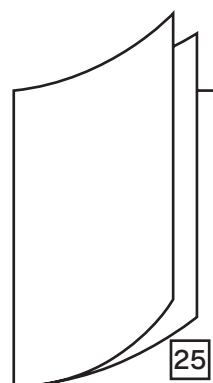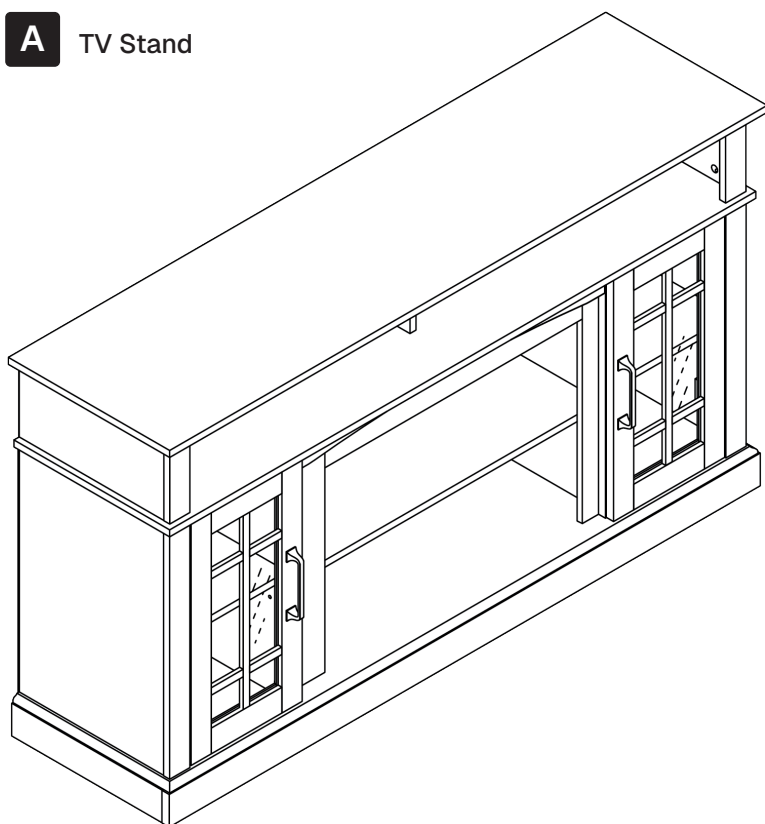  

**B** Fireplace TV Stand

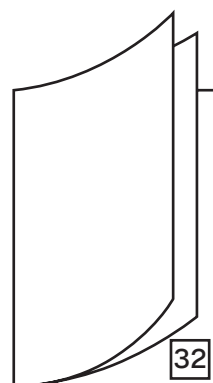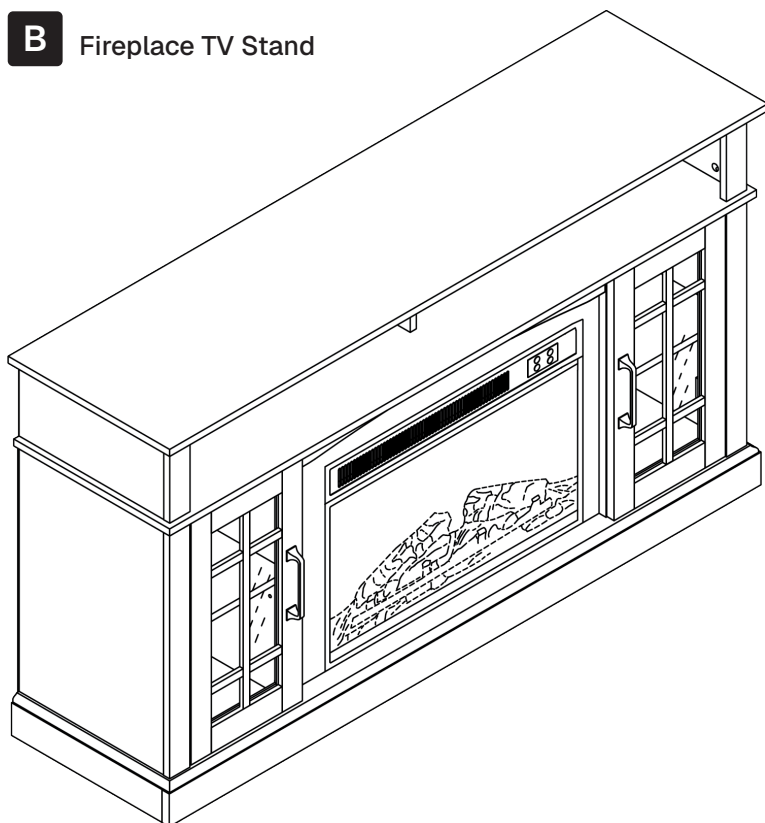  

# 28

 
## Attaching back panels



R 37x



★ Warning label on the back panel should be facing outward.

A

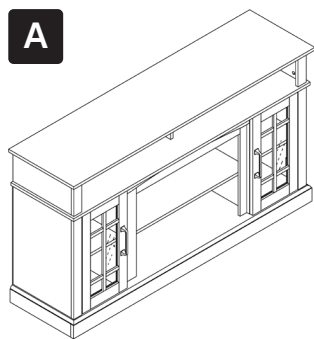

### ⚠ WARNING

  - Risk of death or serious injury. This surface must be placed against a fixed in place wall at least as tall as the television.

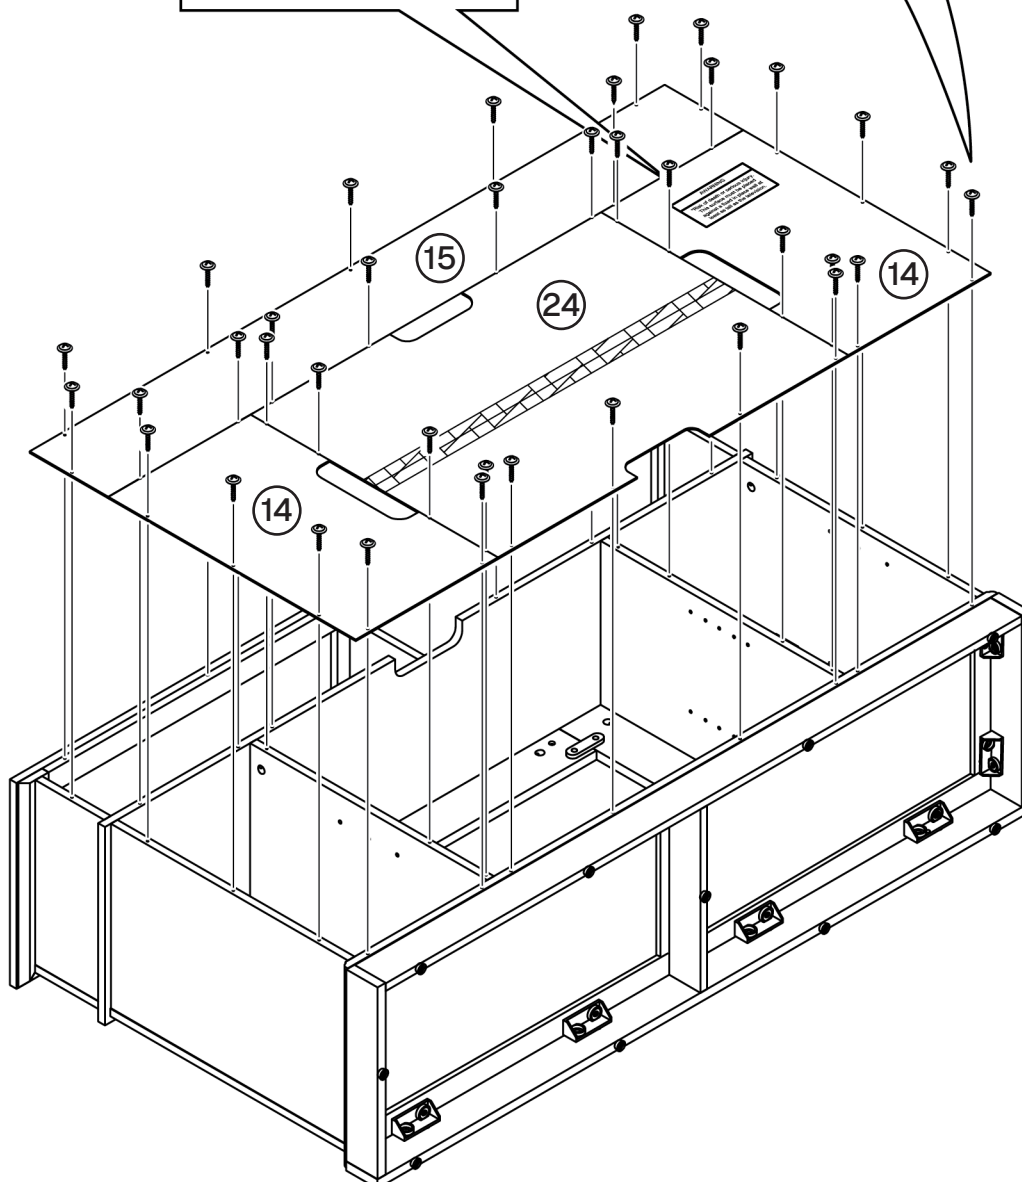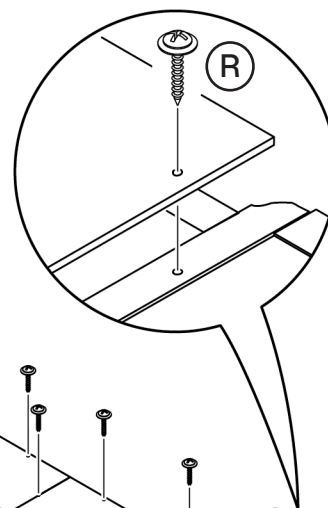


## 29

Inserting shelf pegs and putting on shelf storage panel




 M 12x

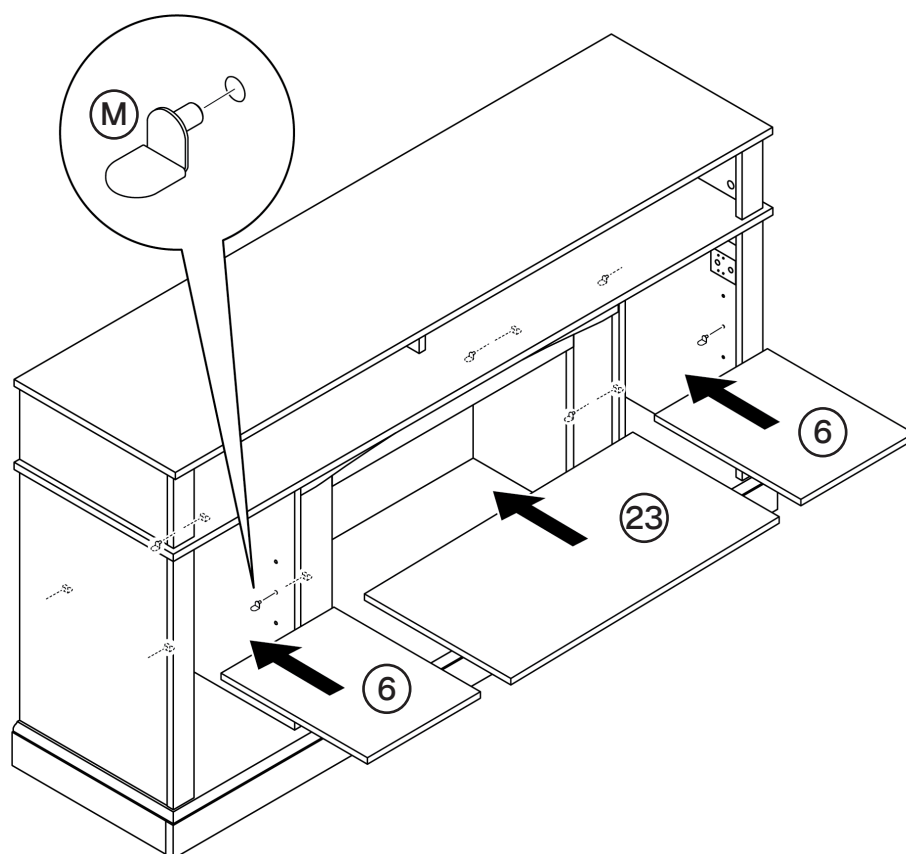

## 30

 
Attaching door hinges



G 4x



 H 8x

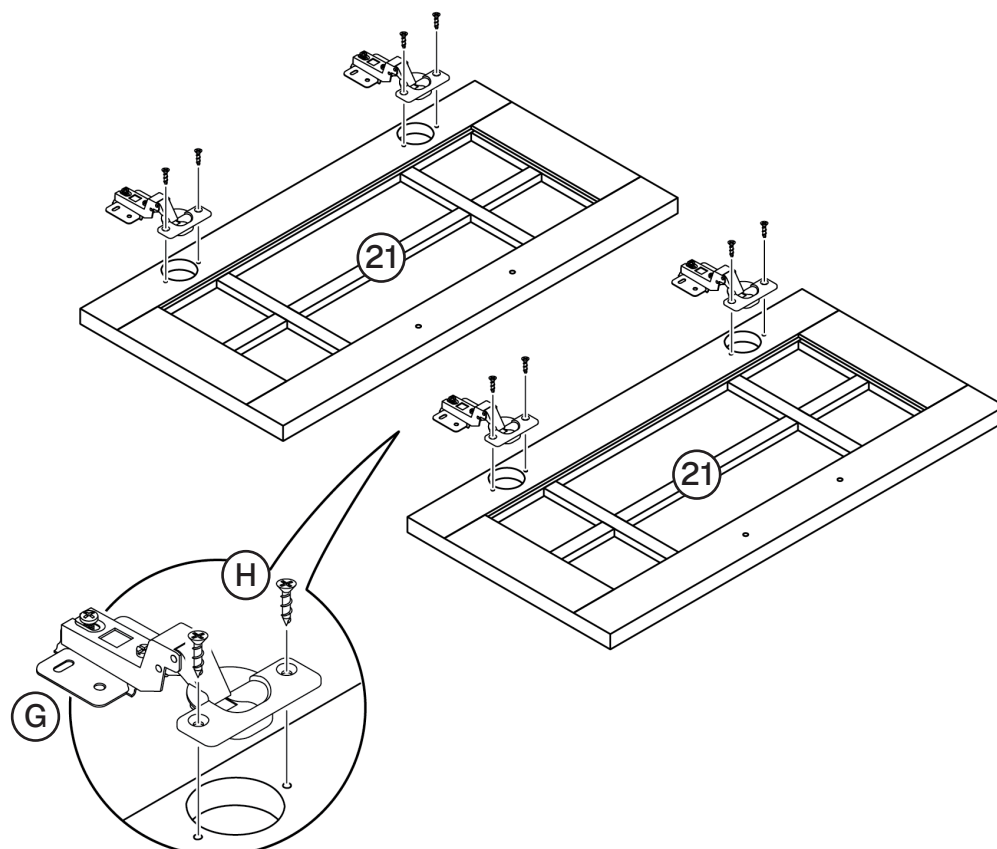

# 31

 
## Attaching door handles



E 2x



F 4x

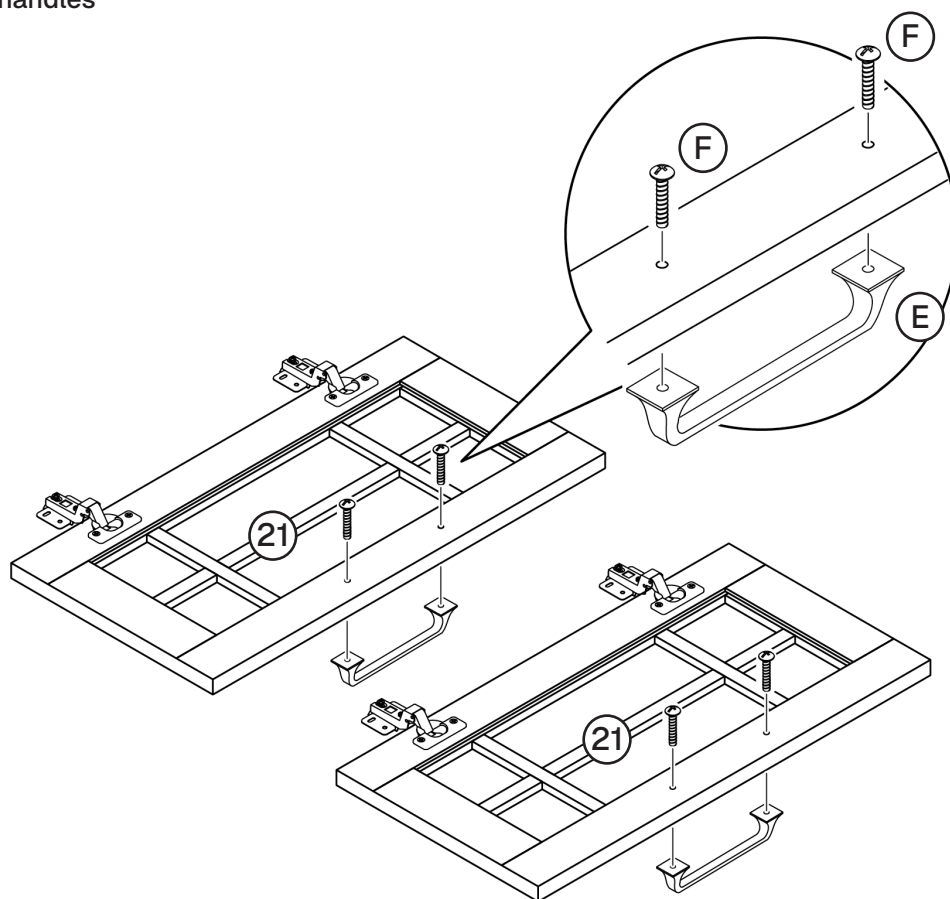


# 32





## Attaching cabinet doors




 
H 16x

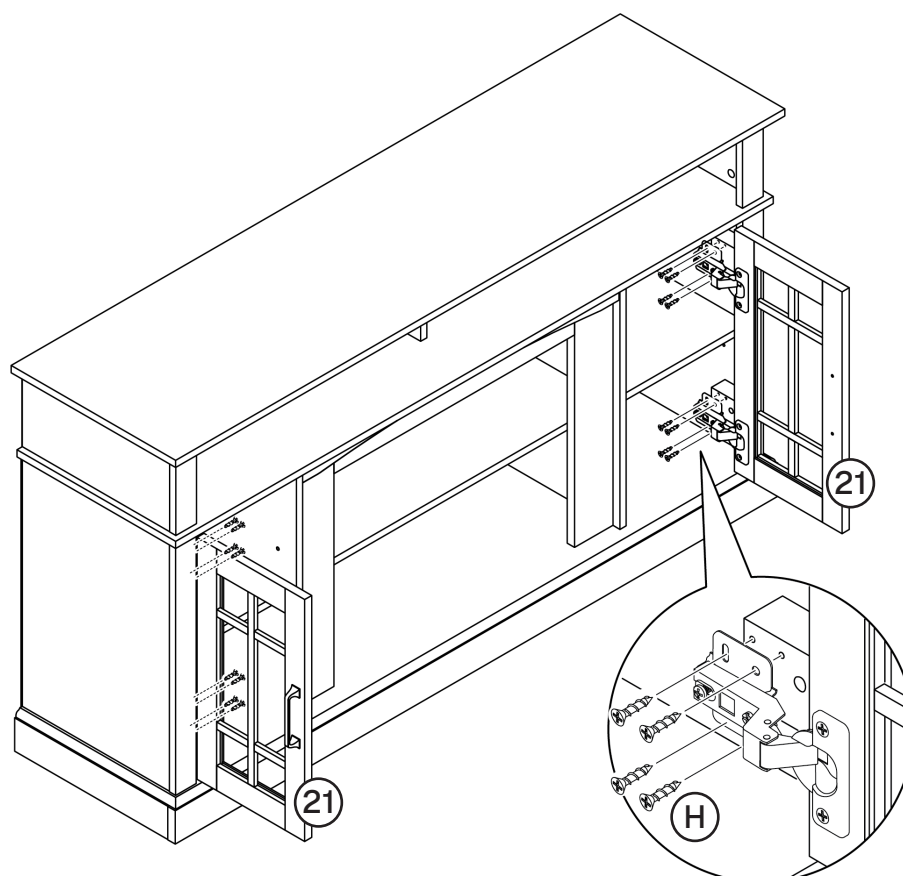





*i*

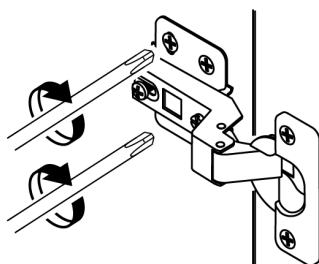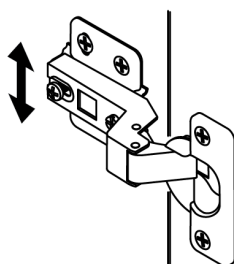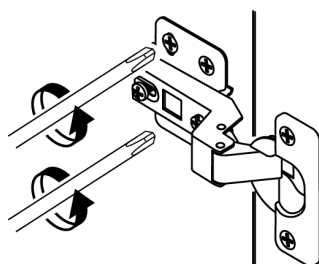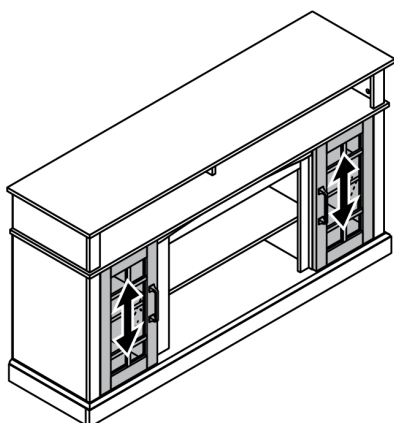    

  Loosen the screws on the mounting plate to adjust the door **up and down**.

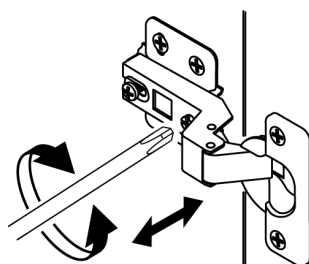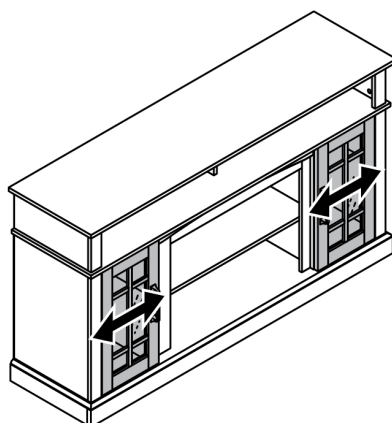

    Adjust the screw on the hinge to micro-adjust the door from **side to side**.

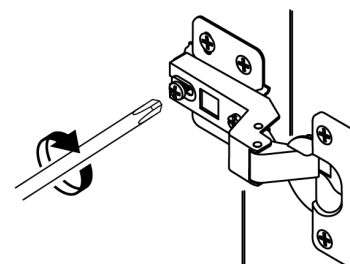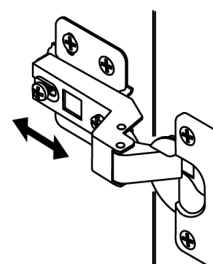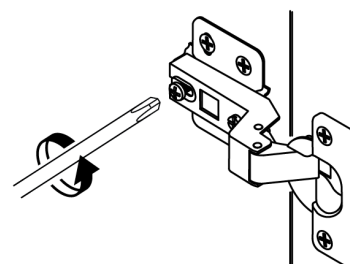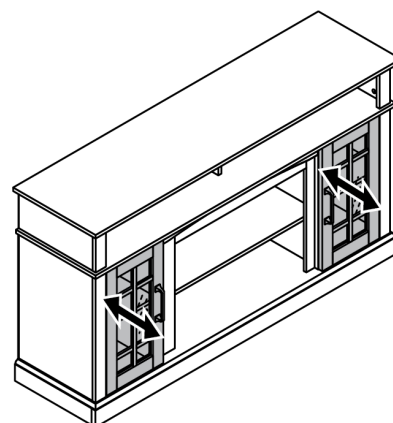

Loosen the screws on the hinge arm to adjust the door **in and out**.

# 33

 
Attaching anti-tipping straps



S 2x



T 2x

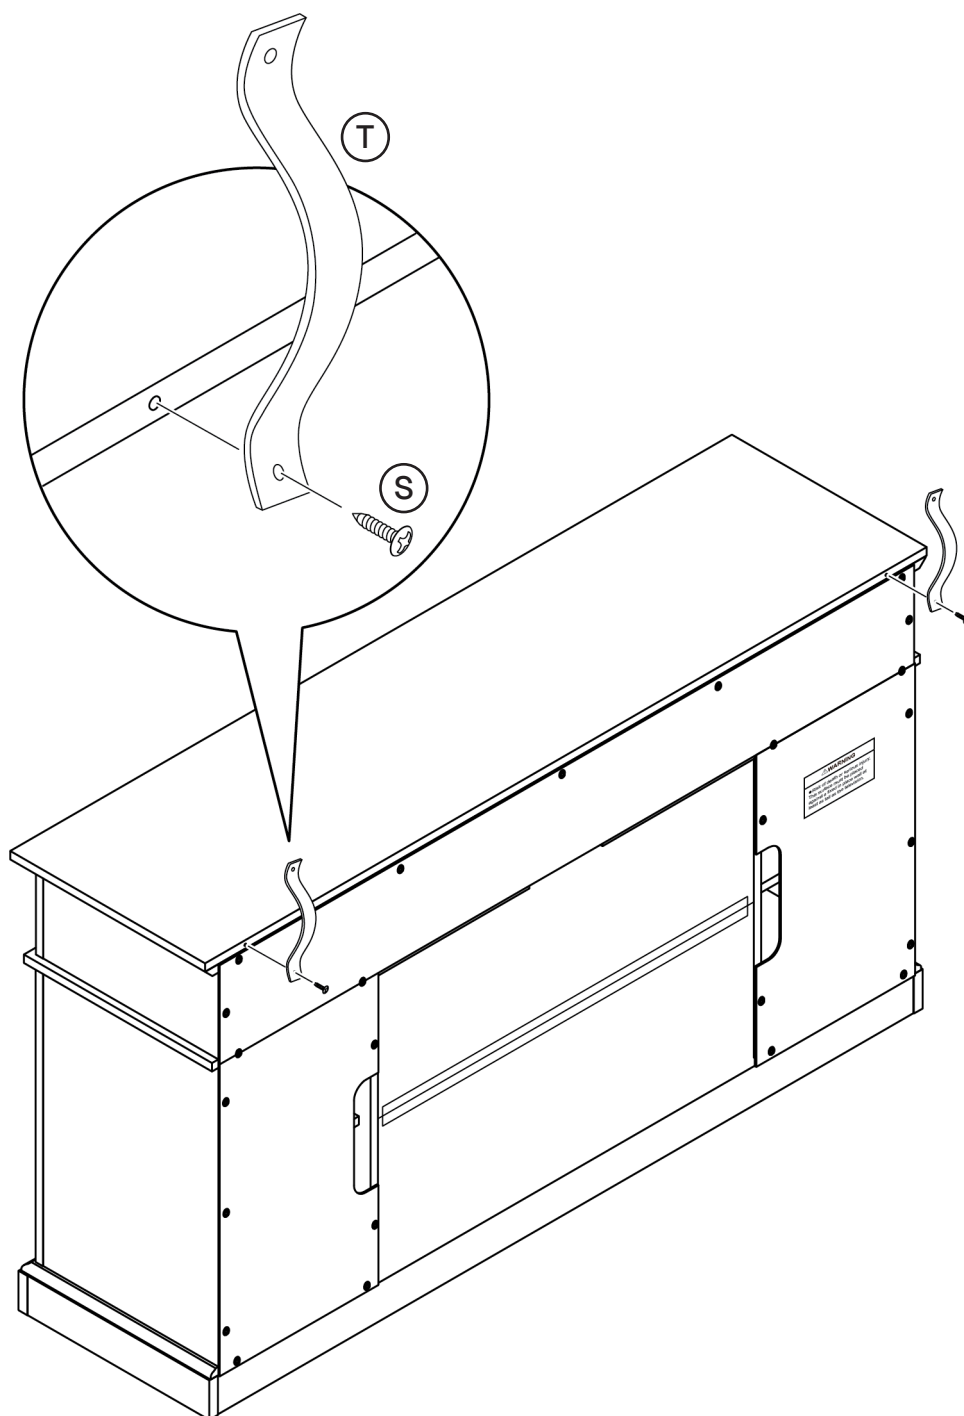




# 34 Affixing the TV stand to a wall



V 2x



   U 2x

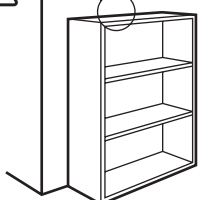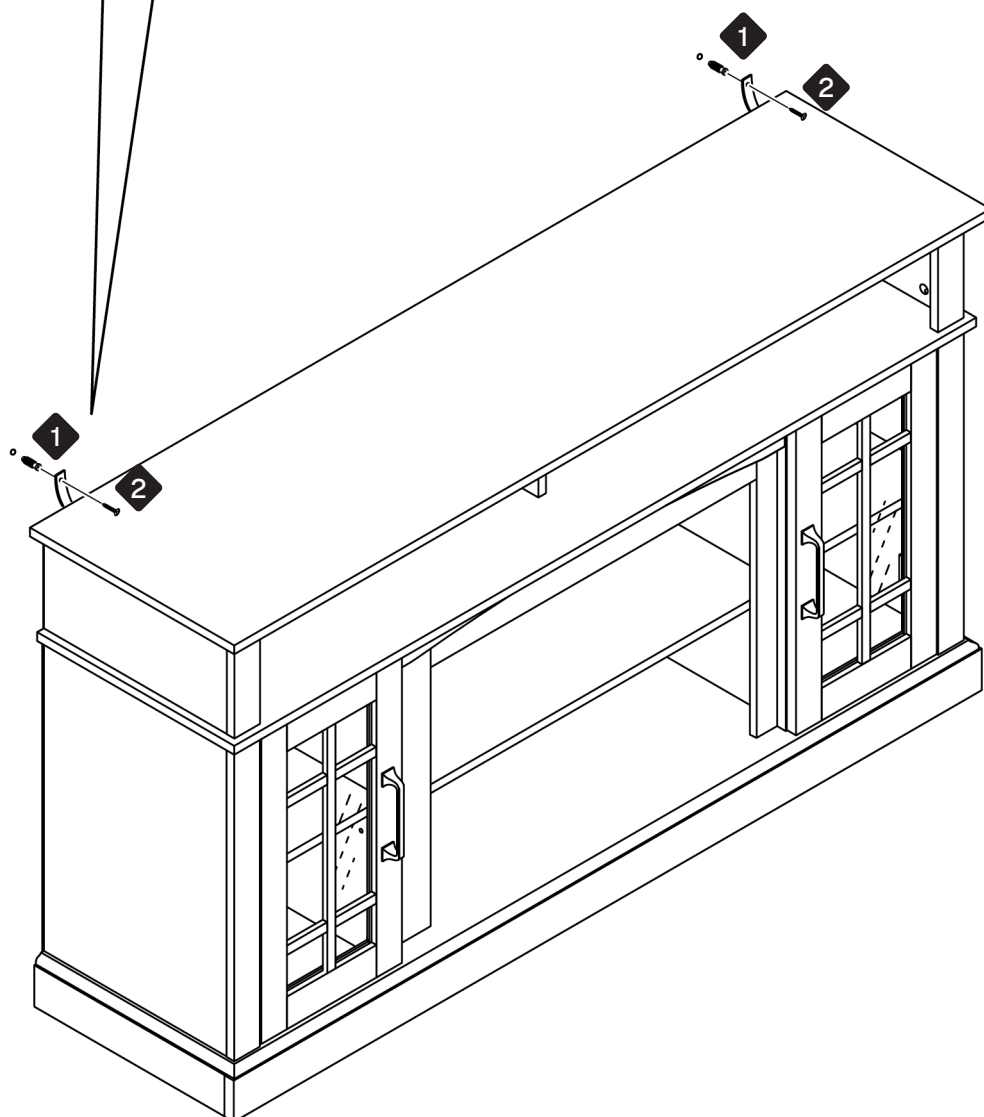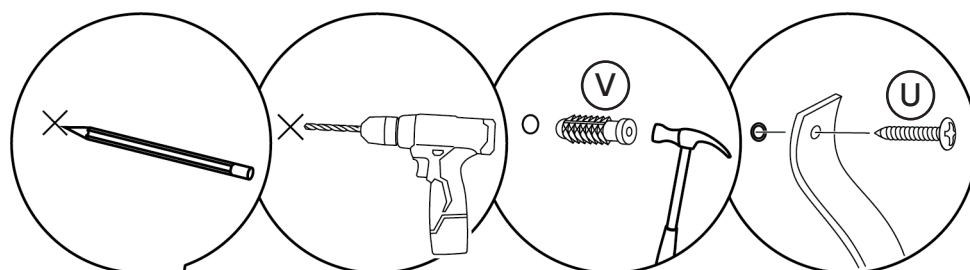


Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.


# 35
 
## Attaching garnishing strip

★ TV or other objects should be placed behind the wood trim to prevent them from falling off.

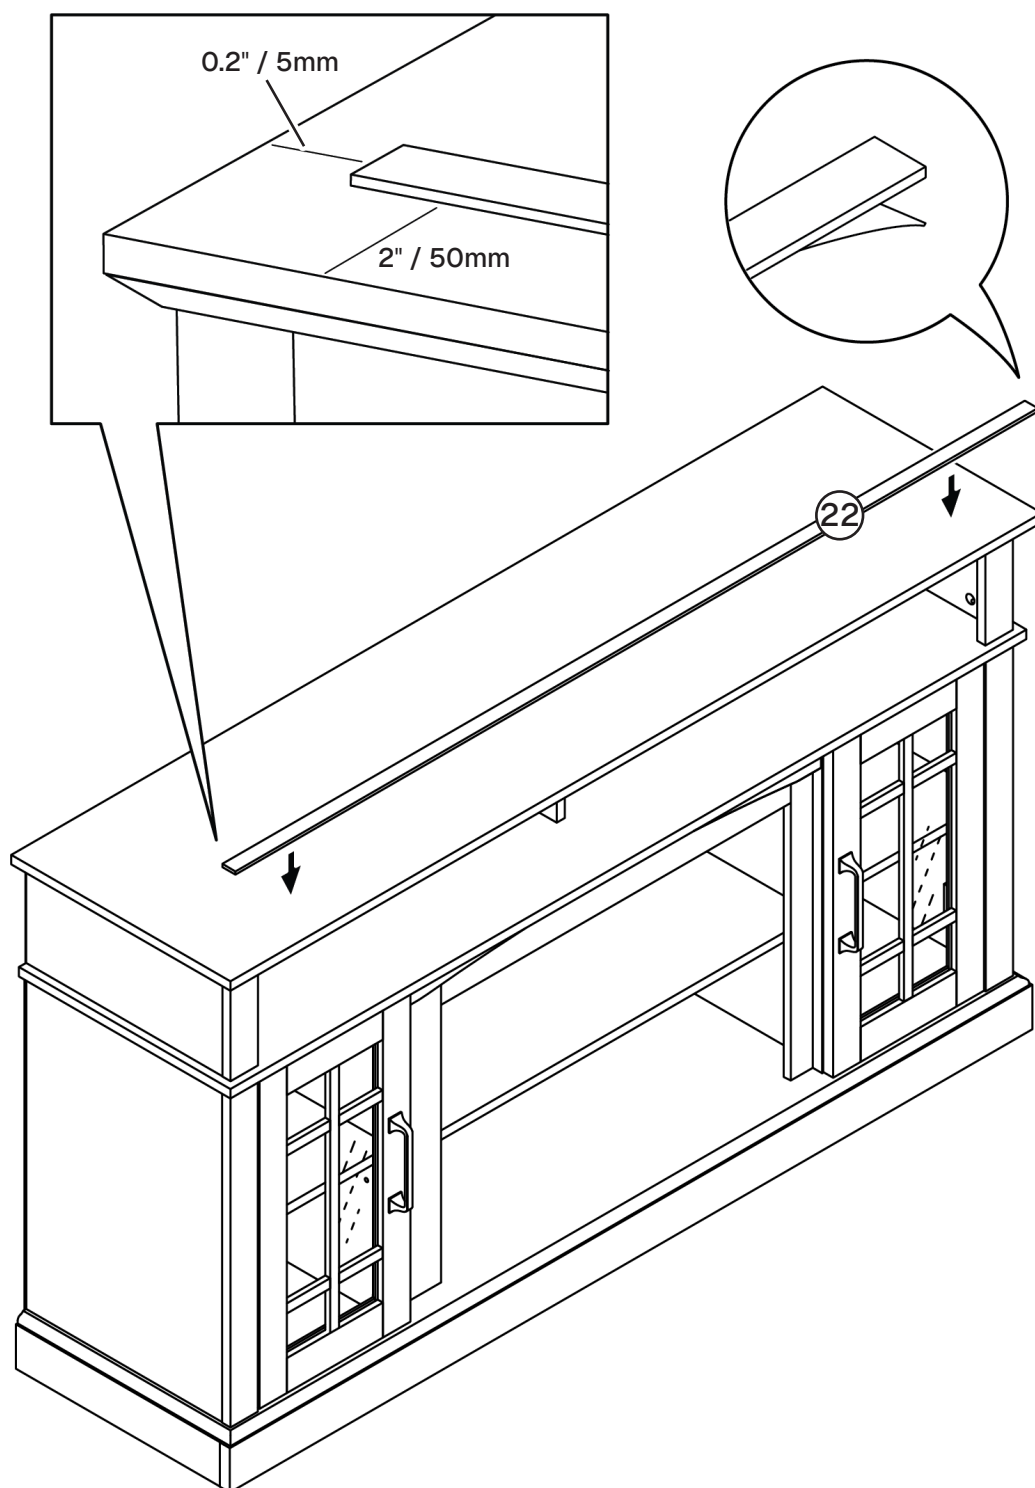

# 28 Attaching back panels

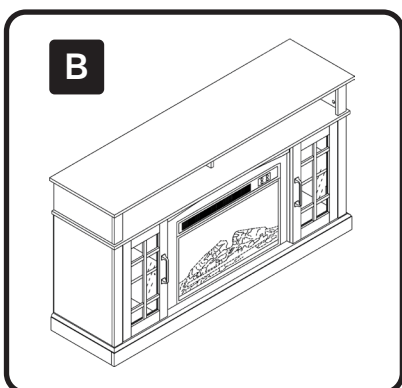 



Ø3 x 15

R 33x


★ Warning label on the back panel should be facing outward.

## ⚠ WARNING

  
● Risk of death or serious injury.  
This surface must be placed against a fixed in place wall at least as tall as the television.

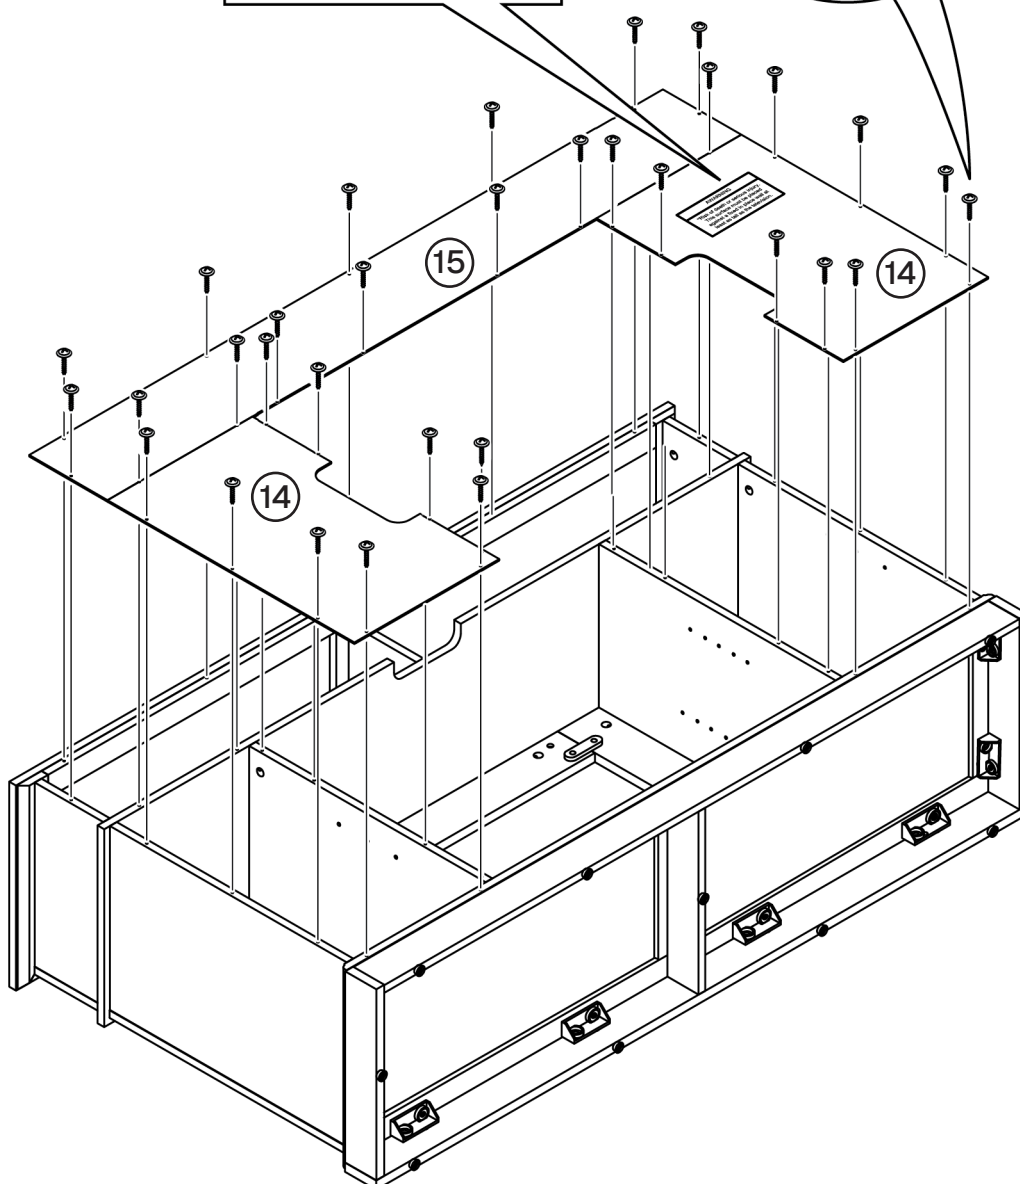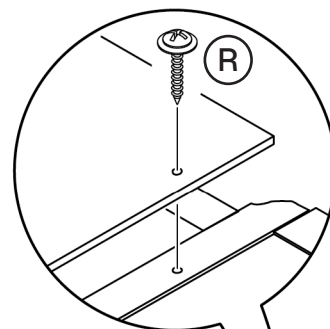

## 29 Inserting shelf pegs and putting on shelf storage panel

 

M 8x

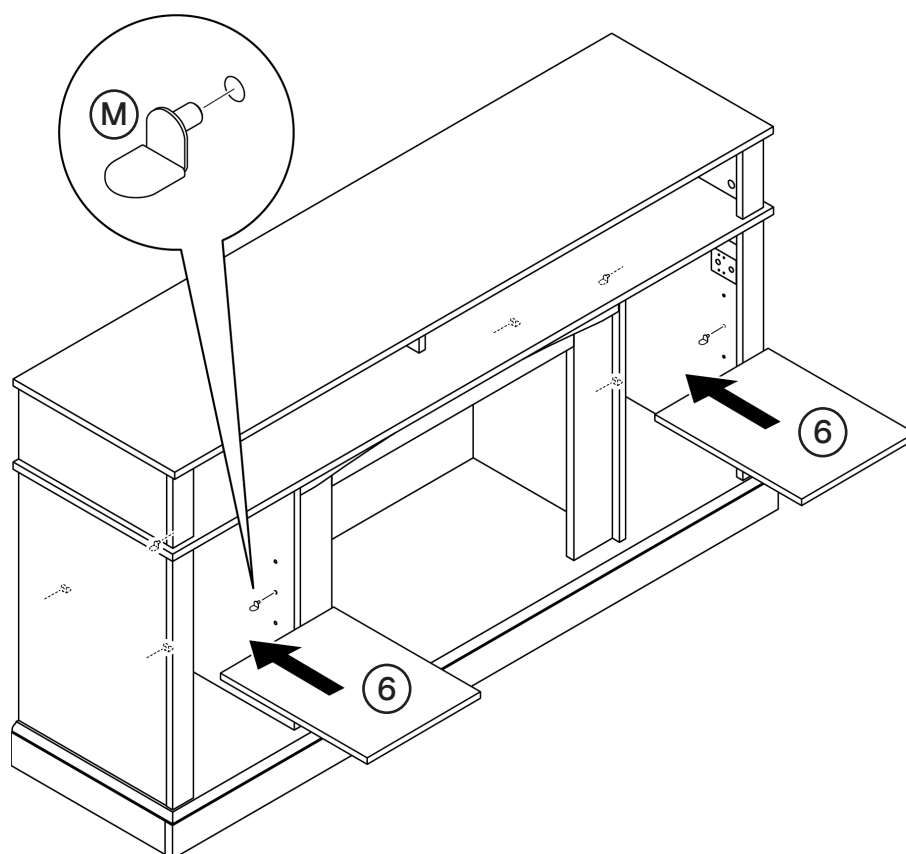 


## 30 Attaching door hinges



G 4x



 H 8x

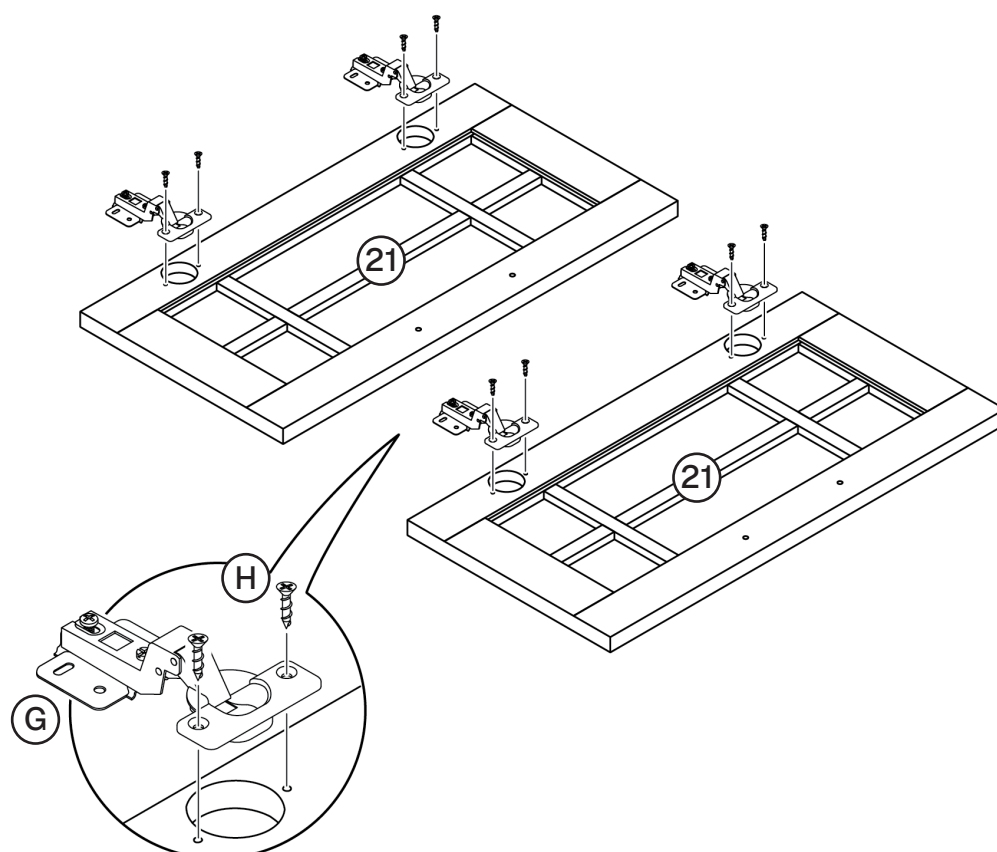


## 31 Attaching door handles



E 2x



 
F 4x

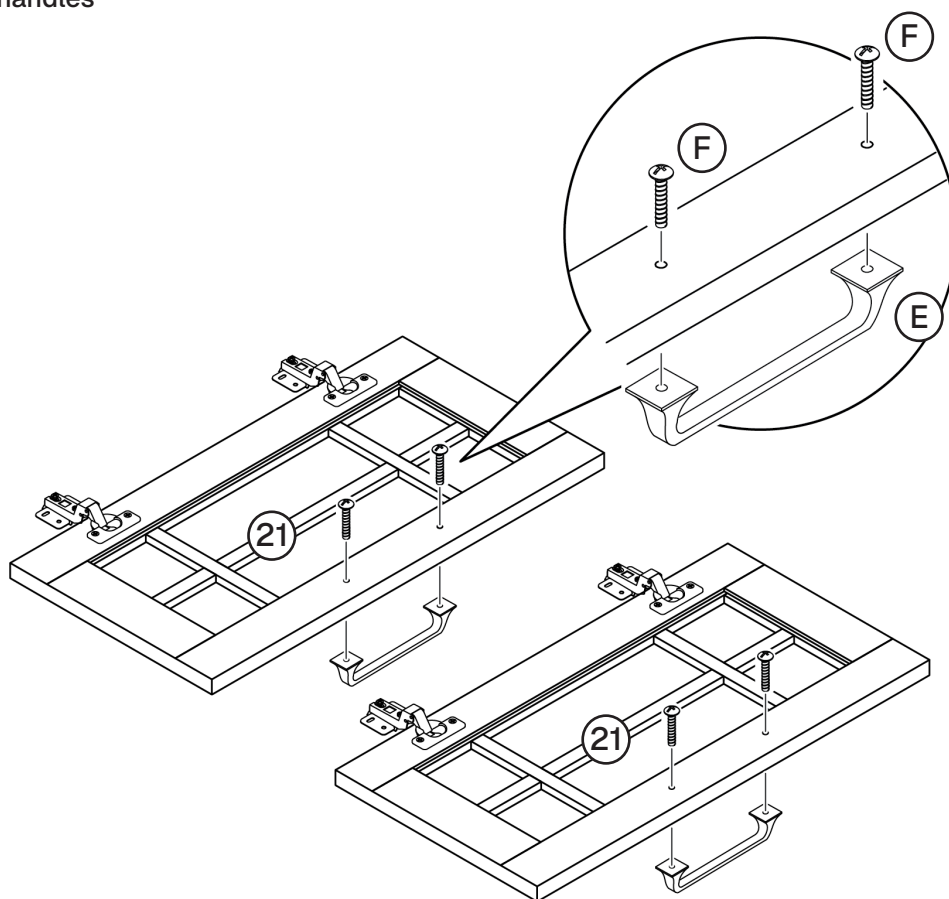





## 32 Attaching cabinet doors




 
H 16x

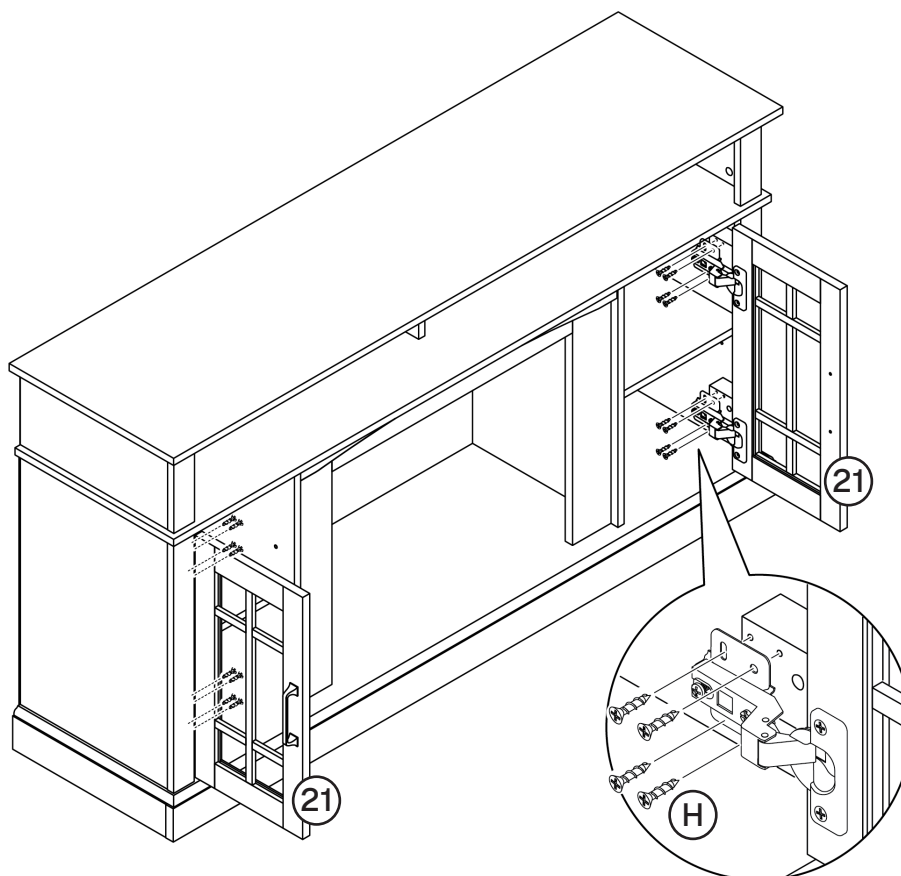





*i*

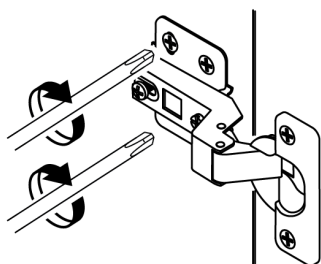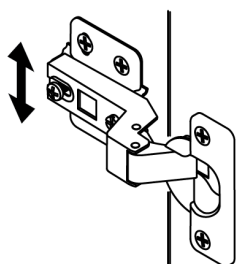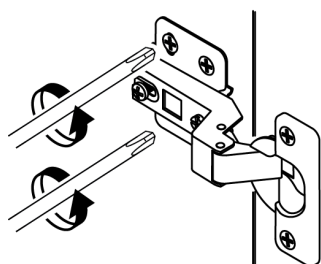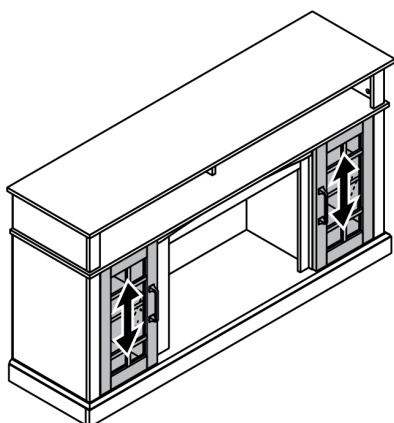    

  Loosen the screws on the mounting plate to adjust the door **up and down**.

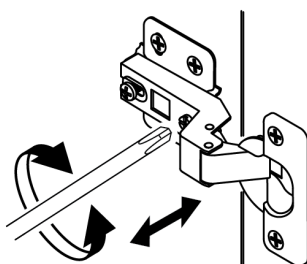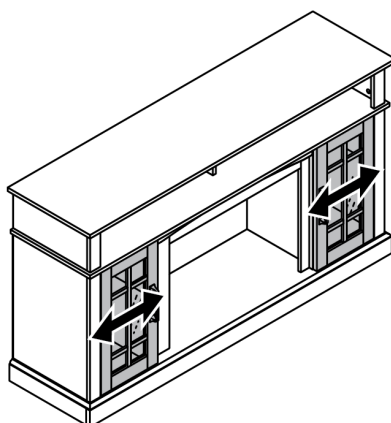

    Adjust the screw on the hinge to micro-adjust the door from **side to side**.

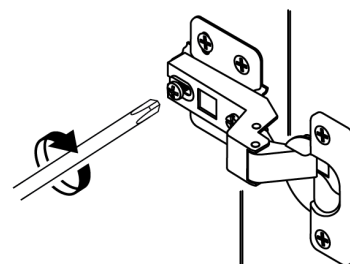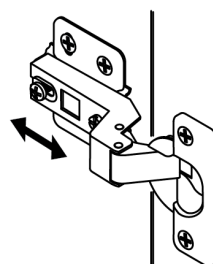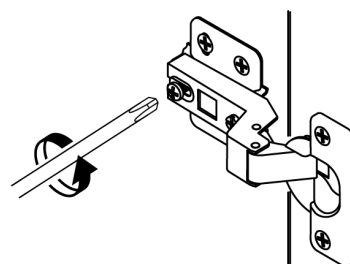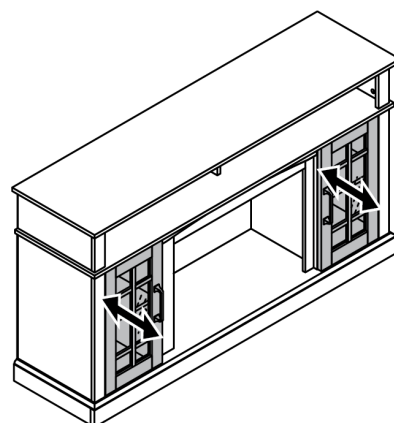

Loosen the screws on the hinge arm to adjust the door **in and out**.

# 33

 
Attaching anti-tipping straps



S 2x



T 2x

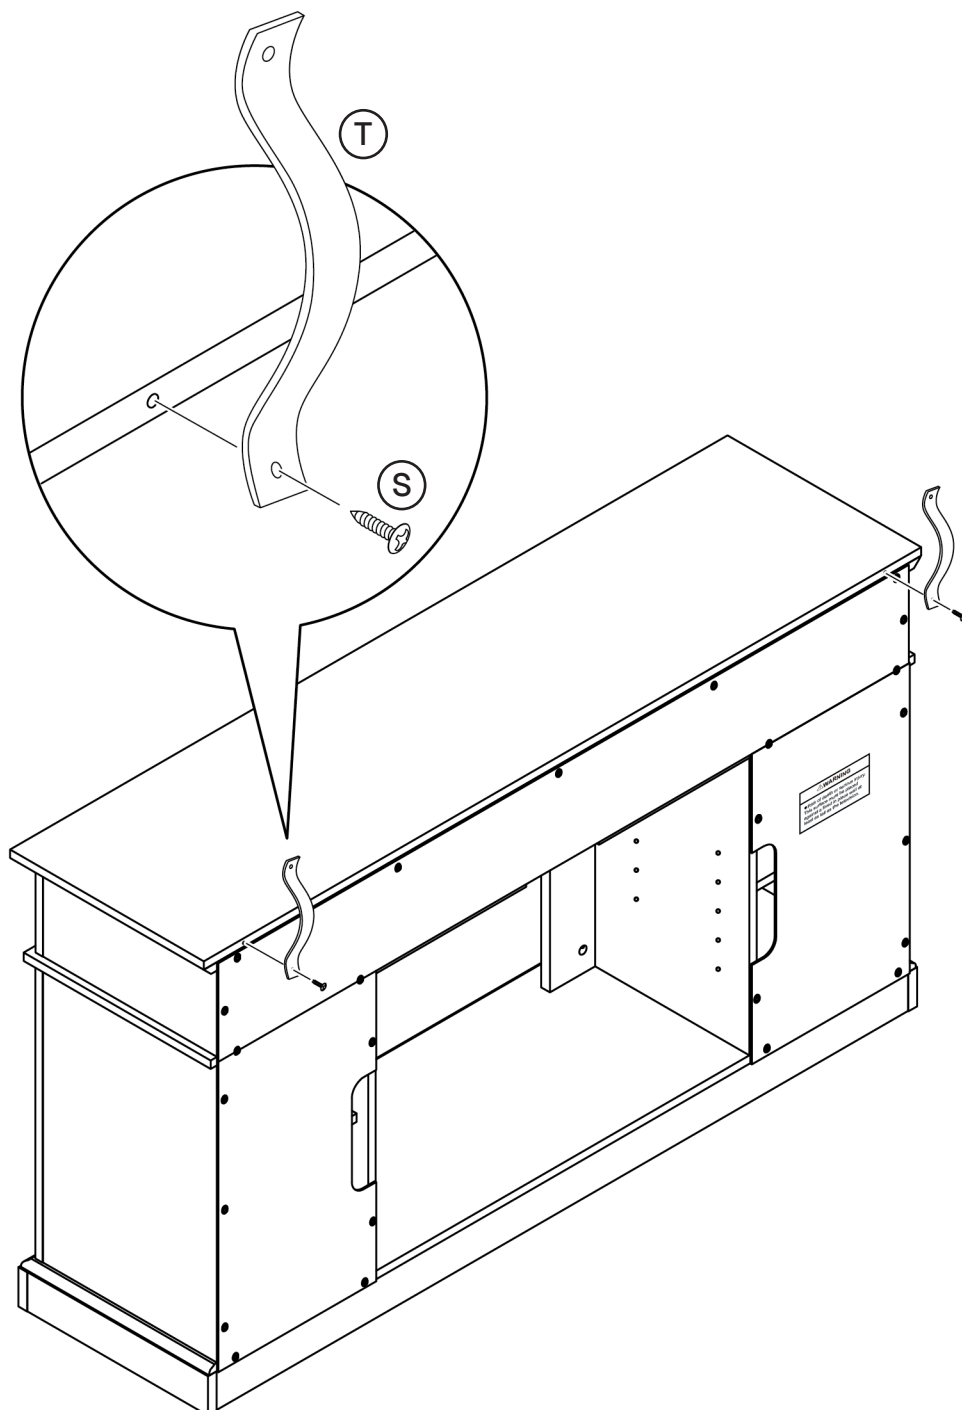


# 34

## Installing fireplace heater

★ Careful when handling glass front panel to prevent injury or damage.

★ Do not attempt to install the fireplace heater from the front of the mantel. It will not fit.

 ★ Refer to the user's manual provided with the fireplace for exact instruction.

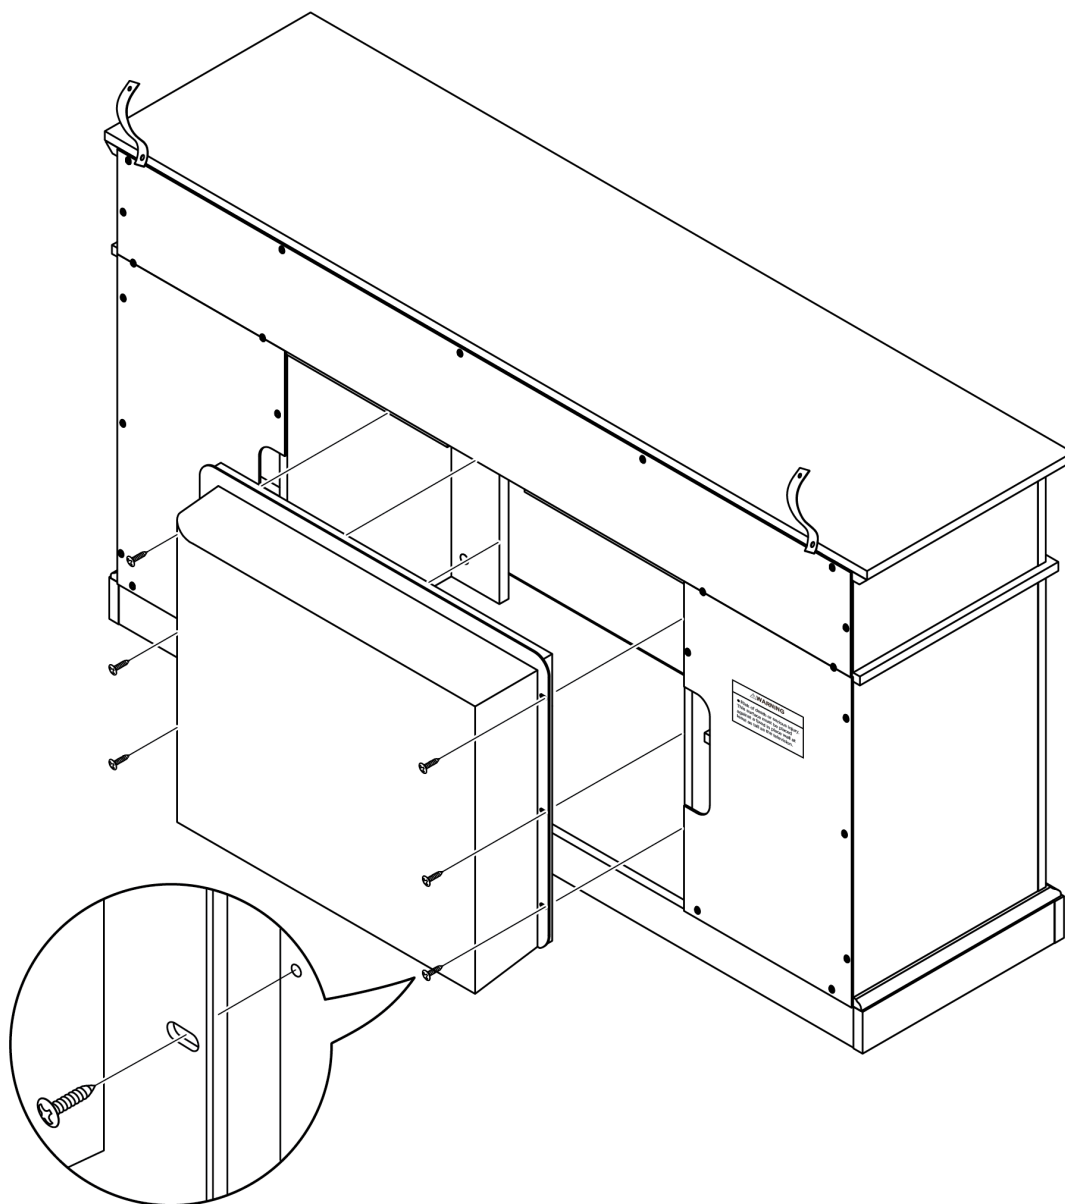

Screws are packed in the heater package.

# 35

 
 
 
## Affixing the TV stand to a wall



V 2x



U 2x

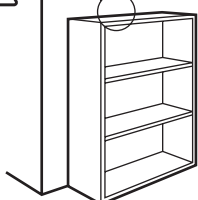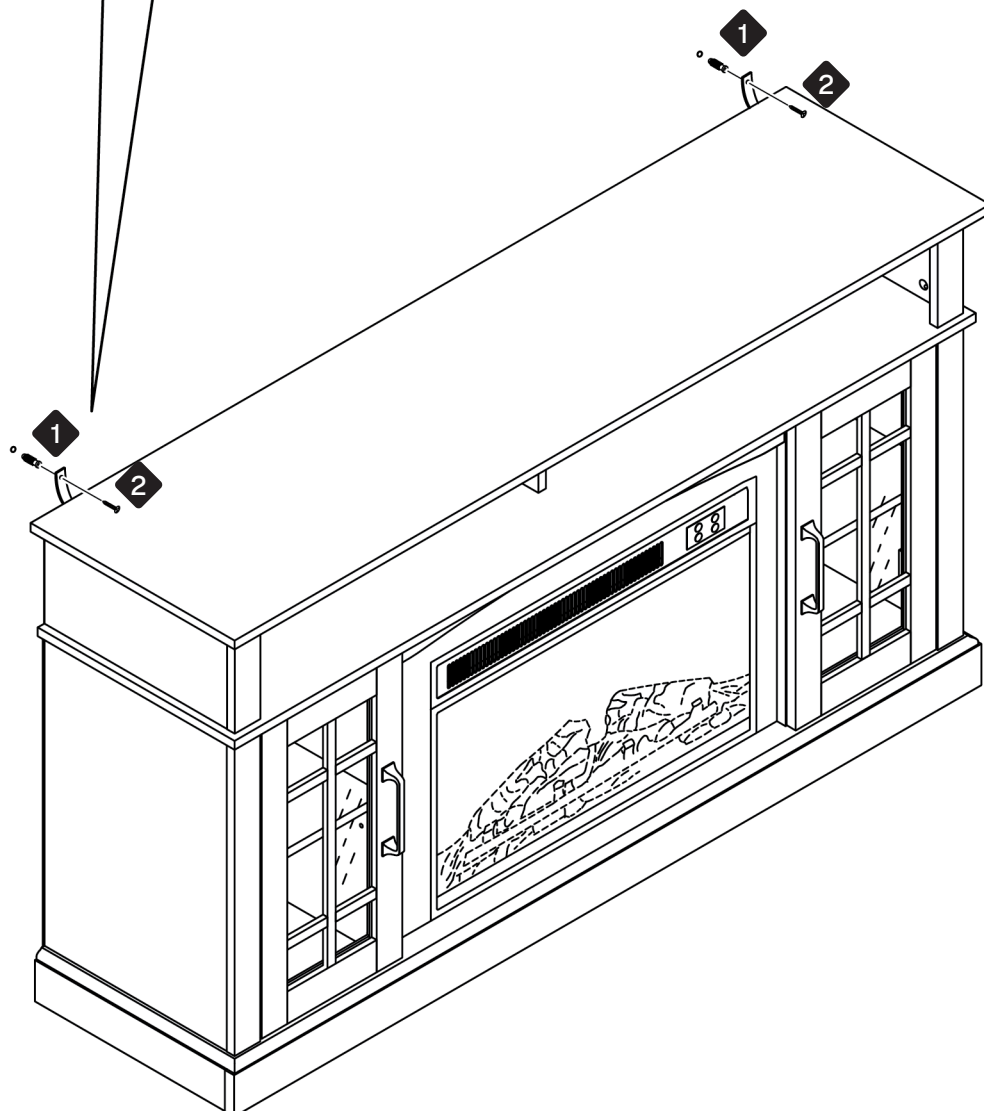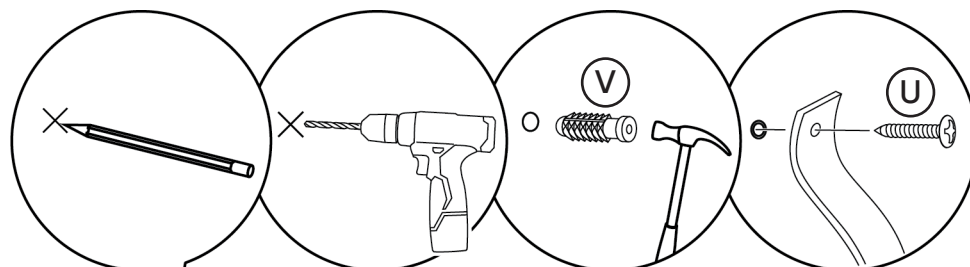


Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.

# 36
 
## Attaching garnishing strip

★ TV or other objects should be placed behind the wood trim to prevent them from falling off.

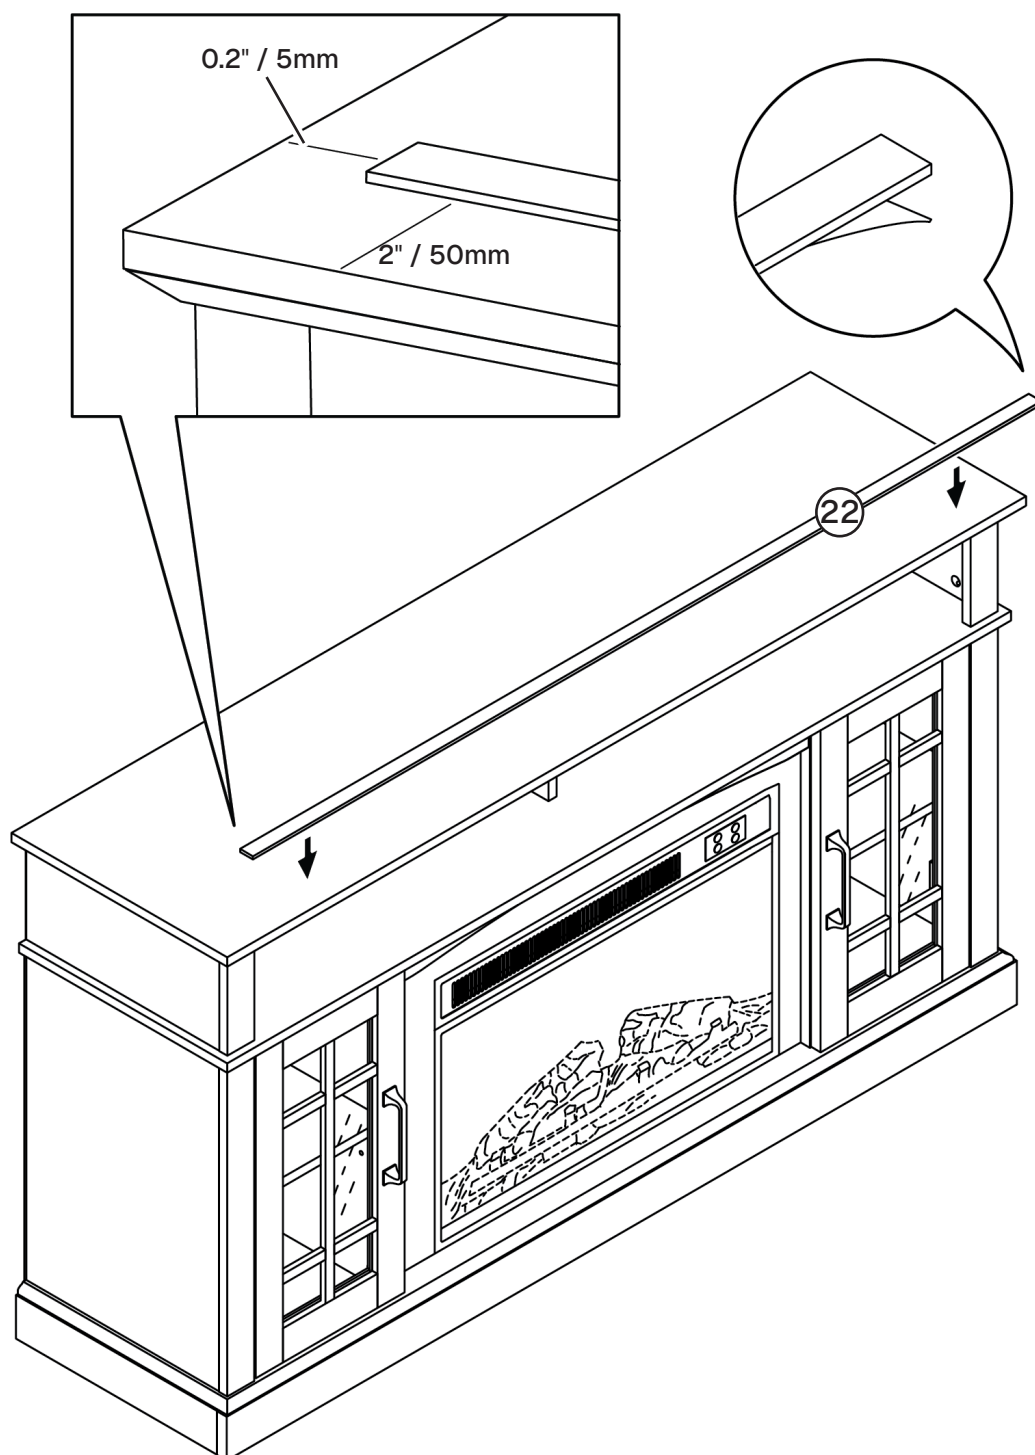



## **WARNING**

For use with televisions weighing 70lbs (31.8kg) or less. Use with heavier televisions may result in instability, causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.



## **NOTICE**

The recommended maximum width of the television is 65 inches. Do not exceed the maximum load capacity.

This product is designed for flat panel TVs only.

## Care and Maintenance

Thank you for your purchase. We want your item to last as long as possible.

To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



### Maintenance

- Tighten all bolts and crews again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and re-tighten them if they come loose.



### Cleaning

- Clean the surface of the MDF (medium density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.



### Attention

DO NOT use bleach or alcohol based cleaner to clean the surface.

DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage.

Make sure to dry the furniture immediately after cleaning.



### Attention

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of the product.





## Warranty

BELLEZE products comes with a 1-year warranty from the date of delivery.  
Register your product on our website to enjoy out limited lifetime warranty!

## After-Sale Service



Encounter any difficulties or missing parts?



Contact us at **1-800-682-6376** or email us at **support@belleze.com**



We will send you replacement.



Hassle free!  
No need to worry about repackaging and sending your item back.

## Contact Us



**support@belleze.com**



**1-800-682-6376**