 


4-in-1 Children's Castle

User's Manual

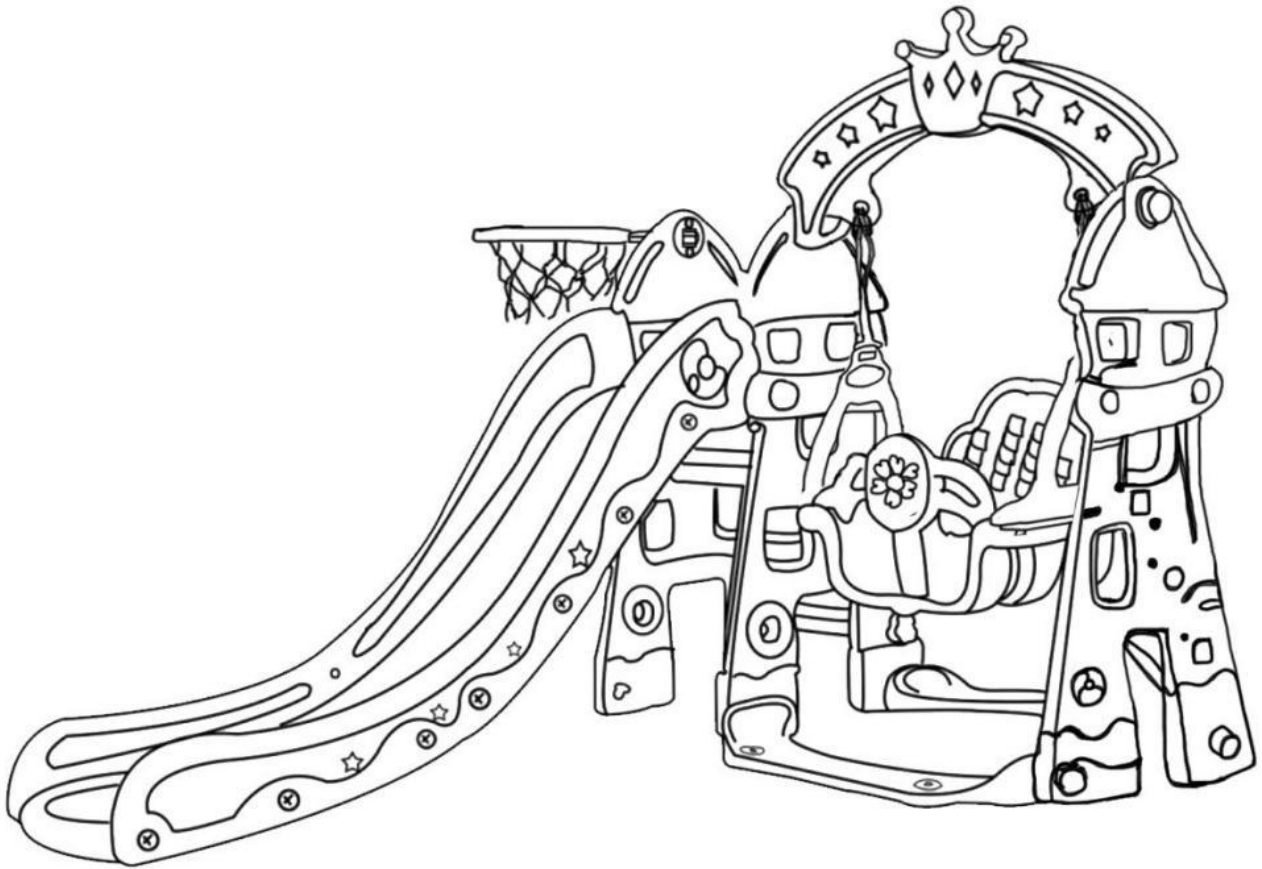

PLEASE DO NOT RETURN PRODUCT TO THE STORE

If you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.

E-Mail: wmcsr@comptree.net

Tel: 626-912-8886 Ext.100

PP198136AAB/PP198136AAP

WARNINGS



ADULT ASSEMBLY REQUIRED

CHOKING HAZARD - Small Parts


For children from 1-8 years old.

Please read these warnings and the information in this manual in its entirety.


Failure to comply with the following instructions may increase the risk of serious injury and/or death:

- This unit must be assembled and disassembled by ADULTS ONLY.
- This Slide is suitable for use by most children 1 to 8 years of age.
- Never use this product in any manner other than its intended use.
- DO NOT exceed the maximum weight limit of 110lbs (50kgs) regardless of age.
- DO NOT install this equipment over concrete, asphalt, or any other hard or rough surface. The Slide should always be installed over an appropriate, stable surface (rubber mat, grass, etc).
- Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment—such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface—does not need any protective surfacing.
- ALWAYS locate this equipment on a stable, level surface AT LEAST 7 feet away from any structure, obstruction, or possible hazard(s) such as walls, pools, power lines, verhangs, other playground equipment, driveways, hard surfaces and/or roadways.
- Children must be supervised at all times when using this equipment. DO NOT leave children unattended at any time. This Slide is NOT for adult or adolescent use.
- DO NOT attach items to the Slide not specifically designed for this purpose. Especially in the case of jump ropes, chains, clotheslines, pet leashes and cables. These may cause a strangulation or physical hazard.
- This Slide is only designed for family residential use. NOT intended for commercial applications and/or use in public areas such as schools, parks, nurseries, day schools, day cares, etc. DO NOT allow more than one child on the Wavy Slide and Ladder at a time.
- Instruct children to always be sure that the chute opening at the bottom is clear of any persons, pets or obstructions before sliding.
- DO NOT allow children to wear glasses or helmets when using the slide.
- At the time of disposal, this item must be completely disassembled and separated into its component types (plastics) for recycling or pick-up according to local ordinances for sanitation pickup.
- DO NOT allow children to wear loose fitting clothing, clothing with straps/loops, backpacks or wear and/or hold accessories with straps or loops, or any article of clothing or accessory with sharp edges which may present a hazard or become snagged or caught on the Slide during use. Serious injury and/or accidental strangulation may occur.
- DO NOT place objects on or under the slide, or allow people and pets to stand or sit on, near or under the Slide and Ladder when in use.
- DO NOT allow children to stand on the slide, attempt to walk up the slide – this can cause serious injury. Children must ALWAYS remain securely seated, in the forward facing position when sliding. Do not lay down, slide from a standing position, or slide down the chute back-wards. DO NOT allow children to stand on the slide top.
- DO NOT use in adverse weather conditions, while the seats are wet, or in poorly lit conditions.
- It is recommended that children wear long pants when using this slide to prevent friction of skin against the chute. At the end of the play season or when the temperature drops below 40 degrees F, this unit must be stored indoors, or disassembled and stored inside.
- Please read and refer to other warnings and use information in the Slide instructions before use.
- Before each use of this product and twice per month, inspect and re-place any worn, loose, defective or missing parts and/or bolts. It is important to check the entire Slide to ensure the Chute is in good condition. If any loose, cracked, missing, or other damaged components are found, cease use of this item immediately. If removed for winter storage, reinstall any plastic parts before allowing use.
- Owners shall be responsible for maintaining the legibility of the warning labels.


SLIDE&SWING SET PARTS LIST

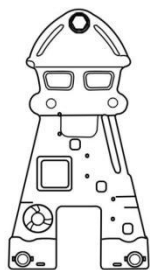


A. Slide Side Board*3

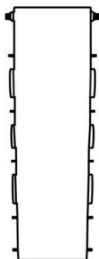


B. Slide Main Board*1

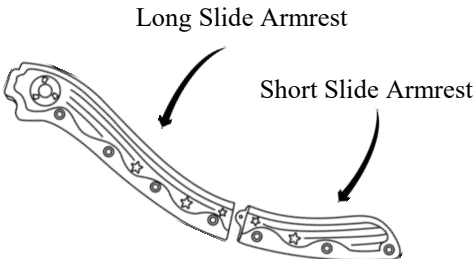


C. Long Slide Armrest*2
Short Slide Armrest*2

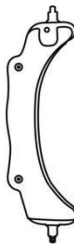


D. Swing Base*2

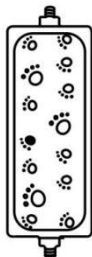


E. Slide Steps*3

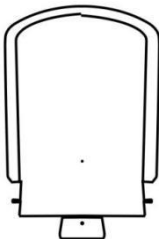

 
F. Slide Extend Board*1

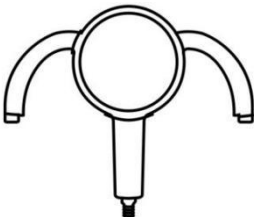

 
G. Swing Armrest*1

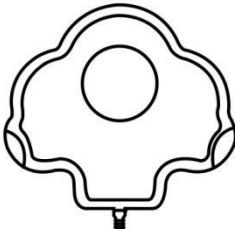

 
H. Swing Backrest*1

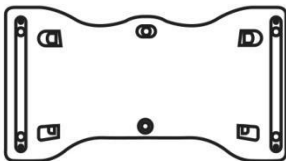

 
I. Swing Seat* 1

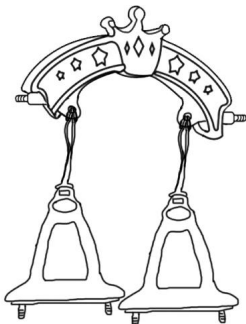

  J. Swing Crossbar*1

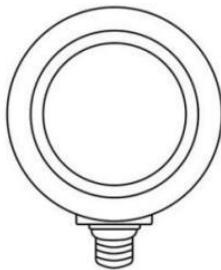



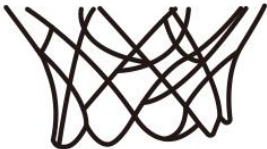






K. Basketball Hoop*1



L. Basketball Net*1

HARDWARE LIST


Part No	Description	Qty	Drawings
1	Iron Screw	1	
2	Plastic Nut	13	
3	Plastic Flower Nut	2	
4	Iron Screw	2	
5	Plastic Nut	14	
6	Nut for backrest and armrest	2	
7	Insert small nut	4	
8	Flower music player	1	
9	Stopper	2	

Note: You may have extra parts.


ASSEMBLY INSTRUCTIONS

STEP1.

Use 1*part 1 iron screw to connect the part F extend board and the part B slide main board.

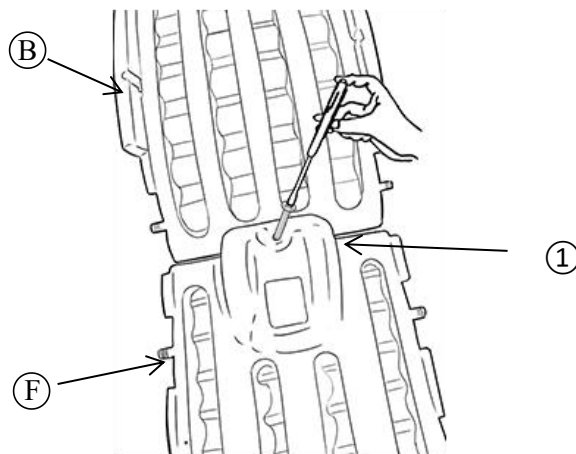


Use 14 * part 5 plastic nut to connect part C (2 * long slide armrest and 2 * short slide armrest) and the main board(part B and part F) on both sides and then fix them with 2 * part 4 iron screw.

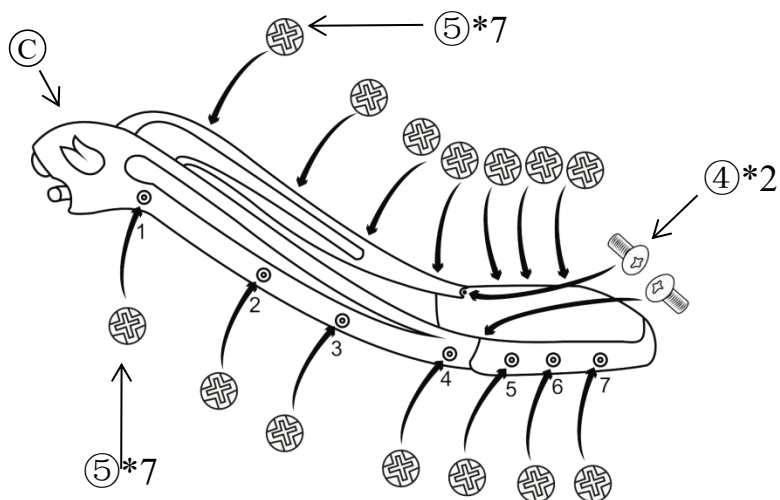


STEP2.

Use 1* part 3 plastic flower nut to connect one side of part A and the assembled slide.

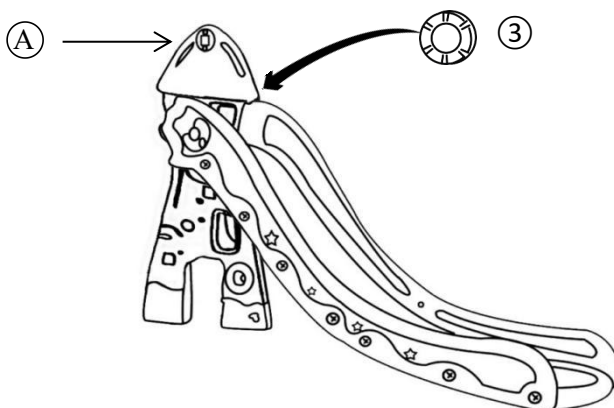


STEP3.

Use 3 * part 2 plastic nut to connect 3 * part E steps and part A

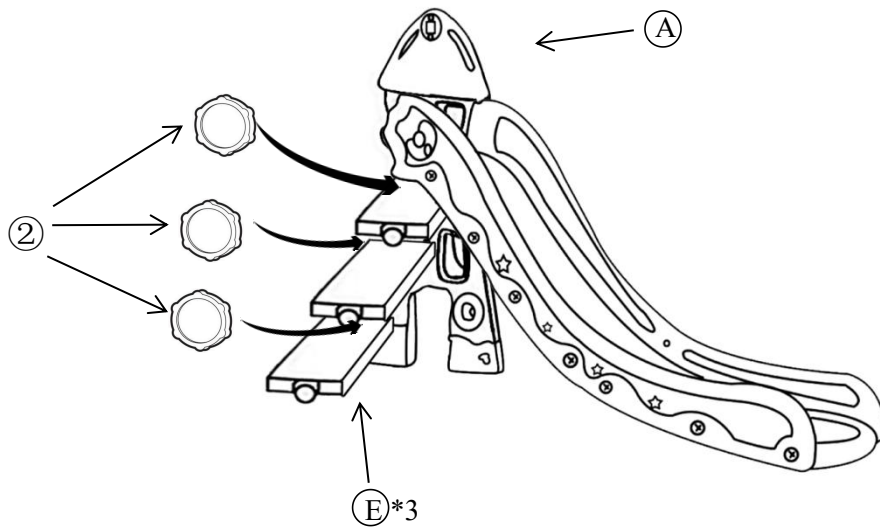


STEP4.

Use 3 * part 2 plastic nut and 1 * part 3 plastic flower nut to connect one other part A and the other side of the steps and the slide.

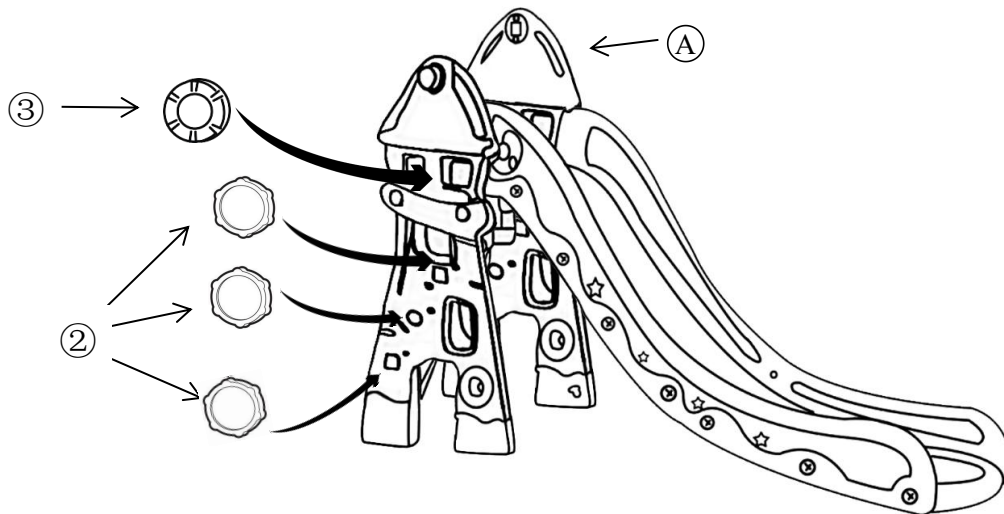

STEP5.


Use 2 * part 2 plastic nut to connect 2 * part D swing bases and part A

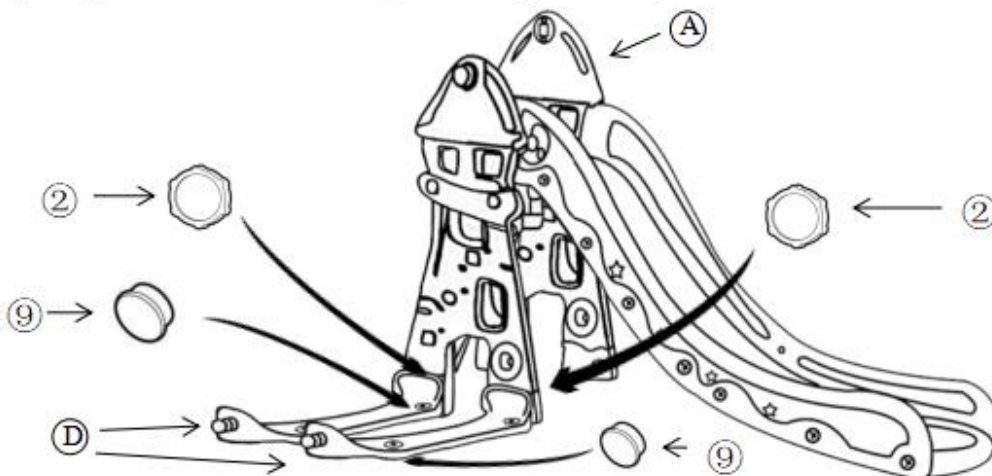

Tips: You can add water into the bases (there are holes on the bases) to make the entire swing heavier and more stable. And you can use 2*part 9 stoppers to block the holes.


STEP6.

Use 2 * part 2 plastic nut to connect one other part A and the other side of the base

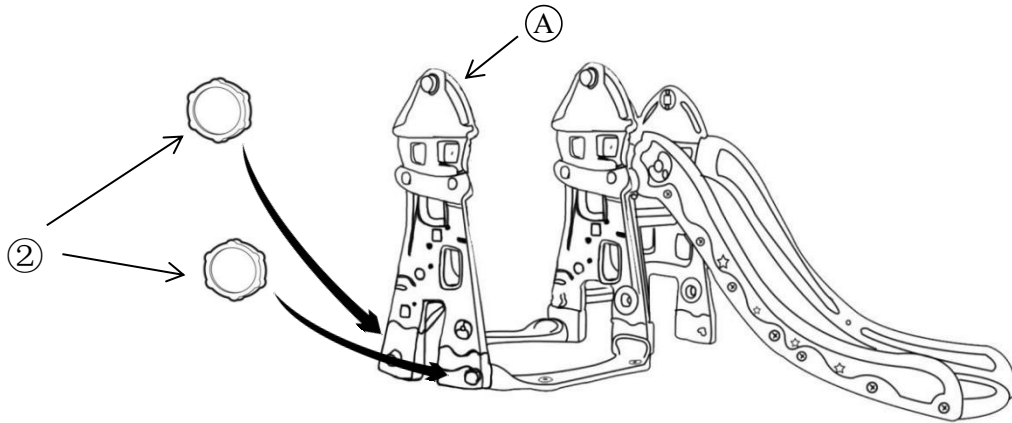

STEP7.

Use 2 * part 6 nut to connect part I swing seat, part H swing backrest and part G swing armrest.

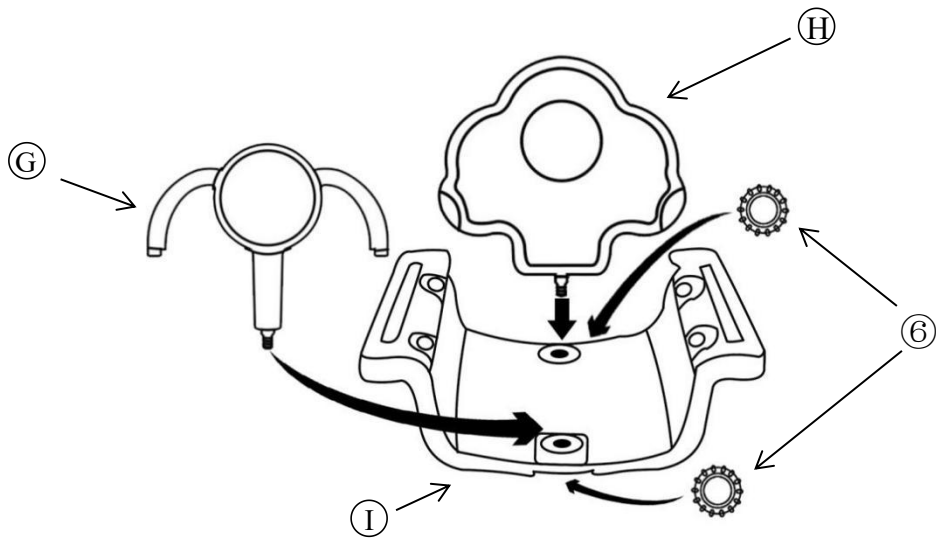


Then you will get a swing seat as below:



STEP8.

Attach the part 8 flower music player to the swing seat.

NOTE: Please put batteries(not included) in this flower music player firstly.

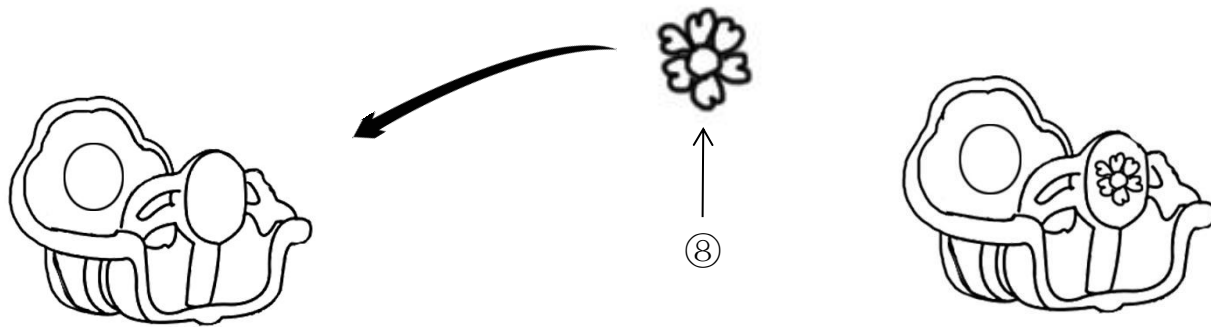


Before assembly

After assembly

STEP9.

Use 4 * part 7 insert small nut to connect 1* part J swing crossbar and the assembled swing seat.

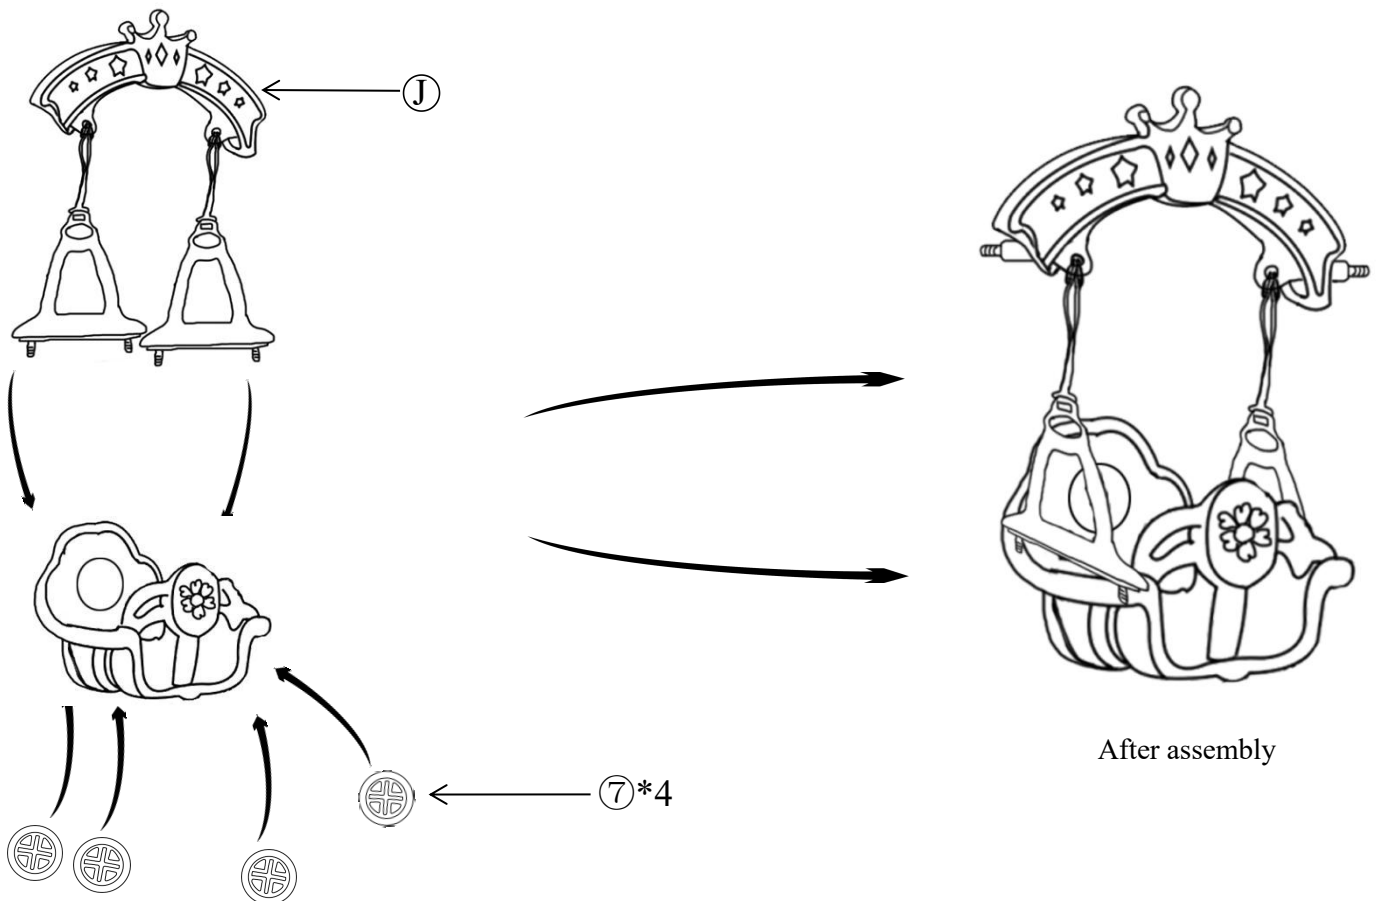


Before assembly

After assembly


STEP10.

Use 2 * part 2 plastic nut to connect the swing crossbar and the slide boards.

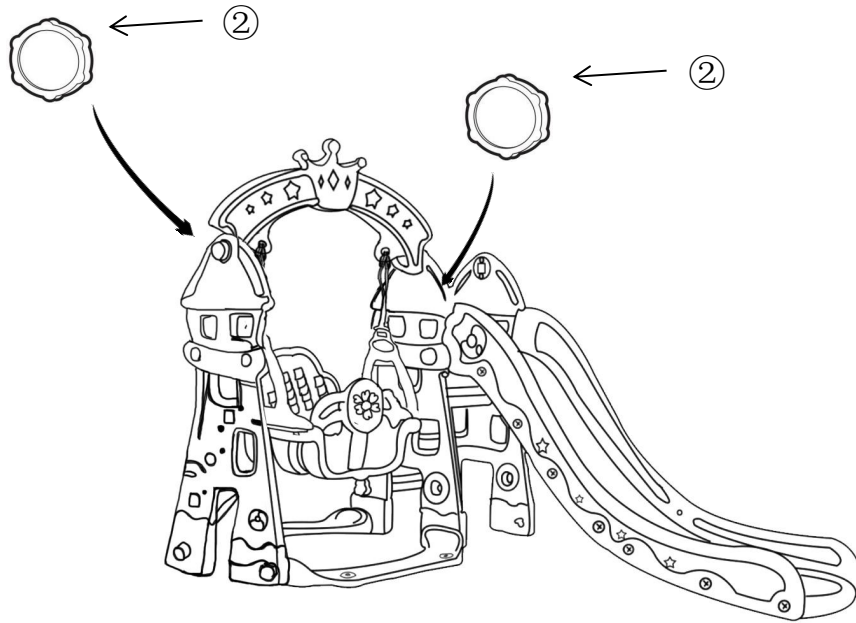



STEP11.

Use 1 * part 2 plastic nut to connect part K basketball hoop and one side of the slide side board.

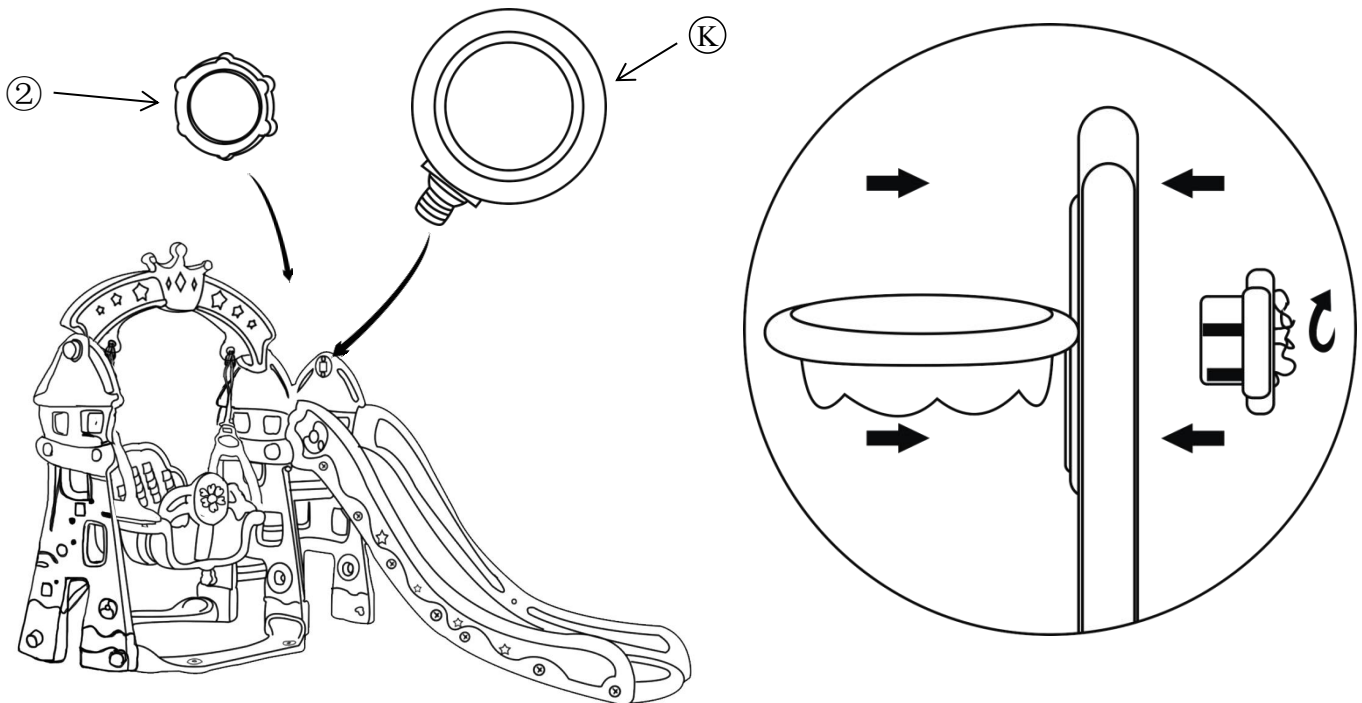

STEP12.

Use 1 * part L basketball net to connect part K basketball hoop .

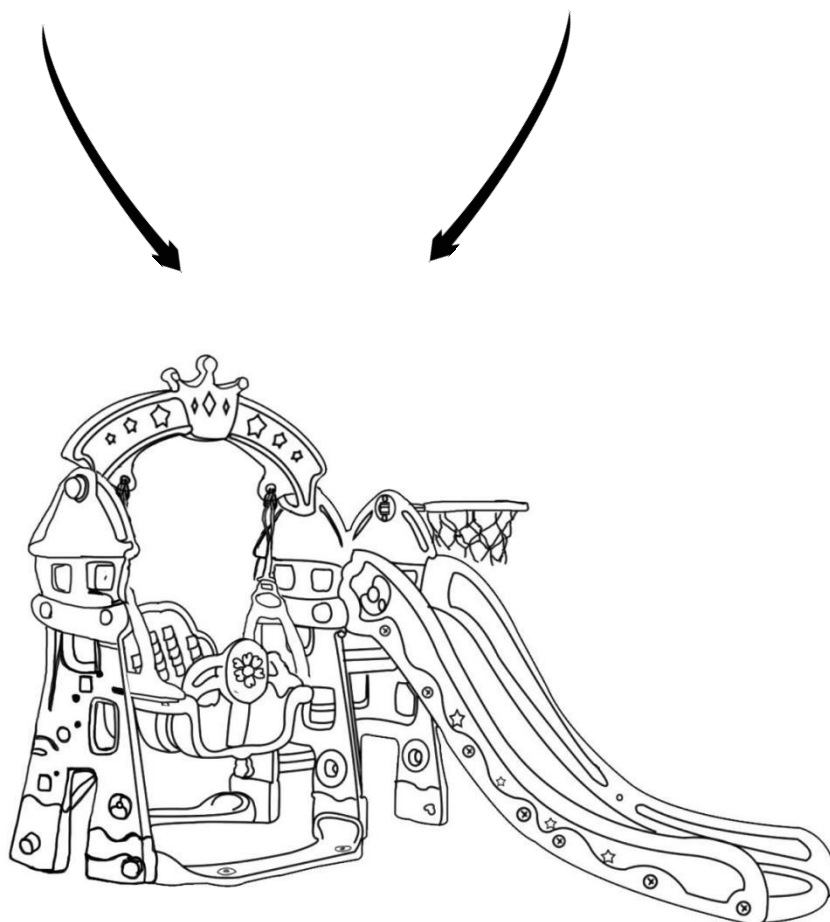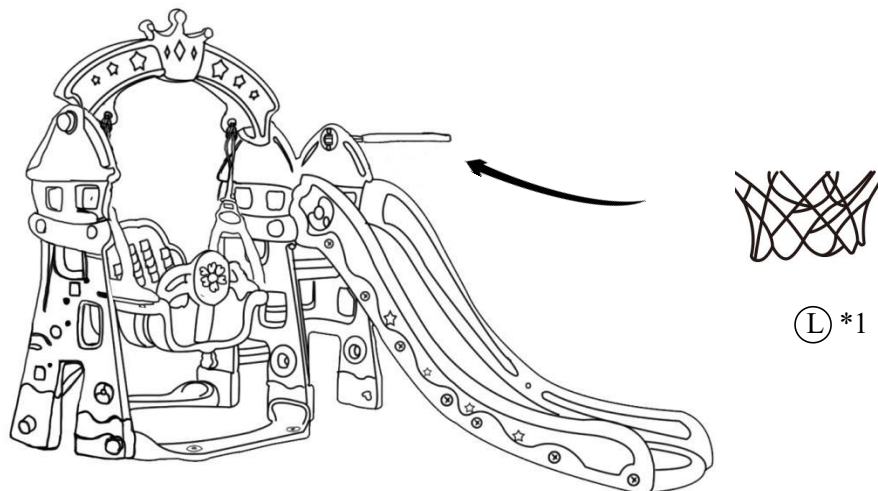

After assembly

