

Barber Chair

OWNER'S MANUAL



CAUTION! Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Table of Contents

Parts	03
Assembly	04
Instructions for Use	05



PARTS

1	Pillow	7	Base	13	Lock Nut M8
2	Backrest	8	Air Bar	14	Allen Key 4mm
3	Chair Frame	9	Hex Screw M8*30	15	Wrench 10mm
4	Hex Screw M8*25	10	Foot Pump Pedal	16	Wrench 14mm
5	Hex Nut M8	11	Footrest		
6	Oil Pump	12	Hex Nut M6		

Note: All screws are **[**pre-installed**]** in the appropriate position.

FIRST TIME USE

STEP ONE: Base Installation


Attach the oil pump (6) to the base (7) of the chair with Hex Nut M6 (12) and tighten the screws with Wrench (15).

Attach the foot pump pedal (10) to pump (6) and tighten the Lock Nut M8 (13) on each side with Allen key (14).



STEP TWO: Seat Installation


Insert the screws (4) under the backrest (2) into the holes on both sides of the chair frame (3), and tighten with wrench (16). Tighten M8 nuts (5) on both sides.

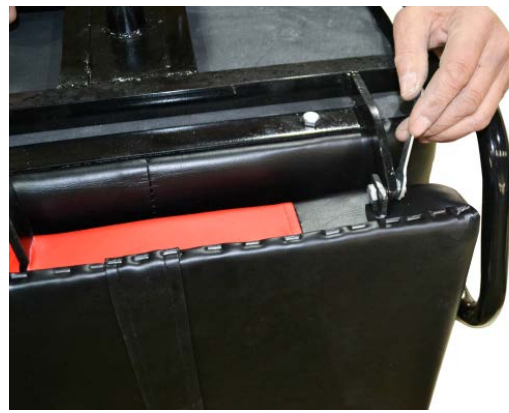

STEP THREE: Air Bar and Foot Pedal Installation

Note: Do NOT tighten the screws too tight, otherwise the reclining mechanism won't work.

The screws under the seat cushion are pre-assembled. Remove them before aligning the holes under the seat and those on the pedal. Put back the screws and tighten with wrench.

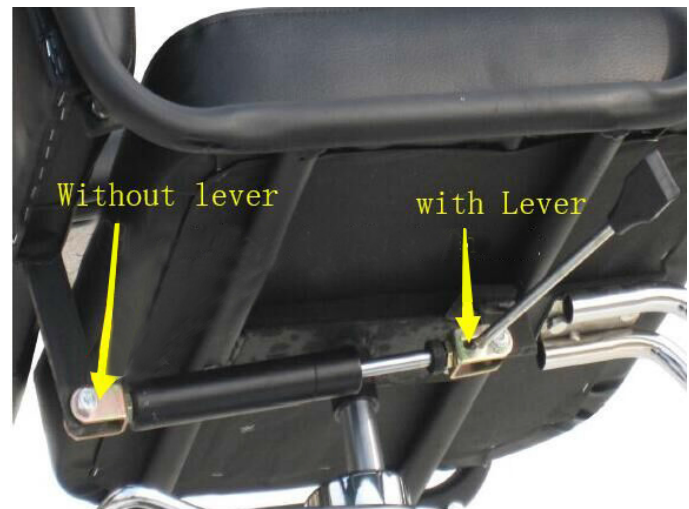

STEP FOUR: Combine the Seat:

Attach the assembled seat to the pump, sit on it, and there you go.

Note: No screws are needed to connect the seat and the base. The longer you seat, the tighter it gets.



INSTRUCTION FOR USE

1. How to lift and lower the chair

Step on the foot lever and PEDAL to lift the chair. Floor the lever to lower the chair. Lift up the lever to prevent it from rotating. While used for shaving, lift the lever up after raising the chair in case the chair moves.

2. How to adjust the backrest

Sit down in chair, put down your right hand and you can reach a small handle. Pull the handle all the way back until you can't, and lean back at the same time to adjust the backrest. Release the handle until you reach desired position to fix the back. Leave your seat and pull the handle, and the backrest will stand up again.