
## Assembly Instructions

#### 6 Pieces Outdoor Wicker Dining Set

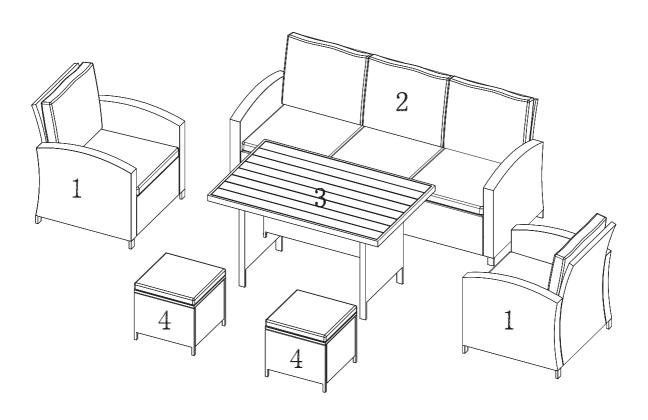


1	Single Sofa	3	Dining Table
2	Three Seater Sofa	4	Ottoman

 
Questions, problems, missing parts? Before returning the product, call our customer service 9 a.m.-5 p.m., PST, Monday- Friday

800-385-0608

or email us at aftersales@cye-way.com for assistance.

#### HARDWARE INCLUDED

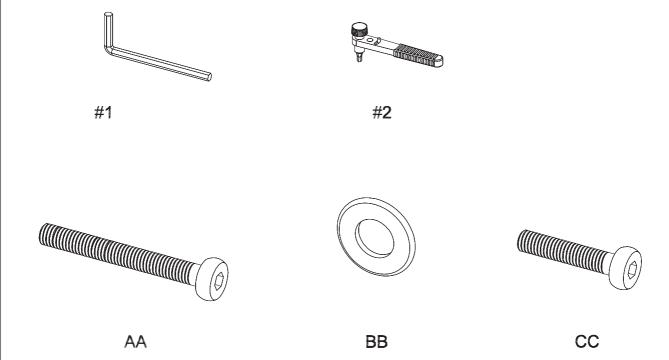





Part	Description Quantity		Part	Description	Quantity	
#1	Allen Wrench	2	CC	M6*35 Bolt	22	
#2	Ratchet Wrench	1	DD	M6*40 Bolt	30	
AA	M6*85 Bolt	6	EE	M6*30 Bolt	8	
ВВ	Washer	66				


#### PACKAGE CONTENTS


Part	Description	Image	Quantity	Part	Description	Image	Quantity
А	Left Armrest		3	н	Table Side Panel With Legs		2
В	Right Armrest		3	I	Table Connecting Panel		1
C1	Single Chair Seat Part 1		2	J	Ottoman Top		2
C2	Single Chair Seat Part 2		2	К	Ottoman Side Panel With Legs		4
D	Single Chair Back		2	L	Ottoman Front/Back Panel		4
E1	3-Seat Sofa Seat Part 1		1	М	Seat Cushion		5
E2	3-Seat Sofa Seat Part 2		1	N	Back Cushion		5
F	3-Seat Sofa Back		1	0	Ottoman Cushion		2
G	Table Top		1				

## Assembly of Single Chair

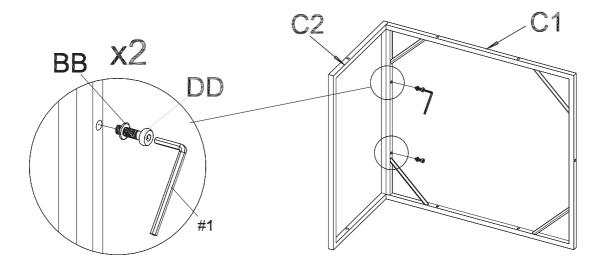


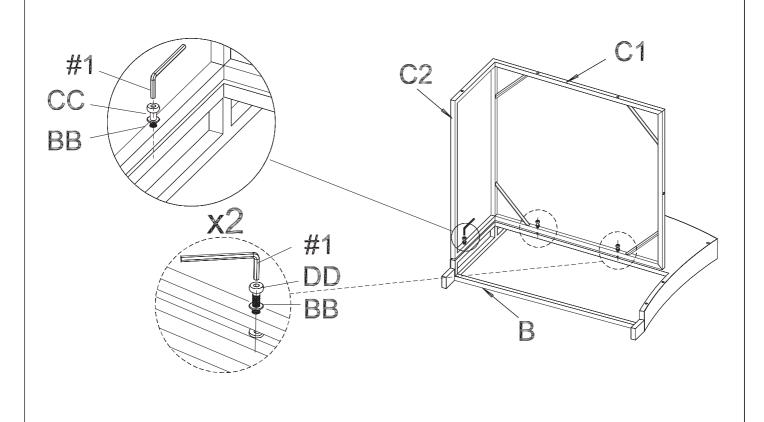


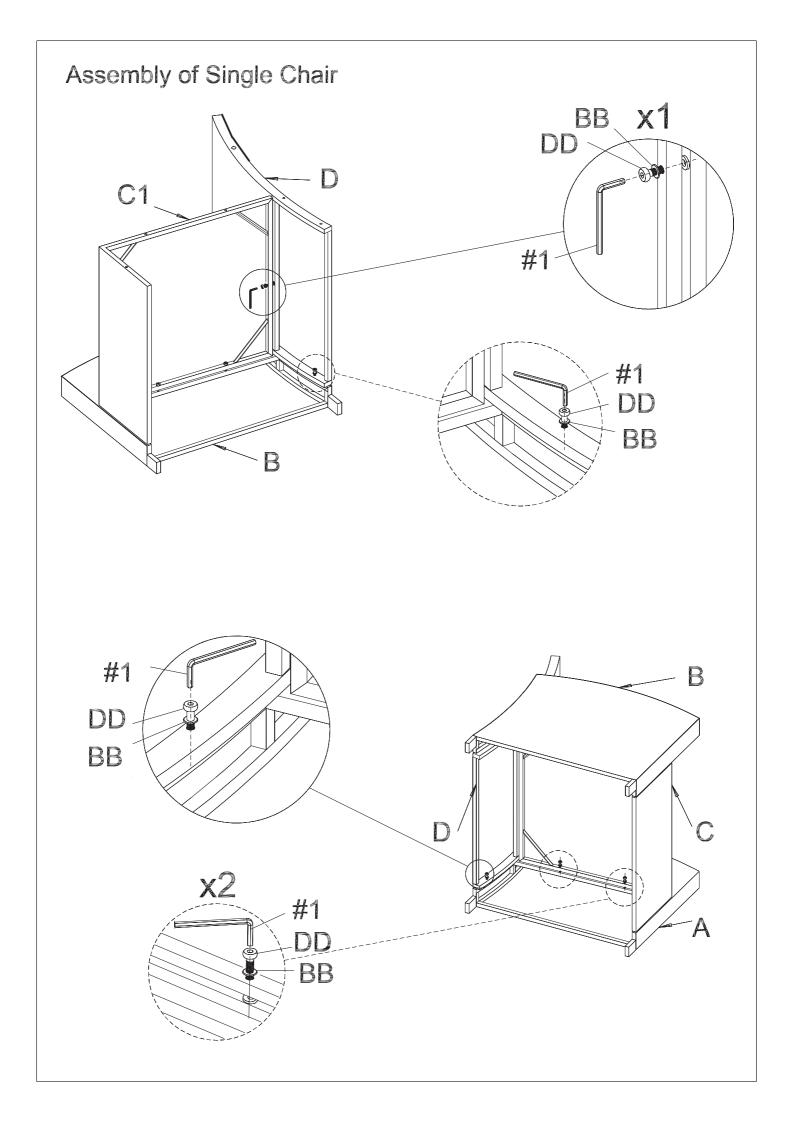

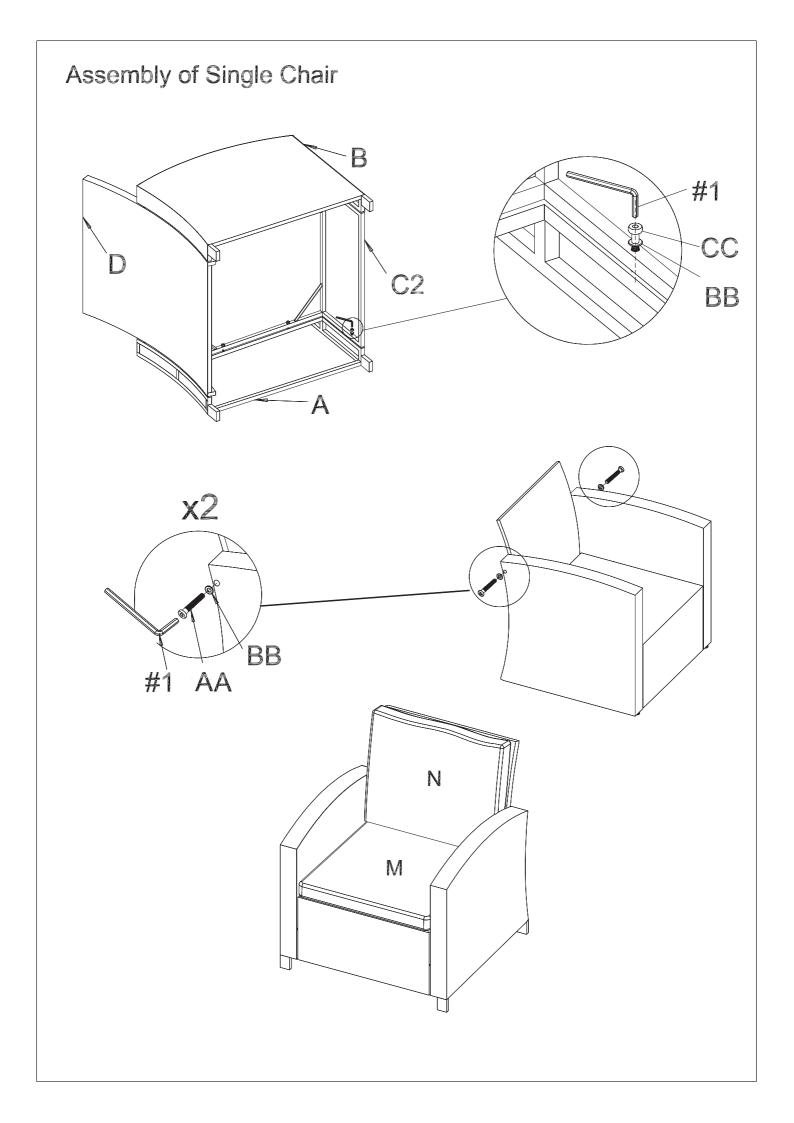



### Assembly of Three Seater Sofa

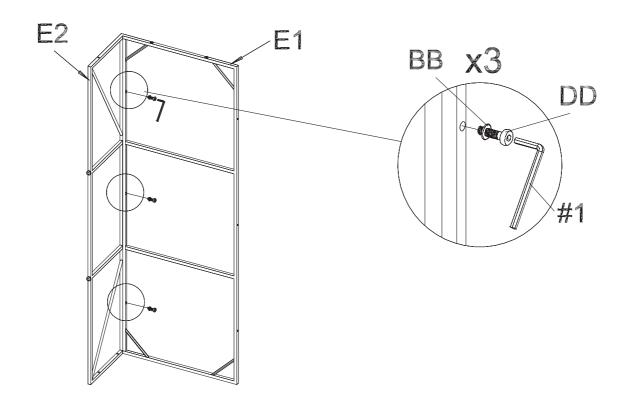


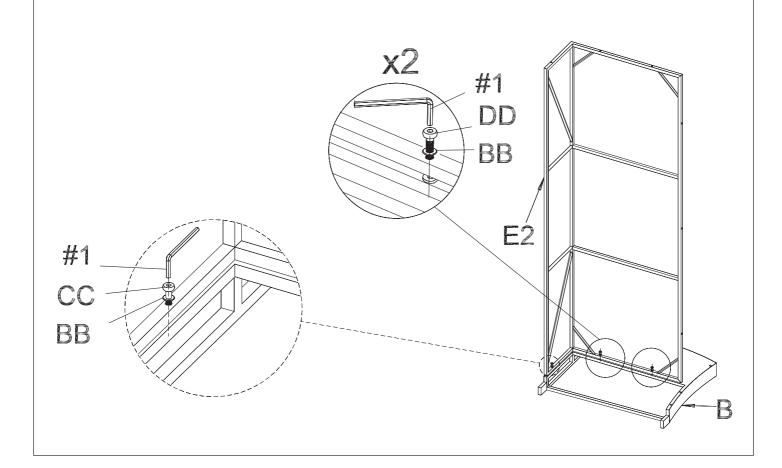


# Assembly of Three Seater Sofa x3BB DD #1 F #1 E2 DD BB B **x**2 #1 DD BB F **E**2 #1 DD BB

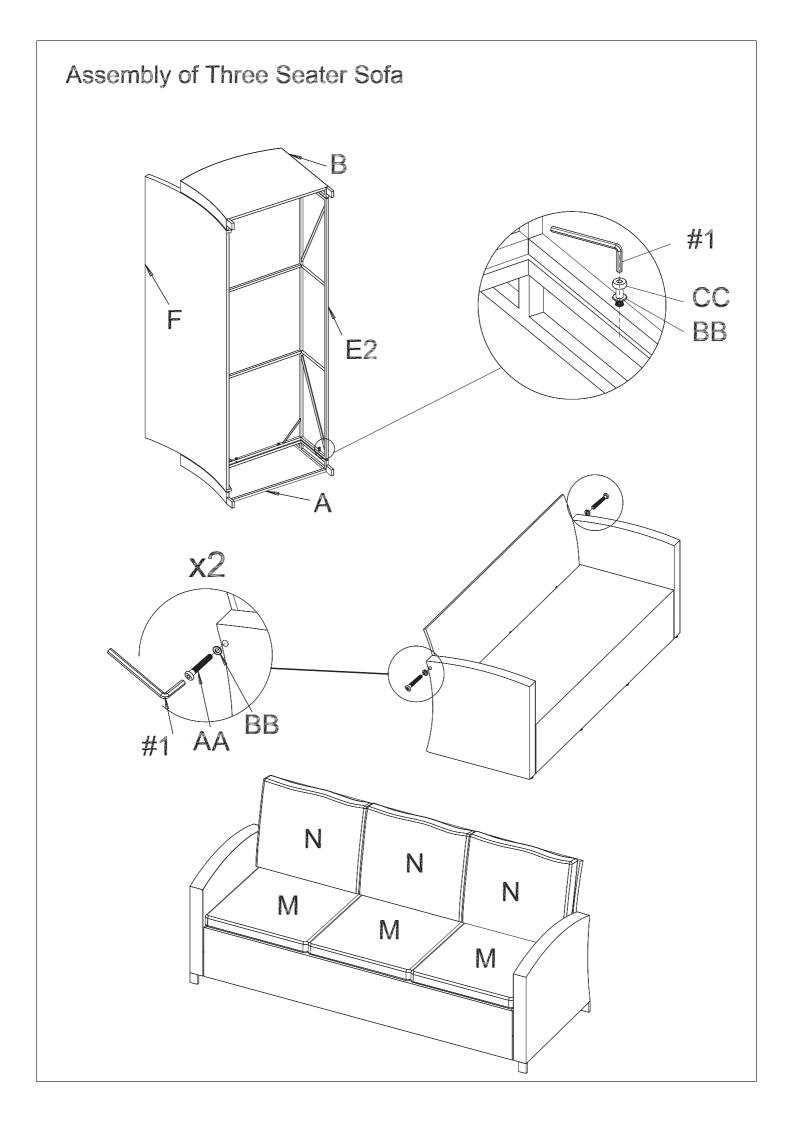

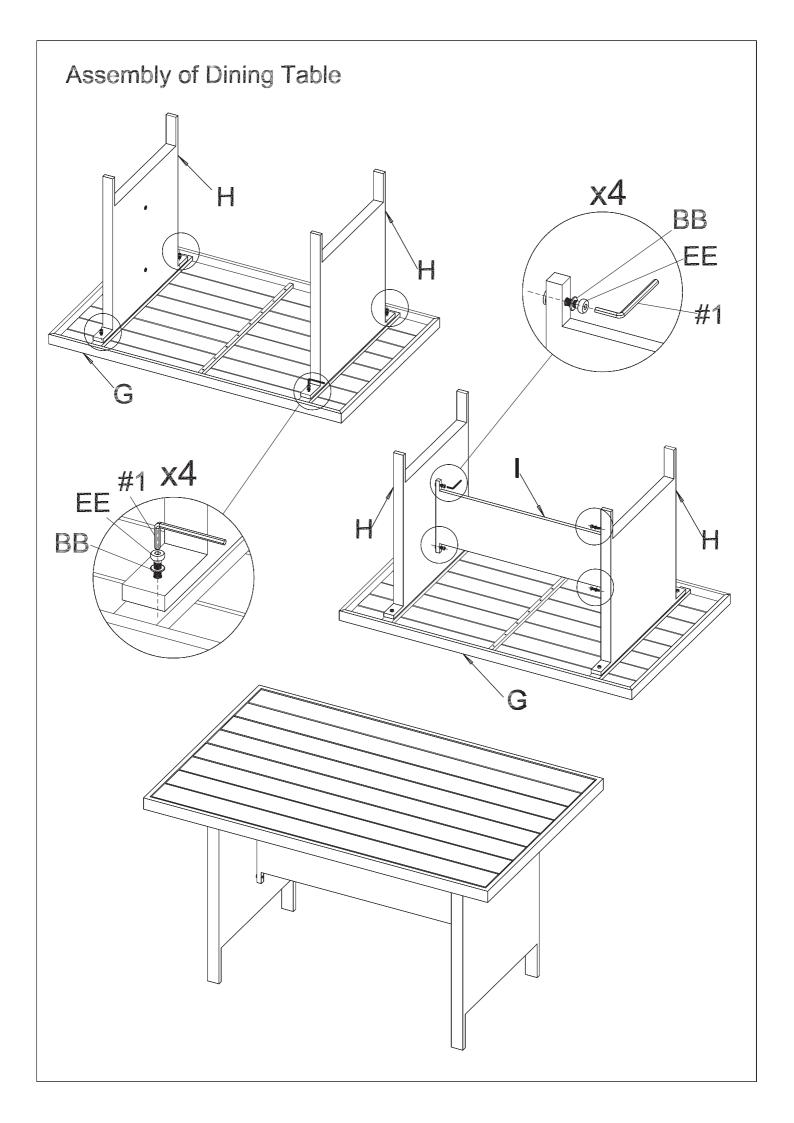

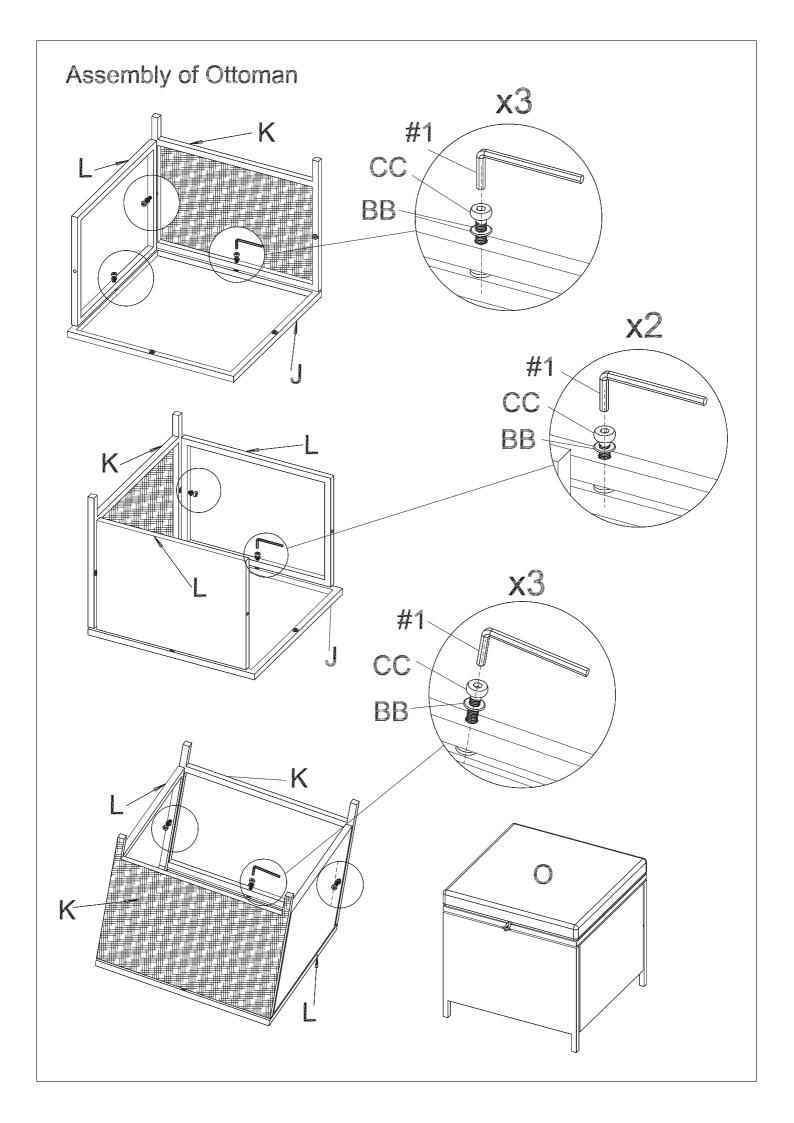

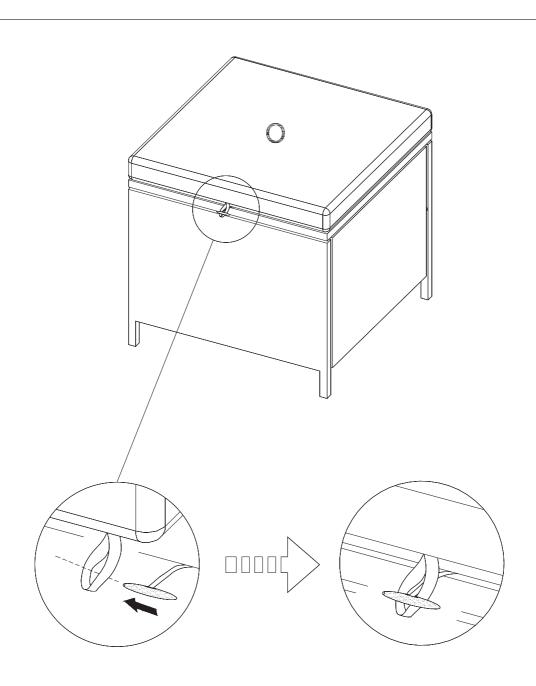

If you find deep wrinkles due to the compression on the cushion cover , warm iron the fabric to remove the wrinkles.