 
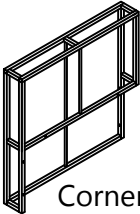 
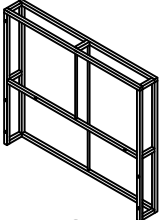 
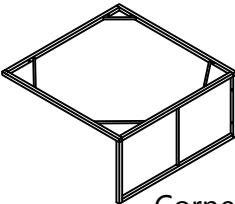 
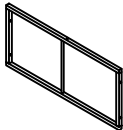 
 
 
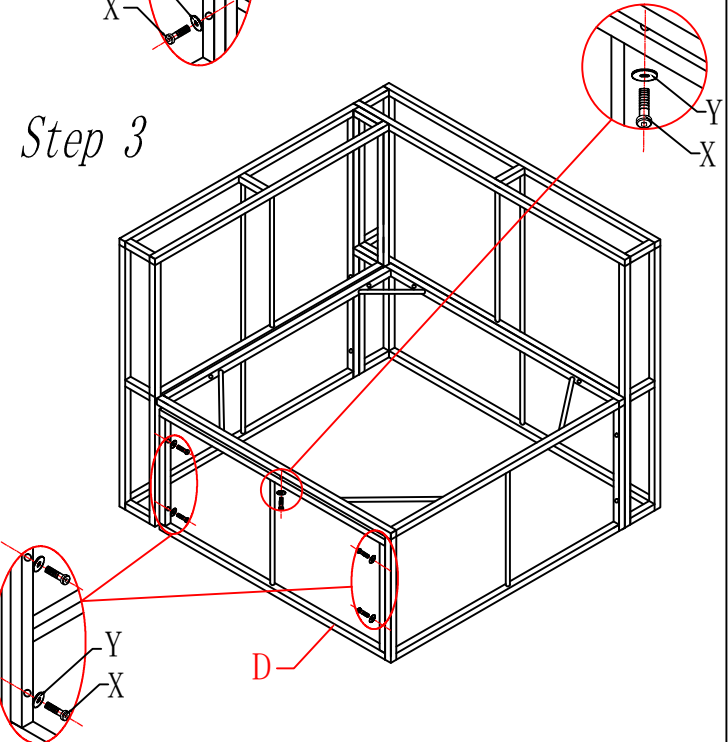 
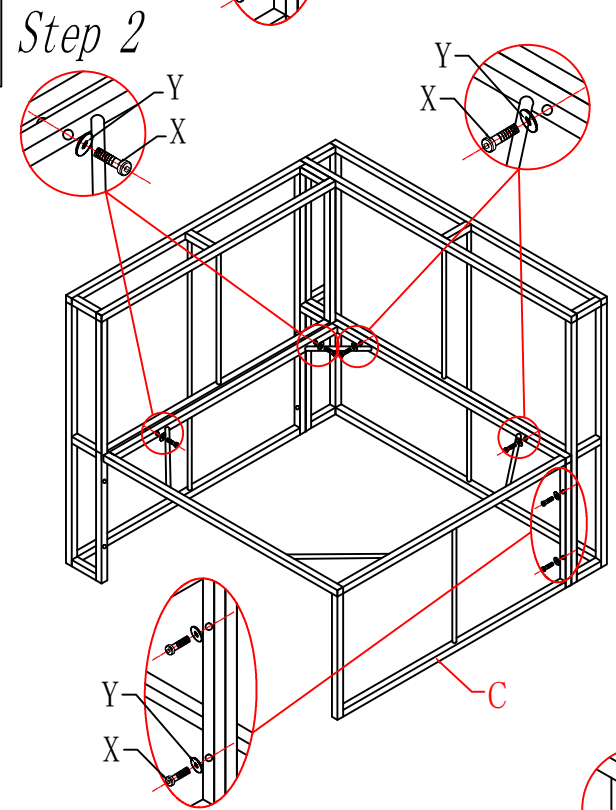 



ASSEMBLY INSTRUCTIONS

A	 Corner Back	1
B	 Corner Armrest	1
C	 Corner Seat	1
D	 Side Board	1
X	 M6*35	13
Y		13
Z		1






 63*63*8CM	1
 32*63*10CM	1
 32*50*10CM	1
 45*45CM	1

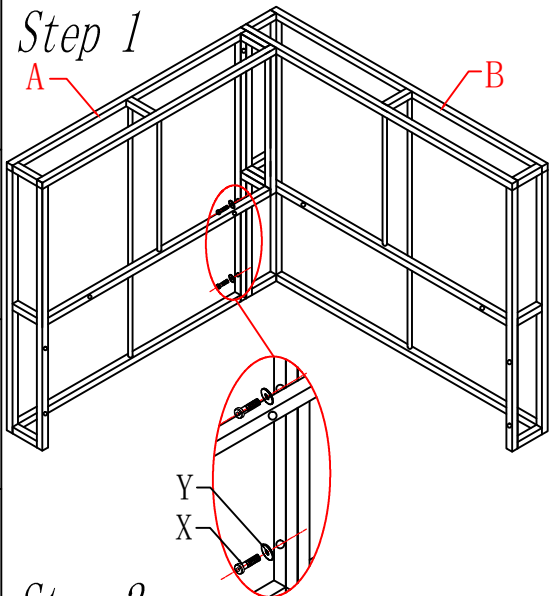

 Corner Sofa

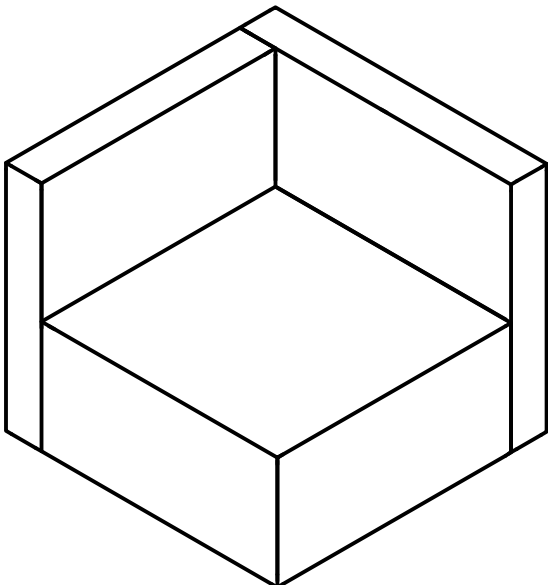

ASSEMBLY INSTRUCTIONS

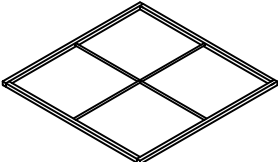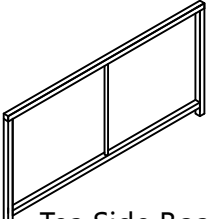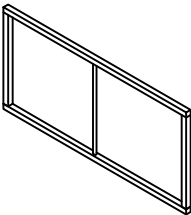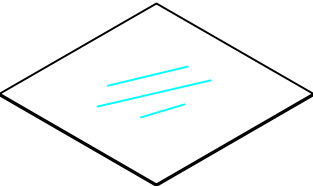     
J		1
K		2
L		2
M		1
X	 M6*35	12
Y		12

Notice:


- 1. Remove the sponge from the cushion when washing.
- 2. Hand wash only. The washing machine and brush harm the fabric.



 
Coffee Table

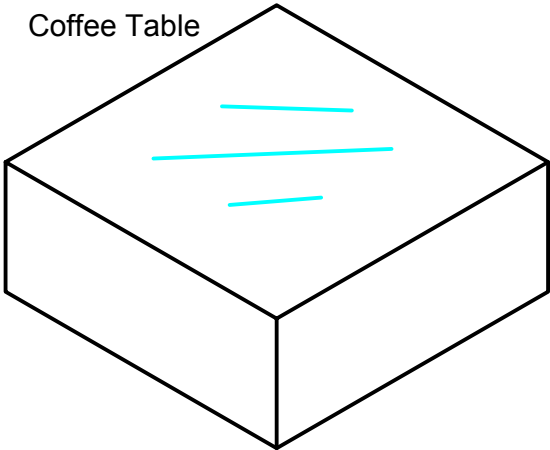

 
Step 1

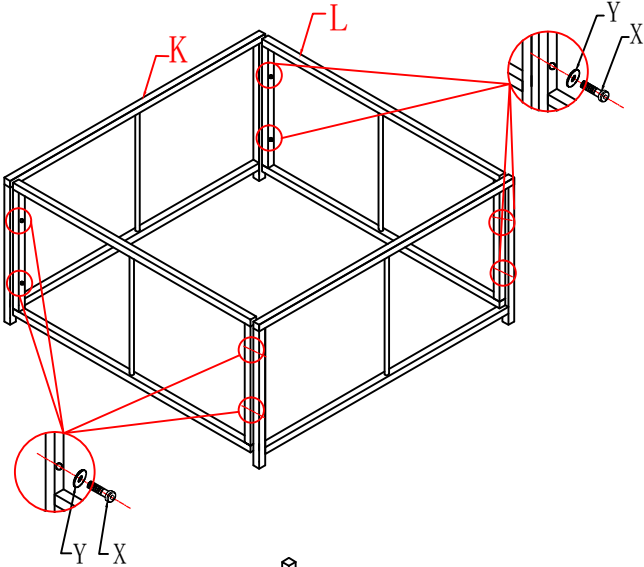

 Step 2

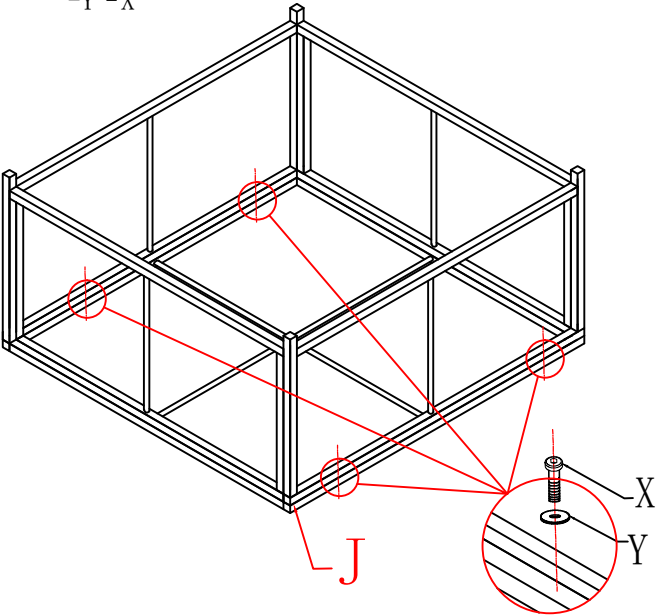

 Step 3

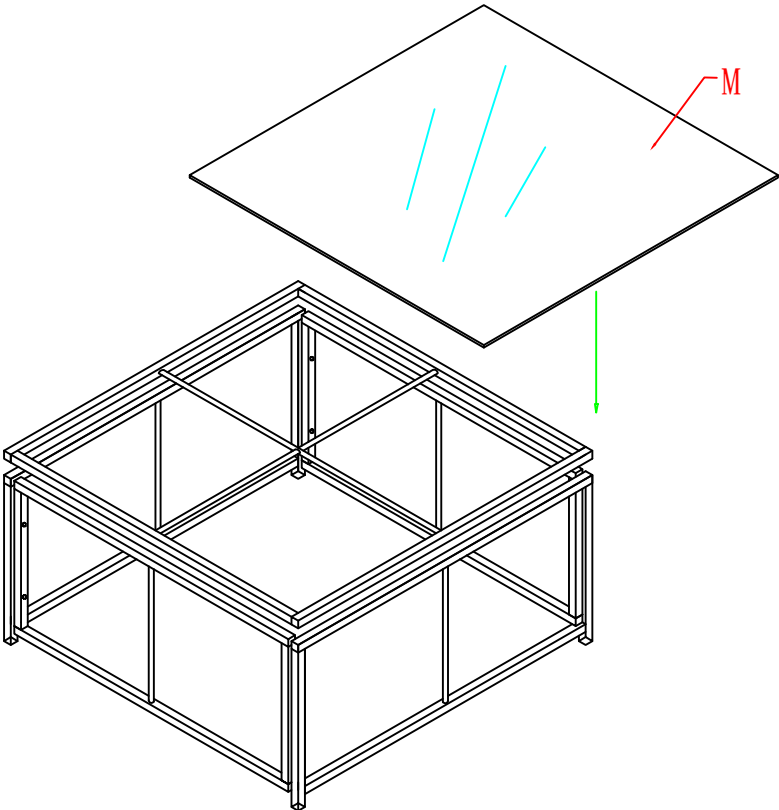

1

The cushion can be fastened to the rattan with the effective horn button.



2

Open the rattan and fasten the horn button to a chosen position.



3

Attached to a spare tape, the horn button allows the cushion to move freely.



4

Contact us for any further problems concerning the item.

