

# ASSEMBLY INSTRUCTIONS

## Chair

ASSEMBLY  
REQUIREMENTS

2-Person  
Assembly

30 Minutes  
Assembly Time

### Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware.

We appreciate your business!



### ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are complete before you start assembling. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Check all of the parts and quantities are included before assembly.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat, level surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

### CARE AND MAINTENANCE






 
- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.

# ASSEMBLY INSTRUCTIONS


## Chair

### PARTS AND HARDWARE LIST

ITEM	DESCRIPTION/PART	ITEM	DESCRIPTION/PART
A	 BODY (1 PC)	D	 SPRING WASHER (12 PCS)
B	 ADJUSTABLE LEG (4 PCS)	E	 BOLT (12 PCS)
C	 WASHER (12 PCS)	F	 ALLEN KEY (1 PC)

### STEP 1

- Place Body (A) vertically to rest on its backrest as shown on a material that does not scratch or damage the part.
- Align bolt holes on Leg (B) to the bolt holes on the bottom of Body (A).
- Use Allen Key (F) to drive Bolt (E) fitted with Spring Washer (D) and Washer (C) to fasten (B) to the bottom of Body (A). Do not tighten bolt completely until all 3 bolts are in place on each leg.
- Set the chair right-side up when all the legs are installed.

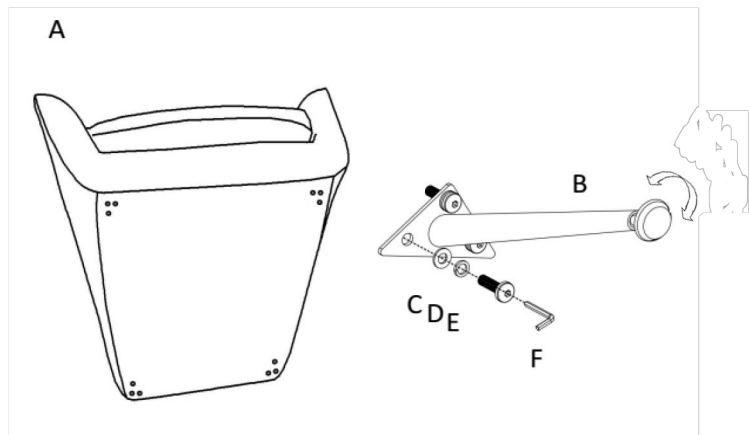

- If find the chair is uneven, turn the bottom circle of the adjustable leg (B).

### STEP 2



The assembly of the Chair is complete.