

Note

May cause personal injury or property damage

!

Necessary

Installing

1.Ensure the firmness of installation area.  
2.Install the device in a ventilative and adequate space.  
3.Do not block the sprayer by hand or other obstructions when the device is working.  
4.Do not spill water or conductive, corrosive liquid on the device surface or fall inside of the device.  
5.Do not operate device without stopping. Suggested average daily usage time should not exceed 14 hours, and the second level is recommended.  
6.Cut off the power in extreme weather environment.

Attached Warranty Card

▲ Please keep the Instruction and the warranty Card carefully for further reference.  
Please read all instructions before using the device.

I. Cautions (The following basic safety precautions should be always complied with)  
Avoid casualties and property loss, please always follow the attentions as the following.

Warning

May cause electric shock or fire hazard,

Prohibition


Installing

1.Do not use unsafe plug or power cable.  
2.Do not install the device at the place where children can reach.  
3.Do not install the device at the place where can not bear strength and prone result in falling and collapsing.  
4.Do not tilt the device.  
5.Keep the device away from fire and heat source, prohibit to store flammable and explosive materials around the device.  
6,Except for the atomizer, the housing material is not resistant to corrosion.  
7.Do not use device in high temperature or wet environment.  
8,Do not use inflammable, explosive, corrosive and other hazardous solvents work with the device.  
9.Do not mix essential oil with water for using in diffuser.

II. Instruction

Approved Certificate: CE、 FCC、 RoHS、 CNAS and so on.  
Application Place: Hotel, 4S Car store、 Brand Shop、 Bar、 Public Area and so on.

III. Schematic diagram of connecting air-conditioning duct

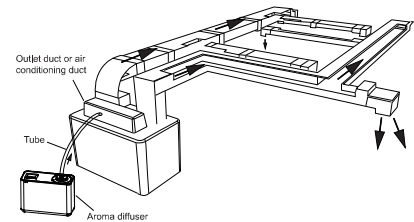

IV. Operation Introduction

8888 Mon

W / 211 s

P / 10 s

1.The device has four buttons : "⏮" is the return button"⏭" is confirmation button, "⏵" is the increasing button and "⏴" is the shift button.

2.Buttons operation:  
Under the normal working interface, press "⏮" and "⏭" buttons at the same time to enter the password setting interface,

3,Under the normal working interface, press "⏴" and "⏵" buttons at the same time to enter local time setting interface,

1.The device has four buttons : "⏮" is the return button"⏭" is confirmation button, "⏵" is the increasing button and "⏴" is the shift button.

2.Buttons operation:  
Under the normal working interface, press "⏮" and "⏭" buttons at the same time to enter the password setting interface,

3,Under the normal working interface, press "⏴" and "⏵" buttons at the same time to enter local time setting interface,

4,Under the normal working interface, press "⏴" and "⏵" button to enter the working time and frequency setting interface,

5,Under the normal working interface, long press "⏮" button to turn on/off the fan.

6,Under the normal working interface, long press "⏴" button to turn off the machine,

Factory Reset:  
Under the normal working interface, firstly, press the "⏮" and "⏴" buttons at the same time until the interface show YES/NO, then let your hand go. Secondly, operate "⏴" to choose YES then press "⏭" button to confirm it and finish the setting.

V. The main common problems after long-time not using.

Reason

1.The PCB can not work

a.PCB damage.  
b.The battery is dead.  
c.PCB poor welding ,resulting in insensitive contact.  
d.Power cut off.

Solution

A.Change the PCB.  
B.Replace the battery.  
C.Replace the PCB.  
D.Check the adapter and power cable.

2.Equipment can not work, but the PCB display normally

a.The pump system is broken.  
b.Time setting.  
c.Inner circuit problems.

A.Change a pump.  
B.Check the time setting.  
C.Check the inner circuit(multimeter).

3.Abnormal Noise

a.Pump is broken, aged or loose.  
b.Trachea cable connection occurs problems.  
c.Internal structure is damaged.

A.Adjust or Change a pump.  
B.Check the cable connection.  
C.Adjust or change parts.

4.Machine works but no scent or scent is weak

a.The nozzle is blocked.  
b.The pipette falls off.  
c.The pump system is aged.  
d.The atomizer is blocked.  
e.There are impurities in the essential oil

A.Change a nozzle(First with alcohol soak for a few minutes) or with a fine needle to clear the nozzle.  
B.Reconnect the pipette.  
C.Change a pump.  
D. Clean the atomizer.  
E.Replace with pure essential oil.

5.Oil Leakage

a.The equipment is tilted.  
b.The atomizer leaks.

A.Put the machine straight.  
B.Change a new atomizer.

VI.Accessories and spare parts

Please clean the equipment periodically,suggest 2-3 months in 1 circle , so that it can work under best condition.

Please cut off the power when cleaning, also do not use wet hand to operate it directly, in case of electric shock and injury.

1.Long-term non-use

- (1) Please turn off and cut off the power then roll up the power cord,

(2) Clean the filter components.

(3) Place the deodorant package which contains activated carbon in the device or package, to prevent residual substances in the equipment produce odor,

(4) Please equip the machine with the dust cover, placed in the shade, ventilative place.

VII.Accessories and spare parts

Name	Quantity	Name	Quantity
Aroma diffuser	1PC	Screws (including plastic expansion tube)	2PC
Adapter	1PC	Manual	1PC
Cap	1PC	Warranty card	1PC
Air conditioning tube	1PC	Bottle sealing gasket	1PC
Key	2PC		
Connector	1PC		

VIII. After-sales Service

- 1.Provide free technical solutions and installation process guidance.

2.Provide free online FAQ consultation and scent-marketing suggestion,

IX. The equipment warranty and precautions

- 1.The equipment warranty period is 12 months (from the date of sale).

2.Please provide the warranty card,invoice or other provement which can prove the equipment was ordered in our company to enjoy the free maintenance.

3.The human error or other wrong operation cause the fault not belong to the scope of warranty, and will not be accepted to provide free maintenance.