


# Assembly Instruction

Description: WITH LED LIGHT /WORKSTATION CROWN  
WORKSTATION TOP/ WORKSTATION BASE

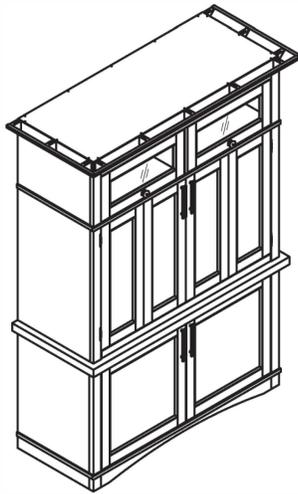


## PARTS LIST:

①		②	
WORKSTATION CROWN: 1PC			
③			
WORKSTATION BASE: 1PC		WORKSTATION TOP : 1PC	


## HARDWARE LIST

NO.	Drawing	Description	
A		Allen wrench (5mm)	1pc
B		Bolt Ø5/16"x1-1/4	6pcs
C		Spring washer (Ø5/16")	6pcs
D		Flat washer (Ø5/16"x19mm)	6pcs
E		Wood screw(Ø8*5/8")	12pcs
F		Braket	2pcs
G		Tie warp	1pc
H		Long screw	1pc
I		Short screw	1pc
J		Wood screw(Ø8*3/4")	2pcs

## STEP1

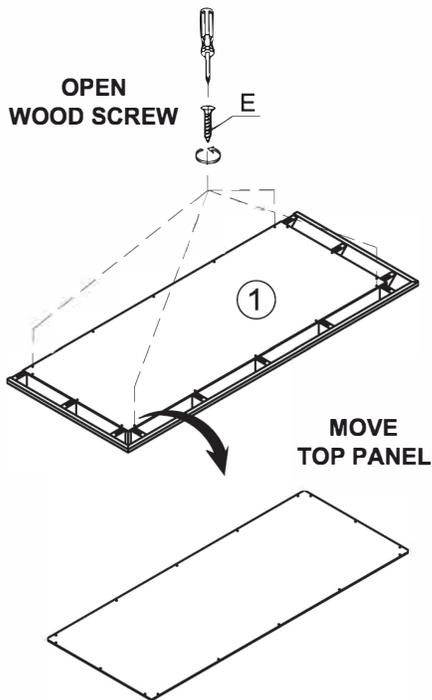


## STEP2

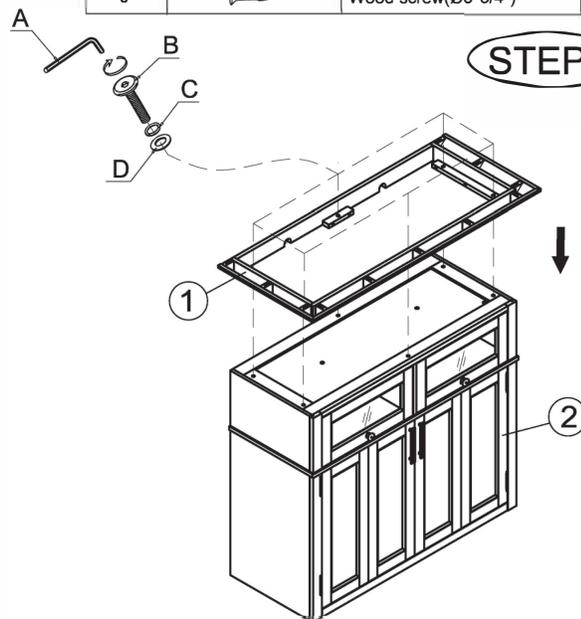

Description: WITH LED LIGHT /WORKSTATION CROWN  
 WORKSTATION TOP/ WORKSTATION BASE


**STEP3**

MOVE  
TOP PANEL

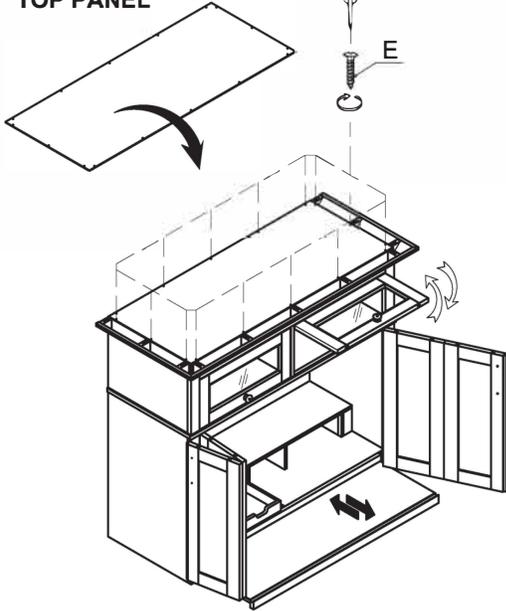


CLOSE  
WOOD SCREW


**STEP5**

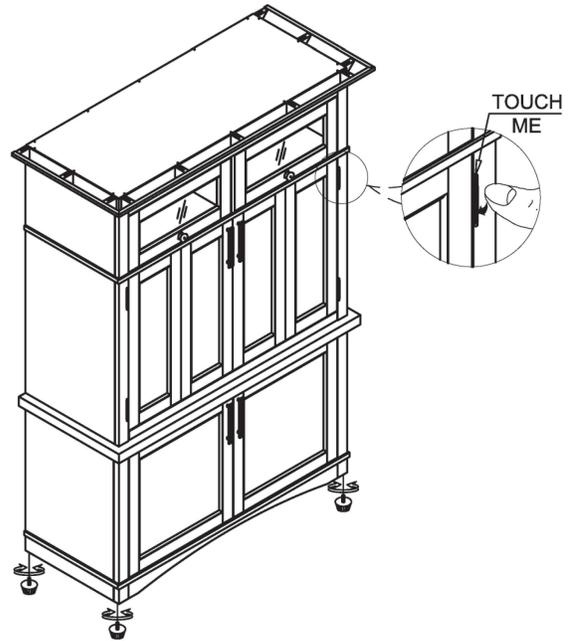

**STEP4**

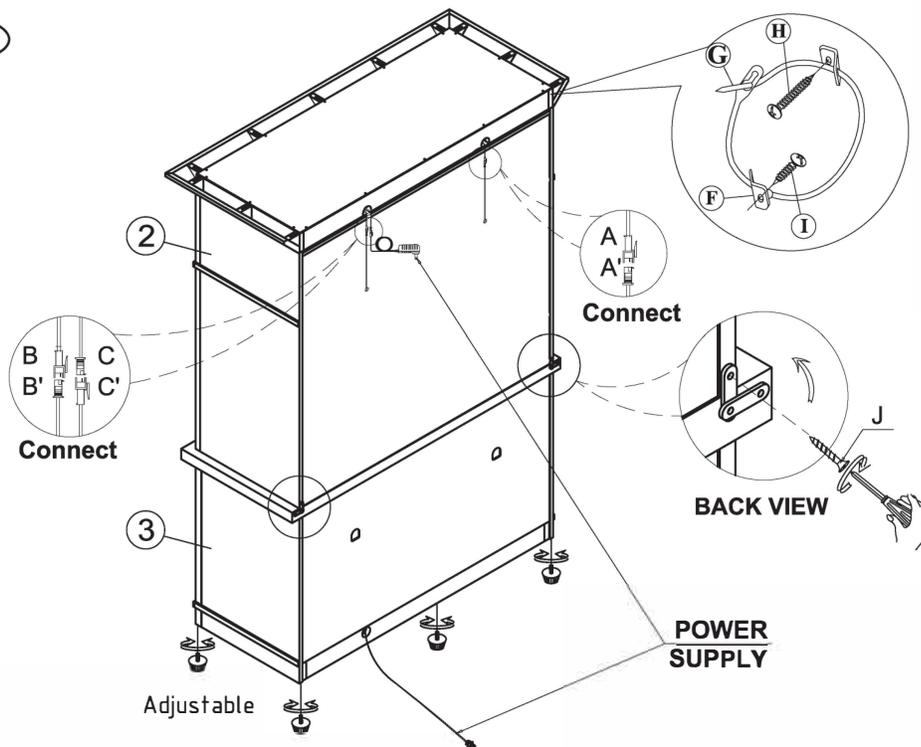

# Anti-Tip Hardware Installation Instructions

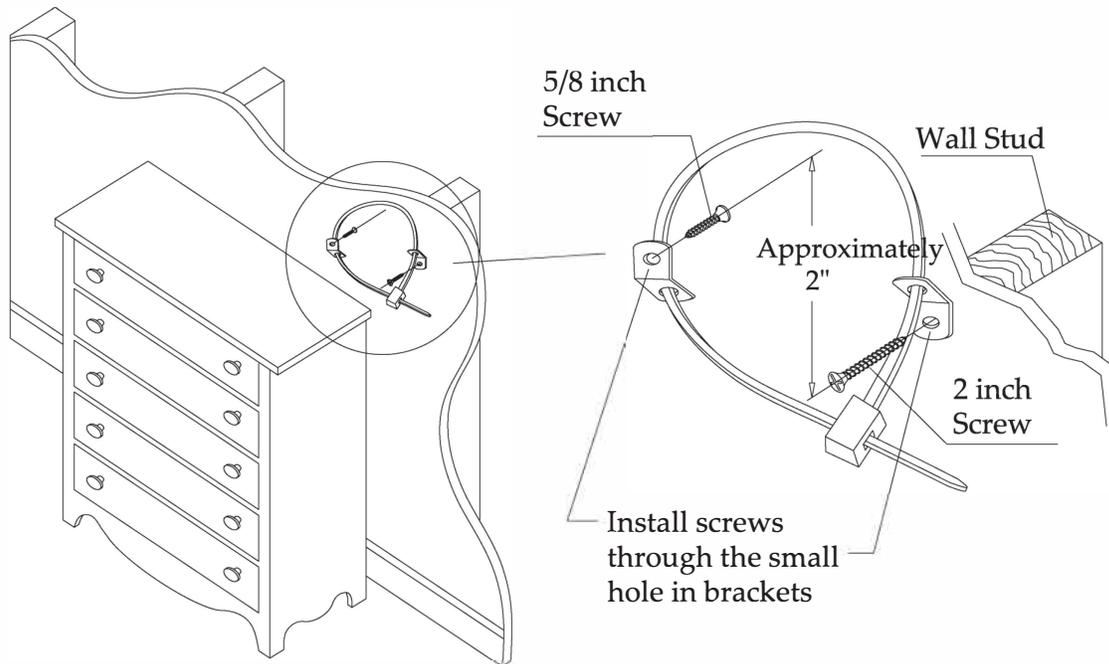

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

**Caution:** Assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

**Warning:** This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.