 


014-HG-41008
Corin TV Stand

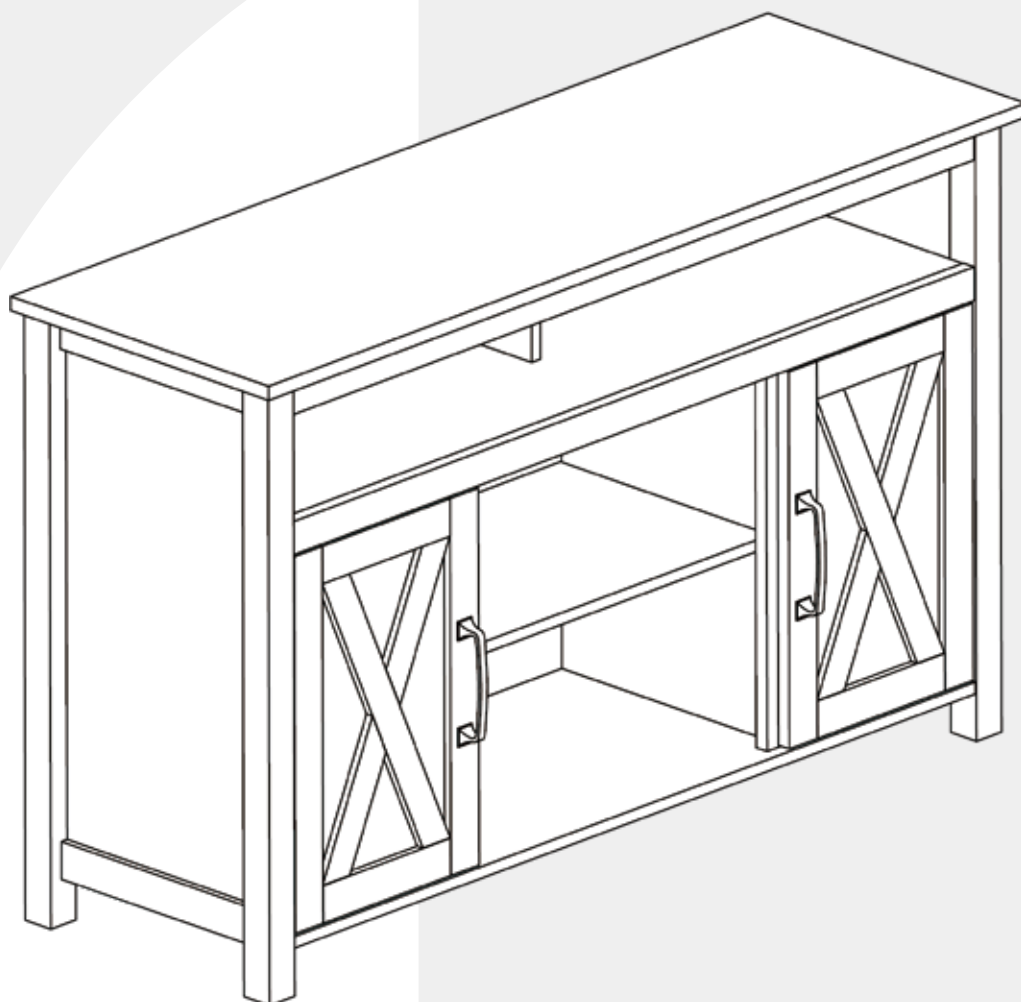

Belleze®

Instruction
Manual



 
 
 
Scan to view
online tutorial
or visit
www.belleze.com

Read Before Assembly

The instruction booklet contains **IMPORTANT** safety information. Please read it in full and keep it for future reference.





WARNING!

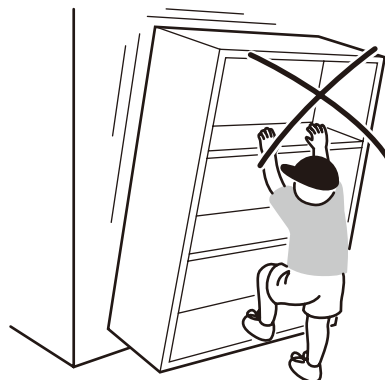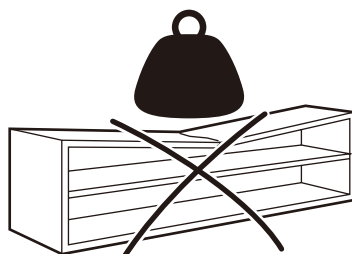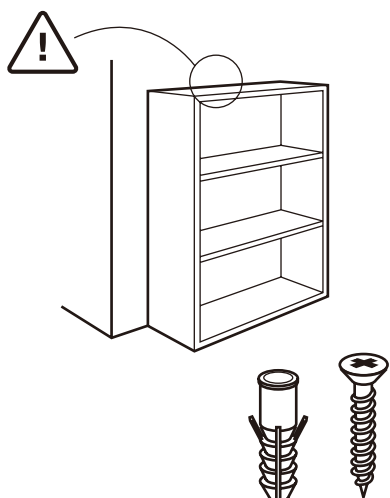

- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.
- Different wall materials requires different type of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or local hardware store and seek professional advice.
- Only place items that is within the recommended size and weight limit of the furniture.
- Items placed onto the furniture must be resting on a support surface without hanging over the edges.
- Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and / or injuries.



  CAUTION!

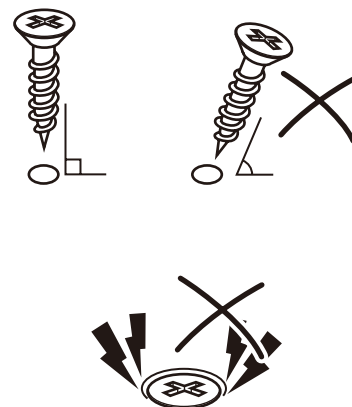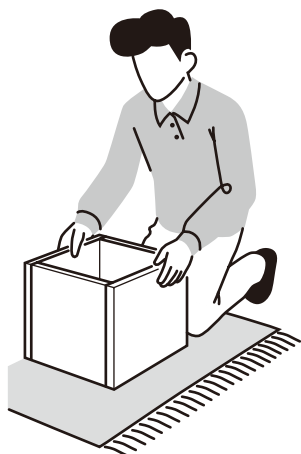

- Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.
- When assembling the furniture, keep pets and children away from the assembly area.
- Ensure the product is fully assembled before use. If you are missing any hardware or parts, do not use it until you have restored the missing parts.
- This furniture requires 2 people for assembly.
- Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.
- There are small components used in the construction of the furnitures. Loose items, plastic bags, and packaging films should be kept away from pets or children to avoid choking hazard or suffocations.
- Read this instruction manual prior to assembly and familiarize yourself with the various steps.
- Install all hardware perpendicular to the opening unless otherwise specified.
- Hand tight all hardware and careful not to over-tighten to avoid damaging the product.

Assembly Symbols



- Follow sequential order.



- Build specified number of parts.



- Flip part as indicated.



- Rotate part as indicated.



- Choose your own assembly options.



- Pay attention to the part orientation.



- Leave bolts or screws partially tighten.



- Fully tighten bolts or screws.



- Level the furniture on the ground.

 


Estimated Time for Assembly


120 mins




Weight Capacity Limitations are as Follows:

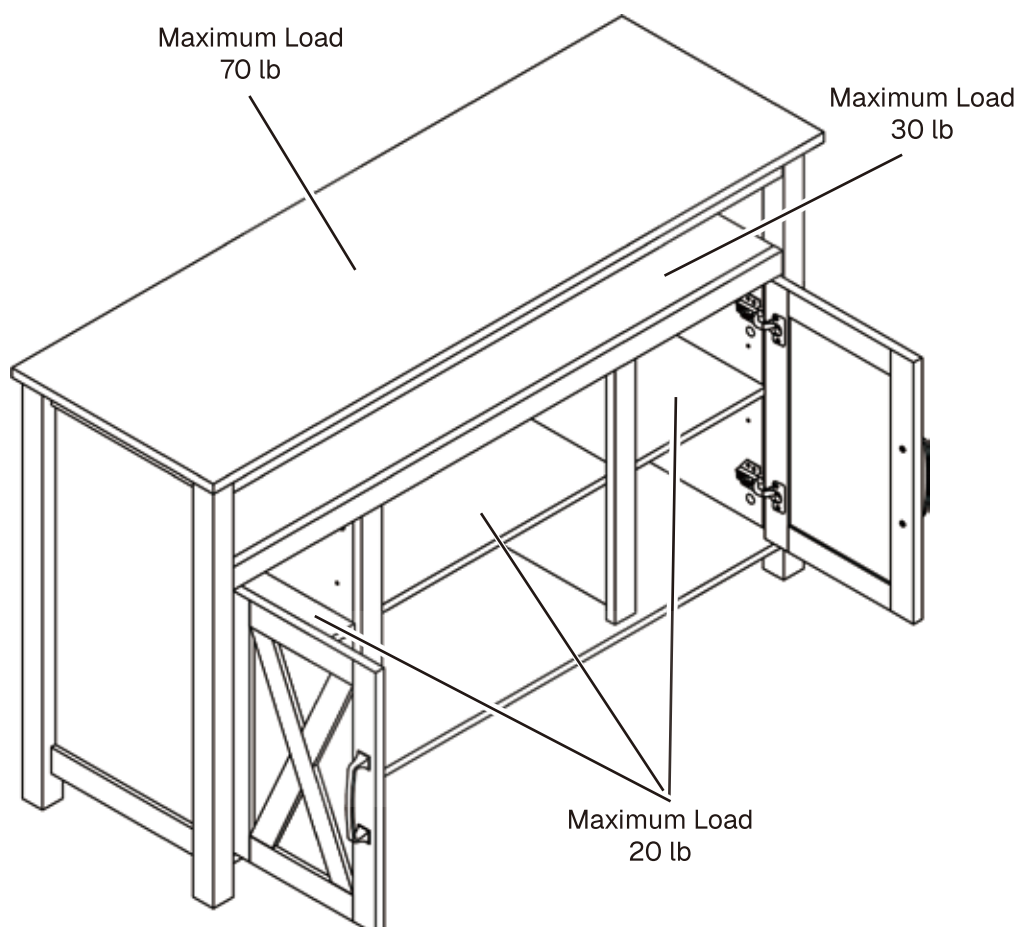


Tools Needed

 

• Philips Screwdriver

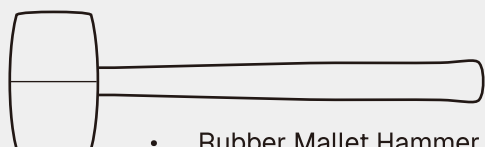 


• Rubber Mallet Hammer

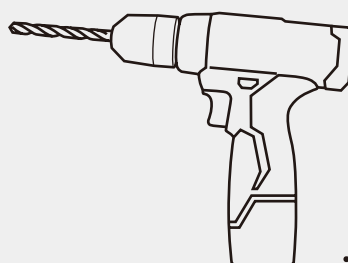 

• Electric Drill

 
Package Contents

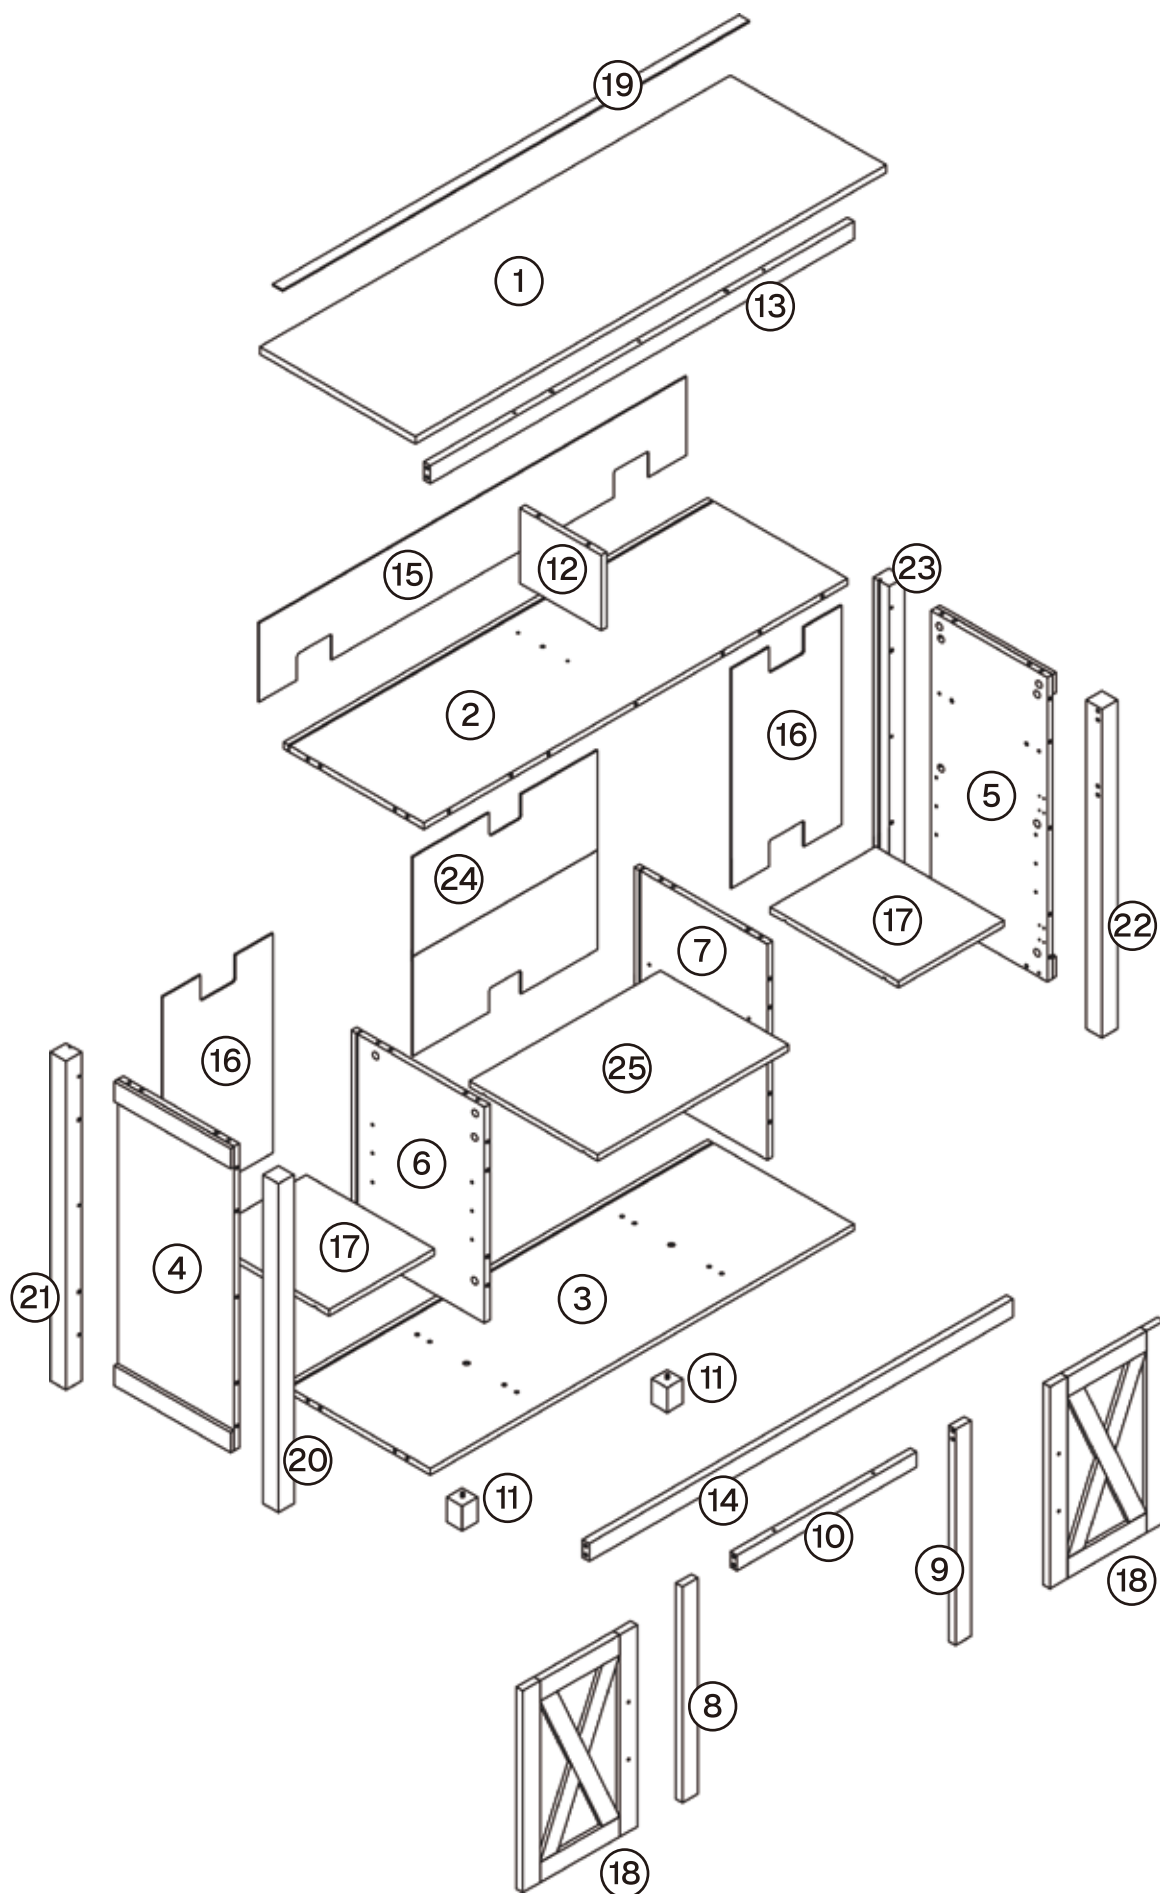

Package Contents



CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Center Panel	1
3	Bottom Panel	1
4	Left Lateral Panel	1
5	Right Lateral Panel	1
6	Left Medial Panel	1
7	Right Medial Panel	1
8	Left Surround Panel	1
9	Right Surround Panel	1
10	Top Surround Panel	1
11	Support Leg	2
12	Top Divider Panel	1
13	Top Crossbar	1
14	Center Crossbar	1
15	Top Back Panel	1
16	Side Back Panel	2
17	Storage Shelf Panel	2
18	Cabinet Door	2
19	Top Garnishing Strip	1
20	Left Front Leg	1
21	Left Back Leg	1
22	Right Front Leg	1
23	Right Back Leg	1
24	Center Back Panel	1
25	Center Storage Shelf Panel	1

 Package Contents

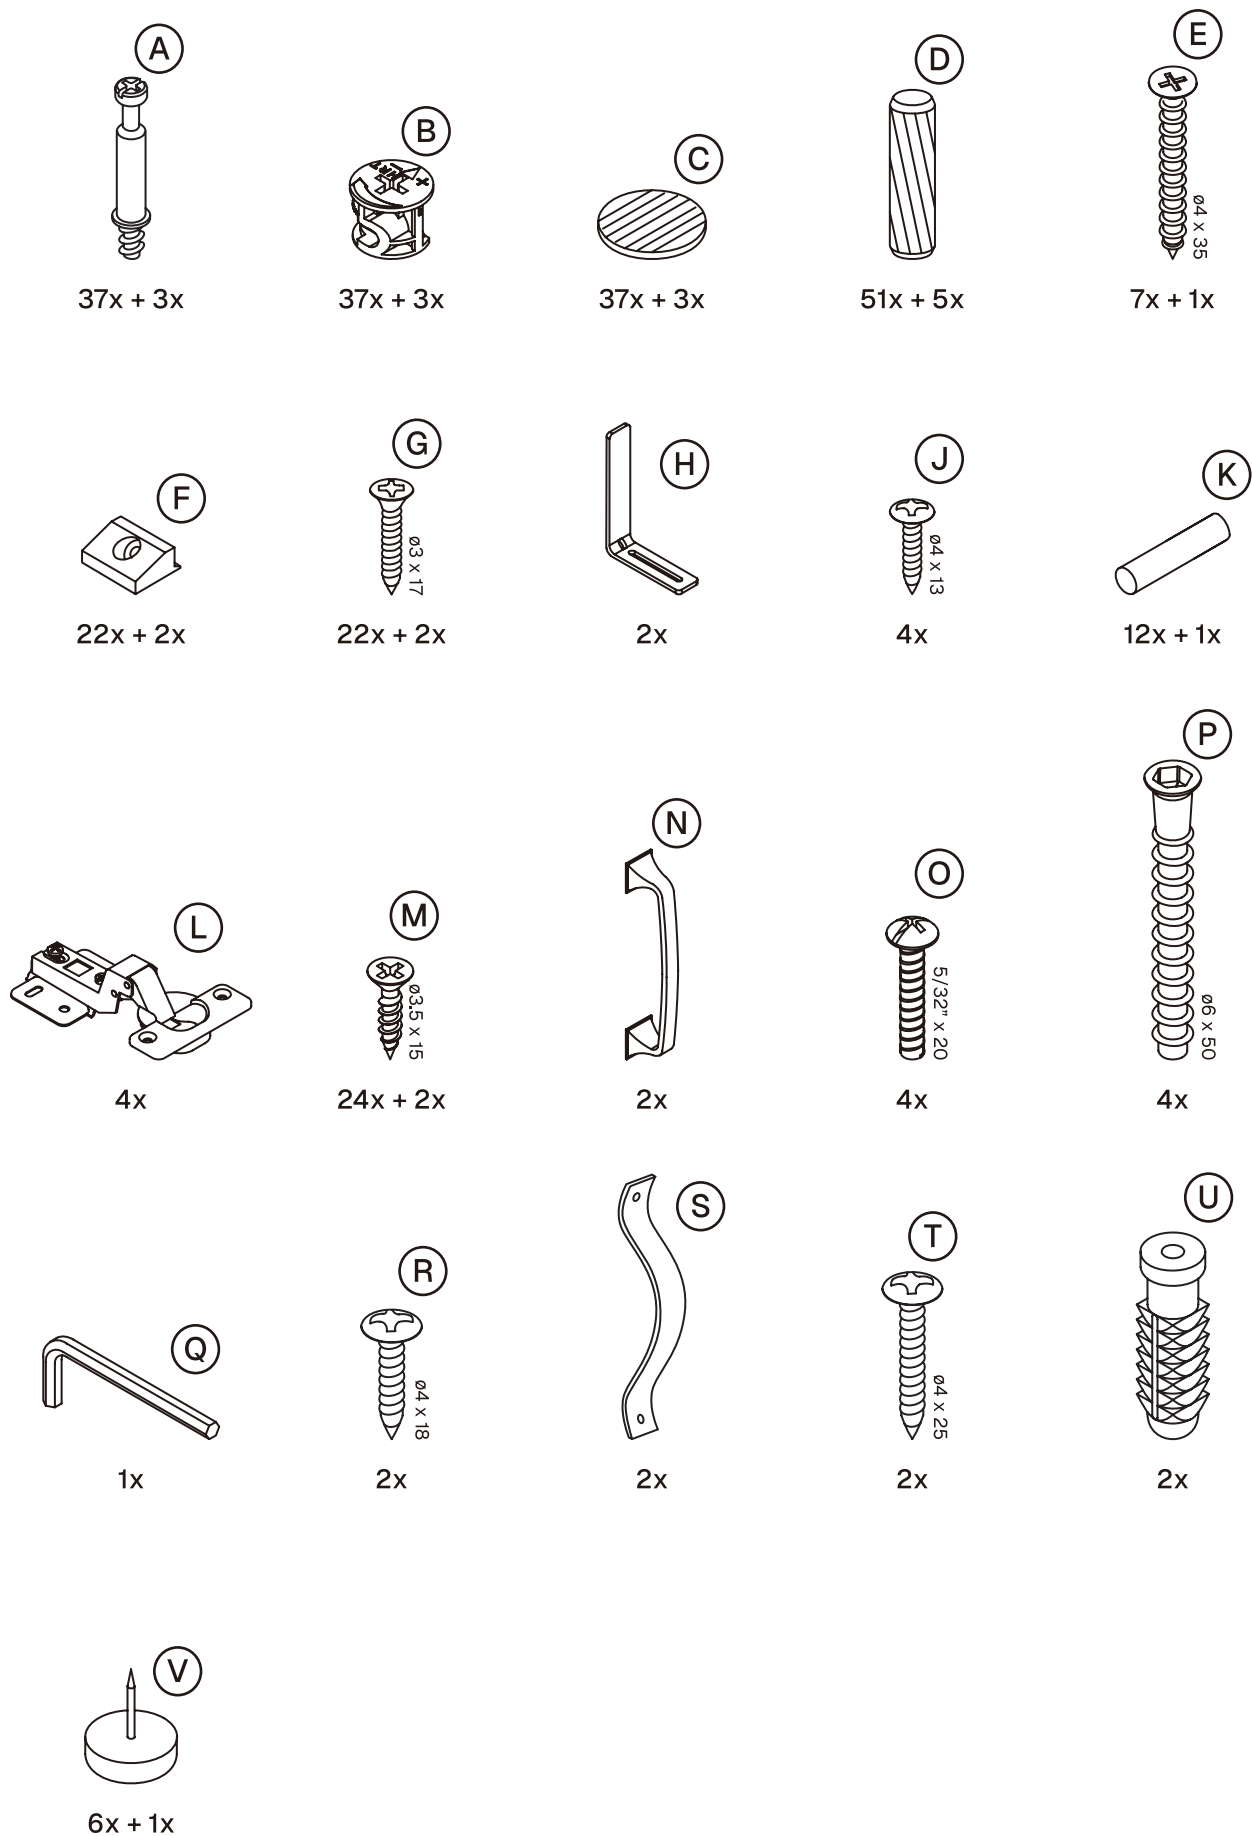



01

  Center panel and center crossbar

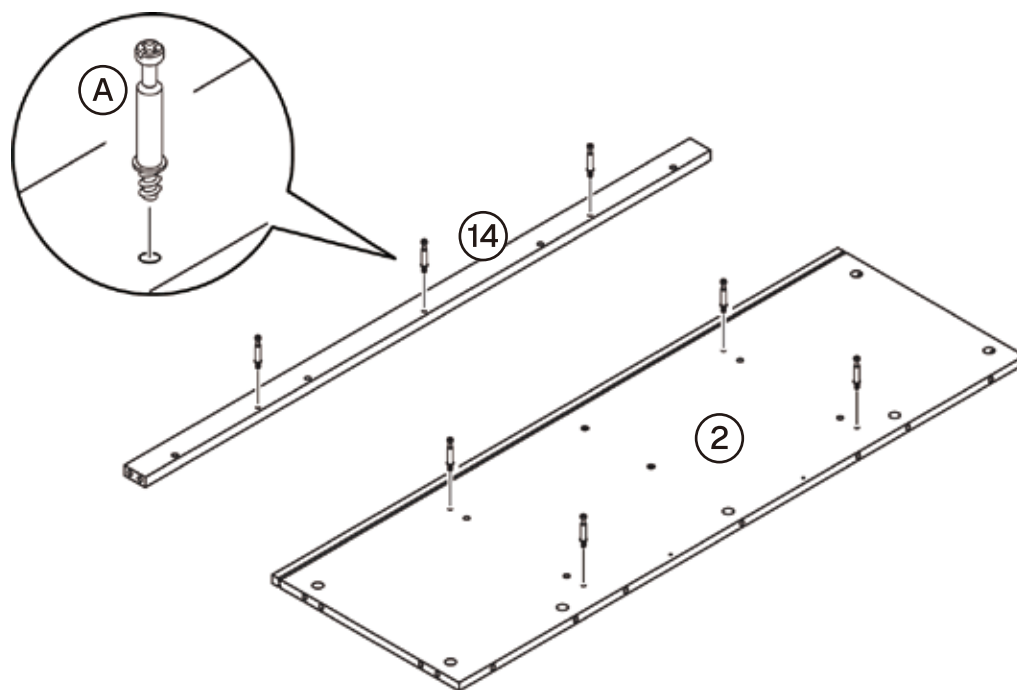

02

  Center panel, top divider panel and center crossbar

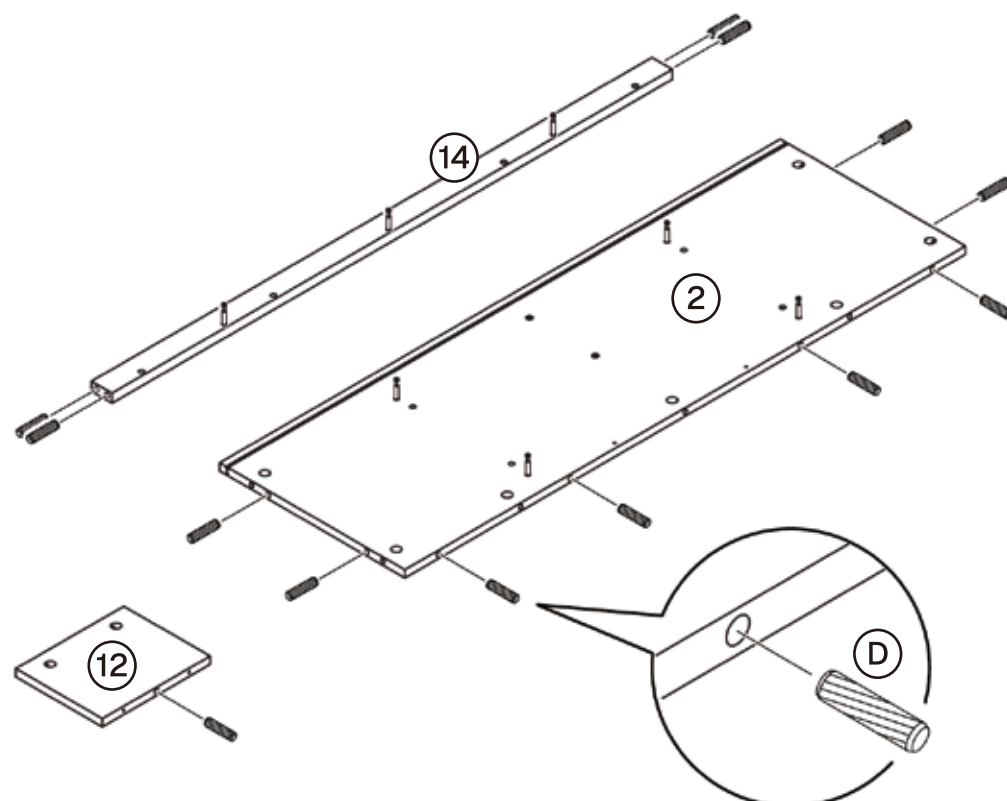


03 Attaching top crossbar



B 3x



 
C 3x

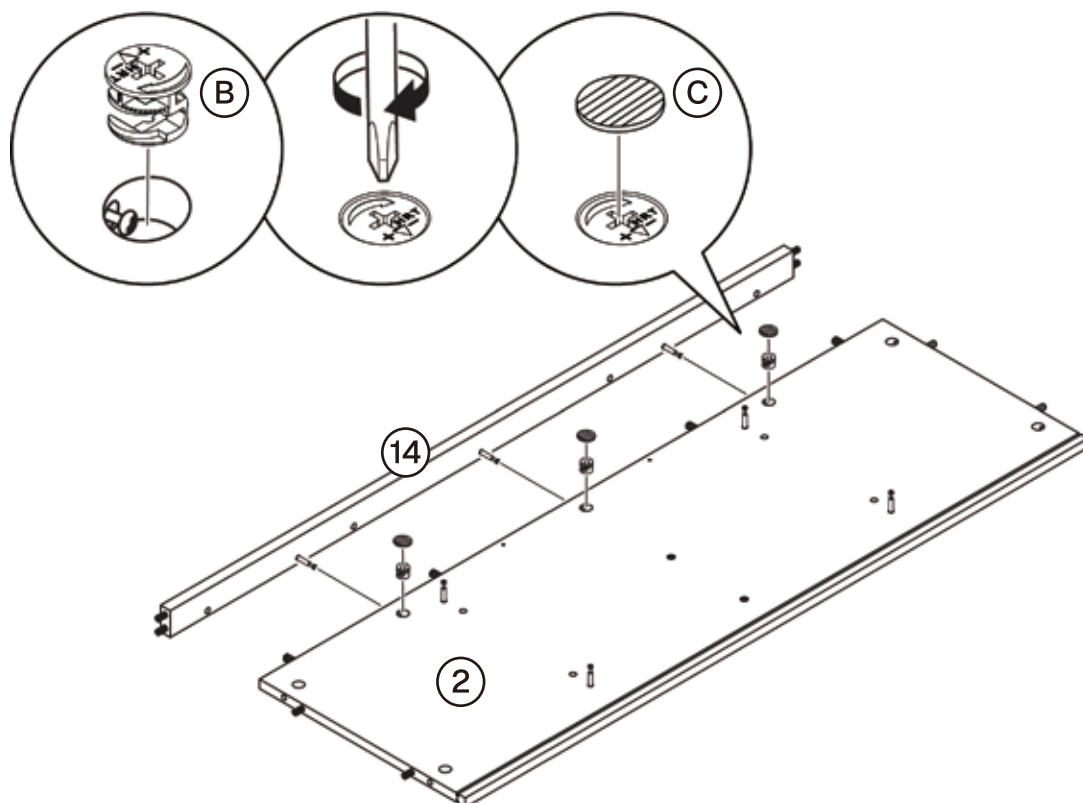

04 Attaching top divider panel



 
E 2x

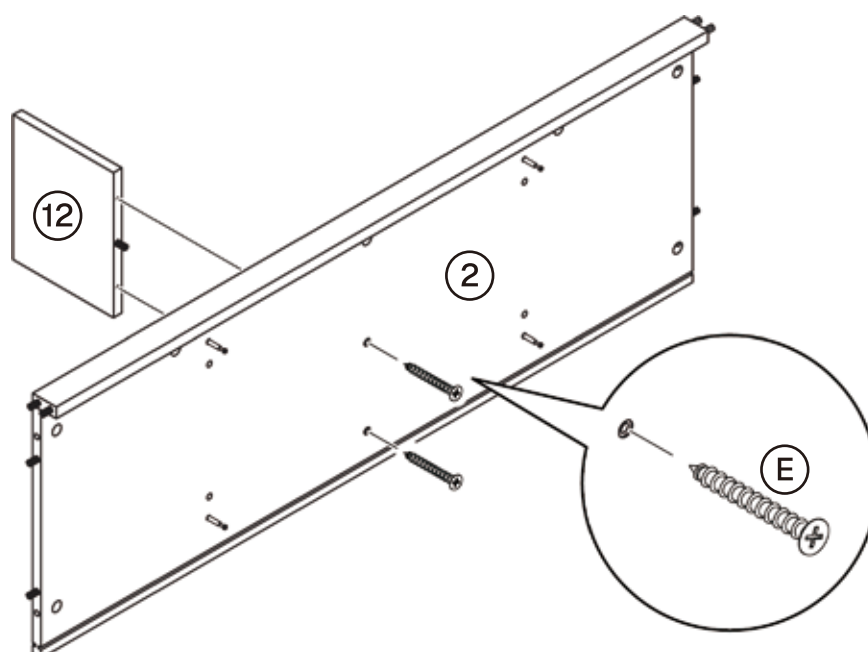

05 Surround panels



 
A 4x

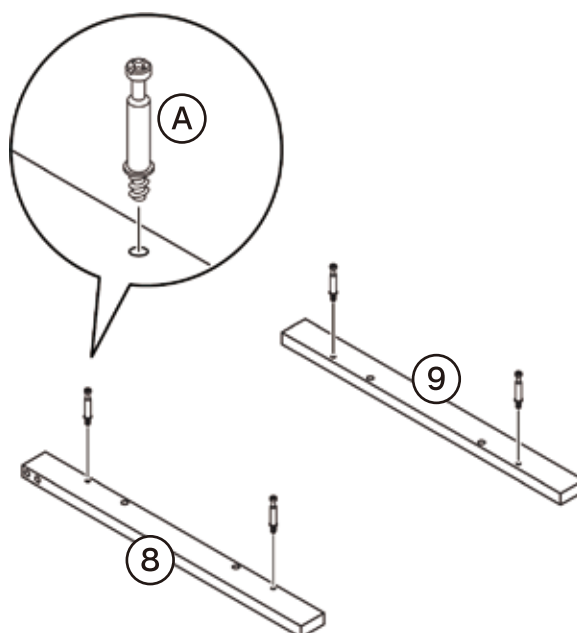

06 Medial panels and top surround panel



 D 16x

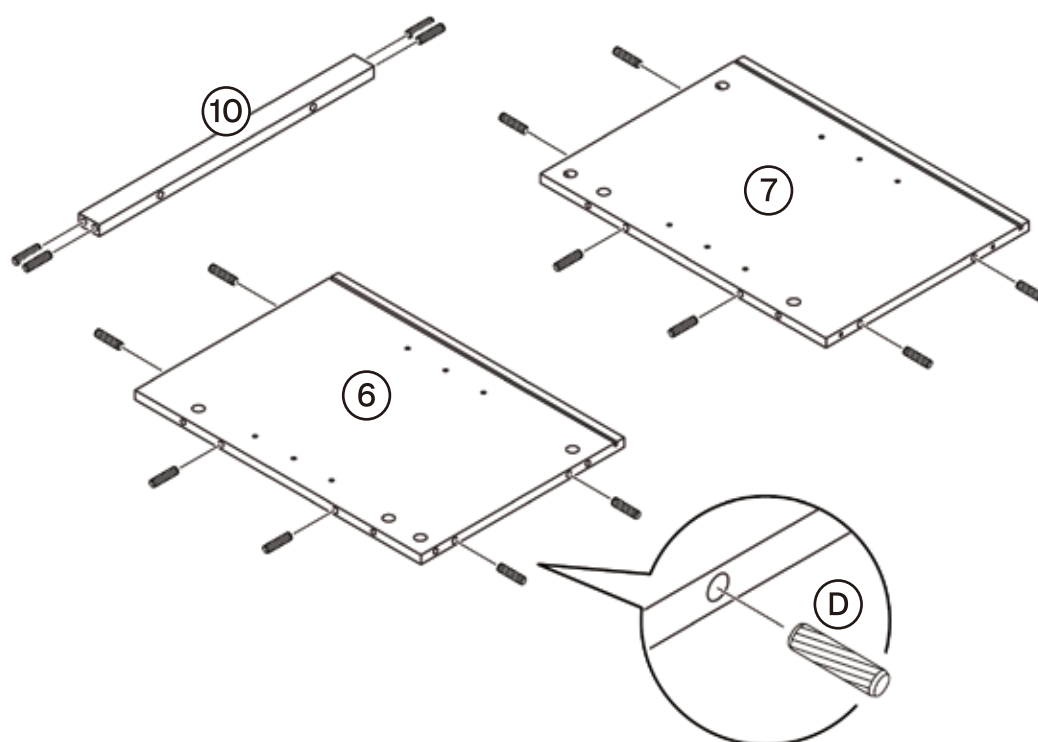


07 Attaching surround panels to medial panels




B 4x



 C 4x

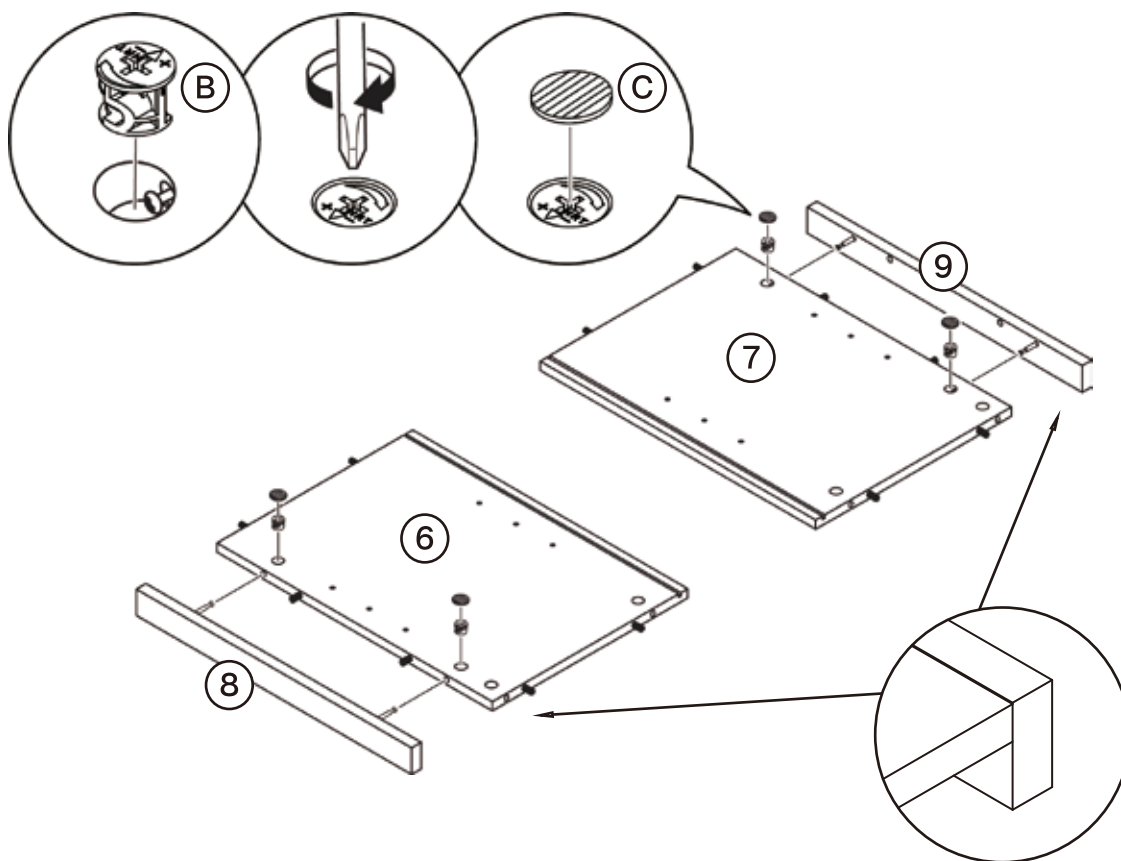

08 Assemble the top surround panel

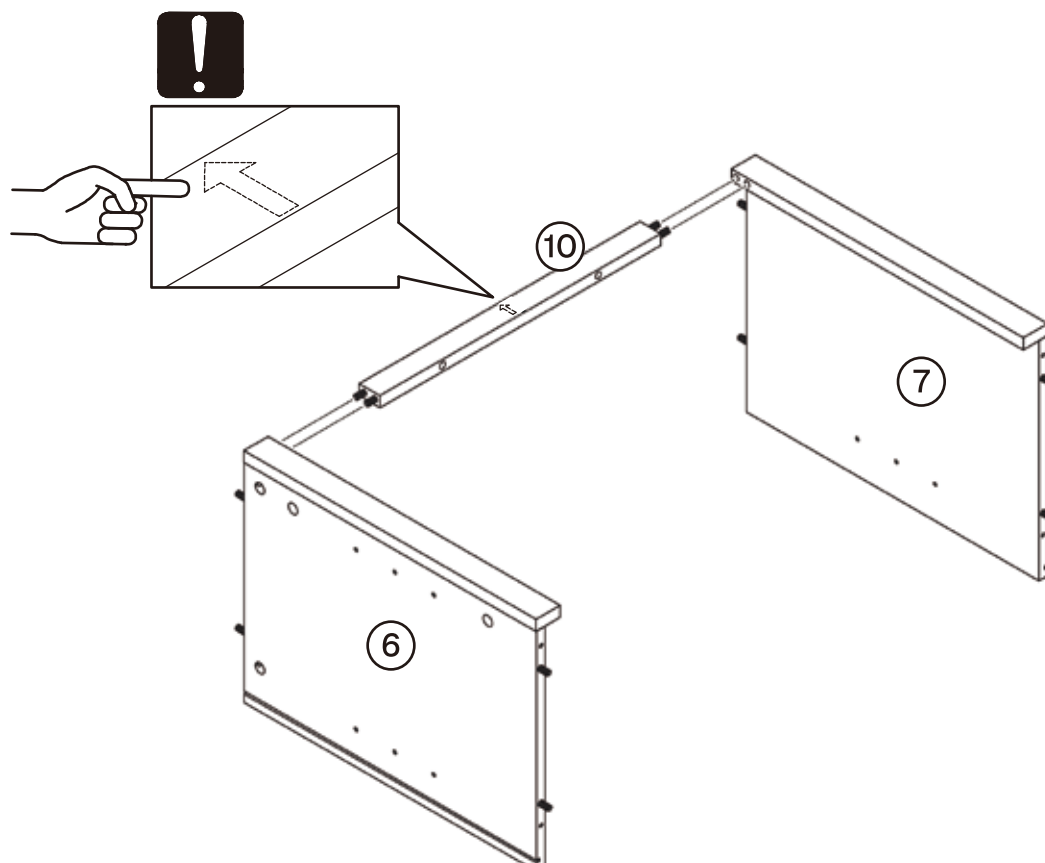 


09 Attaching fire mantel to center panel



B 4x



 
C 4x

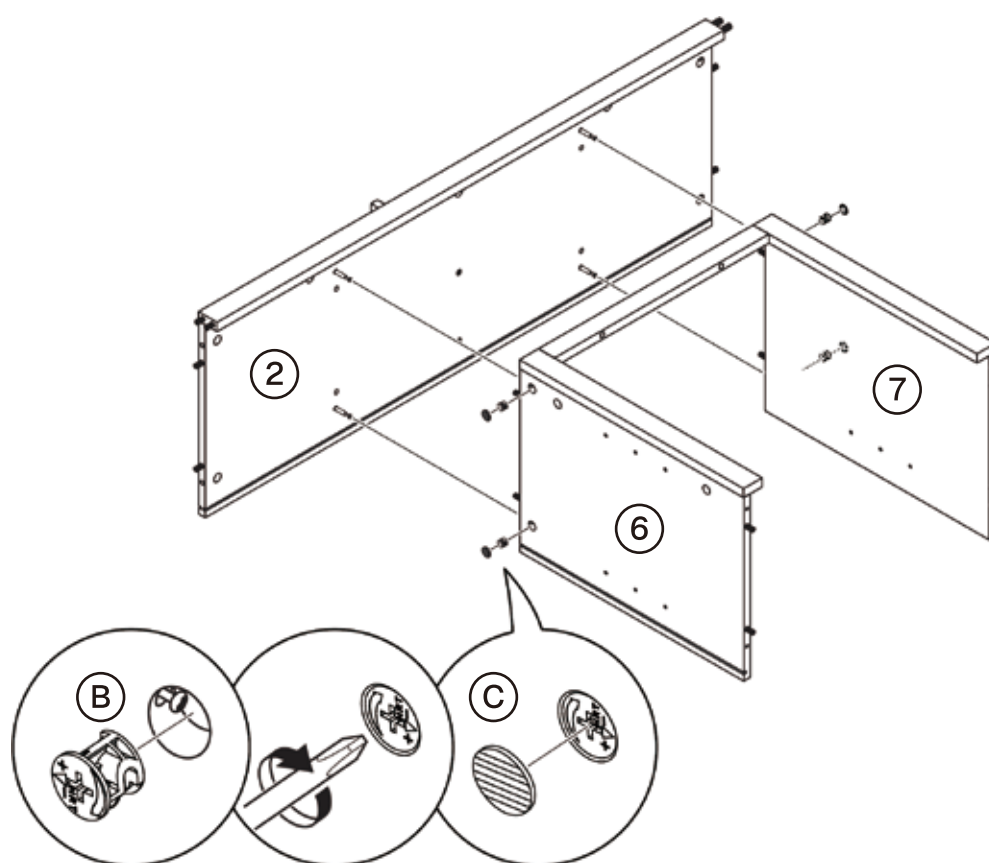



10 Securing top surround panel




 
E 2x

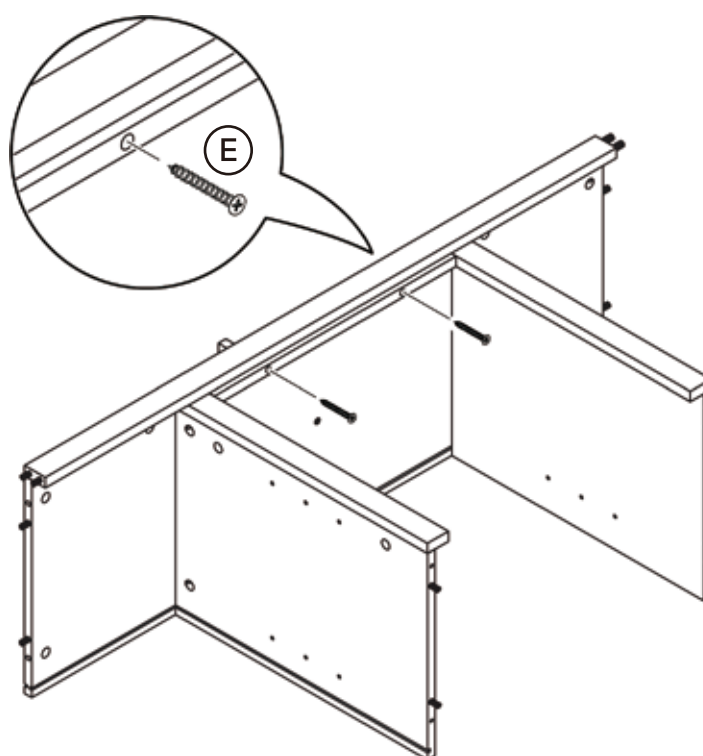

A TV STAND

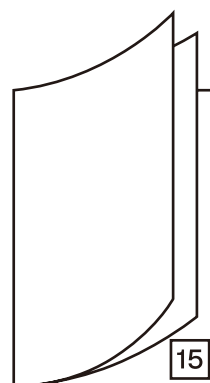 
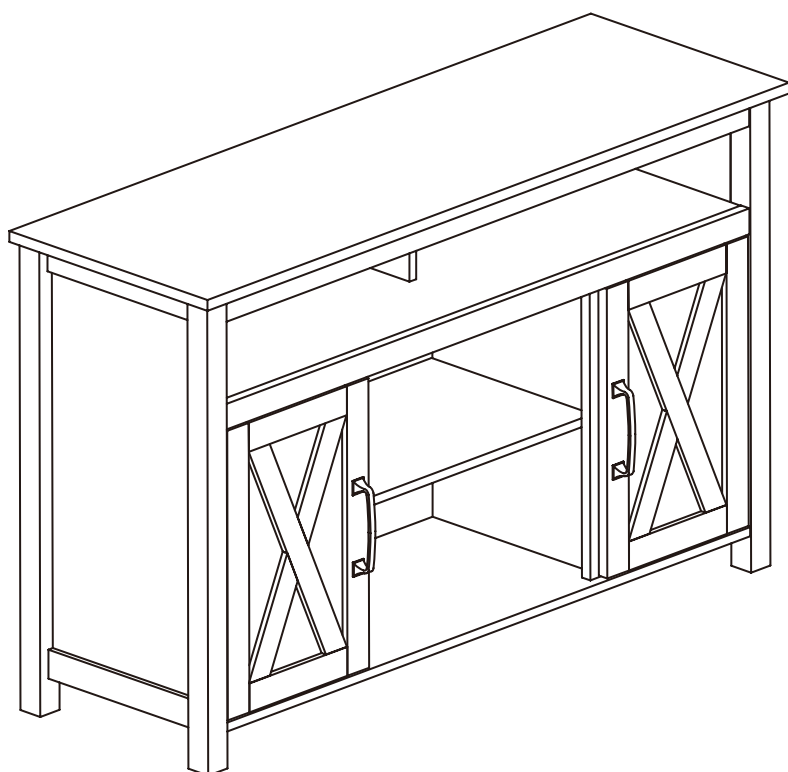 


B Fireplace

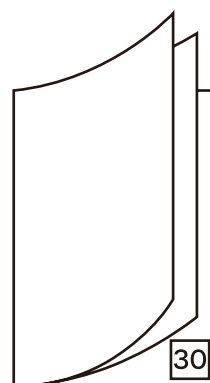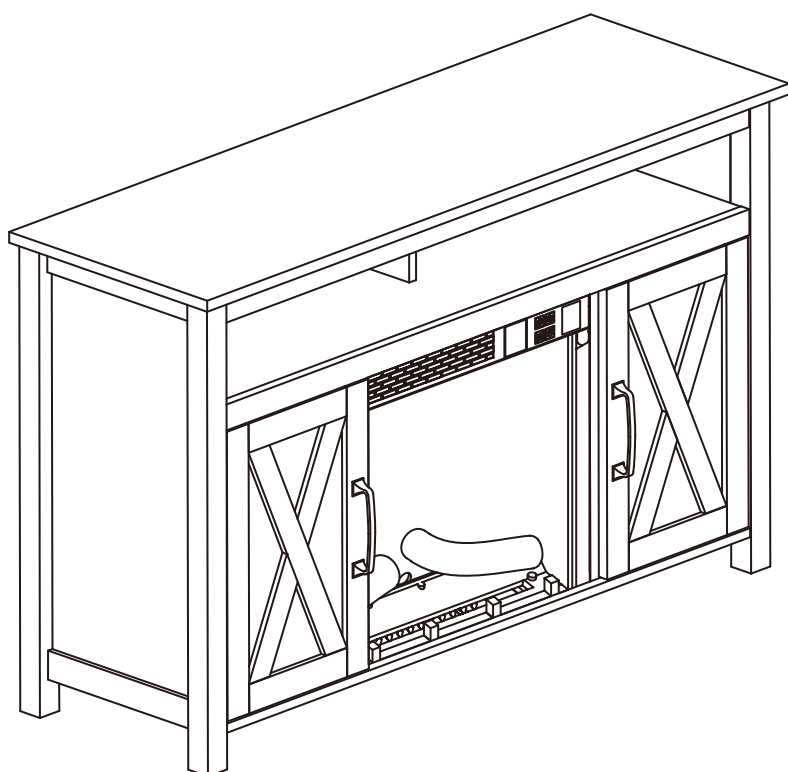  

11

  Sliding in center back panel

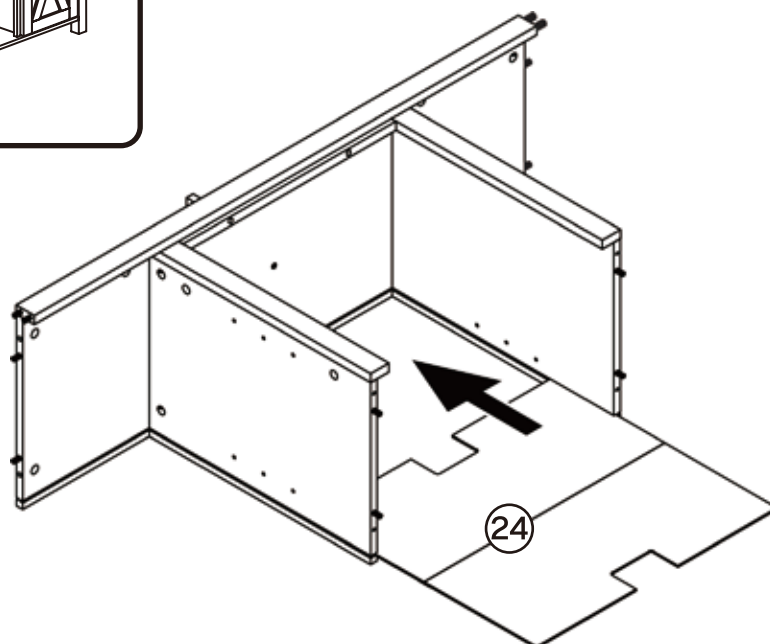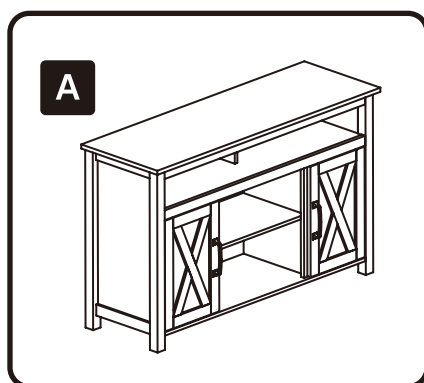


12

Bottom panel



 D 4x

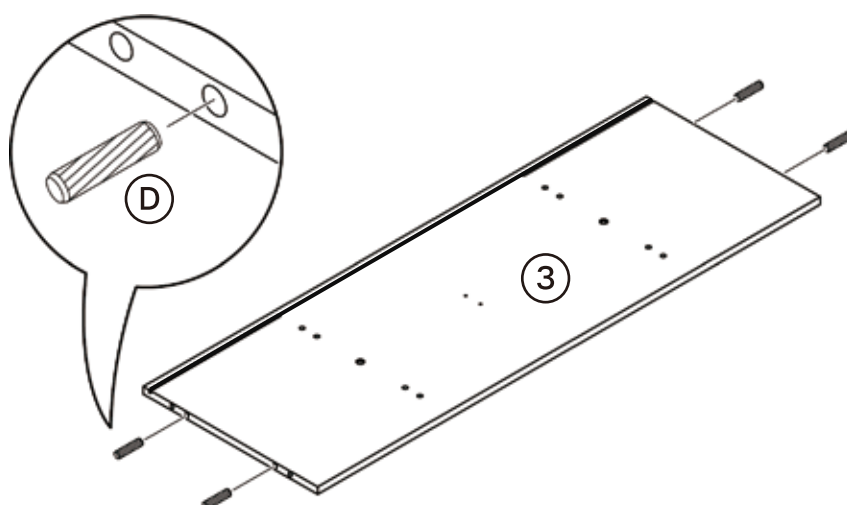

13

 
Assembling bottom panel to fire mantel



P 4x




Q 1x

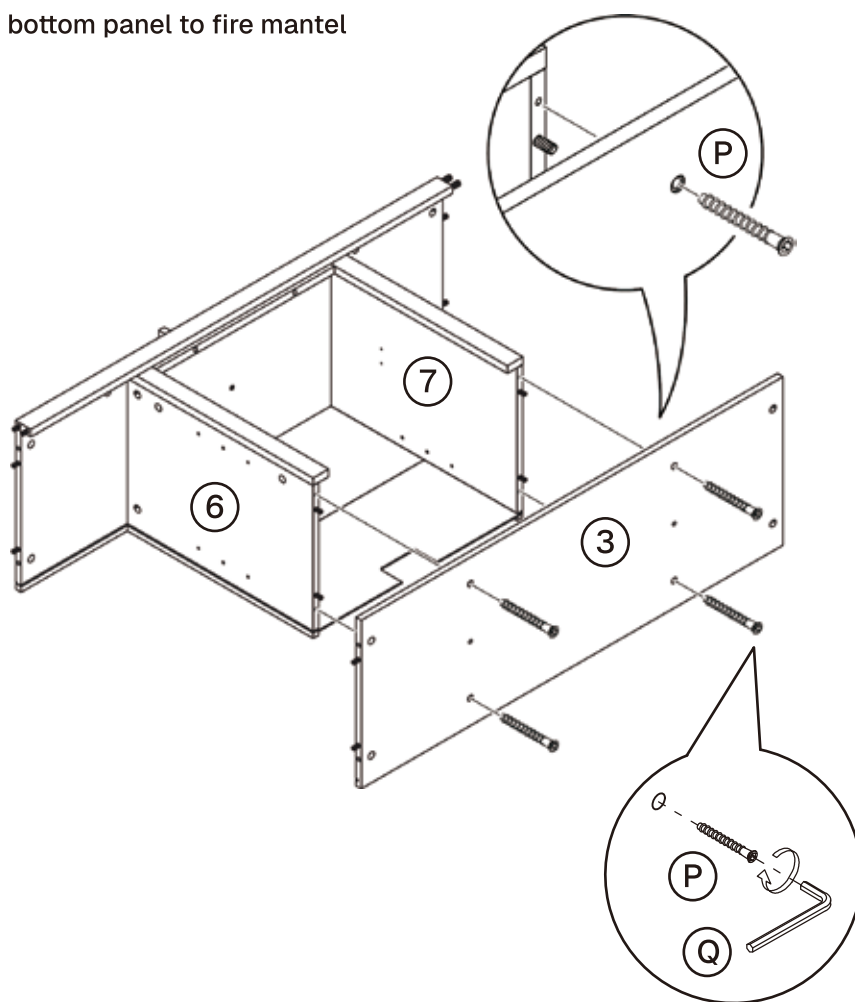

14

Sliding in side back panels

 ★ Warning label should be facing outward.

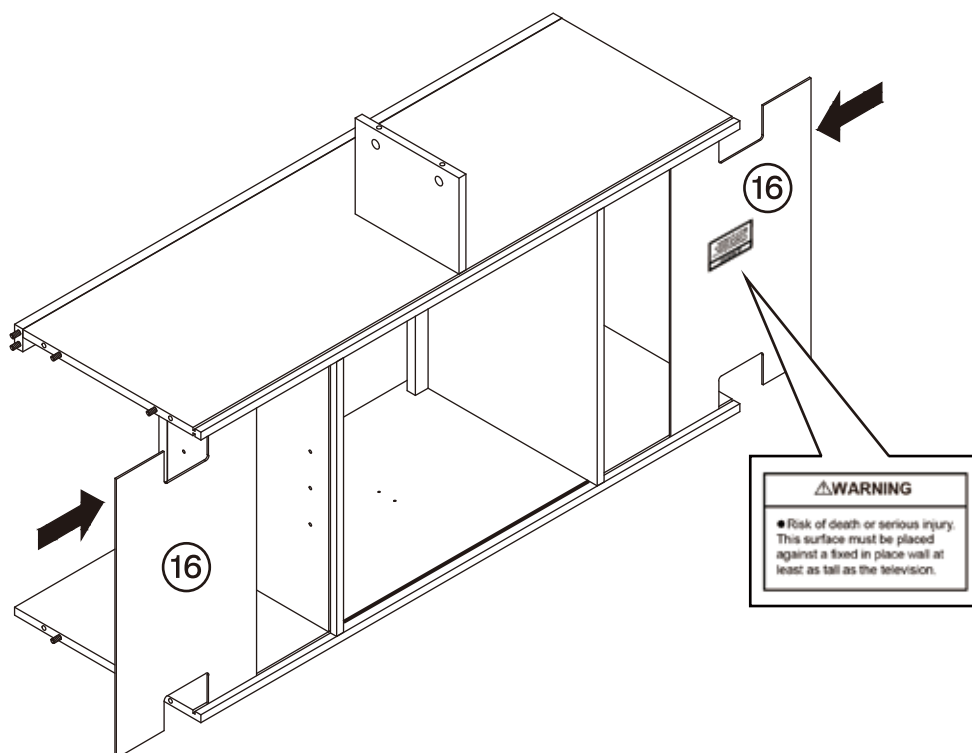

WARNING

 
• Risk of death or serious injury.
This surface must be placed against a fixed in place wall at least as tall as the television.

15

Legs



A 12x

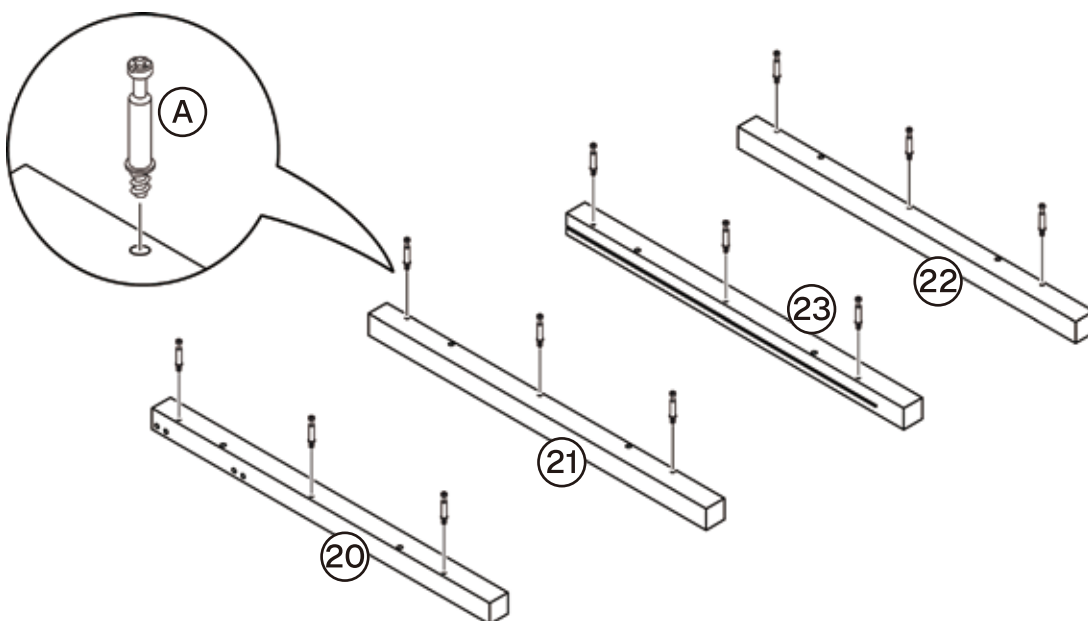


16

Lateral panels



 A 8x

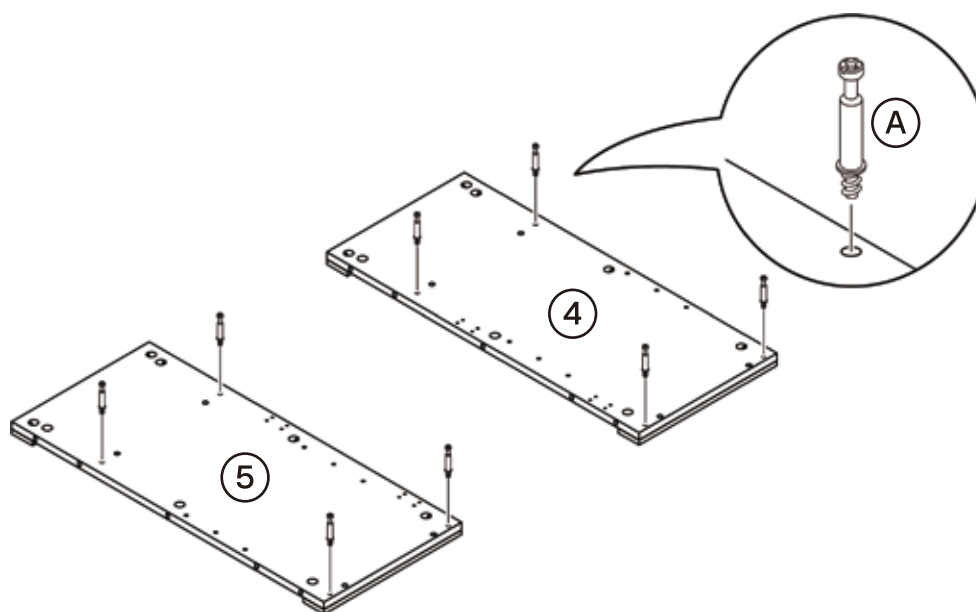


17

Lateral panels and top crossbar



 D 18x

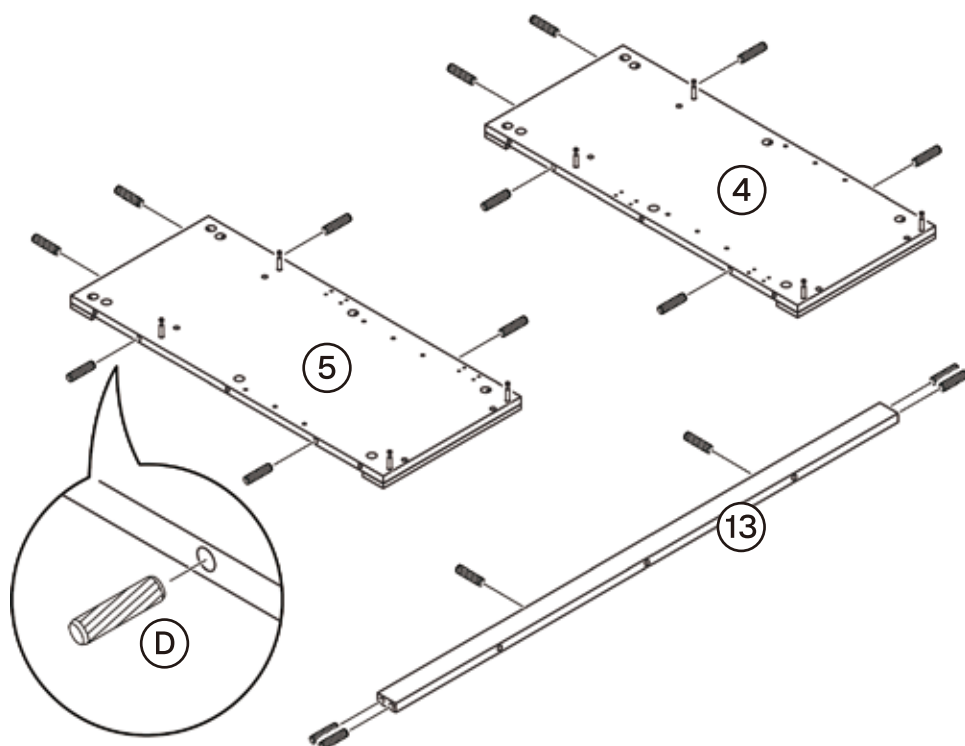

18

 
Assembling legs to lateral panels



B 12x



C 12x

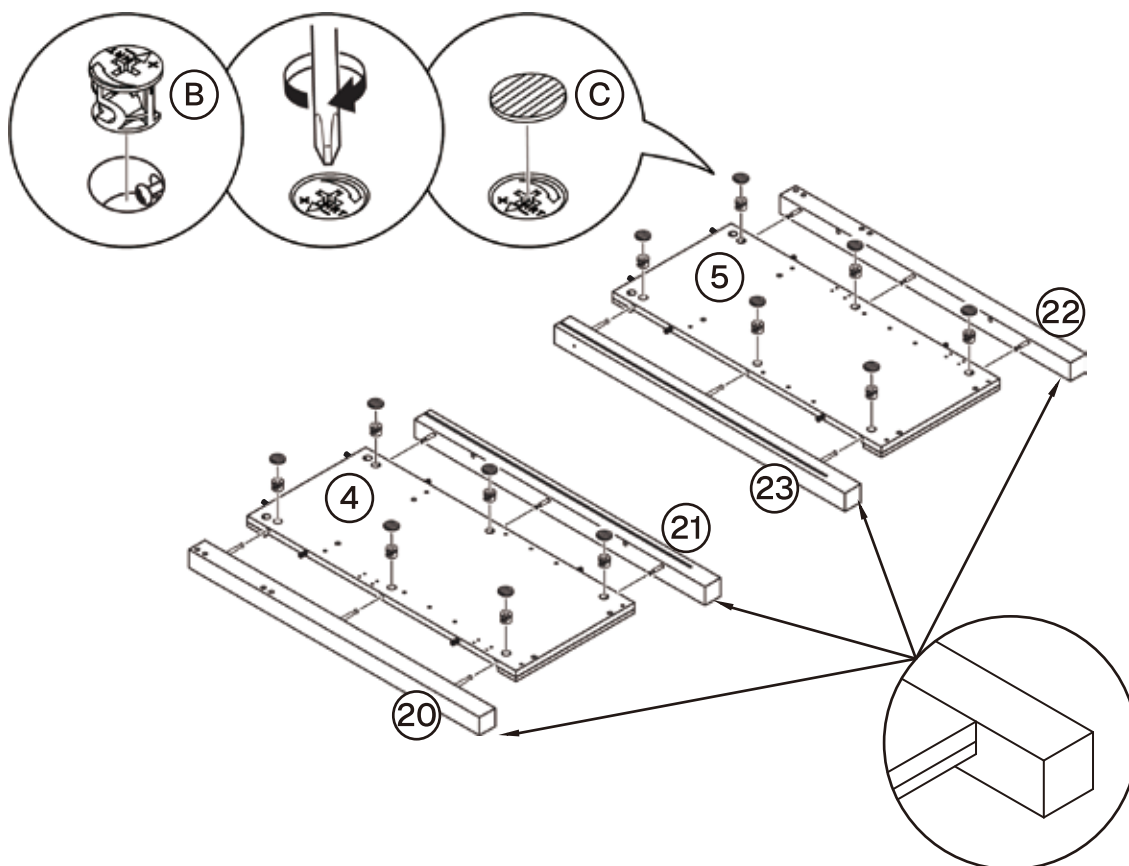

19

 
Assembling top crossbar and lateral panels



B 8x




C 8x

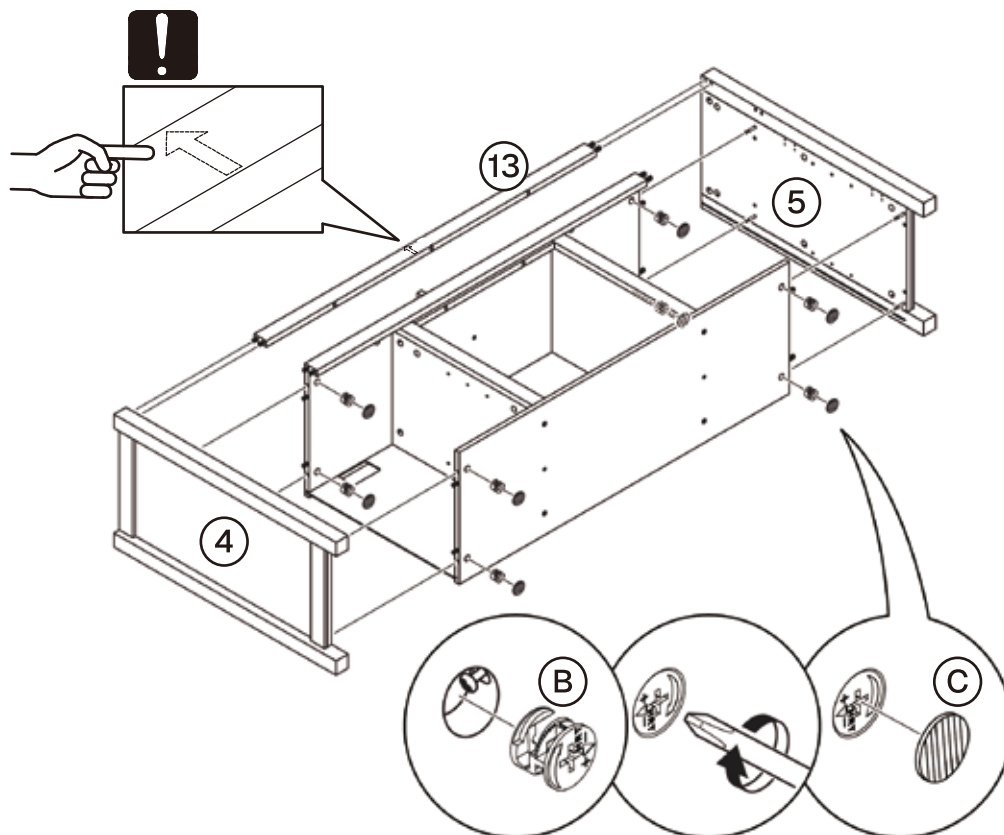

20

 Attaching support legs

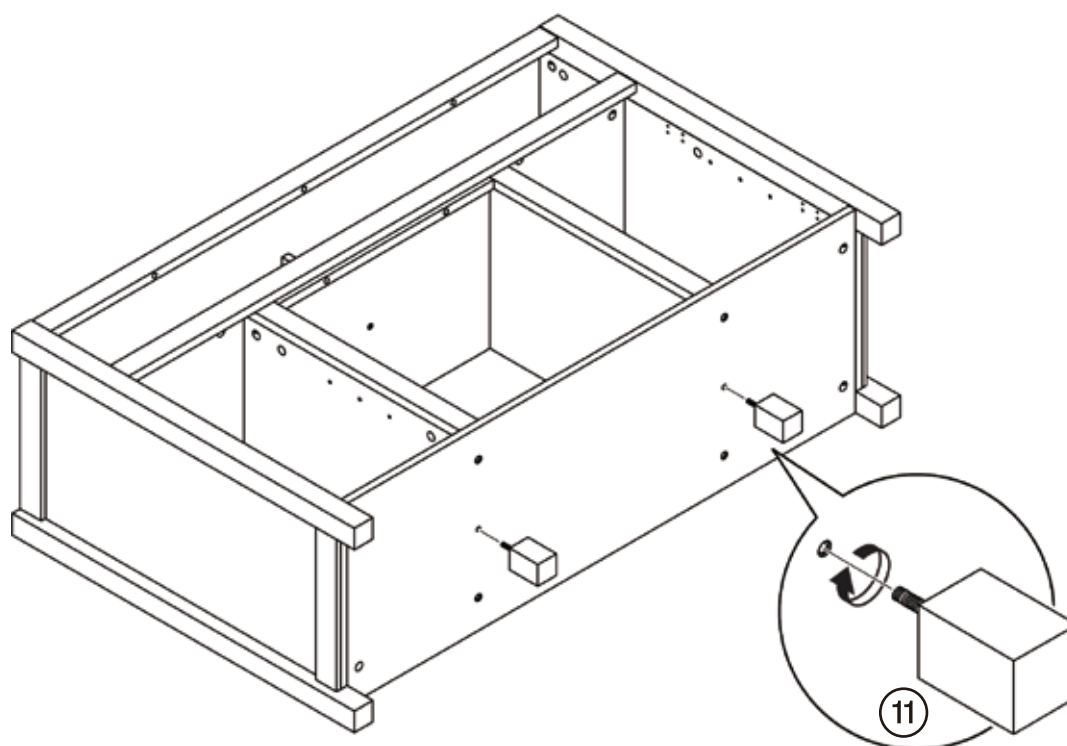

*Assembly symbols




Pay attention to the part orientation


014-HG-41008

19

 21 Attaching leg pads

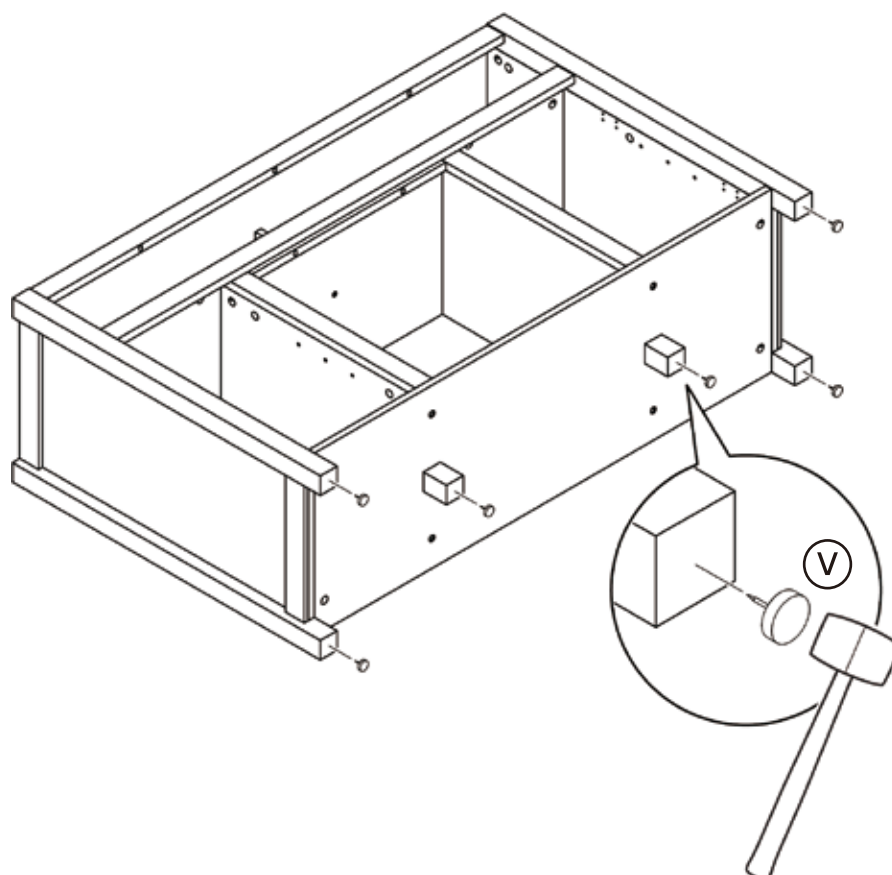


22 Sliding in top back panel

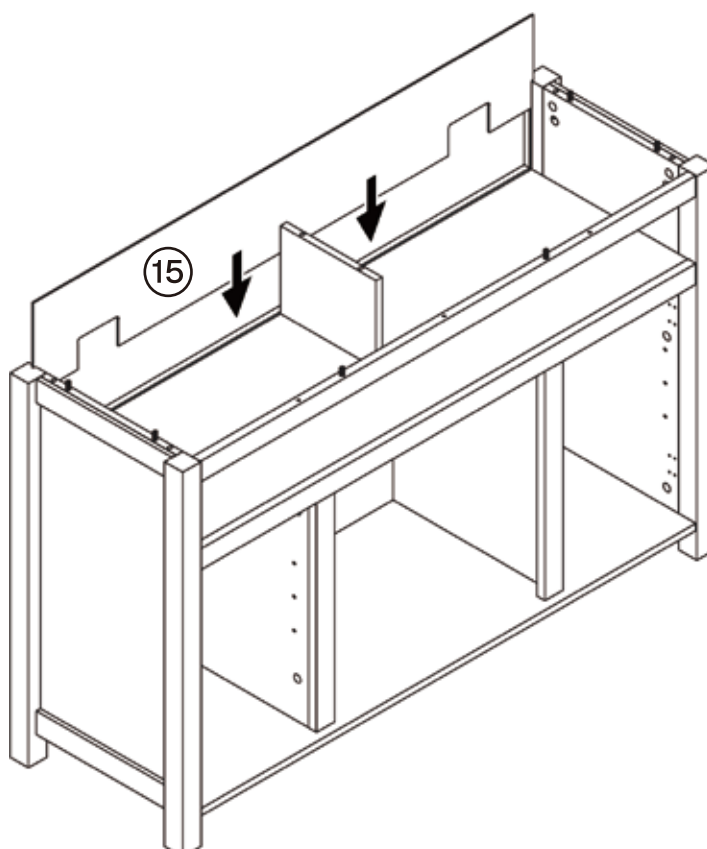 

23 Top panel



 A 6x

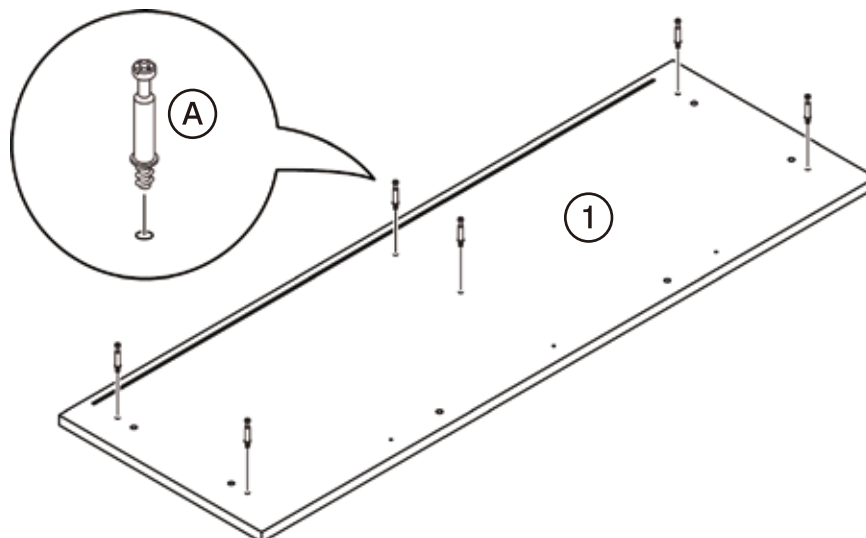


24 Attaching top panel



B 6x



 
C 6x

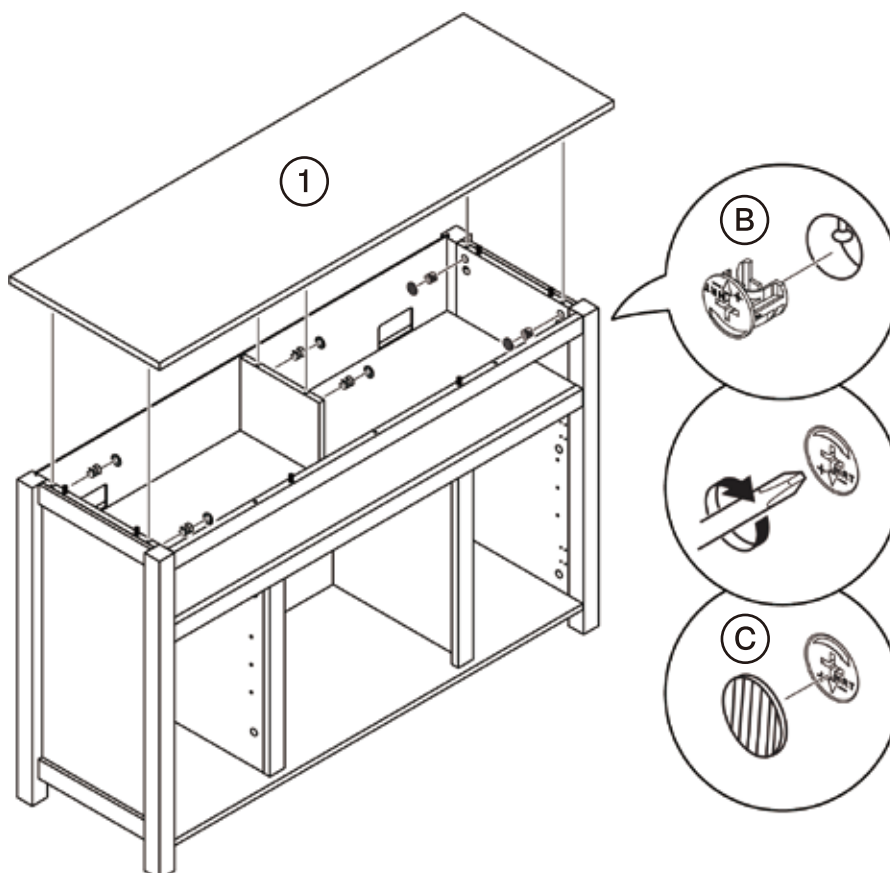

25 Securing top crossbar



 E 3x

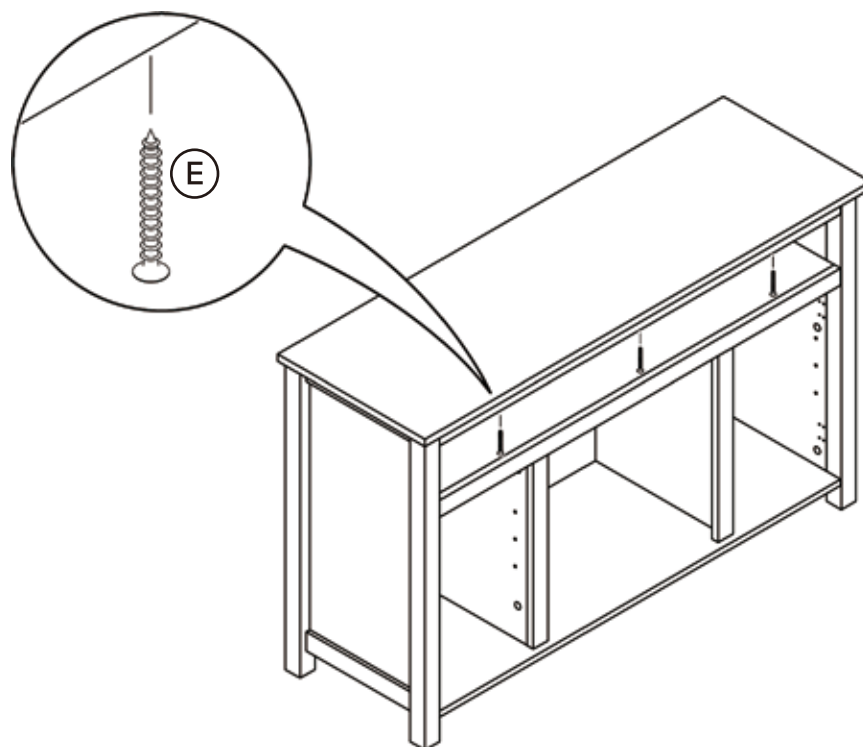


26 Securing back panels




F 22x



 G 22x

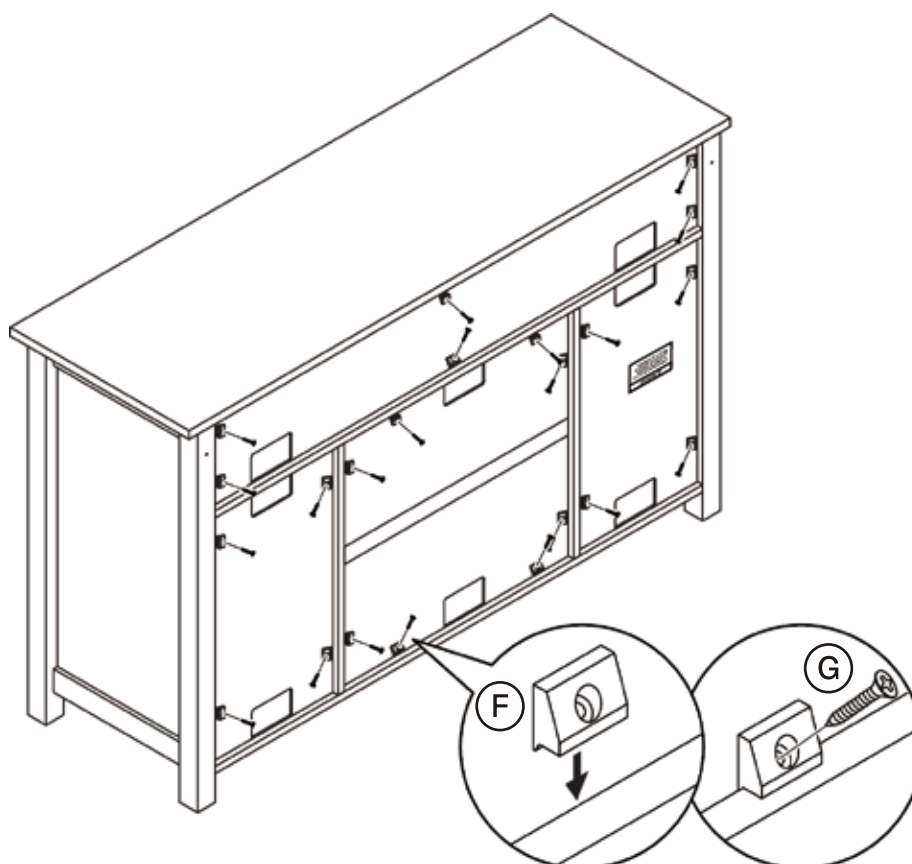


27 Attaching anti-tipping straps

 

R 2x



 
S 2x

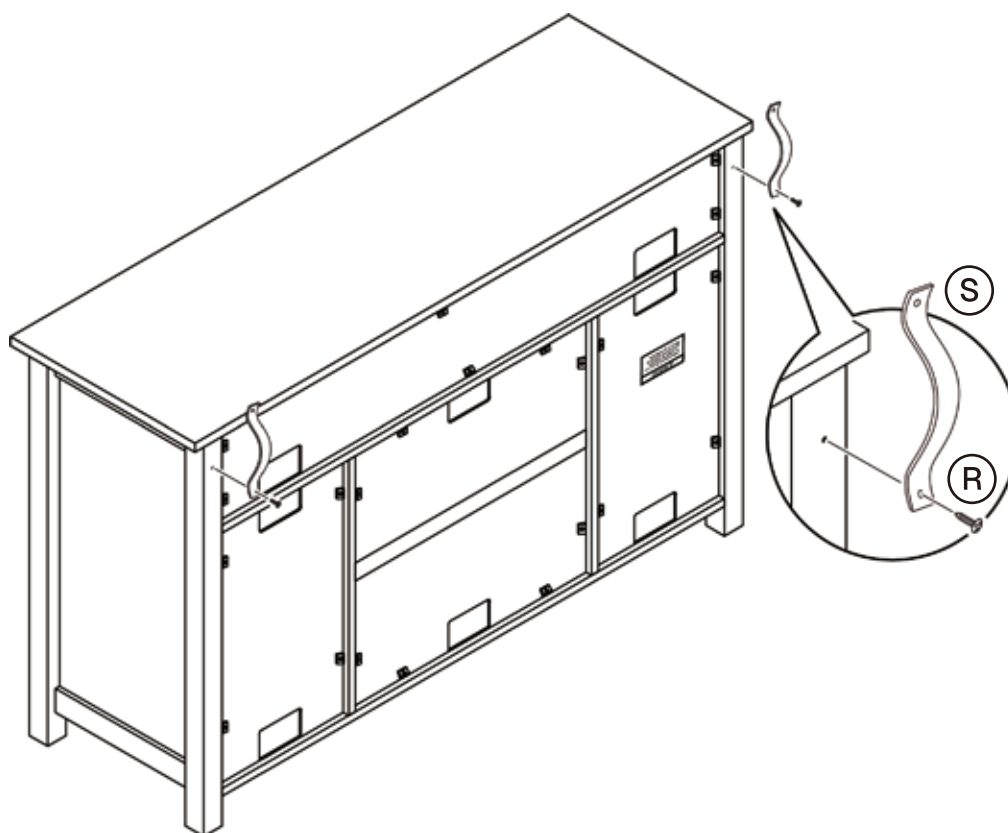

28 Inserting shelf pegs and putting on storage shelf panels



 K 12x

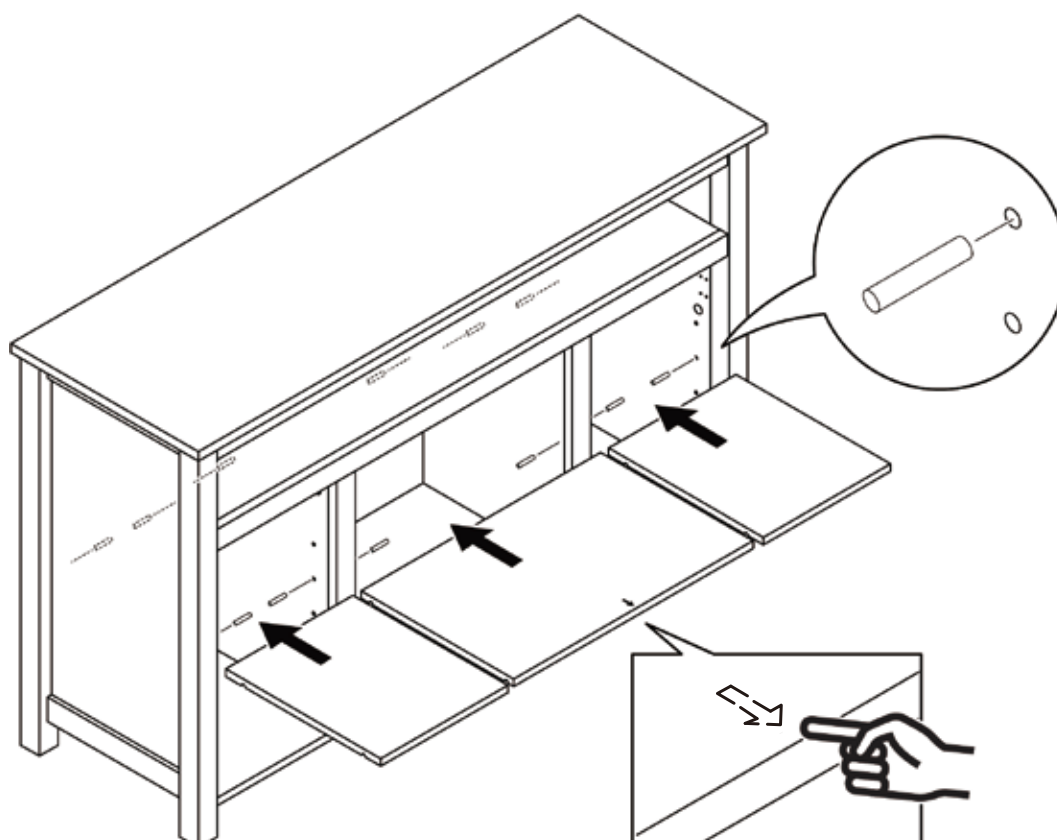

*Assembly symbols




Pay attention to the part orientation

014-HG-41008

23

 
29 Attaching door hinges



L 4x



 M 8x

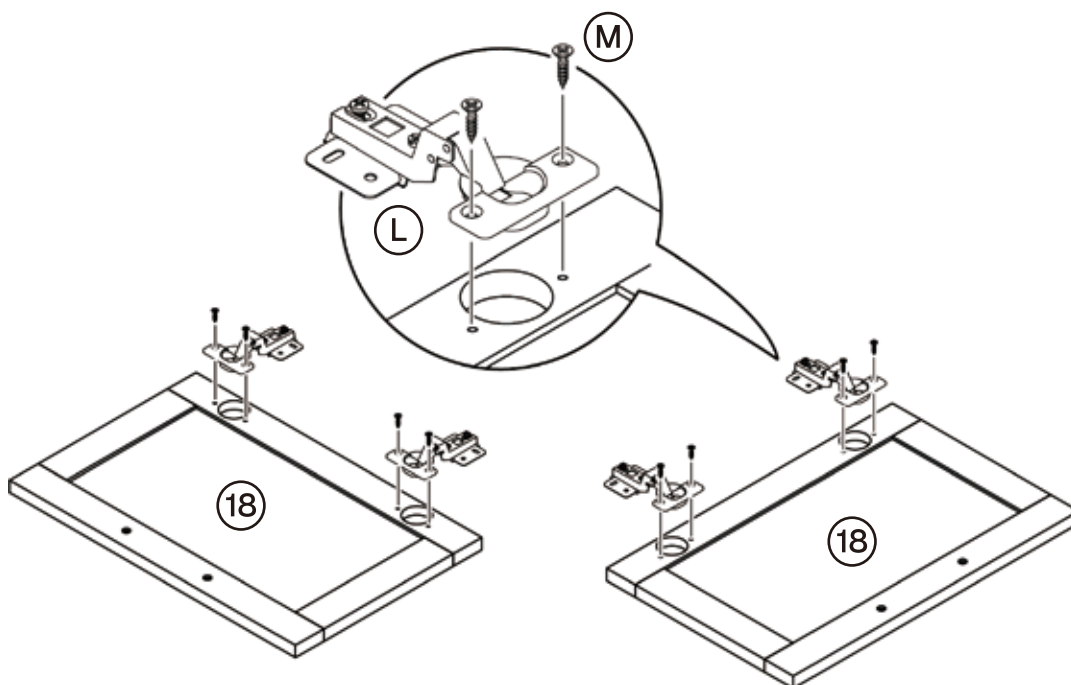


30 Attaching door handles



N 2x



 O 4x

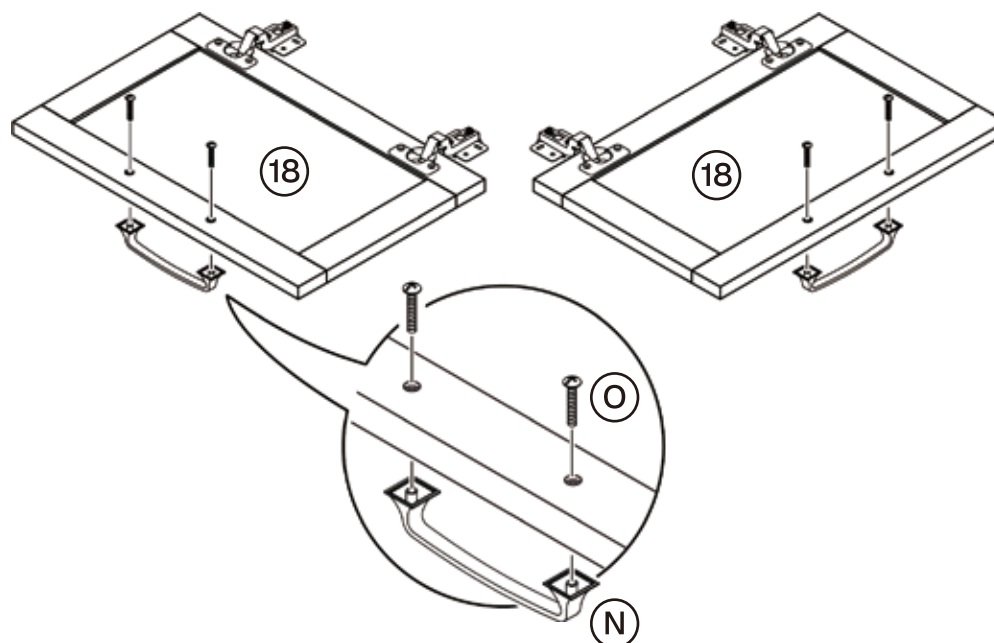


31



Attaching cabinet doors



 M 16x




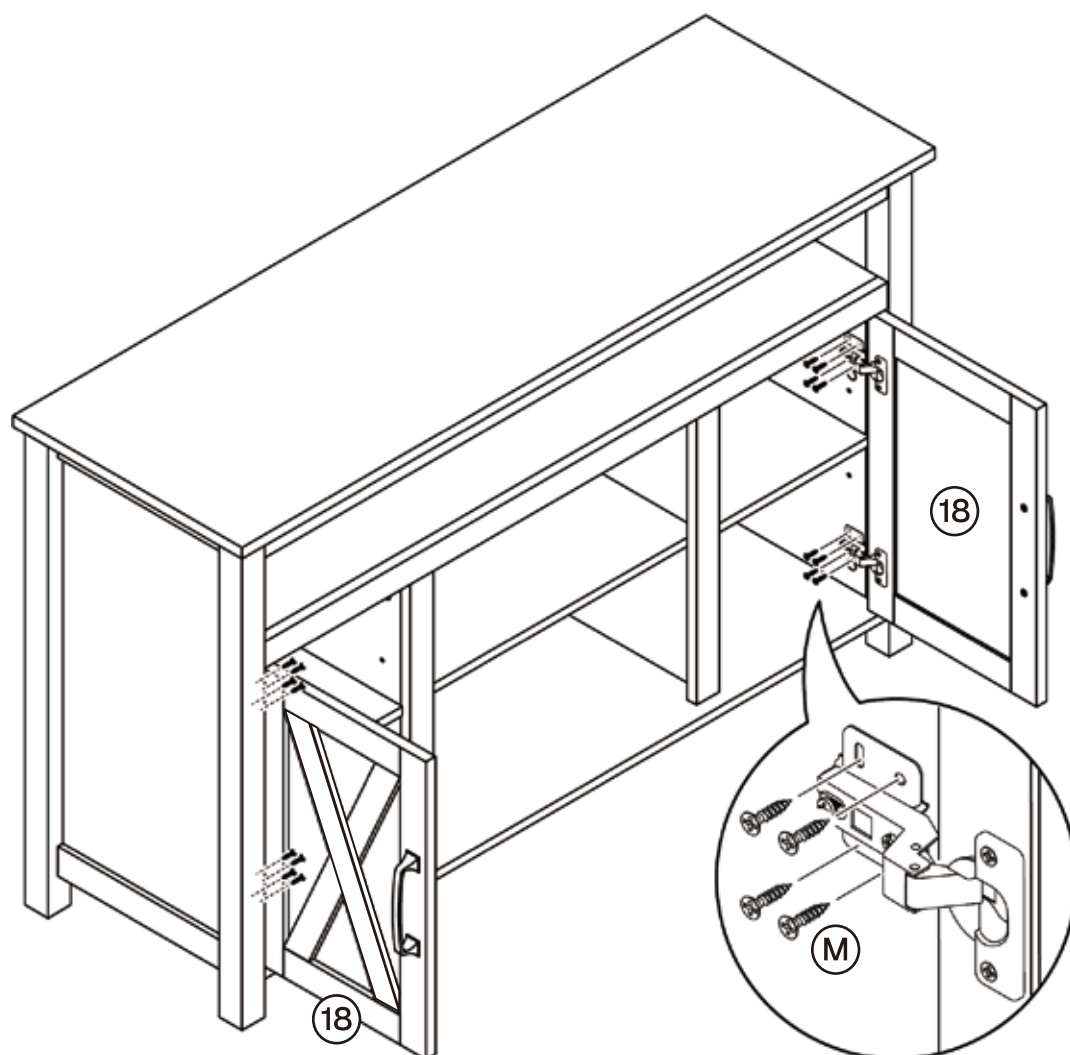


i

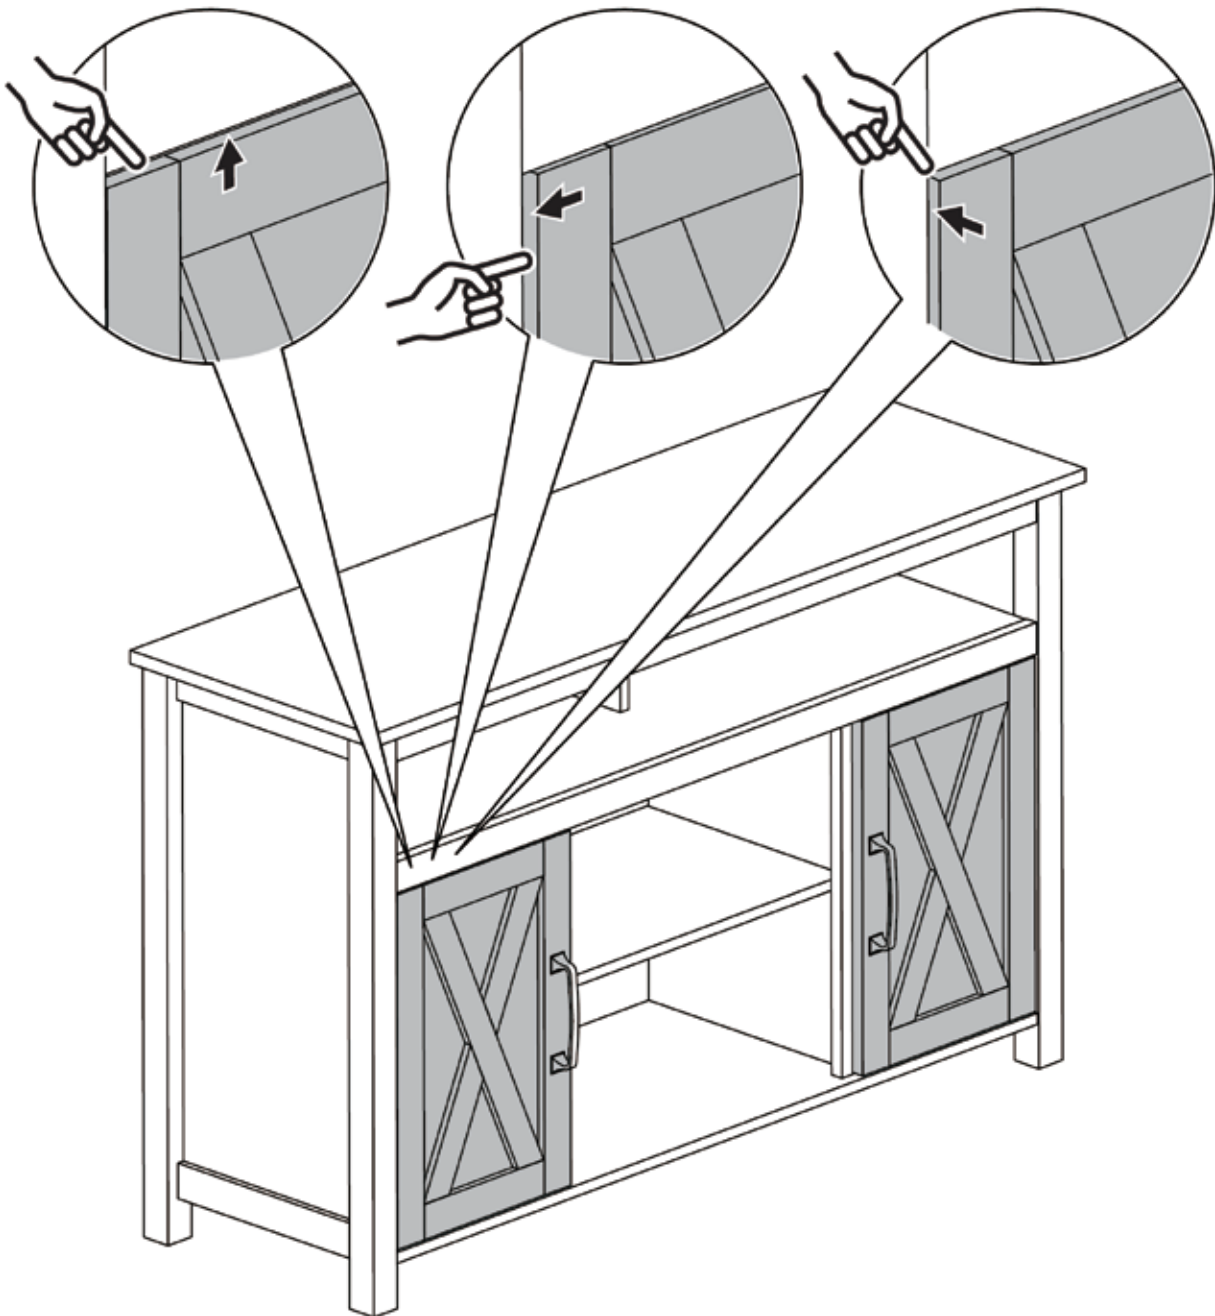 
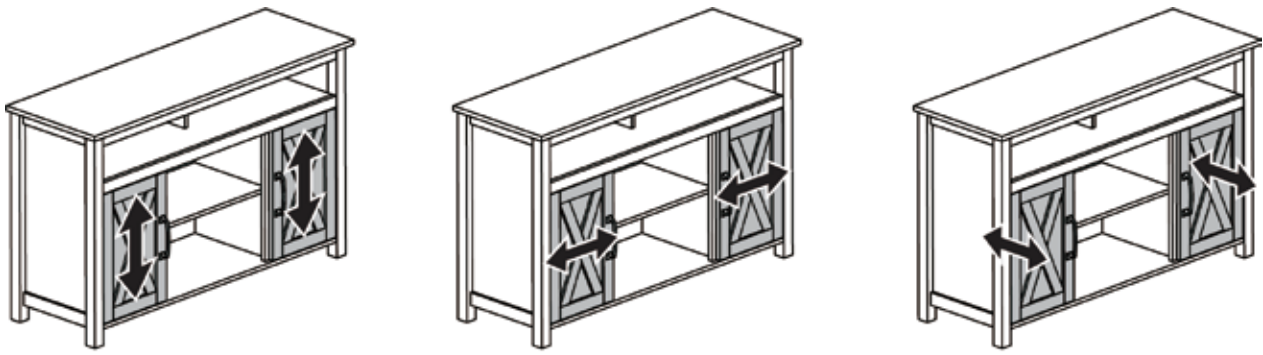 


Adjust the door hinge if there is excessive gaps or height difference between the cabinet doors and/or the cabinet. Adjust both the top and bottom hinge on the same door for best result.

 
 
 
 
i

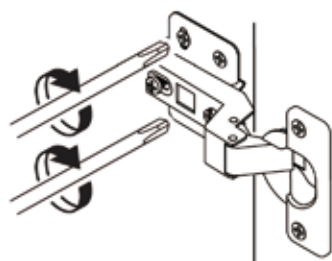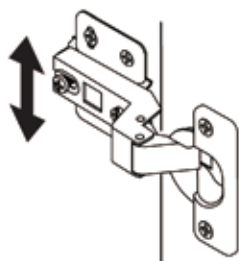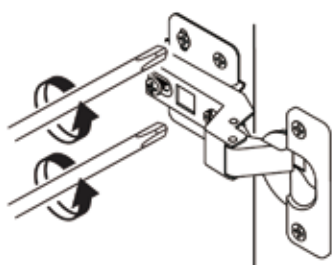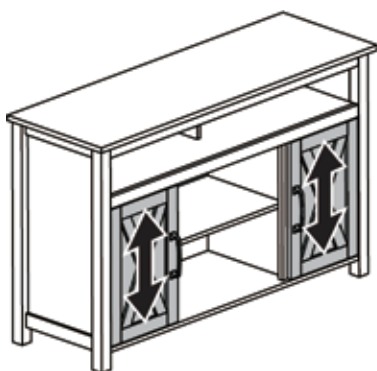

  Loosen the screws on the mounting plate to adjust the door **up and down**.

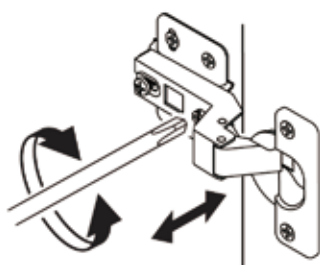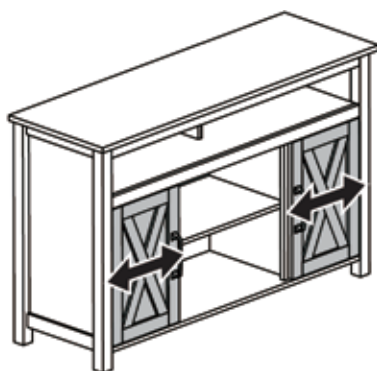

    Adjust the screw on the hinge to micro-adjust the door from **side to side**.

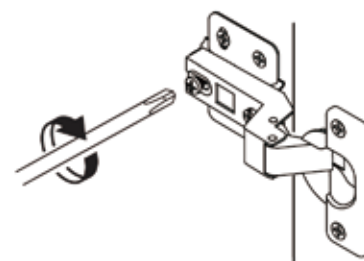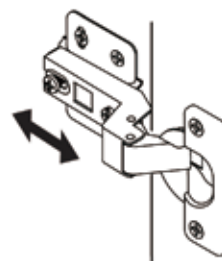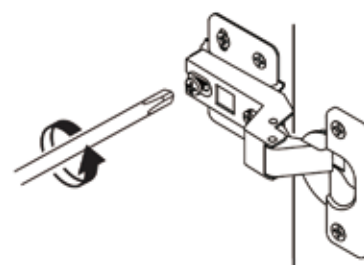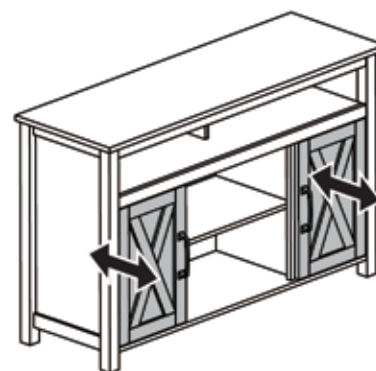

Loosen the screws on the hinge arm to adjust the door **in and out**.

 
 
32 Affixing the TV stand to a wall



T 2x



U 2x

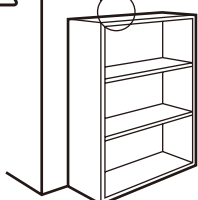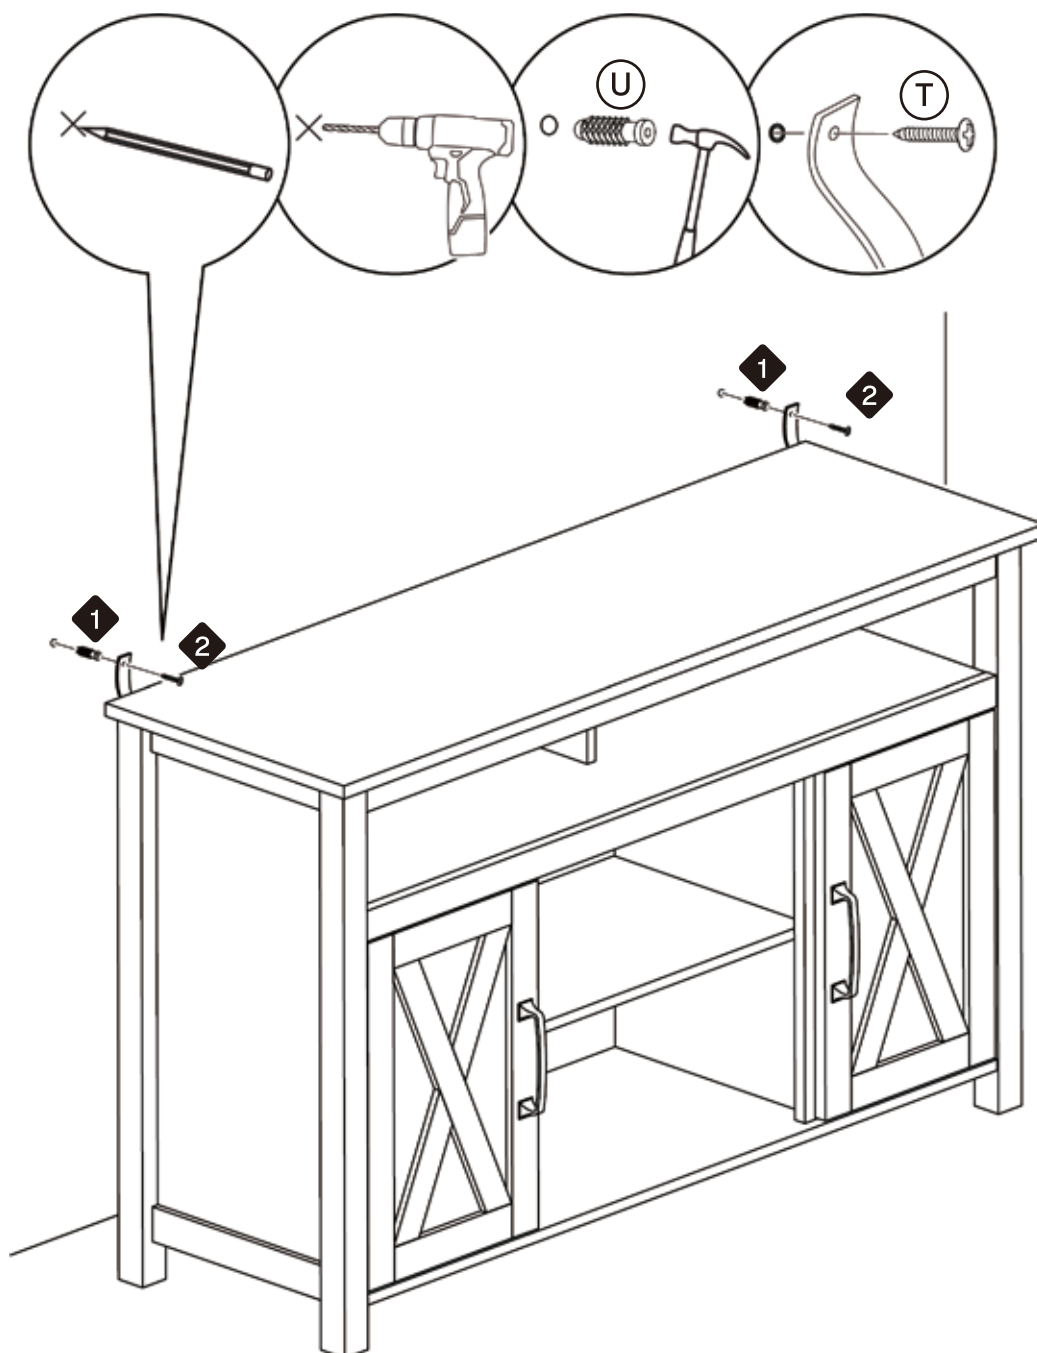


- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.

33

Putting on top garnishing strip

 ★ TV should be placed behind the garnishing strip to prevent it from falling off.

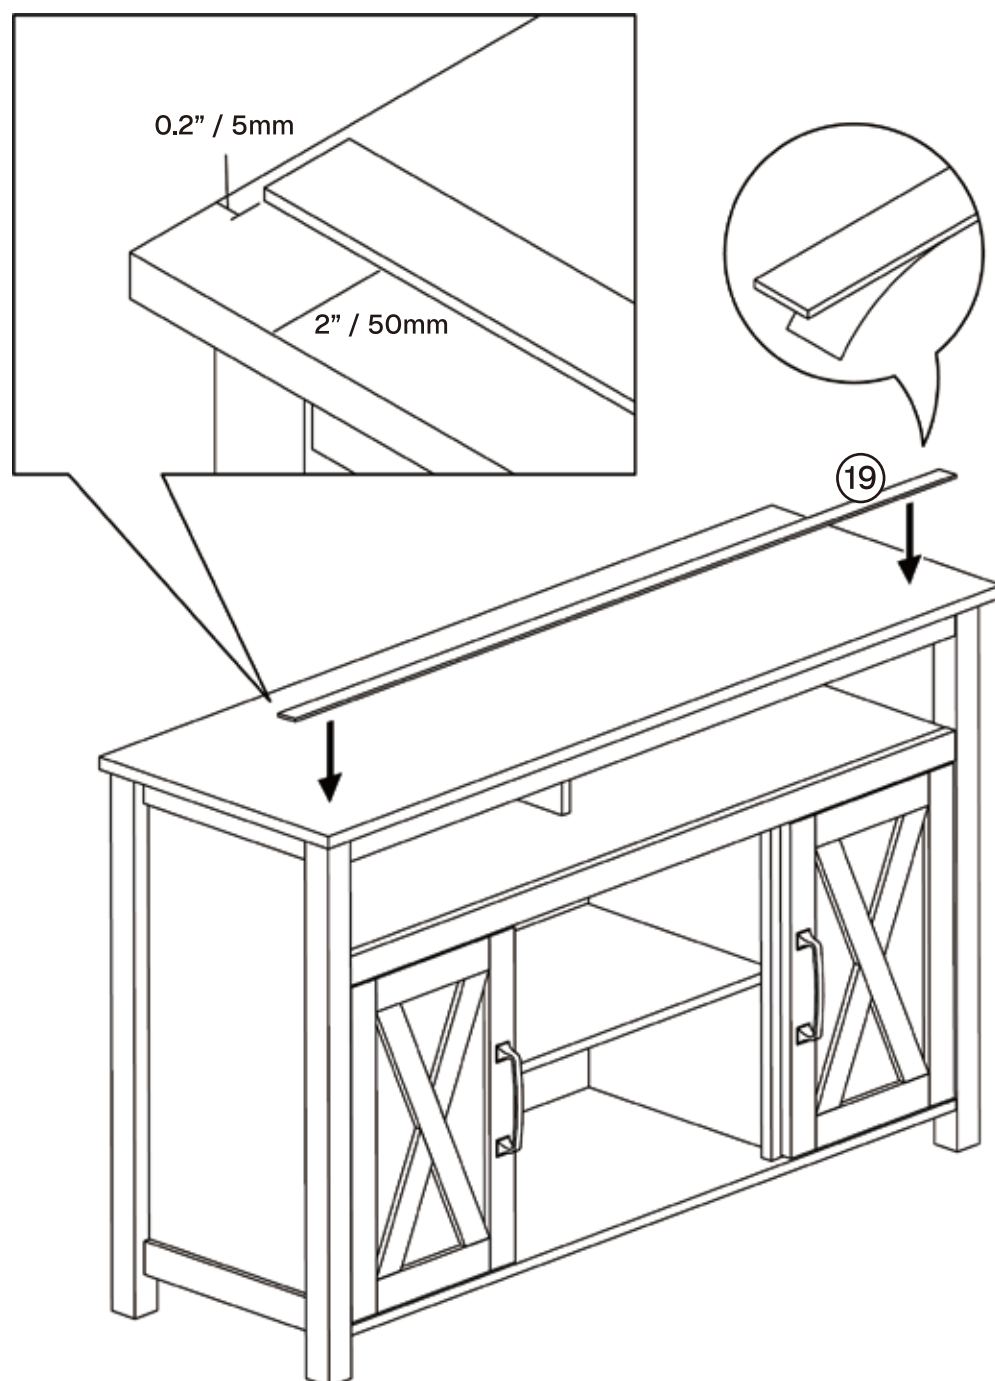



11

Fireplace
Bottom panel



D 4x

  B

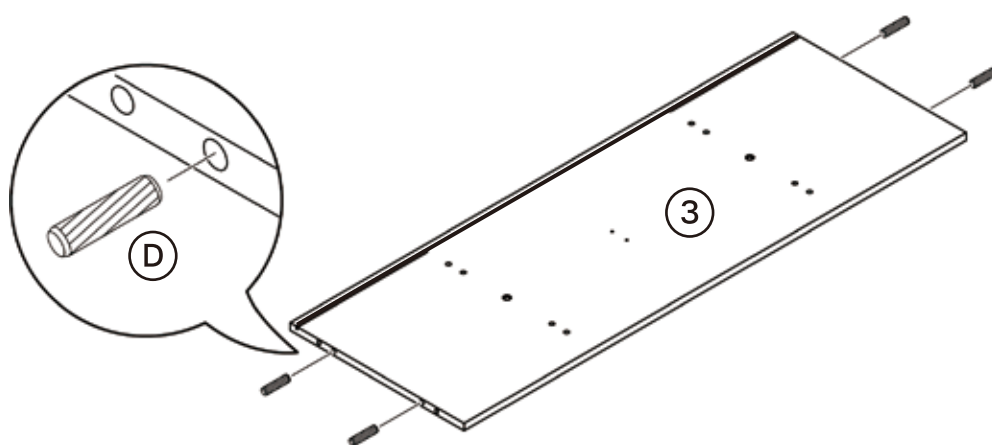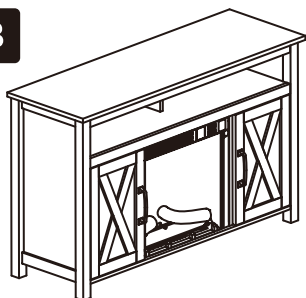

12

 
Assembling bottom panel to fire mantel



P 4x




Q 1x

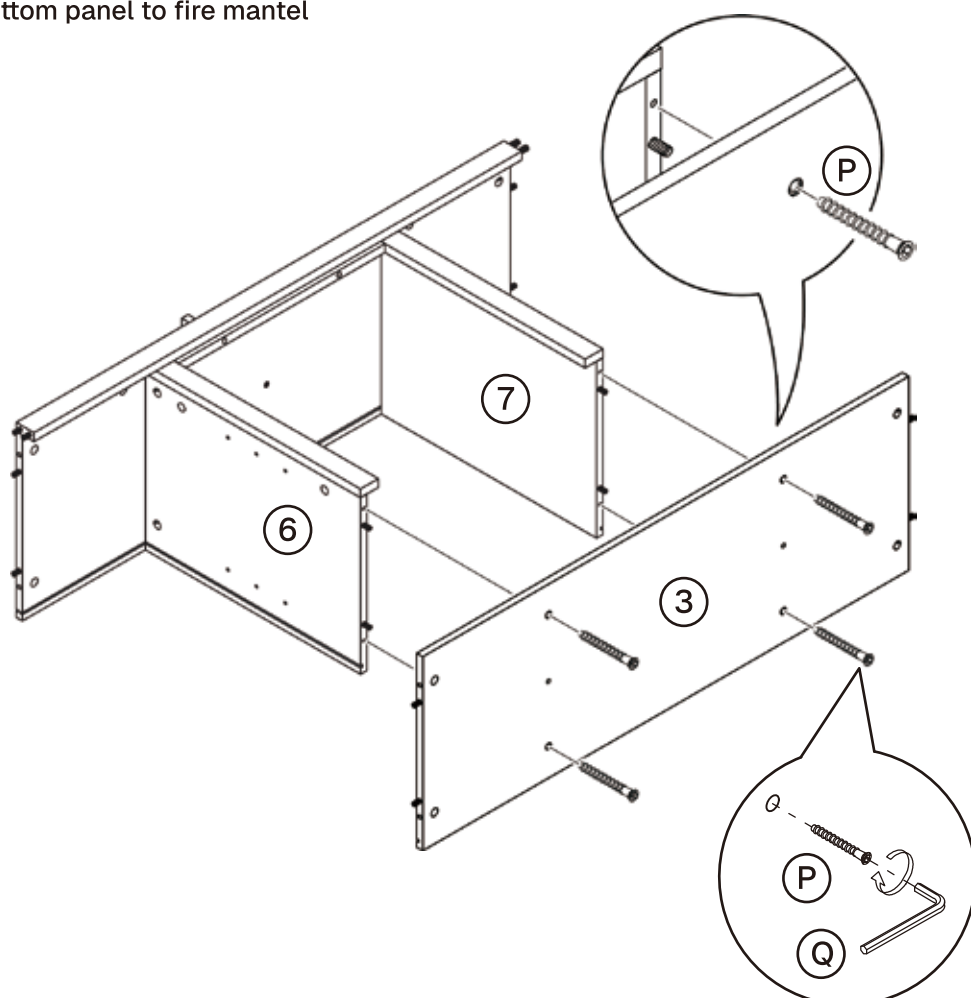

13

Sliding in side back panels

 ★ Warning label should be facing outward.

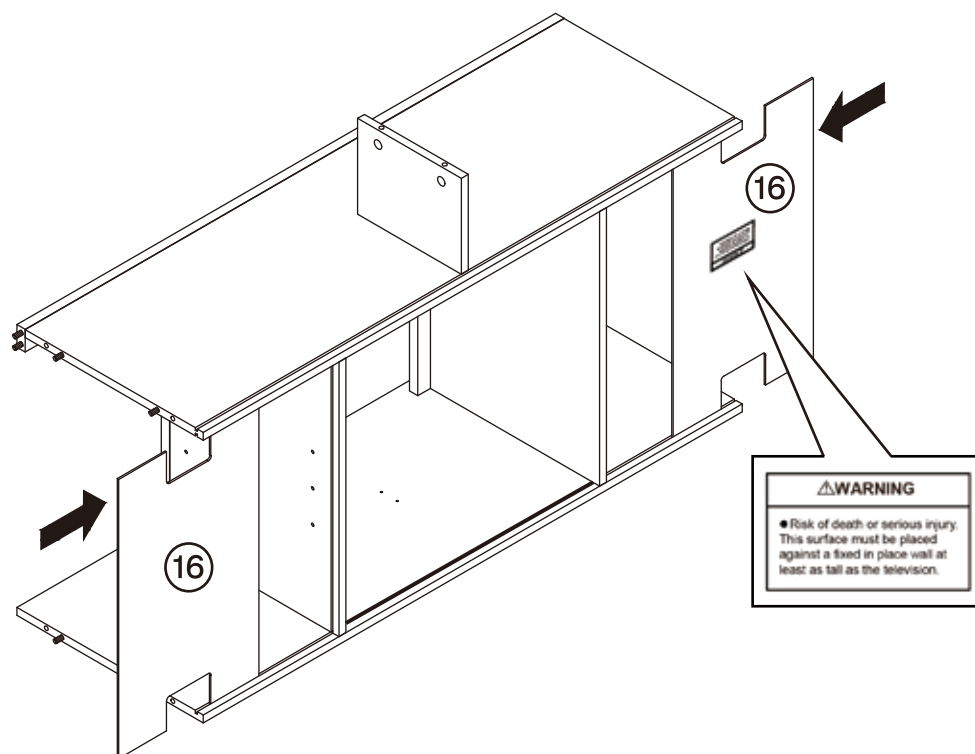


14

Legs



 A 12x

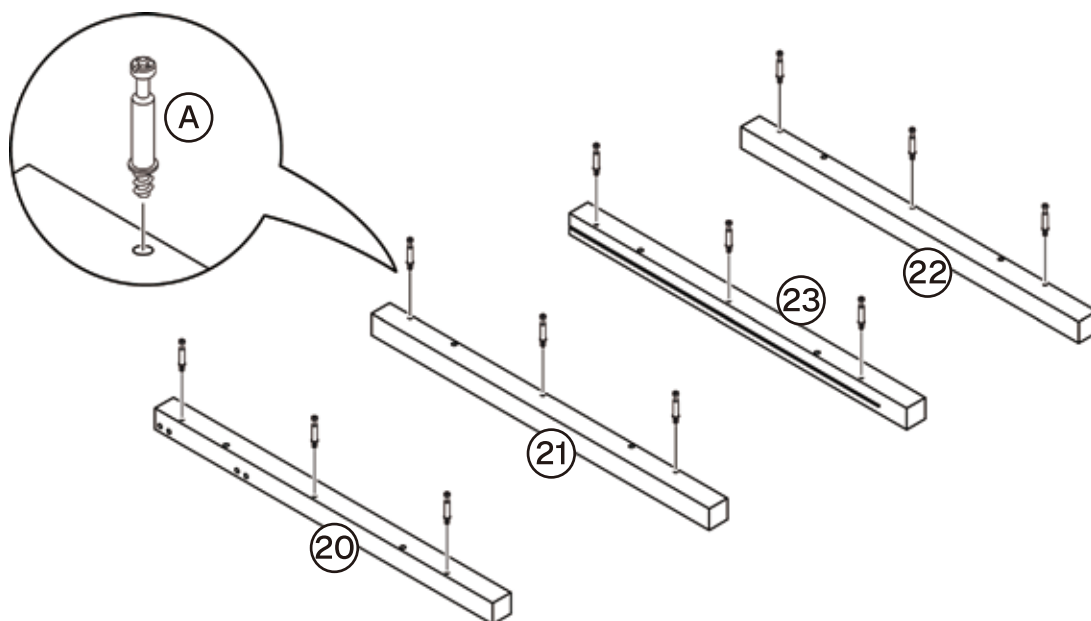


15

Lateral panels



 A 8x

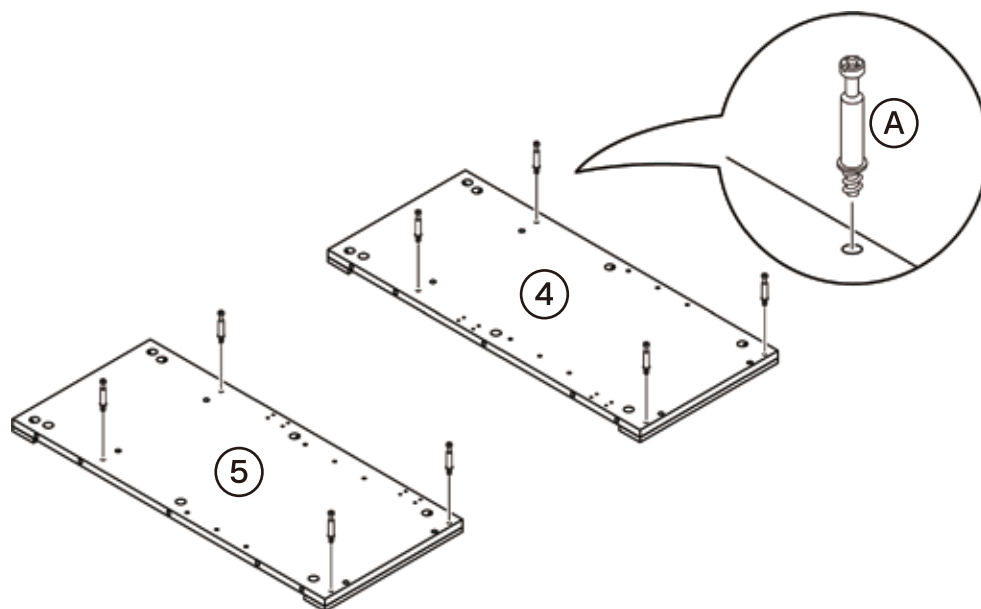


16

Lateral panels and top crossbar



 D 18x

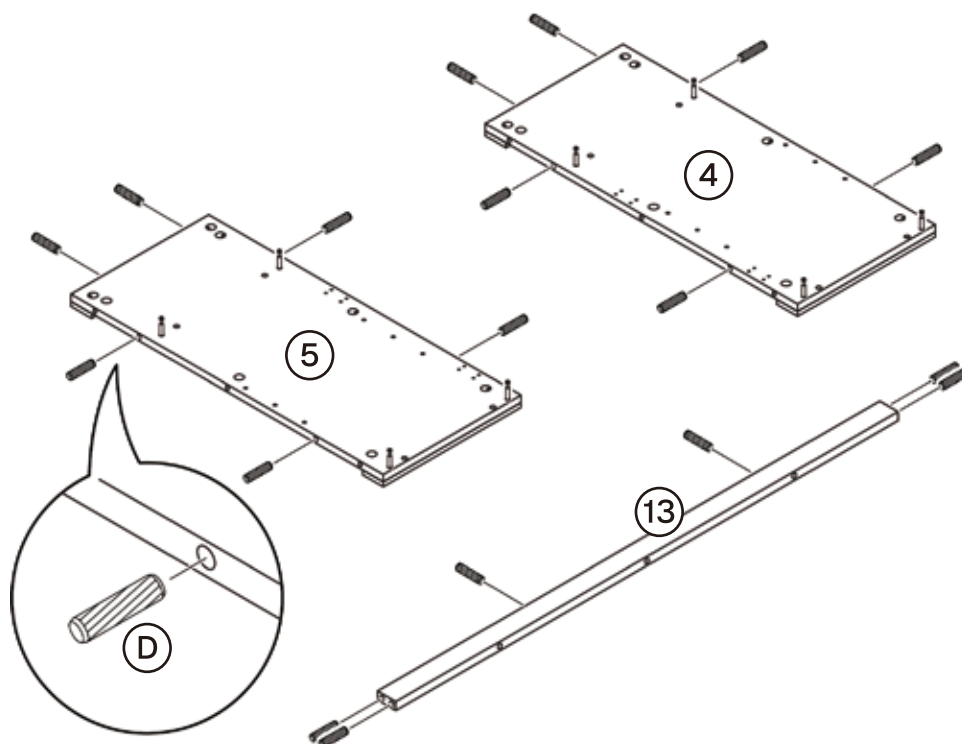

17

 
Assembling legs to lateral panels



B 12x



C 12x

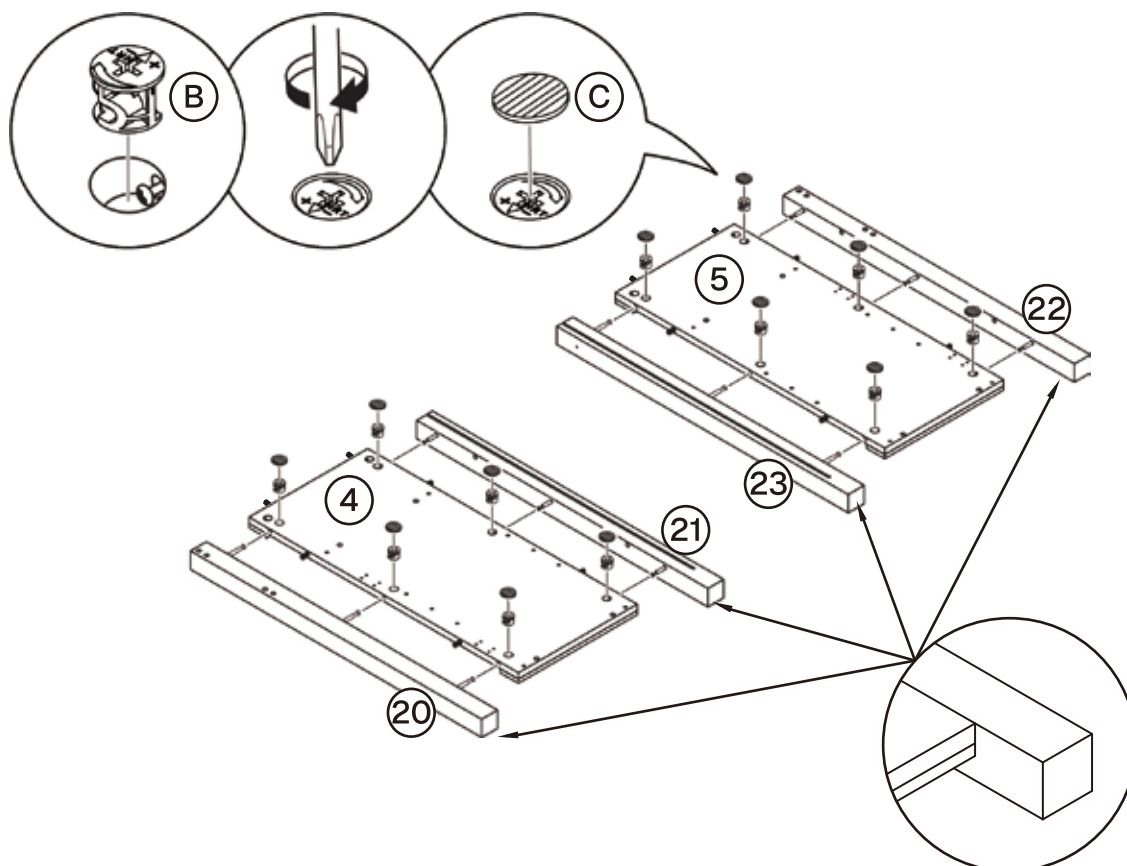

18

 
Assembling top crossbar and lateral panels



B 8x




C 8x

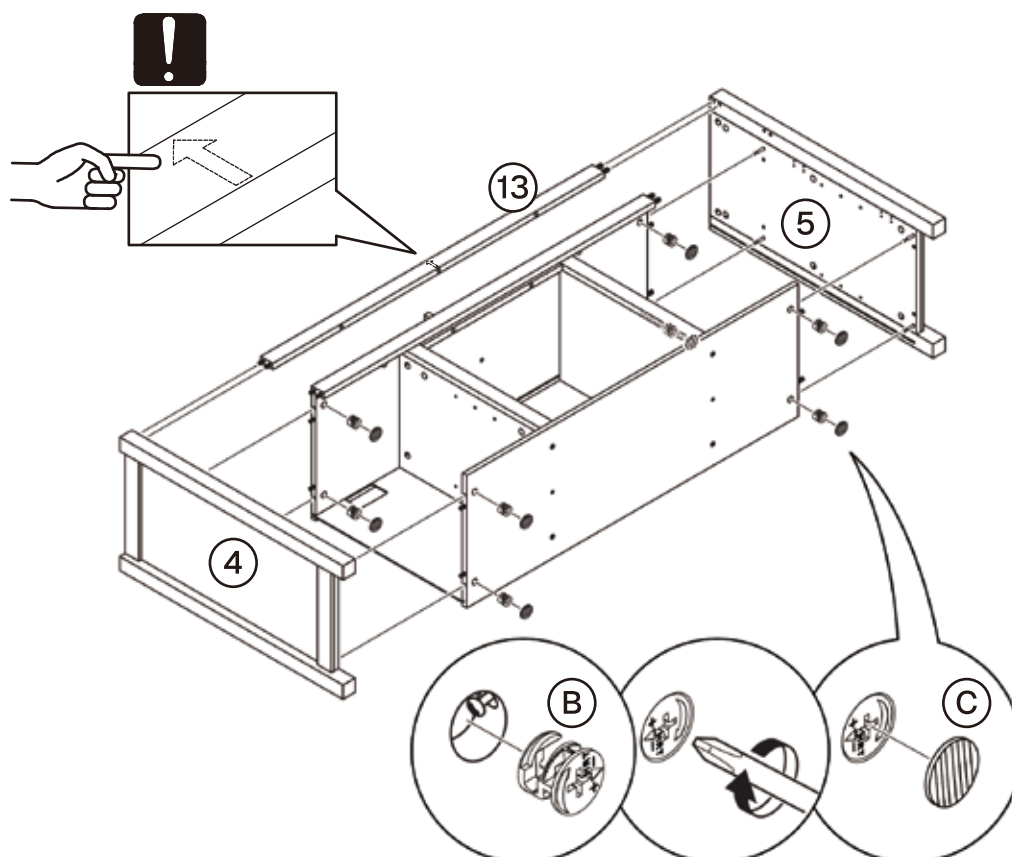


19

 Attaching support legs

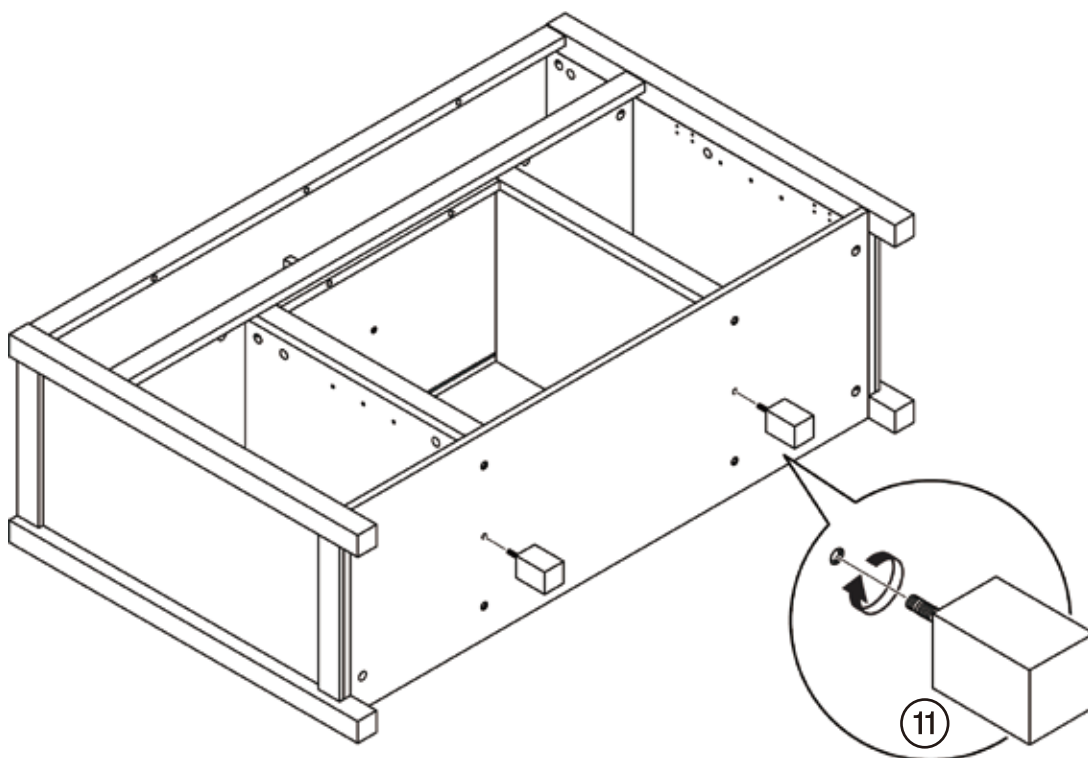


20

 Attaching leg pads

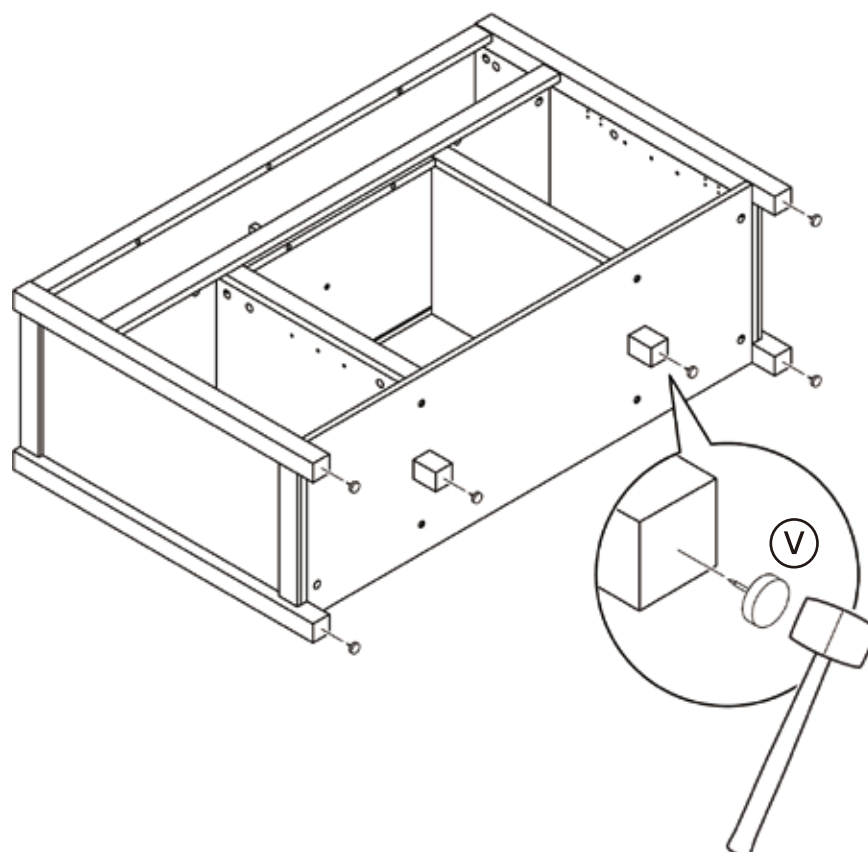

21

 Sliding in top back panel

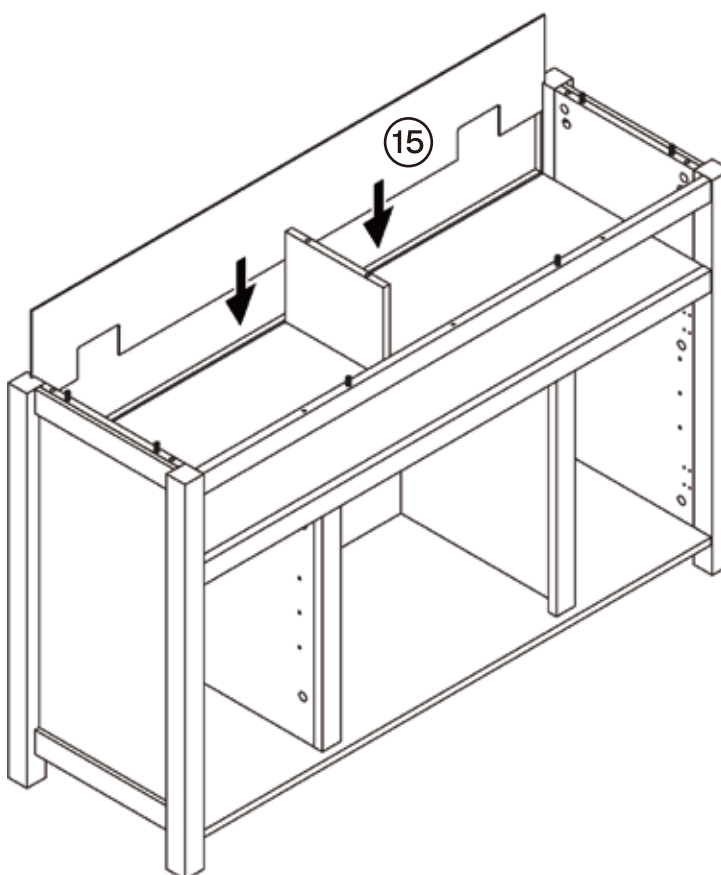


22

Top panel



 A 6x

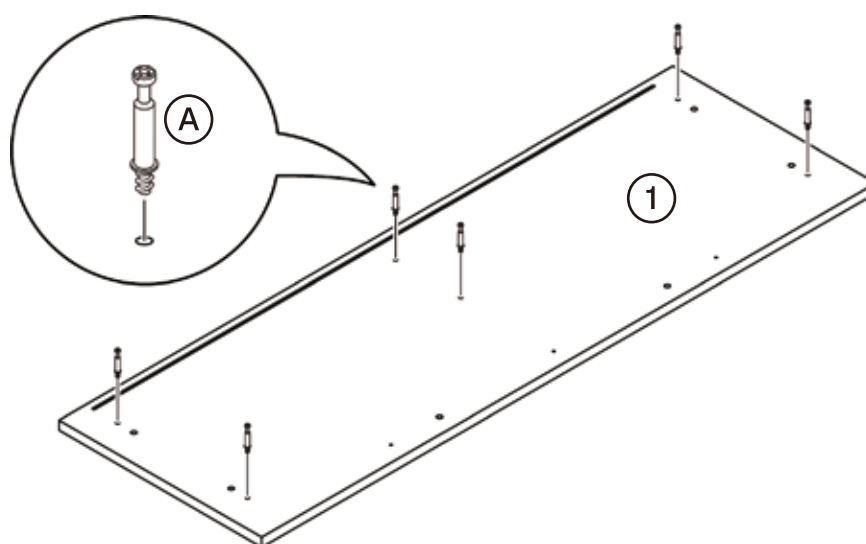


23 Attaching top panel



B 6x



 
C 6x

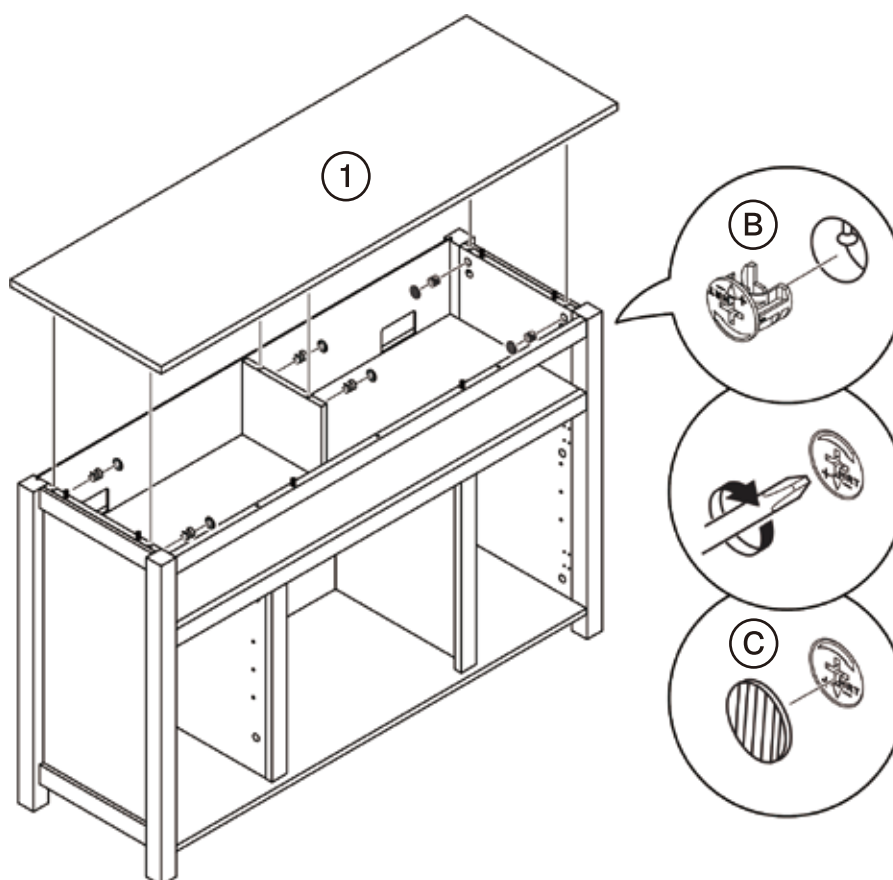

24 Securing top crossbar



 E 3x

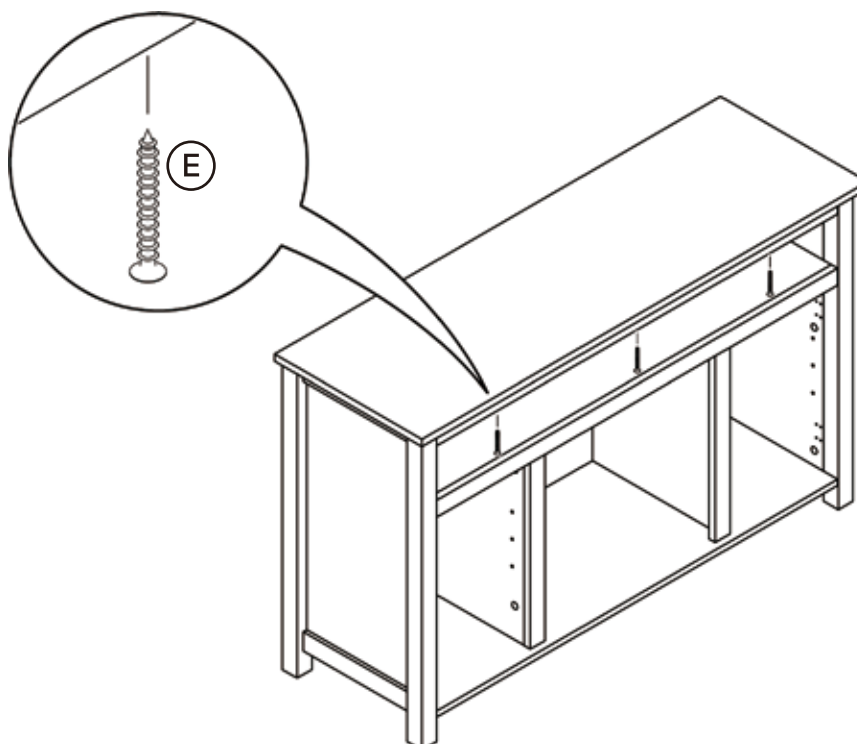


25 Securing back panels




F 14x



 G 14x

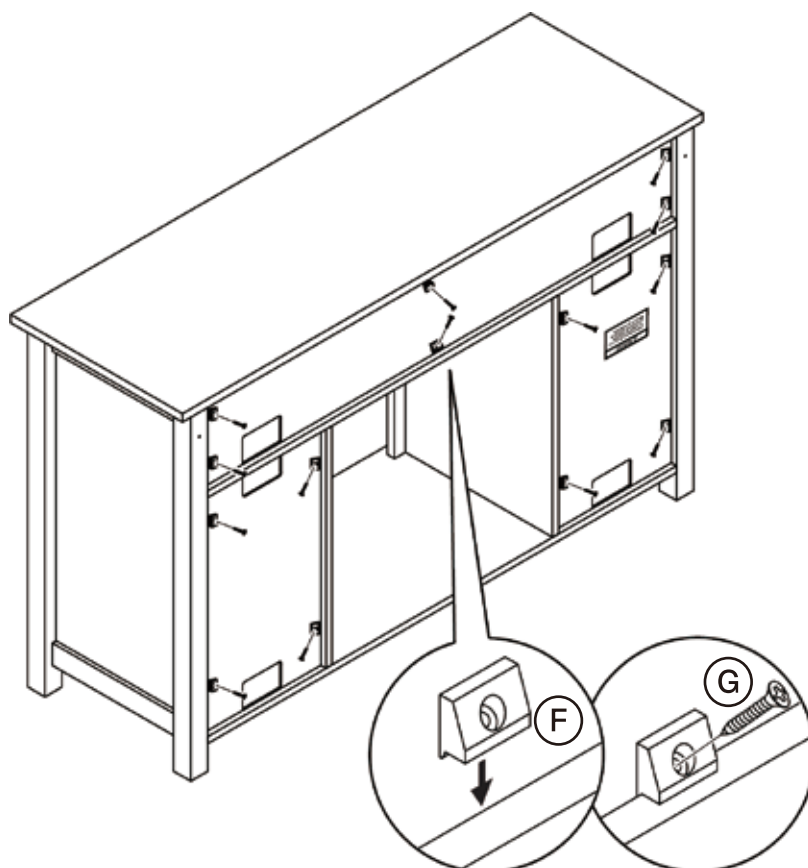


26 Attaching anti-tipping straps

 

R 2x



 S 2x

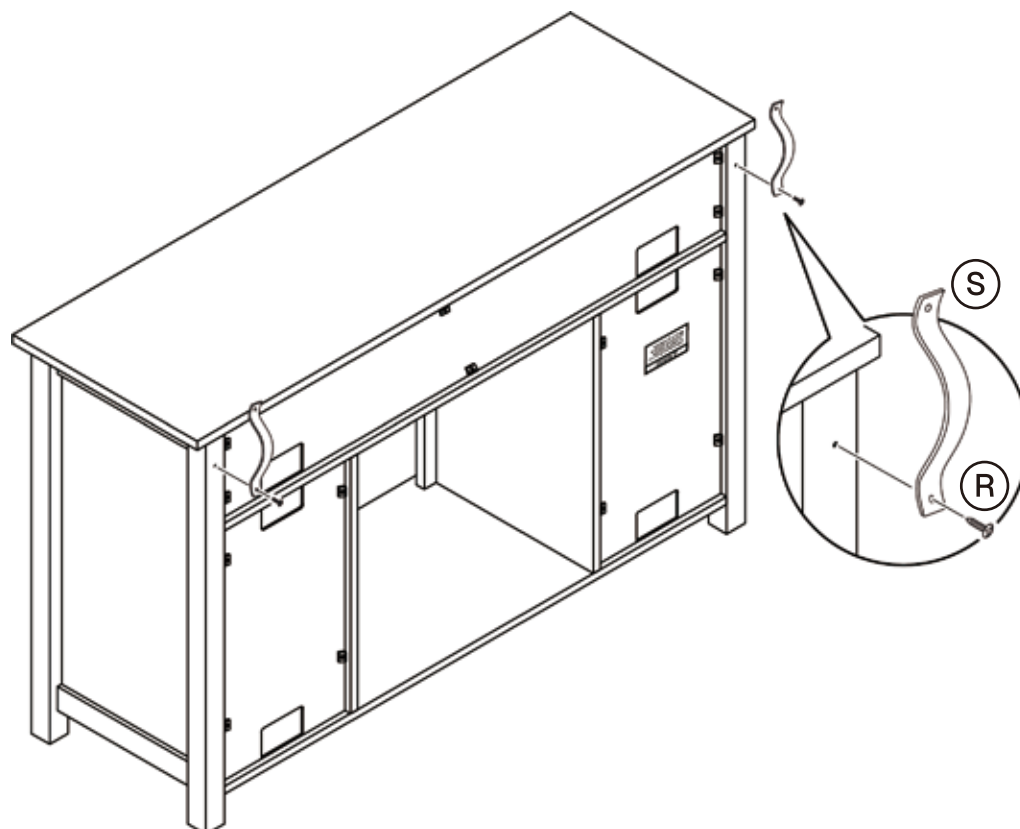


27 Installing fireplace heater


★ Do not attempt to install the fireplace unit from the front of the mantel. It will not fit.

The heater has a glass front panel. Careful when handling glass to prevent injury or damage.

 For the exact instruction, please refer to the user's manual provided with the fireplace.

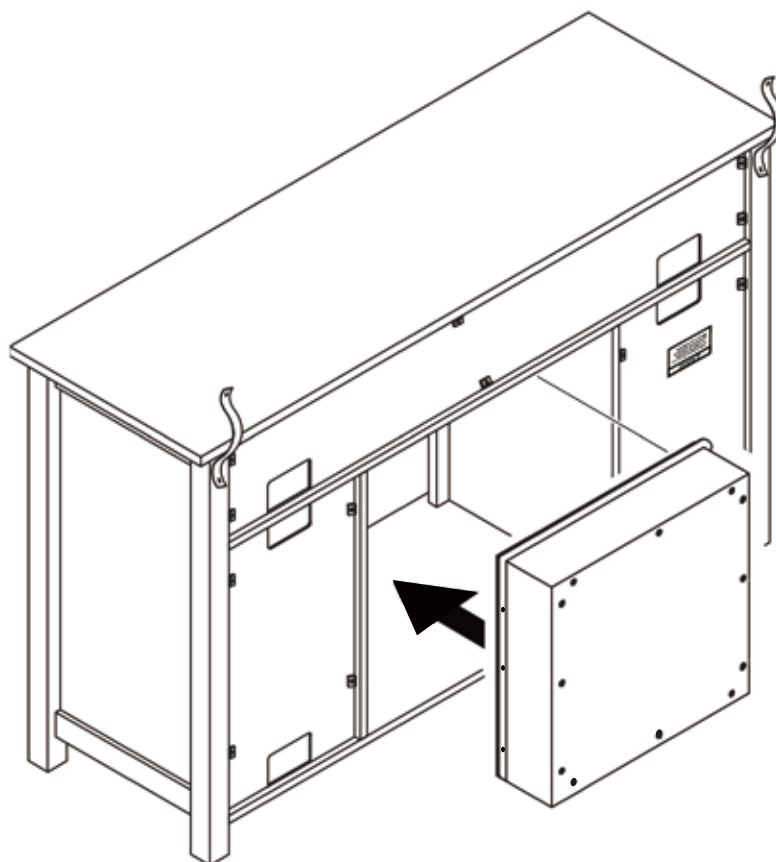


28 Securing fireplace heater

 

H 2x



 J 4x

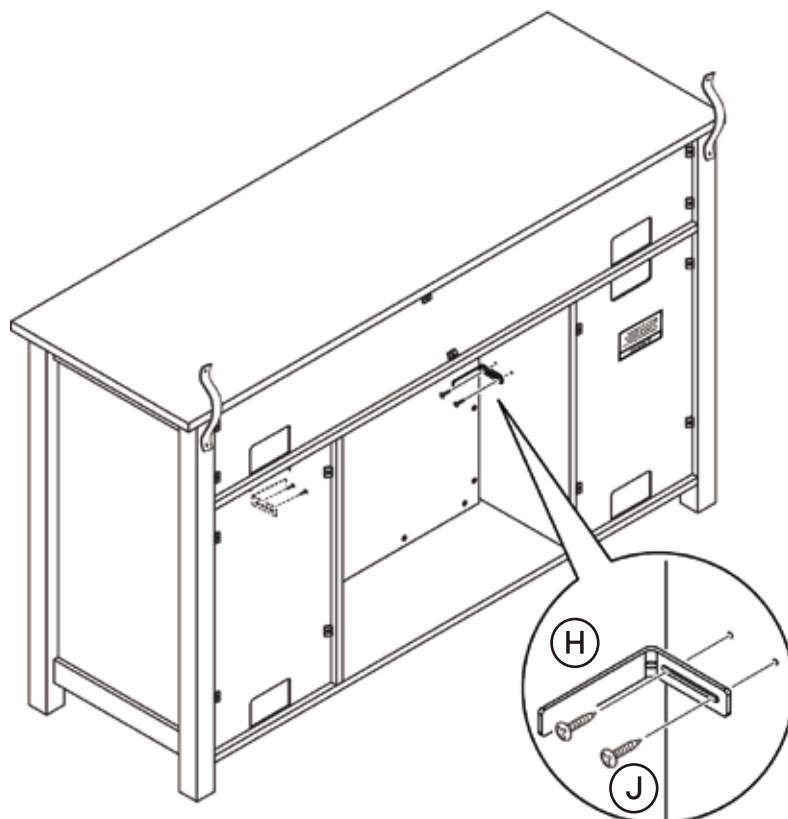


29

Inserting shelf pegs and putting on storage shelf panels



 K 8x

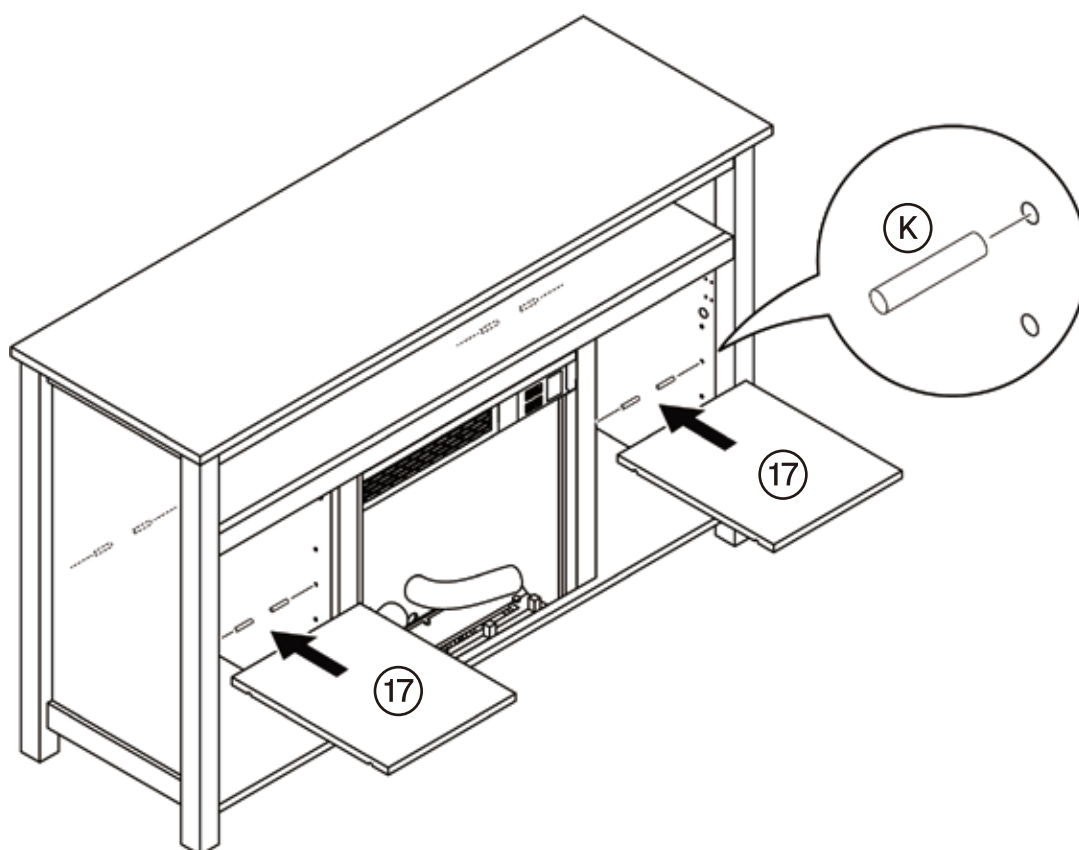

30

 
Attaching door hinges



L 4x



M 8x

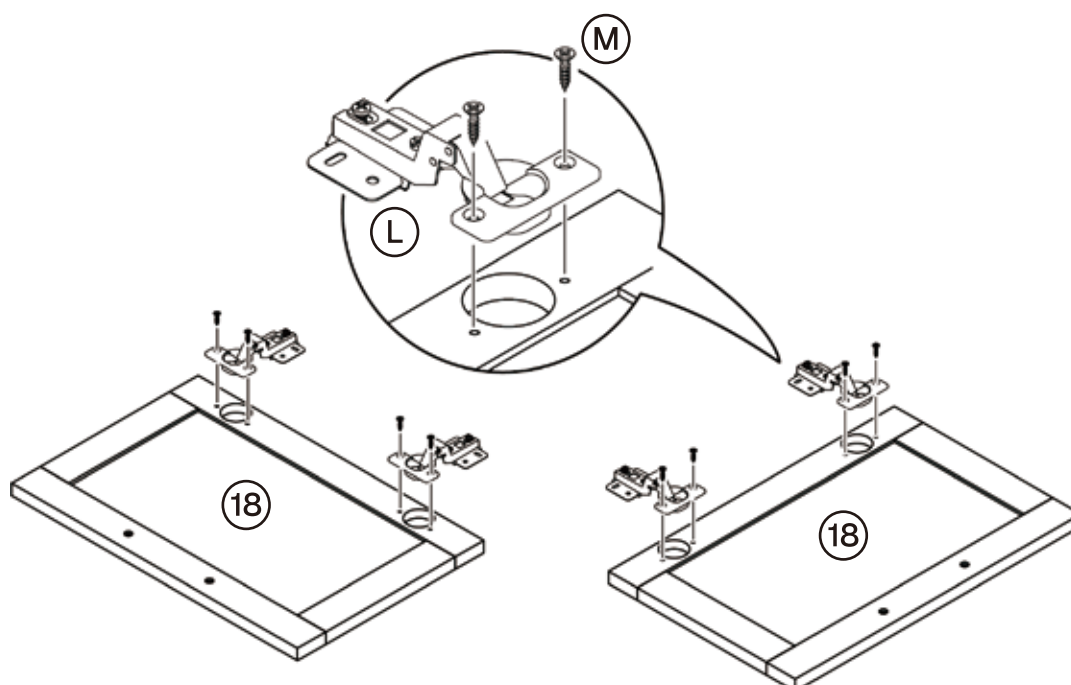


31 Attaching door handles



N 2x



 
O 4x

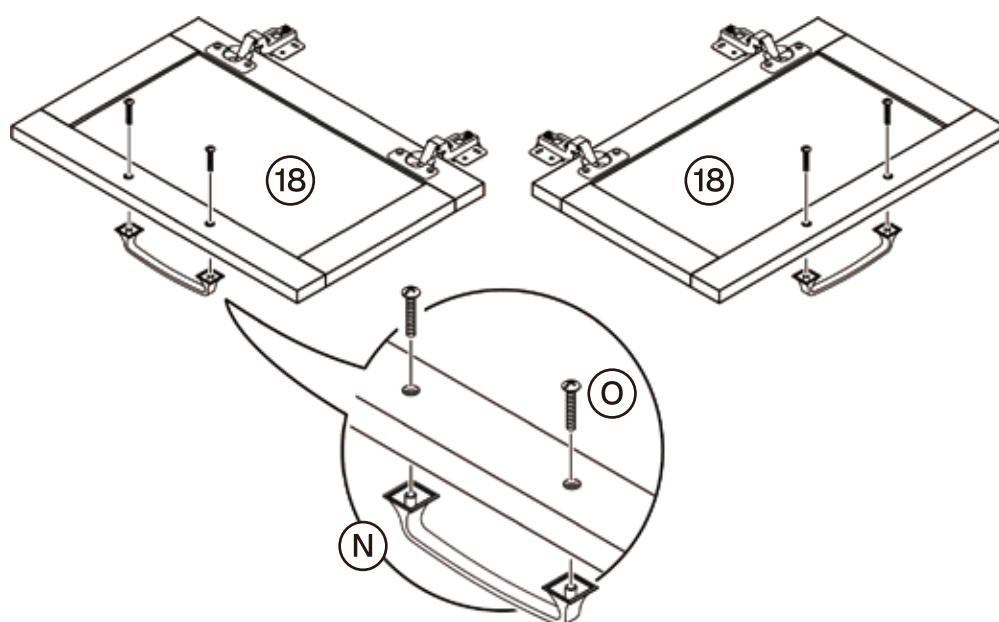



32 Attaching cabinet doors



 M 16x




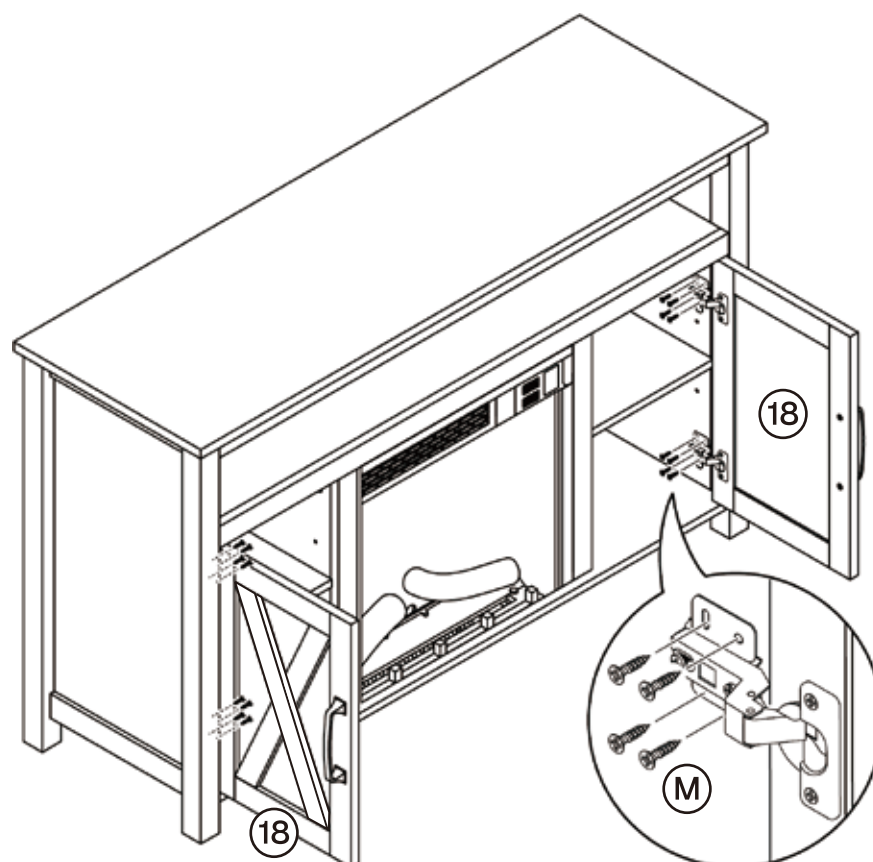


i

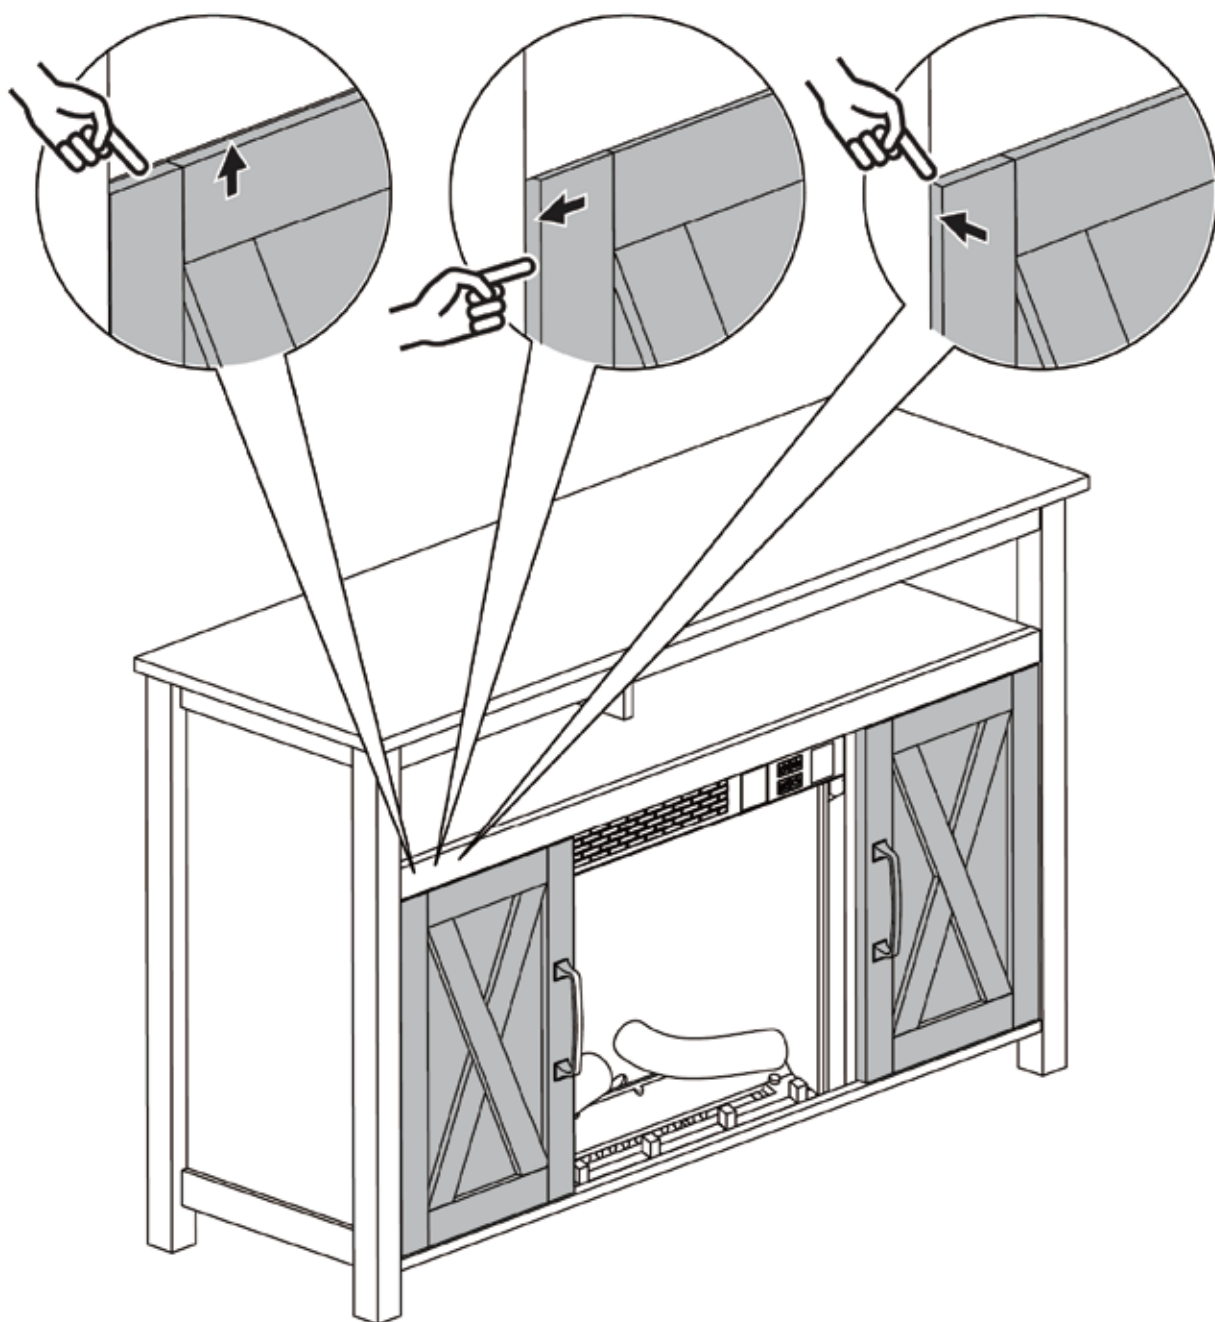 
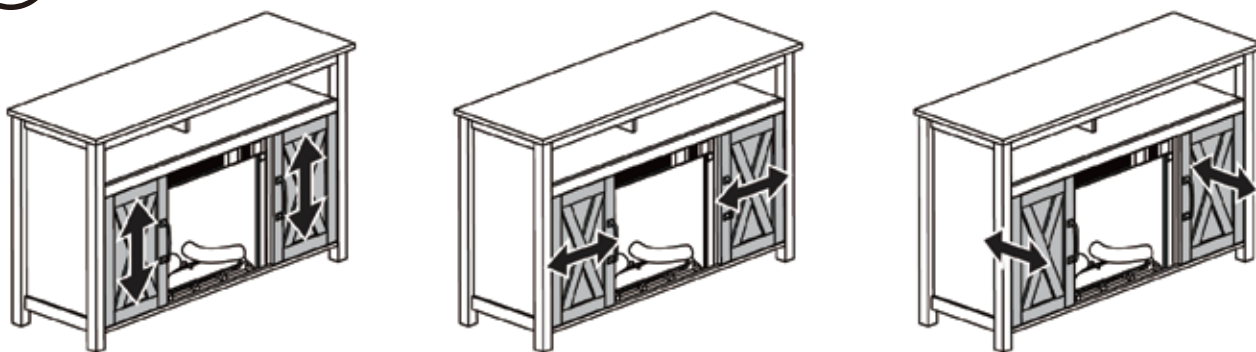 


Adjust the door hinge if there is excessive gaps or height difference between the cabinet doors and/or the cabinet. Adjust both the top and bottom hinge on the same door for best result.

 
 
 
 
i

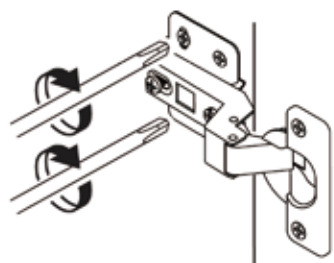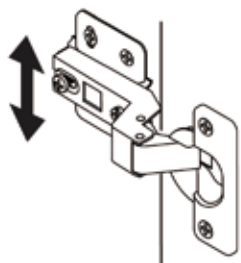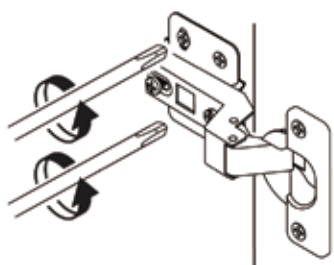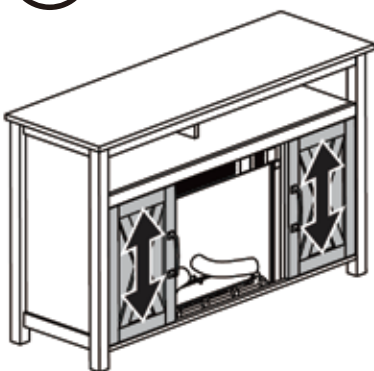

  Loosen the screws on the mounting plate to adjust the door **up and down**.

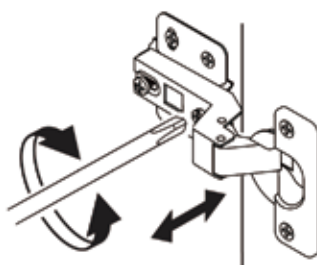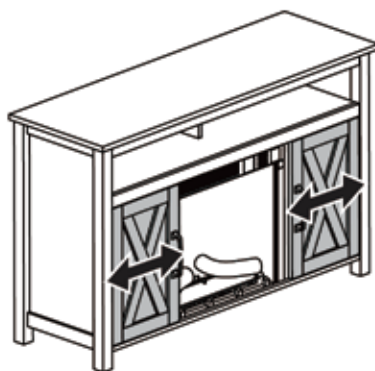

    Adjust the screw on the hinge to micro-adjust the door from **side to side**.

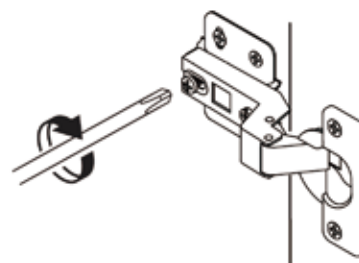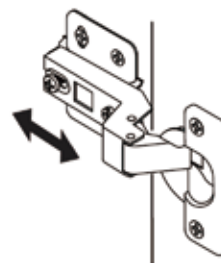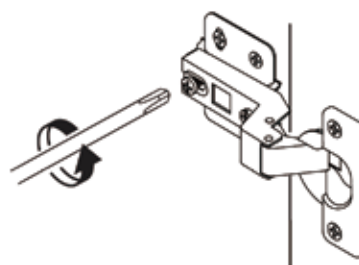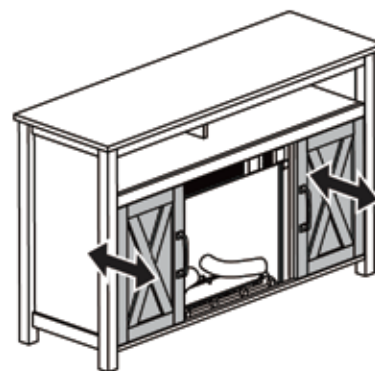

Loosen the screws on the hinge arm to adjust the door **in and out**.

 
 
33 Affixing the TV stand to a wall



T 2x



U 2x

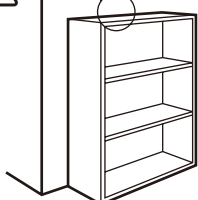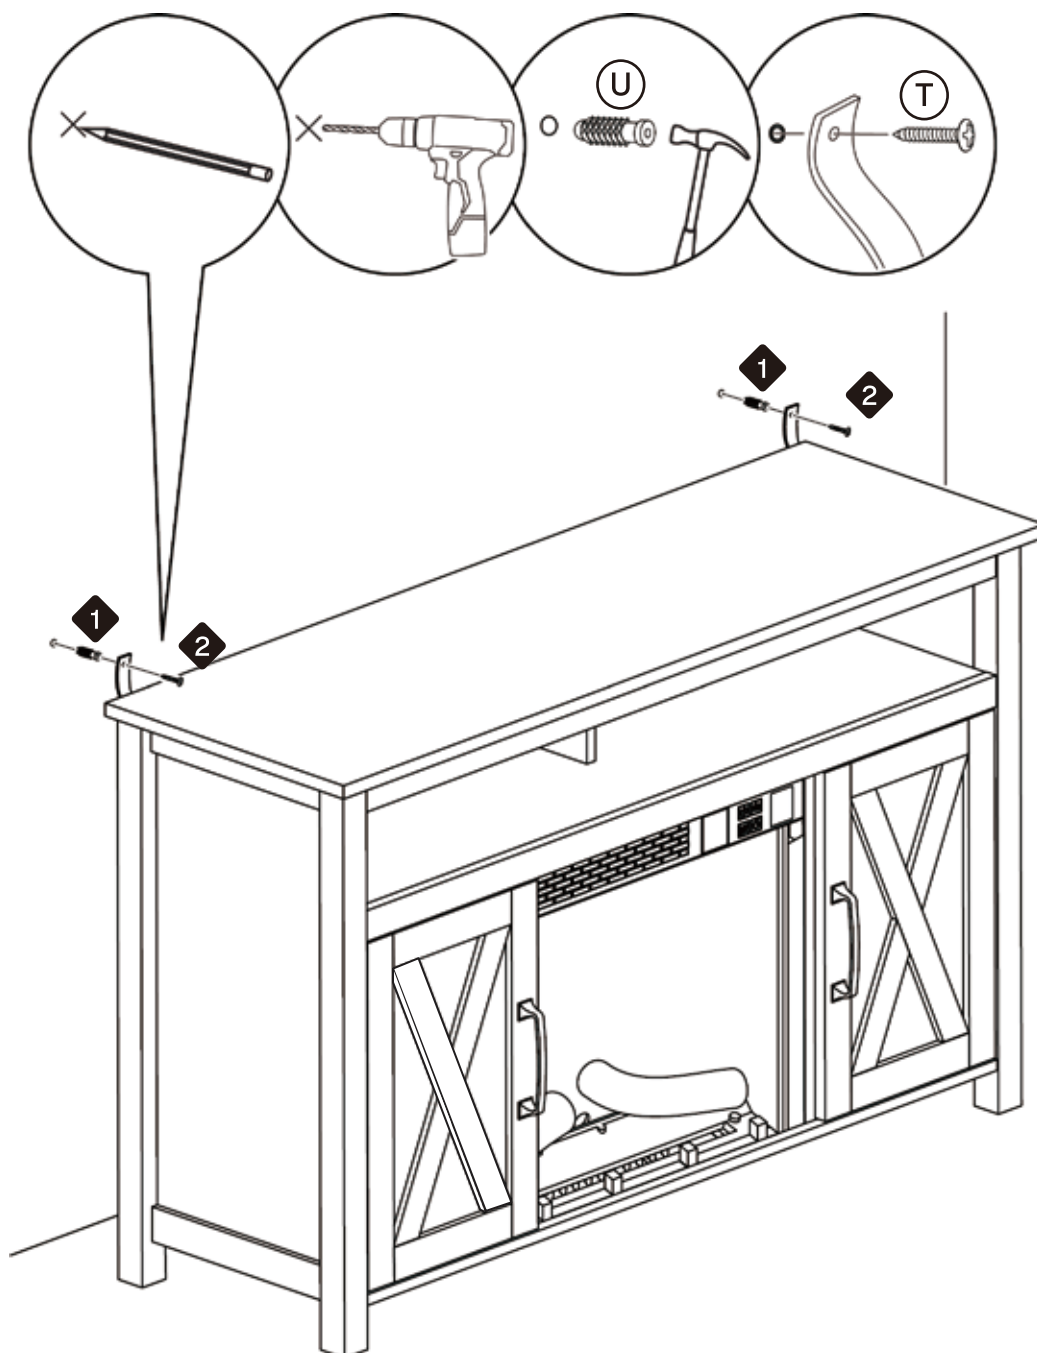


- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.

34

Putting on top garnishing strip

 ★ TV should be placed behind the garnishing strip to prevent it from falling off.

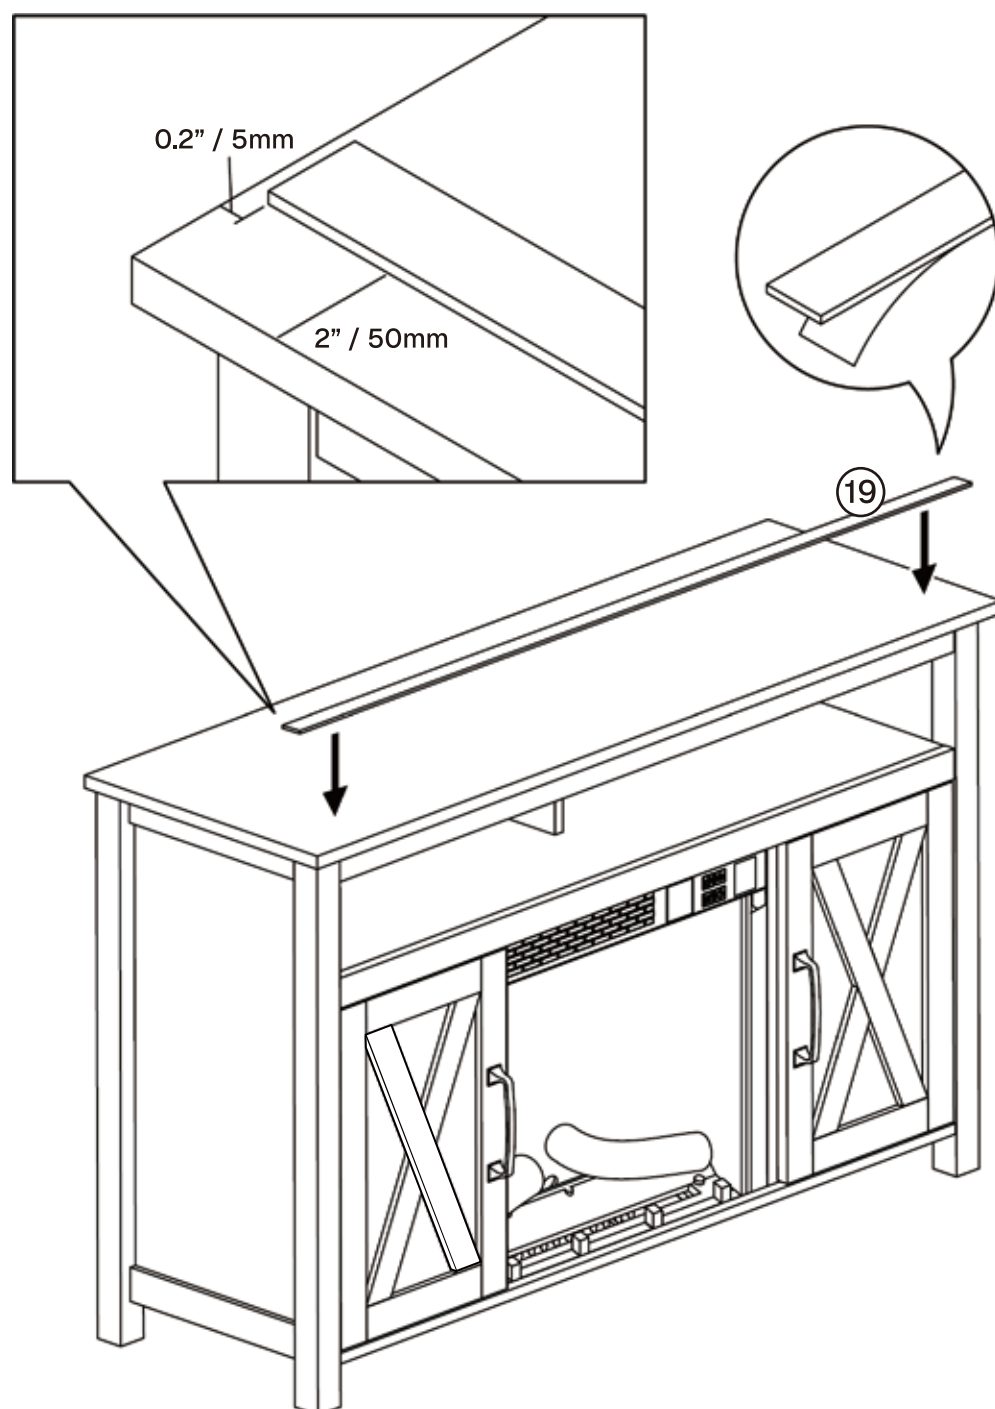

Care and Maintenance

Thank you for your purchase. We want your item to last as long as possible.

To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



Maintenance

- Tighten all bolts and crews again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and re-tighten them if they come loose.



Cleaning

- Clean the surface of the MDF (medium density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.



Attention

DO NOT use bleach or alcohol based cleaner to clean the surface.

DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage.

Make sure to dry the furniture immediately after cleaning.



Attention

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of the product.



WARNING

For use with televisions weighing 70lbs (31.8kg) or less. Use with heavier televisions may result in instability, causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.



NOTICE

The recommended maximum width of the television is 55 inches. Do not exceed the maximum load capacity.

This product is designed for flat panel TVs only.

Warranty

BELLEZE products comes with a 1-year warranty from the date of delivery.
Register your product on our website to enjoy out limited lifetime warranty!

After-Sale Service



Encounter any difficulties or missing parts?



Contact us at **1-800-682-6376** or email us at **support@belleze.com**



We will send you replacement.



Hassle free!
No need to worry about repackaging and sending your item back.

Contact Us



support@belleze.com



1-800-682-6376