 


USER'S MANUAL

TV STAND

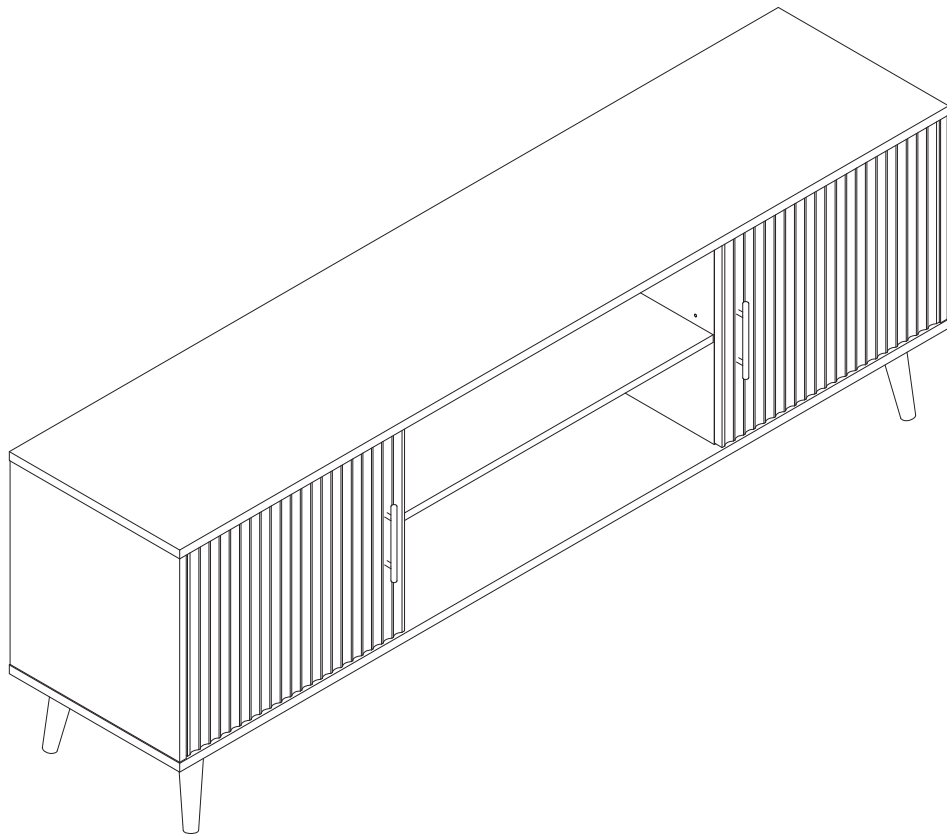

Guide of Manual

- Thanks for your choice. **We will do our best to provide customer service for everyone.**
- Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, **we will expeditiously provide reissue accessories, compensation or other services.**
- Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. **Please contact us if further information and help are needed. We will respond in a timely manner.**
- **Please be patient that the other items are on the way if you buy more than one product.**

Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product. Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- It's unnecessary to use electric drill. Please at a low gear if you need.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- There' s no need to use furniture polish. If you need, test it first in an inconspicuous area. Using solvents of any kind on your furniture may damage the finish. Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately. Gently blot the spill with a soft clean cloth to avoid rubbing.

Further Advice about the Furniture Care

- It is best to keep your furniture in a climate-controlled environment.
- We recommend to keep furniture from sunlight exposure to avoid possible surface damage.
- Following these important and helpful tips will help retain your furniture's performance even when it ages.
- Periodically (every 90 days) make sure the screws are fully tightened.

 
 
 
 
 
 
 
 
 
Max Weight Capacity

- 250lbs [Do not stand on the item]







Parts and Hardware List:


- Make sure all parts are in the package.
- "+" in below list indicates that additional pieces are replacement parts.

Parts List

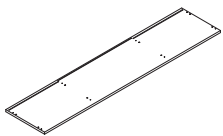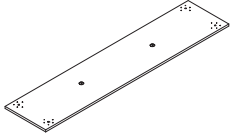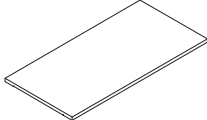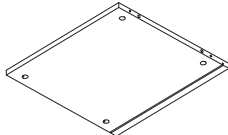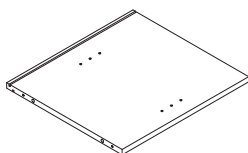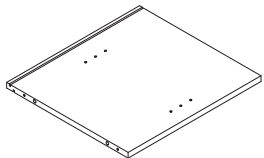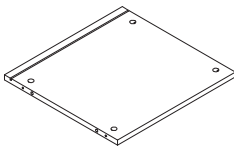
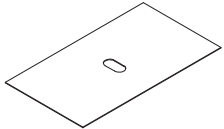
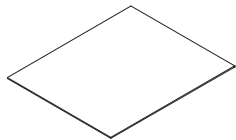
① x 1PC  top panel	② x 1PC  bottom panel	③ x 1PC  shelf	④ x 1PC  side panel	⑤ x 1PC  vertical panel
⑥ x 1PC  vertical panel	⑦ x 1PC  side panel	⑧ x 2PCS  cabinet doors	⑨ x 6PCS  legs	⑩ x 1PC  middle back panel
⑪ x 2 PCS  side back panels				

      Hardware List



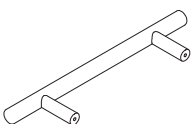
A x16+1PCS  M6x34mm	Bx16+1PCS 	Cx16+1PCS Wooden Dowel Pins  Ø8x30mm	Dx4PCS 	Ex24+1PCS  Ø3.5x15mm
Fx 4PCS  Ø4x19mm	G x 4PCS 	Hx12+1PCS  Ø3x19mm	Kx12+1PCS 	L x 4PCS 
Mx2PCS 	Ox20+1PCS  Ø4x15mm	Tools Required (Not provided) Cross-head Screwdriver		

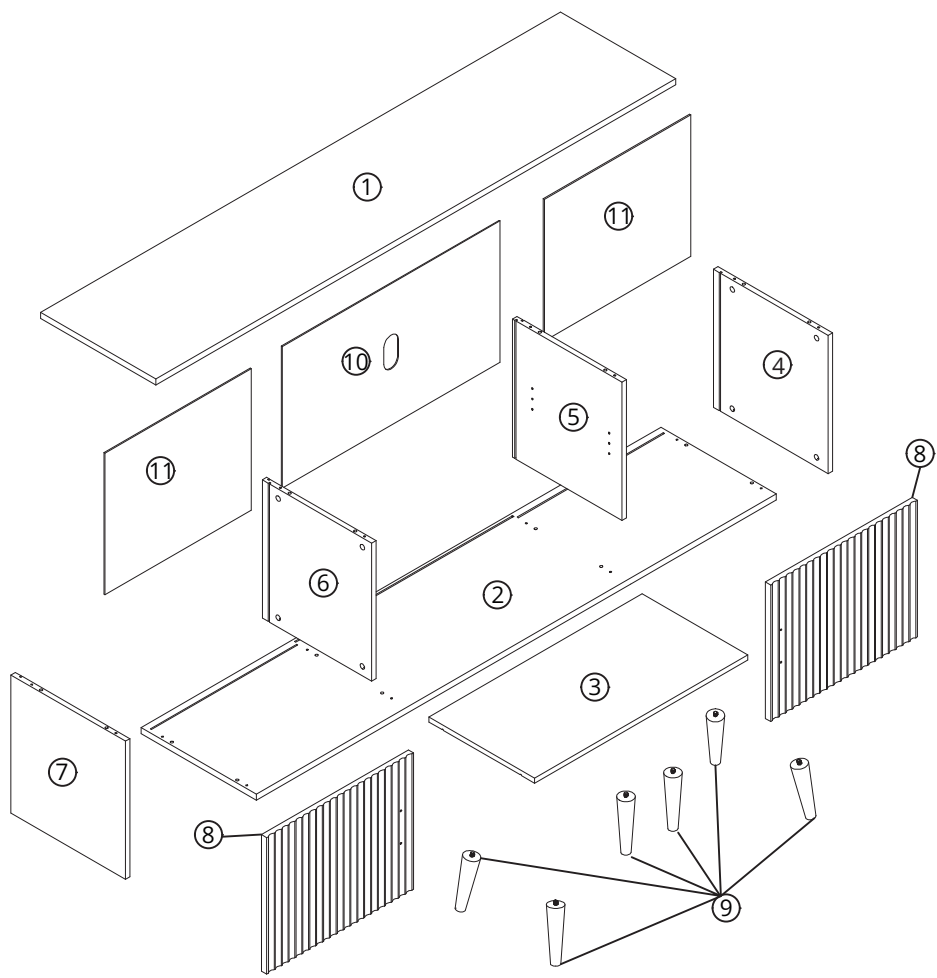 

   
- 1** Locate Top Panel ① and Bottom Panel ②, use a screwdriver to attach Cam Bolt (A) into pre-drilled holes. Tighten all screws firmly.

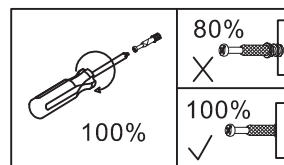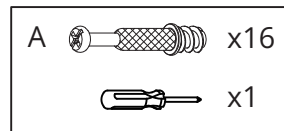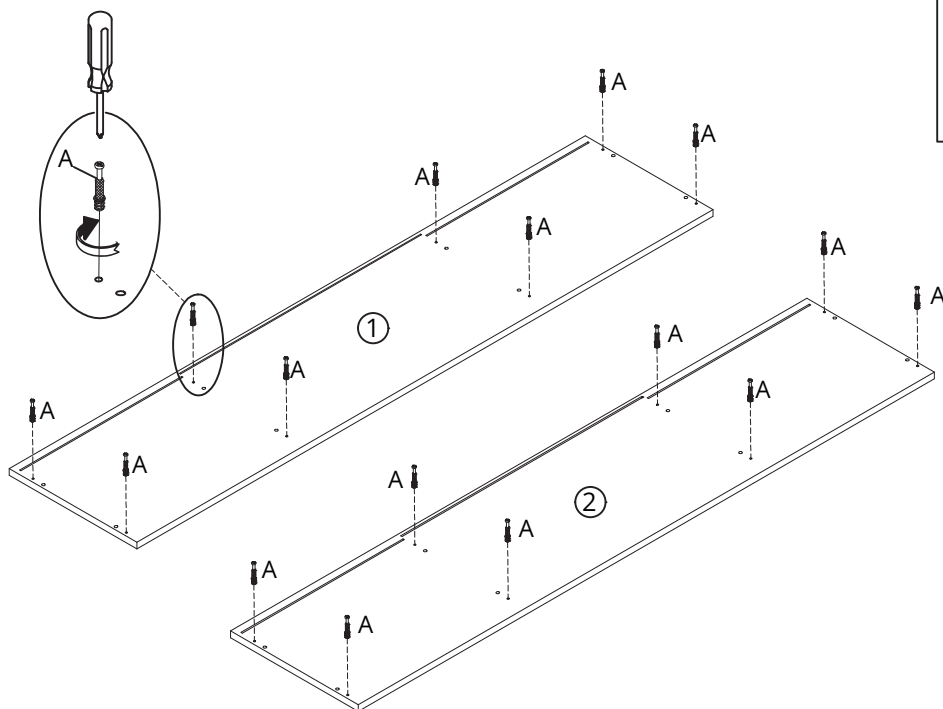

   
- 2** Attach Vertical Panels ④, ⑤, ⑥, ⑦ to Top Panel ①. Align each Vertical Panel. Insert Cam Locks (B) and Dowels (C) into pre-drilled holes. Use a screwdriver to secure the panels firmly.

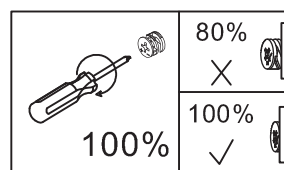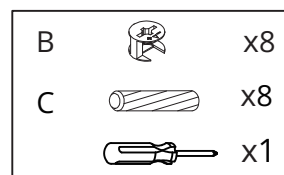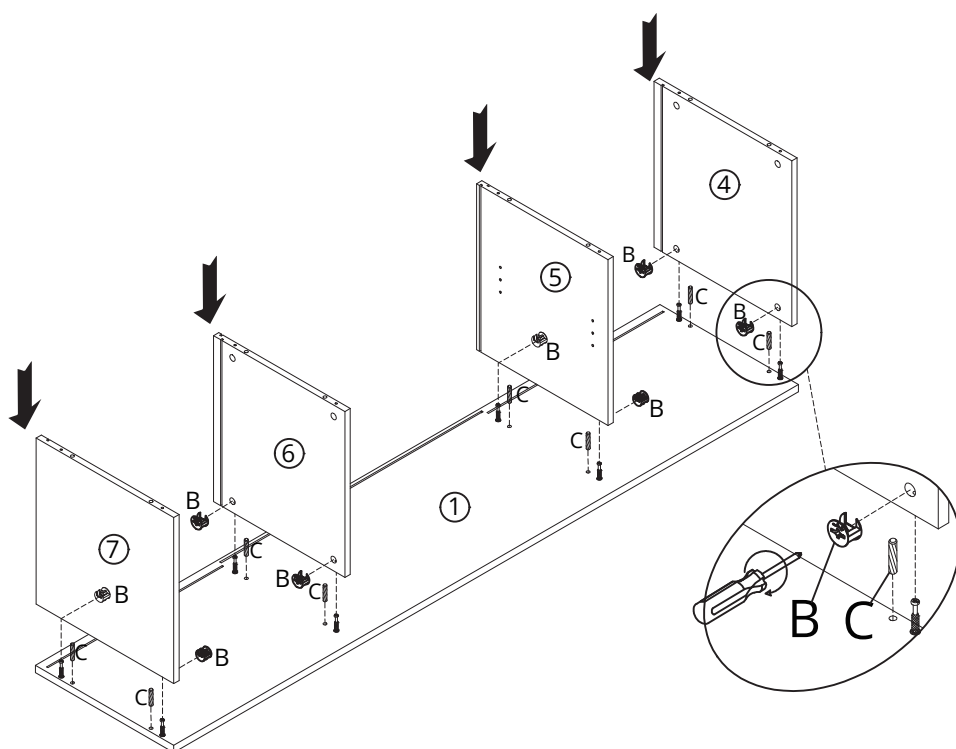

 - 3** Insert the side back panel ⑪ and the middle back panel ⑩. Slide slowly into the grooves.

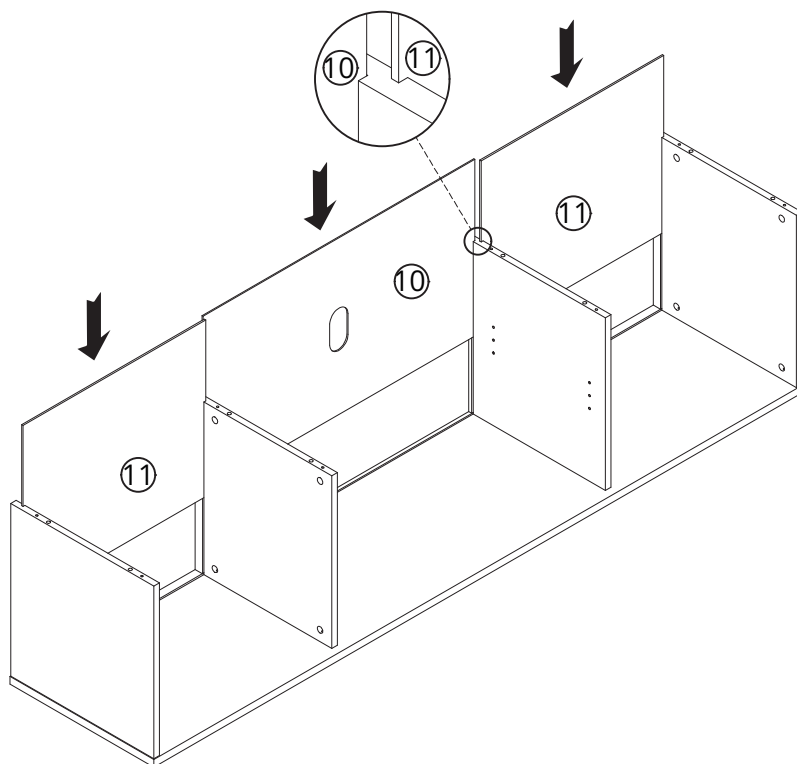

 - 4** Insert dowels (C). Attach the Bottom Panel ②. Align Bottom Panel ② with the dowels and gently press down. Insert cam locks (B). Use a screwdriver to secure cam locks firmly.

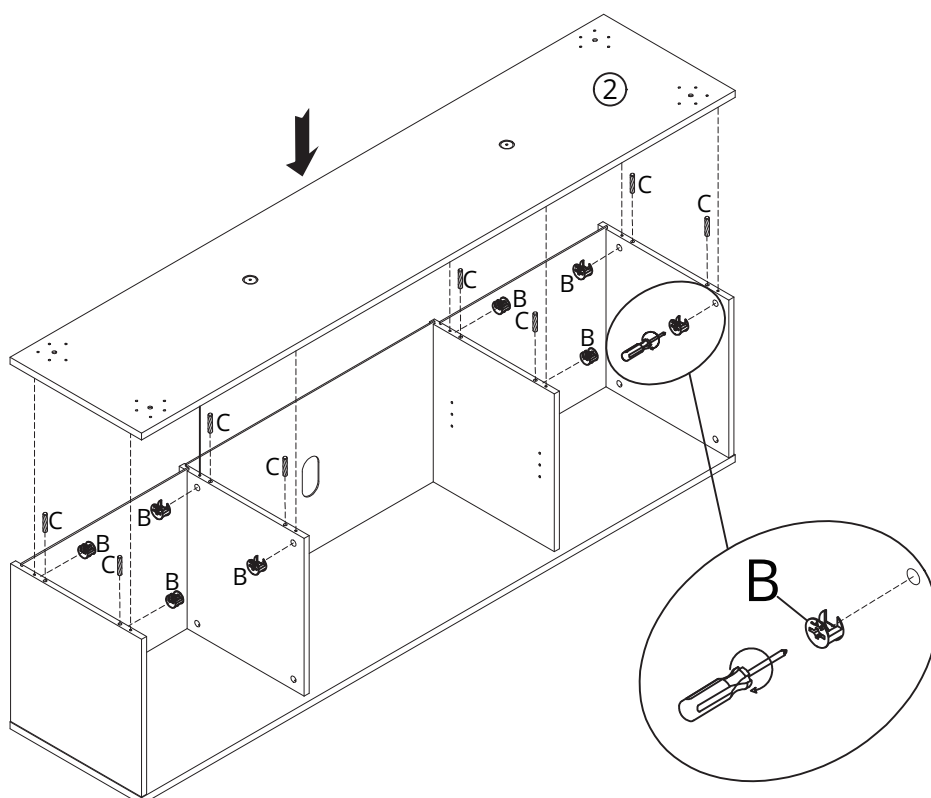



B		x8
C		x8
		x1

	80%	
	100%	

5

  Put 4pcs leg brackets D into the pre-drilled holes, insert 5pcs screws O and tighten firmly.

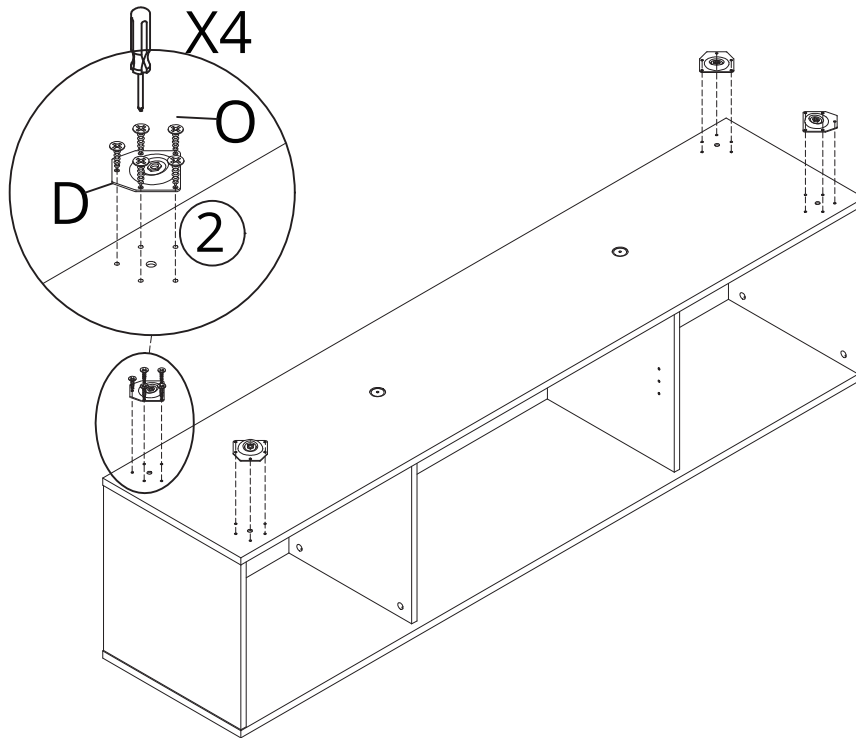


O		x20
D		x4
		x1

	80% X	
100%	✓	

6

 Attach and screw the Legs ⑨ into the bracket firmly.

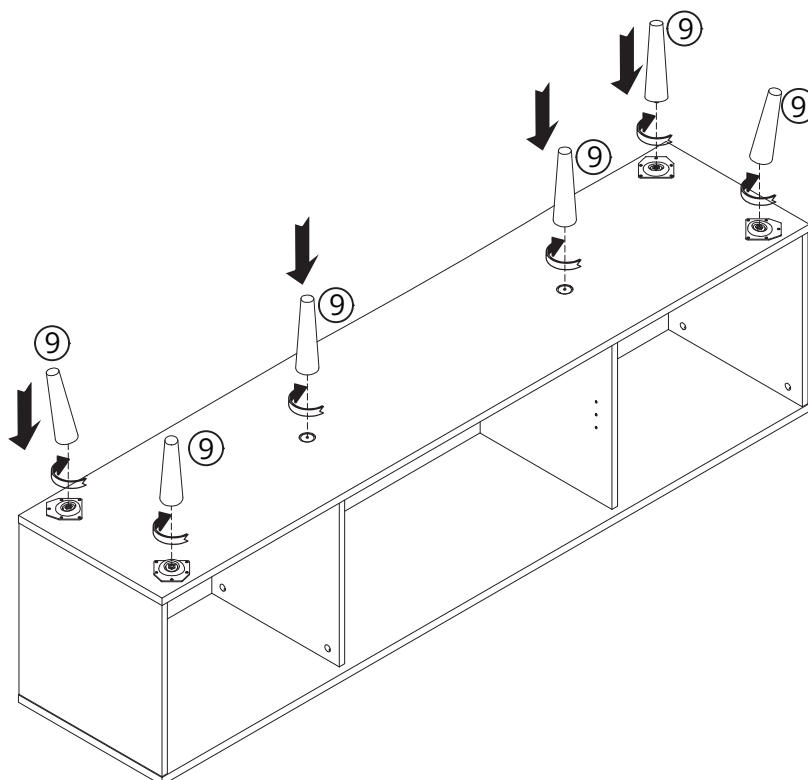


7

Locate Left Door ⑧ and Right Door ⑧. Insert hinges (G) and secure each hinge using screws (E) with a screwdriver.

E		x8
G		x4
		x1

	80% X	
	100% ✓	

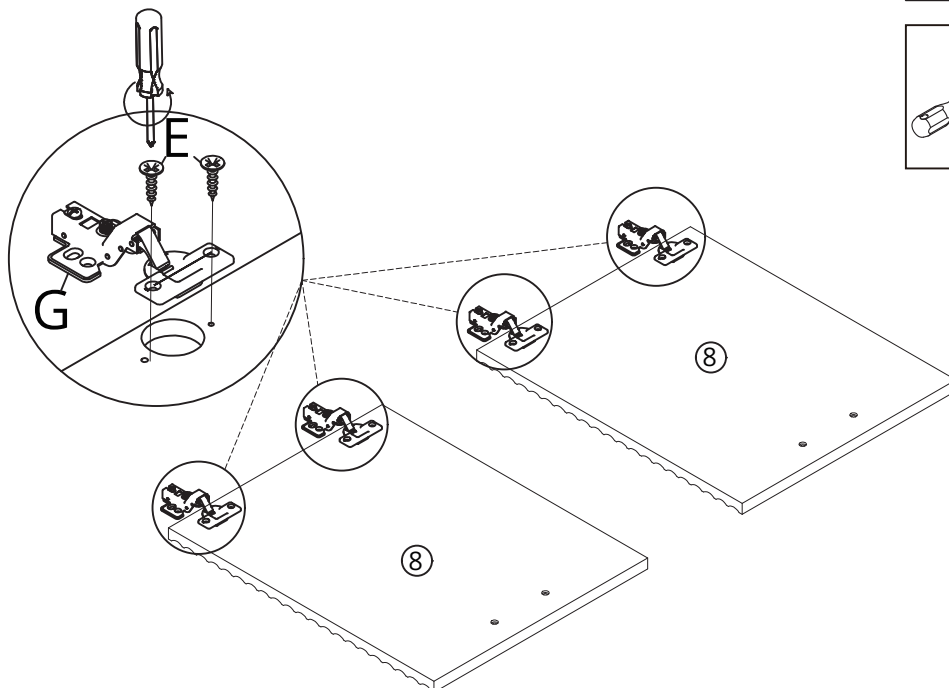 


8

Align each door panel with corresponding pre-drilled holes. Attach the Left/Right Doors using screws (E). Tighten all screws firmly.


E		x16
		x1

	80% X	
	100% ✓	

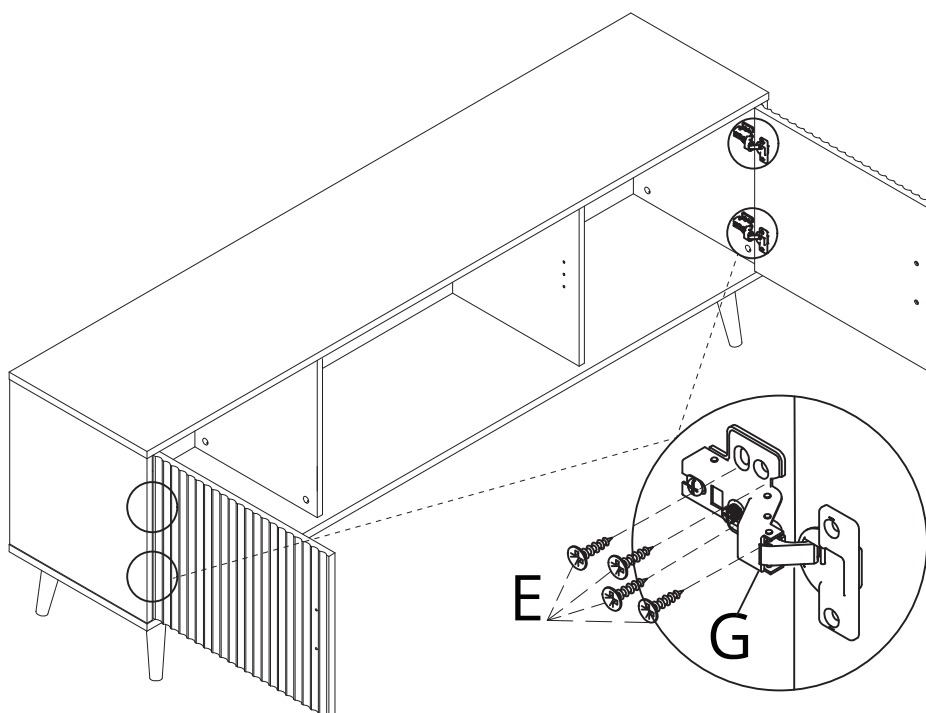 

9

 Attach each handle (M) to front doors using 2 screws (F). Tighten the screws (F) securely with a screwdriver.

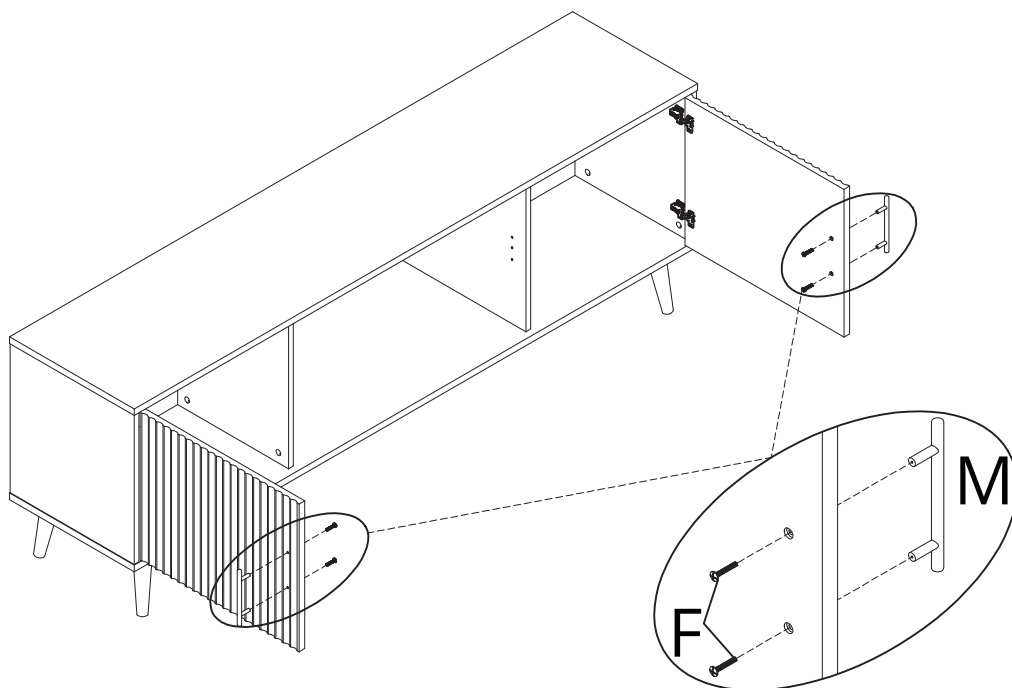


M		x2
F		x4
		x1

	80% X
100%	100% ✓

10

 
Position each bracket (K) on the back of the cabinet. Insert screws (H). Tighten with a screwdriver until secure.

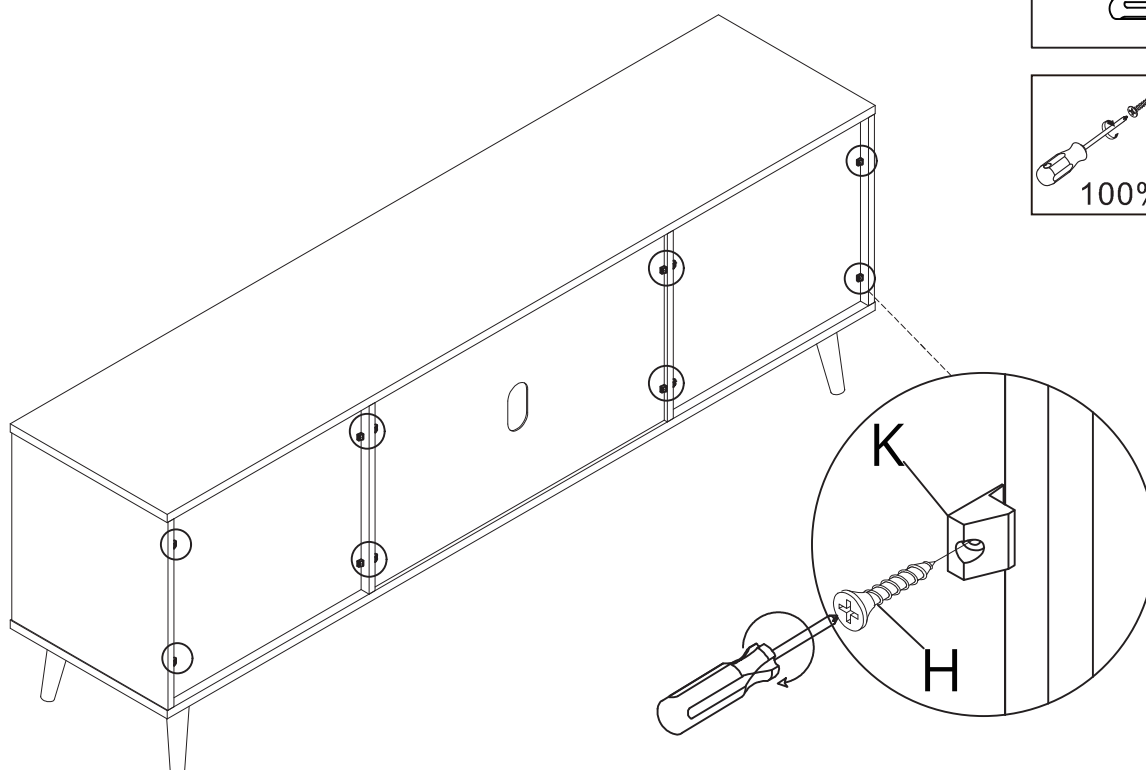


H		x12
K		x12
		x1

	80% X
100%	100% ✓

 - 11** Insert shelf pin (L) into the pre-drilled holes at your desired height, then place the shelf ③ onto the pins, aligning them with the supports.

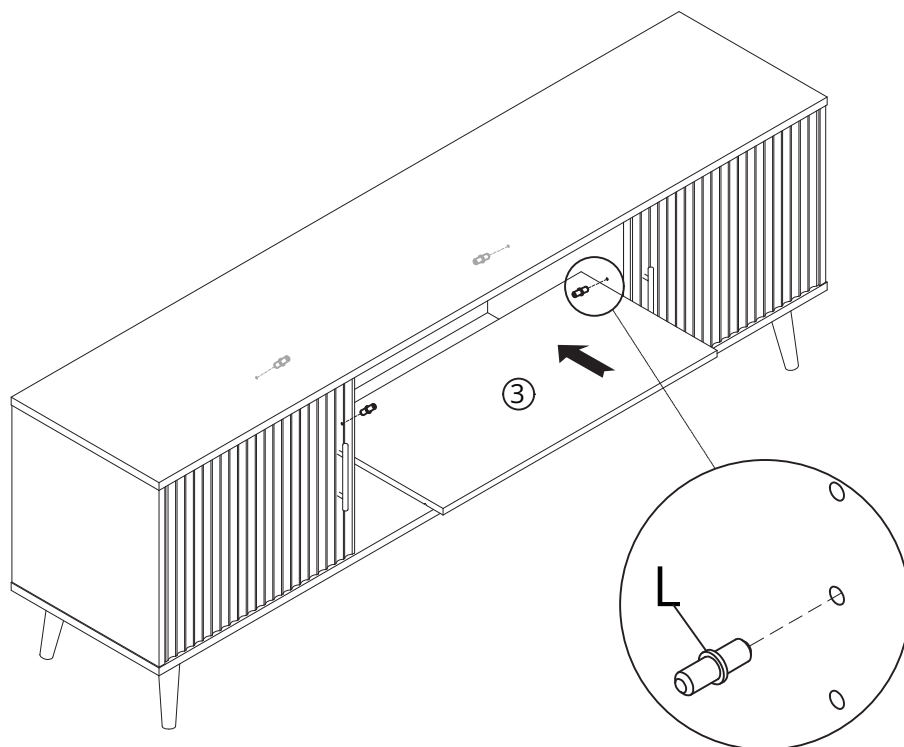


 
- 12** Adjust the leveling feet for balance.

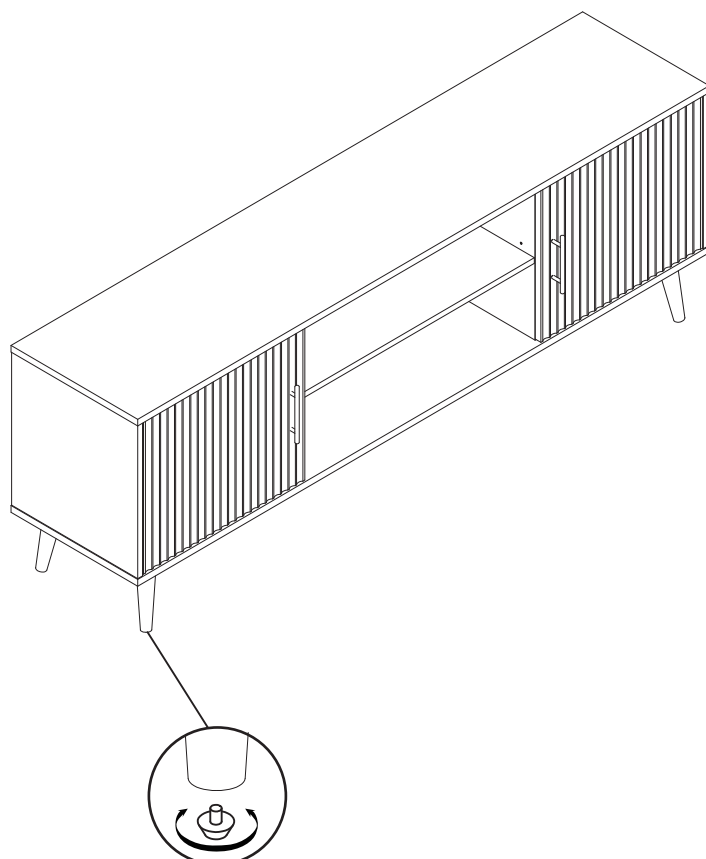



Tips

Hinge/Door Adjustment

 
 
Up and down adjustment

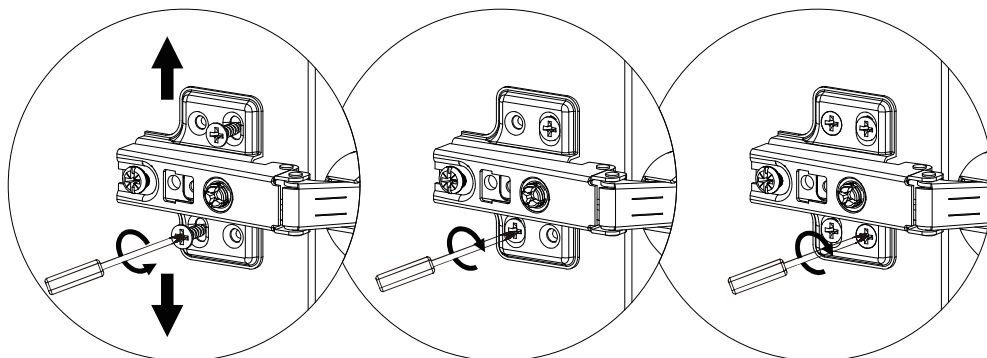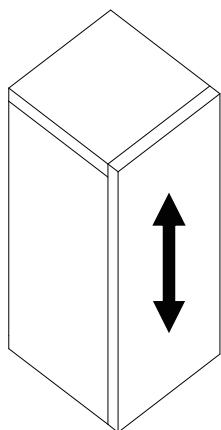

In and out adjustment

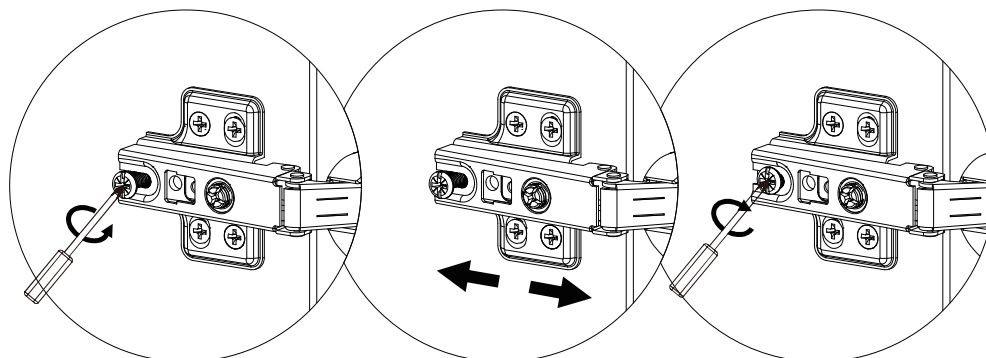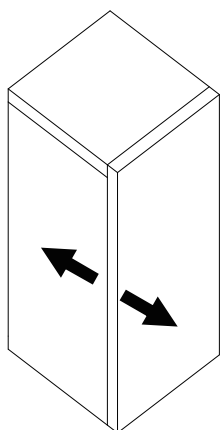  

Left and right adjustment

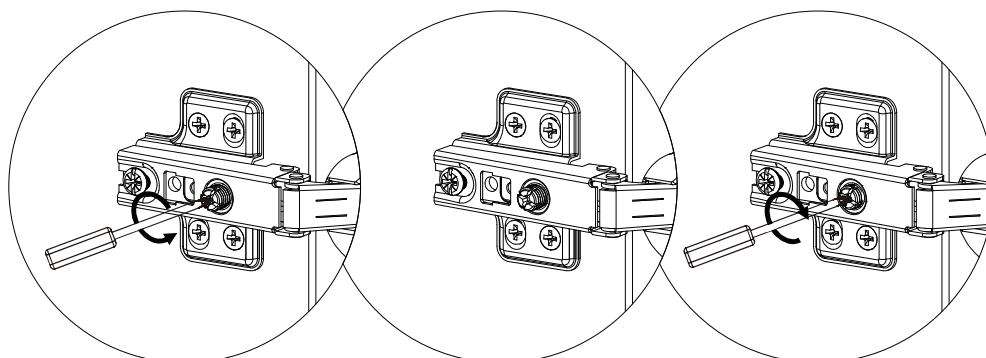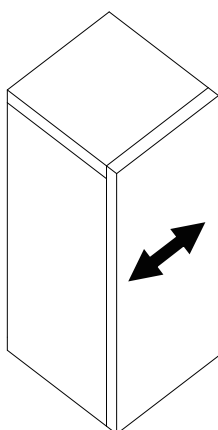  

FINISHED

