

INSTRUCTIONS:

- 1. Remove existing showerhead from shower arm.**
- 2. Apply thread sealant tape to existing shower arm threads.**
- 3. Thread adjustable arm onto existing shower arm hand tight plus a quarter turn with a wrench.**
- 4. Apply thread sealant tape to outlet of adjustable shower arm threads.**
- 5. Thread showerhead onto adjustable shower arm hand tight plus a quarter turn with a wrench.**

To Adjust Height:

**Loosen bottom wing nut and raise or lower shower head/arm.
Retighten wing nut.**

To Adjust Angle: Loosen top wing nut and adjust shower head to desired angle. Retighten wing nut.

Tip: Use cloth between wrench and nut to protect finish.