


# Pre-Installation

 
## Installation kit

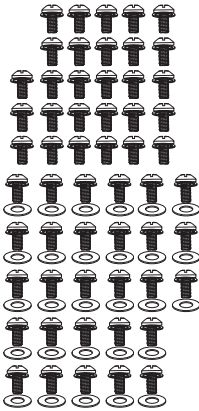


AA



BB




CC

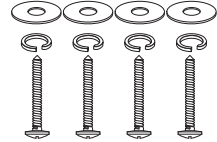

DD

Part	Description	Quantity
AA	Blade attachment screw with lock washer	28+28
BB	Wire nut	3
CC	Screws A	2
DD	Screws B	4

## Blade balancing kit

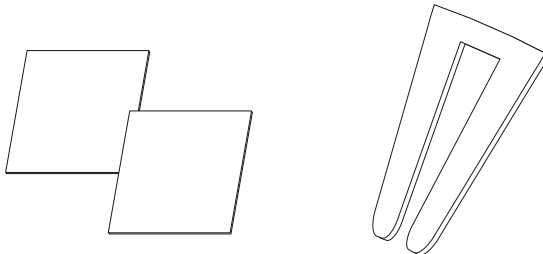


.4.

Visit [www.pmwfan.com](http://www.pmwfan.com) for further assistance.

# Pre-Installation

## Specification

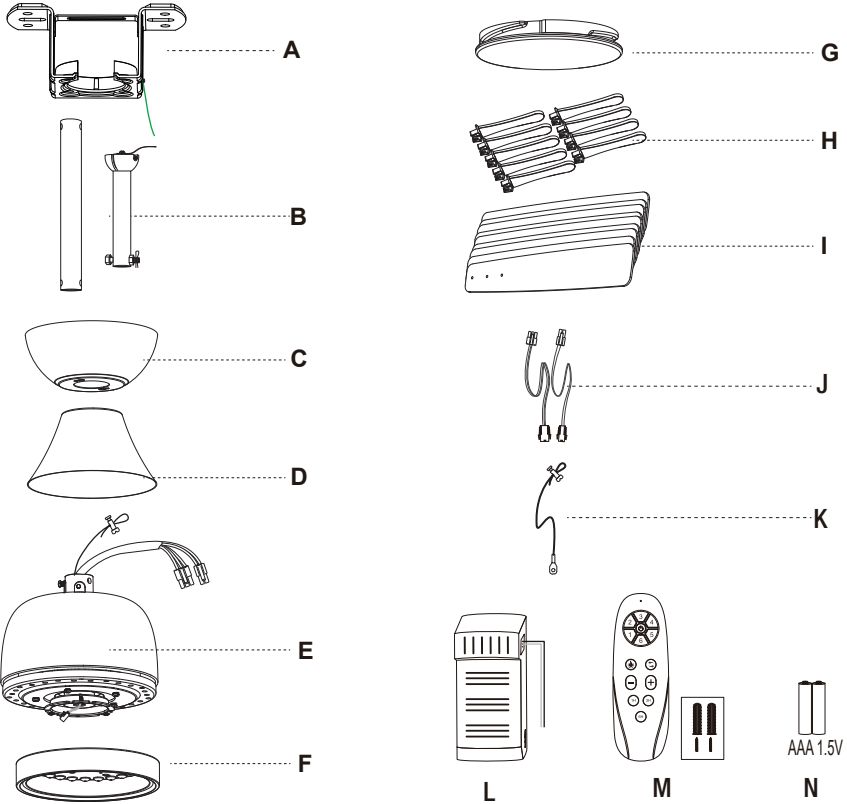

Part	Description	Quantity
A	Bracket	1
B	Down rod	1
C	Canopy	1
D	Yoke cover	1
E	Body/motor	1
F	Light kit	1
G	Light cover	1
H	Blades connector	9

Part	Description	Quantity
I	Blades	9
J	Spare power cable	1
K	Spare safety rope	1
L	Receiver	1
M	Remote control	1
N	Battery	2


Note: The Illustrations in this manual are for explanation purposes only and may differ from the actual unit. It is subjected to change without prior notice for further improvements.

# Remote Control ( Emitter ) Operation

## Transmitter learning process


1. Insert the 2 pcs of batteries into transmitter.
2. Turn on the power supply to the fan. Within 10 sec, press and hold the "1" and "2" button for about 3 sec. Once the receiver has detected the frequency, receiver will "Beep Beep" twice. Programming process is completed and fan is ready to use.

Press and hold for about 3 sec  
→

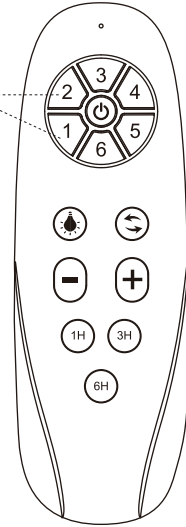


**NOTE:**The remote control device has already been code matching when it leaves the factory.If the fan is not responding to the transmitter,repeat transmitter learning process.

## Remote Control Holder Installation

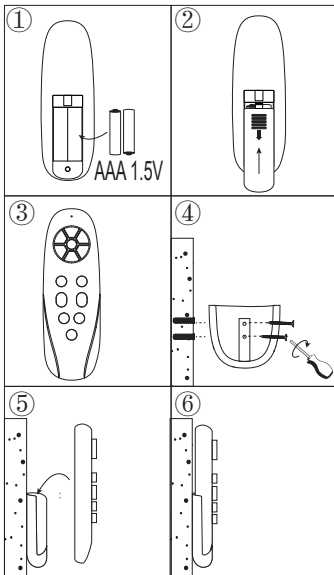

## Transmitter Function

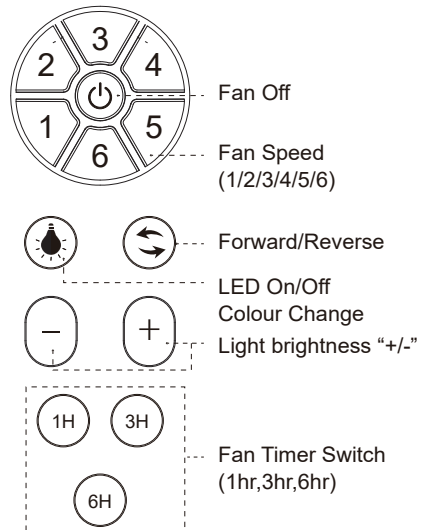

# **YUHAO**

**Questions, problems, missing parts? Before returning to the store,  
visit [www.pmwfan.com](http://www.pmwfan.com) for further assistance.**

**Retain this manual for future use.**