

230.00 mm

USER GUIDE 4 BLADE STOVE FAN

This manual contains information regarding the safe operation and warranty details for your product. Please read all details before operation to avoid injury and product damage. We recommend that you keep this for future reference.

1. Handle Make sure handle is upright before placing on the stove. Always carry the Stove Fan by the handle.

2. Fins Never insert fingers or other objects into the fins whilst the Stove Fan is running. Keep hair and clothing away from moving fins.

3. Hex Box Ensure the fins are tight before use, using a suitable hex key to tighten if necessary.

4. Base Make sure the Stove Fan is located onto a flat, suitable surface, kept out of reach of children. Children MUST be supervised when the fan is in operation. BEWARE that the base will get hot so do not set it down onto an unprotected surface as this could cause damage.

5. For summer use, the fan can be connected with the power charger or the notebook with USB cable for cooling.

WARNING!


This Stove Fan operates between temperatures of 65°C-350°C. Temperatures above this can cause damage to the product. It is recommended that you use a suitable high temperature thermometer to test the temperature of your stove. DO NOT touch the USB connection by hand directly. Keep children away from USB cable.

CAUTION:


When using on a stove, the body of the Stove Fan will become hot. Do not touch the base of the Fan.

REMEMBER:

Do not leave the Stove Fan unattended whilst in operation and take care not to drop the Stove Fan which could cause damage.

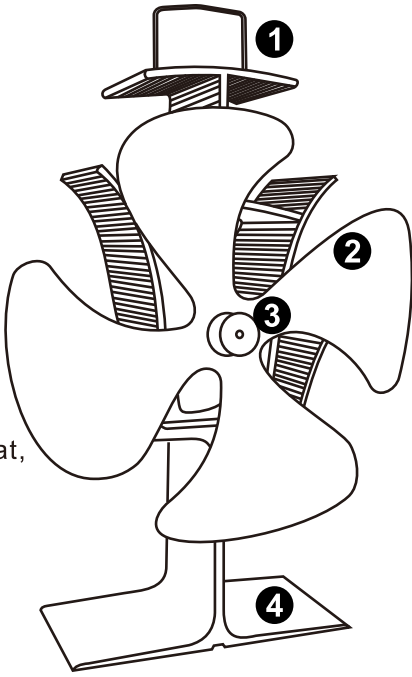

USER GUIDE 4 BLADE STOVE FAN

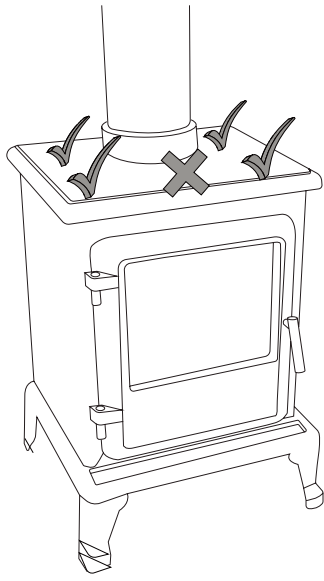

PLACEMENT:

For optimum performance of your product, placement of the Stove Fan is critical.

- Ensure the position of the Stove Fan is as far away from the flue pipe as possible. Do not place directly in front.
- Place the Fan to either side of the stove or the front.
- Place the Fan so that cool air can flow through the rear of the fins.

NOTE:

Overheating not only reduces the effectiveness of the item, but can also damage the Stove Fan's components. The fan should be removed if the temperatures exceed 300.

RECOMMENDED:

It is suggested that you keep all packaging for this item for storage during the summer months and also to make it easier to return under warranty.

WARRANTY:

This product carries a 1 year warranty to be free from manufacturing defects in material and workmanship for 1 year from date of purchase. This covers domestic use only - this item is not considered suitable for industrial or commercial use. Damages or defects resulting from improper use, general wear and tear, breakages or accident are not covered. Should you wish to report a problem with your product we recommend contacting your retailer for information on the warranty process before sending. No rights are given under this warranty to a person acquiring the product second-hand. Repair or replacement options will be at the discretion of the retailer. Your statutory rights are not affected.

RETURNED GOODS:

will not be accepted unless re-packaged in its original colour box. We recommend that you contact the retailer for information on their returns process before sending. This does not affect your statutory rights.