

Attention: Do not tighten the bolts and screws before the allen bolts are in place

USER'S MANUAL

Bar Stool

BEFORE YOU GET STARTED, A FEW POINTERS




Having a friend to help makes assembly extra-easy



Mind the important safety information


★ PLEASE MAKE SURE ALL THE PARTS ARE INCLUDED.

1

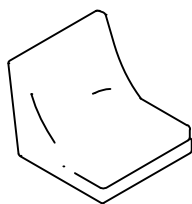


Chair back *1

2

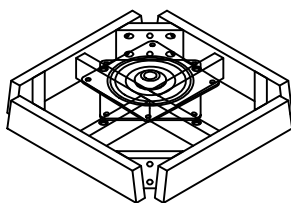


Seat frame *1

3

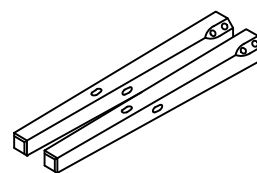


Left legs *4

4

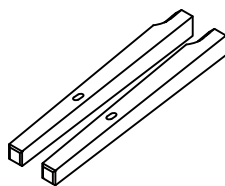


Right legs *2

5

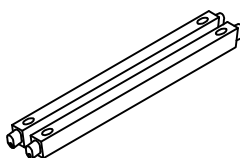


Short cross bar *2

6

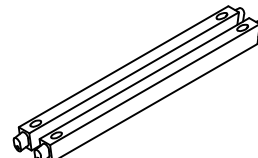


Long cross bar *2

 7



M6x60mm *8

 8



M6x25 *4

9



M6x13 *16

10



 
M6x13mm *16

11



M6x45 *8

12




M4 Allen Key *1


ASSEMBLY INSTRUCTIONS - ATTENTION

Friendly Notice:

If the installation positions cannot be aligned well, gently shake the Seat (2) when locking the bolts, this can help prevent the bolts from locking and ensure smooth assembly. Do not tighten the bolt completely, only 50% is ok


STEP 1

M4 x 45mm		4pcs
-----------	---	------

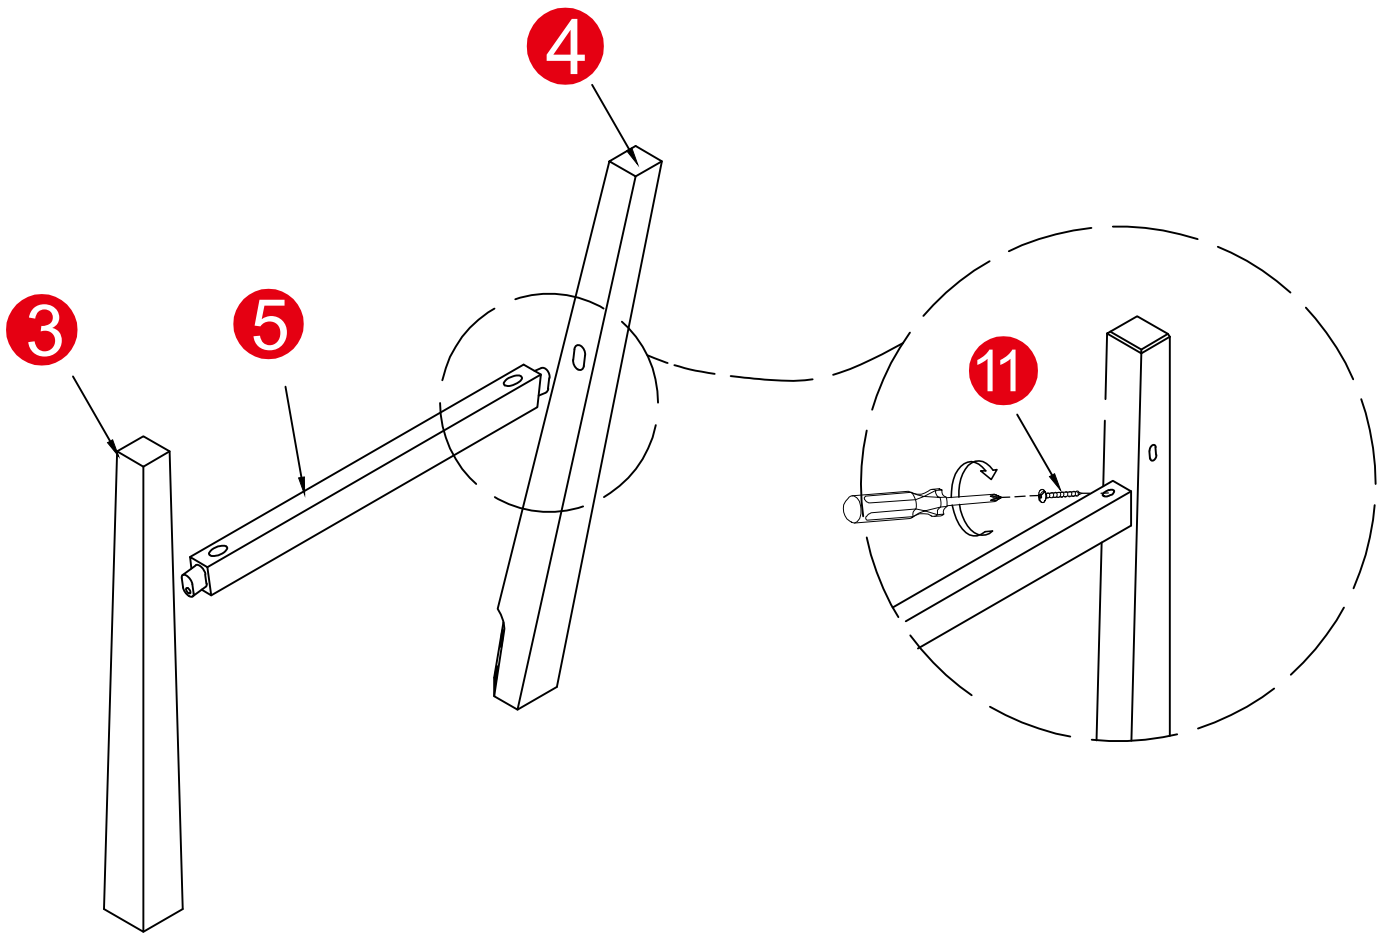


ASSEMBLY INSTRUCTIONS - ATTENTION

STEP 2

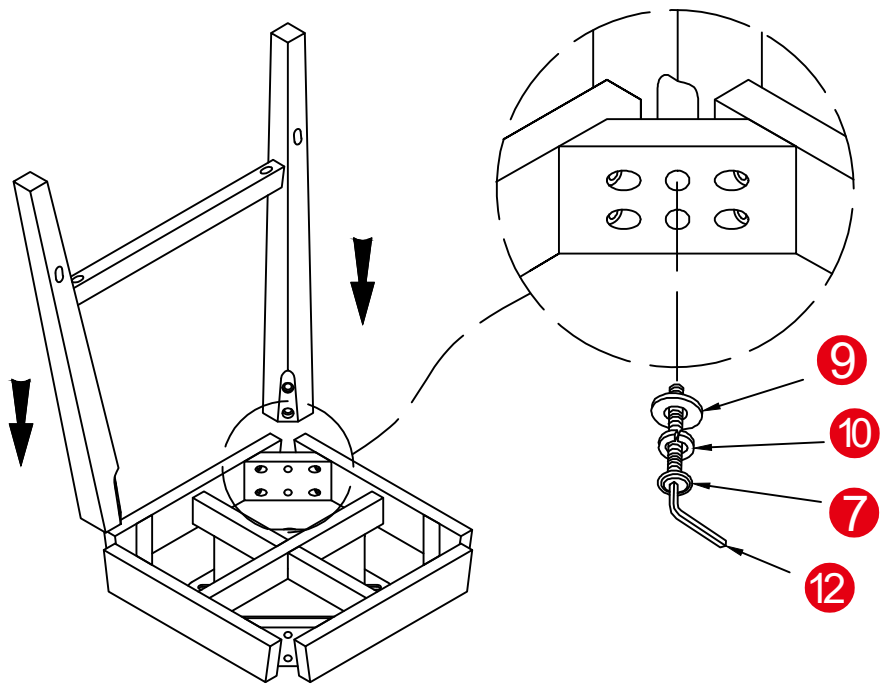



(8pc)	(8pc)	(8pc)	(1pc)

STEP 3



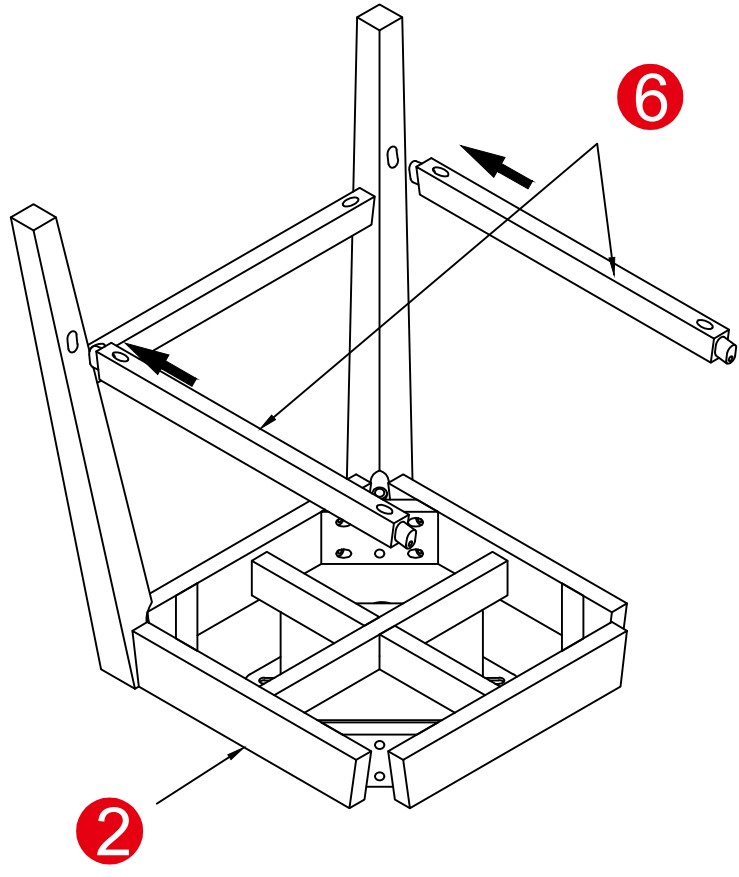


ASSEMBLY INSTRUCTIONS - ATTENTION

STEP 4

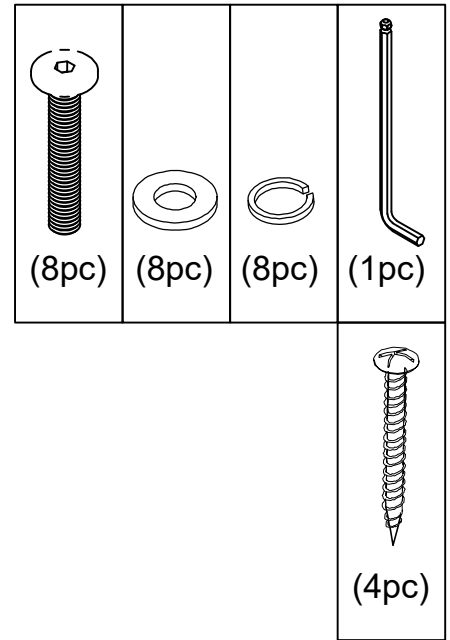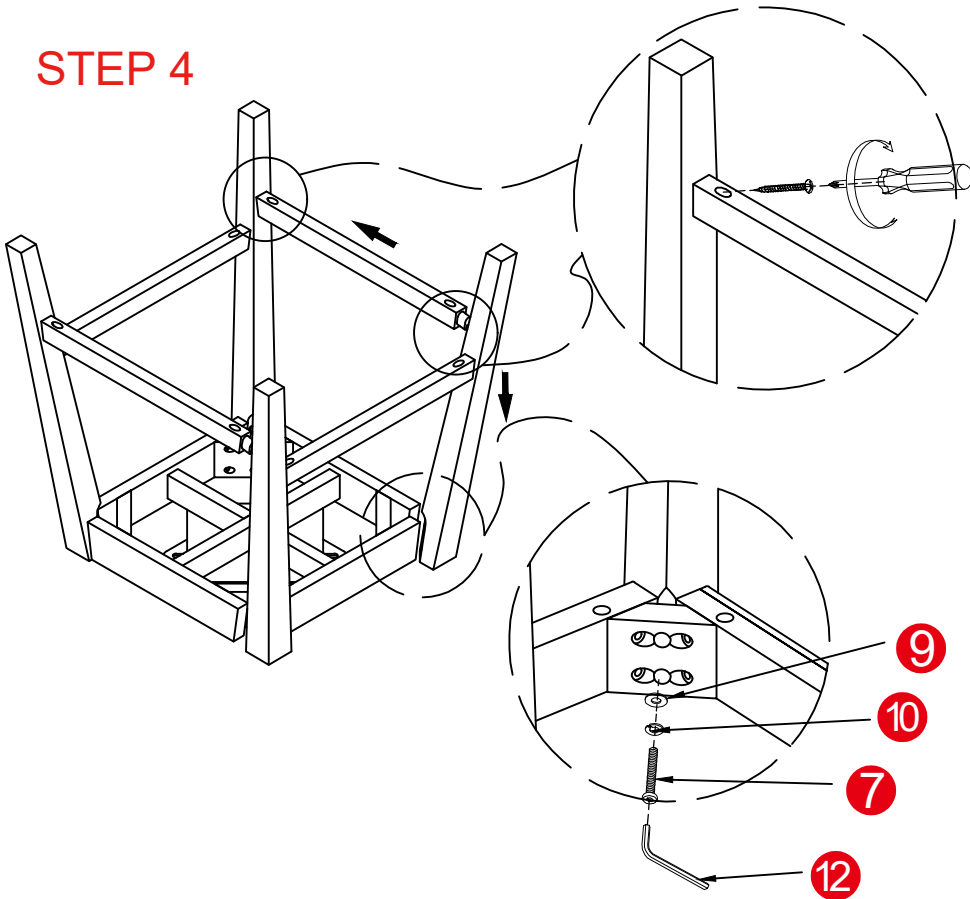

STEP 5

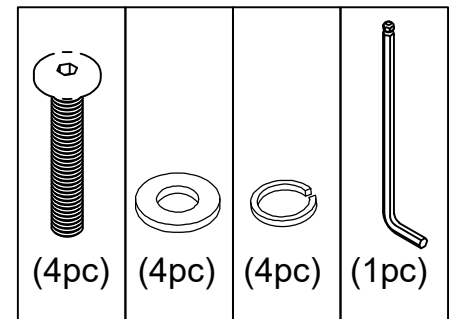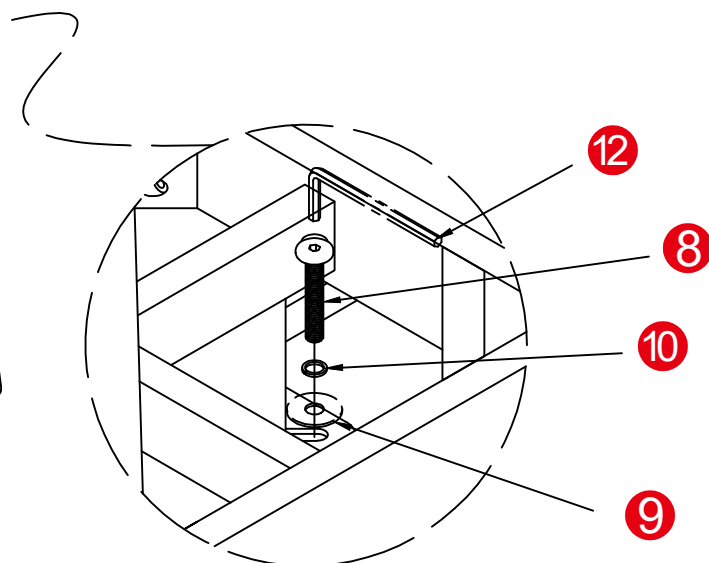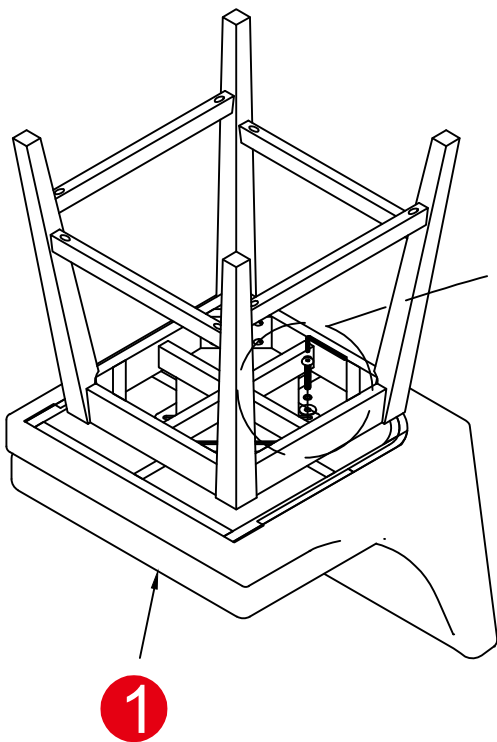

BE SURE ALL BOLTS ARE SECURELY TIGHTENED PRIOR USING THIS STOOL.



WARNING:



Read the instructions carefully.

Step 1

Step 2

Please follow the assembly steps.

Weight Capacity for Seating: 350LBS

To ensure proper assembly, follow all steps and use all parts, do not use power tools. Failure to follow this warning can result in serious injury to yourself or others.

Please inspect all items before assembly, if for any reason you need to return this item, please kindly return in it's original packaging.

To avoid misalignments, leave the screws loose and do not tighten them until all are in their respective places.

Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.

Do not overtighten or force the screws as they could break, strip, or damage the threads of the holes.

Using the wrong size of screws on a part could result in damage to the screw or the part.

Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed.

Do not use if this product becomes damaged, and / or components are broken or missing.