

ASSEMBLY INSTRUCTIONS

E-mail: Seevooservice@gmail.com

If you encounter any problems during installation
or use, please feel free to contact us by email
and we do happy to help you.



MODEL NO(5293)

NOTE:

If there is any issue with our chair, please contact After-Sales Support with your order number at **E-mail: Seevooservice@gmail.com** , we will solve it for you immediately !

Components




Hardware



ITEM	DESCRIPTION	QUANTITY
A	Leg	5
B	Base	1
C	Backrest	1
D	Seat	1
E	Armrest	2
F	Seat Plate	1
G	Caster	5
H	Gas Lift	1
I	Dust Cover	1
J	Screw(M6x25mm)	8
K	Screw(M6x16mm)	10
L	Screw (M6×20mm)	4
M	Decoration Cap	8
N	T Allen Wrench	1



step 1.

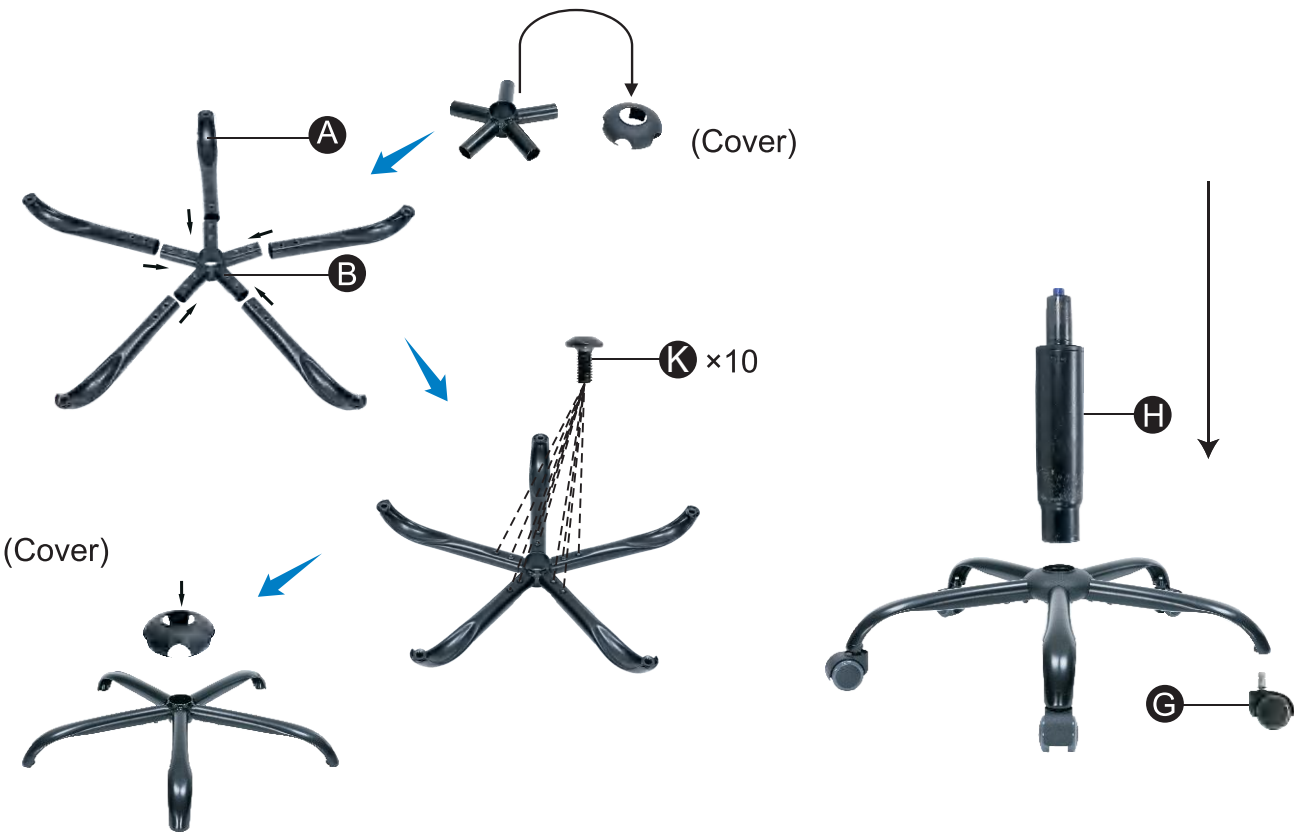

step 2 .



step 3.



step 4 .



step 5.



step 6.



Function

Congratulations! Enjoy your chair now!
Join our warranty system to get a surprise!

- 1、Open your camera
- 2、Scan the code to activate a 5-year warranty & redeem \$50



Rocking Mode

Pull out the lever to enter rocking mode with the backrest. Push in the lever to lock the backrest to 90°.

Adjustable Lumbar Support

Press the airbag to inflate the lumbar area of the chair, which will provide more effective support for lower back.

Adjustable Height

An adjustable height range of 3.9 inches, support shoulder & back relaxation. You can adjust the height by pulling up on the proper lever if you are already in the chair.



Tension Device

Offer a little rocking feature what are clockwise to tight and anticlockwise to loosen.

Q&A

Q: Does the chair have a warranty? What if parts are missing or damaged?

A: Dear customer, we have 5-year warranty. If there are problems such as missing parts, product damage, or other unsatisfactory issues, please feel free to contact us.

Customer Service Email: Seevooservice@gmail.com

Q: How to adjust the seat height?

A: When you sit on the chair. To raise the seat height, please lift your body slightly while lifting the adjustment lever. To lower the seat height, please increase the pressure down on your body while lifting the adjustment lever.

Q: How to adjust the tightness of the backrest?

A: When you are taking a rest. Loosen the tension knob (under the seat), pull out the adjustment lever, and you can turn on the rocking mode. Lean back, and the backrest angle swings from 90° to 115°.

When you are working, you can push in the adjustment lever to lock, keeping the backrest angle at 90°.