

Purchase Date: ____ / ____ / ____ Order/Customer Reference Number: _____

 
Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty.

If you have any questions, comments or concerns, feel free to contact , or via our contact us page.

GENERAL CARE GUIDE FOR HANGING HAMMOCK CHAIRS

Save this guide for future reference.

USE & CARE



ROPES: Even with normal use, all hammock chair ropes will stretch. Keep this in mind when hanging a hammock chair.

WOODEN SURFACES: Unfinished surfaces may need to be hand-sanded if stains develop. Take care not to overdo it as it will reduce the strength of the wood. Do not use power tools to sand, it is unsafe and could damage the ropes.

SAFE USE: Do not swing, bounce, jump, twist, or make other excessive movements while using this chair. Misuse of the hammock chair, such as using it like a swing or exceeding the weight limit, can cause the ropes to stretch or break.

SUN EXPOSURE: All fabrics will eventually fade and degrade from sun exposure. The less direct sunlight the hammock chair is exposed to, the longer the life of the hammock will be.

CHILDREN: Supervise children at all times while using this product. Do not allow children or pets to play in the hammock chair. Excessive swinging or rough play may damage the hammock chair and could cause injury.

INSPECT: Before each use, inspect the ropes, fabric, and spreader bar for wear and weakness.

CLEANING: Clean when soiling or staining is present and before storage.

STORAGE: Store indoors, in a dry location during inclement weather, winter, and when it will not be used for an extended time. Ensure it is completely dry before storing to prevent mold and mildew growth.

CLEANING



HAND-WASH ONLY



DO NOT USE BLEACH OR FABRIC SOFTENERS



LAY FLAT TO DRY



DO NOT IRON

Spot-clean whenever possible.

Hand-wash in a bathtub or kiddie pool using mild soap or detergent and a soft-bristled scrub brush. Soaking may be required for heavily soiled ropes. Keep the wooden bar and galvanized ring out of the water as much as possible.

Rinse away all soap residue and air-dry on a flat surface to prevent the ropes from stretching. The ropes may shrink slightly while drying but will stretch back out with use.

! SAFETY STATEMENTS & WARNINGS !

- Before each use, inspect your hammock chair for wear and weakness. Do not use if the ropes are frayed, fabric is torn or the spreader bar is cracked.
- Excessive swinging and other rough play may result in serious injuries.
- Children must be under constant supervision while using this product.
- Do not allow pets into the hammock chair as doing so may result in injury or damage the product.
- Do not exceed the recommended weight capacity of the hammock.
- Never untie the ropes.

Any modification to the product or failure to follow recommended care will void the product warranty.

! WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

