

INSTRUCTIONS FOR YOUR PRODUCT

Step 1

Connect tubing from fountain feature to intake on pump. Place pump inside base of fountain. Feed plug through circular hole in fountain frame. Place top of fountain into the base. Fill base with water making sure pump is fully submerged.



Step 2

Plug in fountain and adjust water flow as needed. Move the switch towards (+) to increase flow rate and towards (-) to decrease flow rate. Water will naturally evaporate depending on conditions. Add water as needed. Never let the pump run dry as it will damage the motor.



THANK YOU FOR
YOUR PURCHASE