

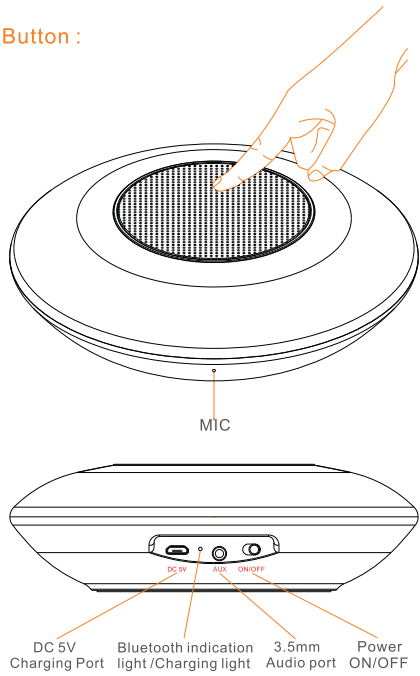


<div data-bbox="605 323 831 453"><p>MONDAWE PICK YOUR FAVORITE</p><p>USER MANUAL</p></div> <div data-bbox="498 499 937 756"></div> <div data-bbox="593 785 822 831"><p>Website:www.mondawe.com Customer Service:service@mondawe.com Phone:888-328-5111</p></div> <div data-bbox="593 848 848 894"><p>Site Internet: www.mondawe.com Email de Service Client:service@mondawe.com Numéro de Téléphone:888-328-5111</p></div> <div data-bbox="519 900 926 951"><p>Intelligent Mood lamp bluetooth speaker</p><p>Please read this user manual carefully before using the device.</p></div>	<div data-bbox="1029 344 1175 367"><p>Specifications:</p></div> <div data-bbox="1029 396 1359 932"><p>Product name:intelligent mood lamp speaker</p><p>Mode:X6</p><p>Charging input: DC5V---1A</p><p>Battery capacity:3.7V/2000mAh</p><p>Charging time: about 2.5 hours</p><p>Speaker specification: Φ52mm</p><p>Speaker unite: 4 ohms, 3W</p><p>Lighting power: 2.4W.</p><p>Material: ABS / PP /Metal</p><p>products size: 150x 48mm</p><p>Frequency range: 50HZ - 20KHZ</p><p>Distortion:<0.5%</p><p>SNR: 65Db</p><p>Bluetooth Frequency:2.4 GHZ-2.8GHZ</p><p>Bluetooth protocol:A2DP1.2</p><p>Bluetooth version: V4.2</p><p>Bluetooth distance: 10 Meter</p></div>	<div data-bbox="1537 344 1614 367"><p>Button :</p></div> <div data-bbox="1537 327 1929 957"></div>	<div data-bbox="2044 344 2136 367"><p>Charging</p></div> <div data-bbox="2044 375 2433 489"><p>Please make sure the unit is fully charged before using for the first time. Charge the speaker using the provided USB cable by connecting it to any computer or 5V cell phone charger. The charging LED indicator will remain red while charging and will turn off once the unit is fully charged. Charging time is approximately 4 hours.</p></div> <div data-bbox="2044 527 2193 550"><p>Power ON/OFF</p></div> <div data-bbox="2044 556 2433 588"><p>Press the button ON/OFF to the “ON”,the device will be power on.move to “OFF”,the device will be power off.</p></div> <div data-bbox="2044 627 2154 651"><p>Light Mode</p></div> <div data-bbox="2044 657 2433 703"><p>The device has variety of light modes. Touching the speaker mesh for 5 seconds will switch the unit between lamp mode and color mode.</p></div> <div data-bbox="2044 705 2433 819"><p>Lamp Mode: To activate lamp mode simply push the speaker mesh. This will set the lamp to its lowest mode. There are three levels to choose from: low, medium, and high bright. To increase lamp brightness, touch the speaker mesh until desired brightness is achieved. Once the lamp is at its brightest setting, touching the speaker mesh again will turn it off.</p></div> <div data-bbox="2044 833 2433 913"><p>Color light:You can change the speaker to multi-color mode (AKA cool mode) by touching the speaker mesh for 3 seconds. Once in this mode, touch the speaker mesh to change colors. Continue touching to reach color cycling mode and rhythm mode.</p></div>
<div data-bbox="519 1079 641 1102"><p>Mode switch</p></div> <div data-bbox="519 1108 920 1155"><p>There are two modes :Bluetooth,aux in mode,The default mode is Bluetooth,it will be aux in mode when inserting the aux in cable.</p></div> <div data-bbox="519 1167 673 1190"><p>Bluetooth Mode</p></div> <div data-bbox="519 1197 920 1337"><p>When the speaker is turned on it automatically enters Bluetooth mode. If the unit has been previously paired, it will automatically connect to that device. If no device has been paired, upon being powered on, the unit will enter paring mode. The blue indicator LED will flash and you will hear voice prompts. You may only connect one device at a time. To connect a different device, be sure to turn off Bluetooth mode on the curently connected device and follow the corresponding steps below.</p></div> <div data-bbox="519 1339 920 1419"><p>When Power on speaker, if without connect the bluetooth after 10 minutes, the bluetooth pairing function will be automatically turn off. If you want to re-connect the bluetooth, need to turn off the power button and then turn on the power to re-activate the bluetooth pairing function.</p></div> <div data-bbox="519 1438 697 1457"><p>Mobile Device Pairing:</p></div> <div data-bbox="519 1457 920 1554"><p>To connect your mobile device (phone, tablet, MP3 player) enter the Bluetooth settings and search for nearby Bluetooth devices. When you see X6 in the list of available devices, select it. If your device requires a password, enter 0000. Once succesfully paired, the blue indicator LED will stop flashing and remain solid blue.</p></div> <div data-bbox="519 1570 721 1589"><p>Connecting To Computer:</p></div> <div data-bbox="519 1589 920 1703"><p>Connecting to a desktop computer or laptop is easy. First make sure that the Bluetooth function is on by entering your computers Bluetooth settings and turning it on. While in the Bluetooth menu find the device name X6 and select it. Your computer should pair with the X6. Once succesfully paired, the blue indicator LED will stop flashing and remain solid blue.</p></div>	<div data-bbox="1029 1096 1261 1119"><p>Bluetooth Music Playing</p></div> <div data-bbox="1029 1125 1397 1205"><p>Open the player device when the connection is successful. Click to play music, and the Bluetooth speaker will play the music. You can operate the connected player to control play, pause, volume up and down .</p></div> <div data-bbox="1029 1230 1276 1253"><p>Bluetooth Hands free Call</p></div> <div data-bbox="1029 1260 1421 1323"><p>Answer and hang up the phone. There will be an alert sound from the speaker when there is a phone call. Touch the top panel to answer and end the phone.</p></div> <div data-bbox="1029 1346 1124 1369"><p>AUX Input</p></div> <div data-bbox="1029 1375 1421 1438"><p>Use this 3.5mm jack to connect any external audio device such as a mobile phone, MP3 player, tablet, lap top, or computer. When a 3.5mm cable is connected, the unit automatically switches to AUX input mode.</p></div> <div data-bbox="1029 1463 1353 1486"><p>Bluetooth connection notification:</p></div> <div data-bbox="1029 1488 1421 1665"><p>1. If the speaker has been connected with Bluetooth devices before, it will connect with the last Bluetooth device automatically once it is turned on. 2.Other phones or tablets can not be connected with the Bluetooth speaker when the speaker is being connected with a phone or tablet. 3.The phone or tablet can not be connected with the Bluetooth speaker if it is connected with other Bluetooth devices. You should turn off your Bluetooth connection and connect your phone with the Bluetooth speaker.</p></div>	<div data-bbox="1537 1096 1813 1119"><p>Frequently Asked Questions</p></div> <div data-bbox="1537 1121 1875 1140"><p>Unsuccessful pairing and connection repeatedly</p></div> <div data-bbox="1537 1144 1929 1272"><p>1.Check the speaker and make sure it is in the searching state or reboot the speaker. 2. Connection is difficult when there are too many Bluetooth devices nearby. Turn off other Bluetooth devices. 3. Turn off the Bluetooth device that was connected with the Bluetooth speaker last time, and reconnect the speaker .</p></div> <div data-bbox="1537 1291 1712 1310"><p>Muted or distorted sound</p></div> <div data-bbox="1537 1314 1911 1362"><p>1.Check the volume of your phone or the speaker, and adjust the volume. 2.The battery is low. Please charge it.</p></div> <div data-bbox="1537 1381 1670 1400"><p>Choppy music play</p></div> <div data-bbox="1537 1404 1935 1470"><p>1. Check if the device is beyond the effective connection distance. 2.Check if there is any obstacle between the speaker and your device.</p></div> <div data-bbox="1537 1484 1843 1503"><p>The indicator not shining in Bluetooth mode</p></div> <div data-bbox="1537 1507 1798 1539"><p>1.The battery is low. Please charge it. 2.Please reboot the speaker.</p></div> <div data-bbox="1537 1581 1656 1604"><p>Precautions</p></div> <div data-bbox="1537 1617 1926 1682"><p>1.Please store and use the product in room temperature environment. 2.Do not expose this product in rain or wet conditions. 3.Do not drop or bump this product.</p></div>	<div data-bbox="2044 1117 2433 1247"><p>4.Do not disassemble, repair, or modify the product in private. 5.Please use the power charge with rated voltage for the speaker. 6.It may cause hearing damage if playing music in high volume for a long time. Avoiding excessively high volume when playing music for a long time. 7.Disassemble this product will invalidate the warranty.</p></div>