


Betty Crocker

OVAL PROGRAMMABLE SLOW COOKER

For assistance regarding this appliance, please call 1-877-244-1110





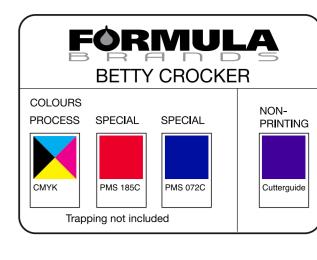

Select from 3 pre-programmed settings: High, Low and Keep

Warm Program cooking times from 30 minutes to 20 hours.

Clean and sleek design Digital
Touch Control Panel.

ideal for cooking and serving large family meals and perfect

you to monitor the cooking

cook your meals with consistent and even heat.

READ INSTRUCTIONS BEFORE USING



READ INSTRUCTIONS

BEFORE USING





Betty Crocker

