


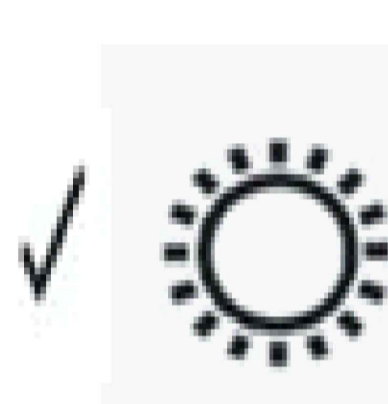

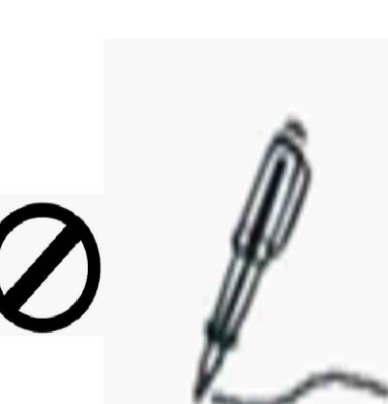


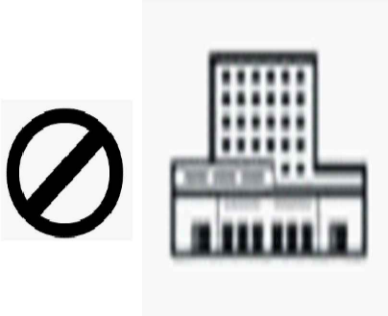

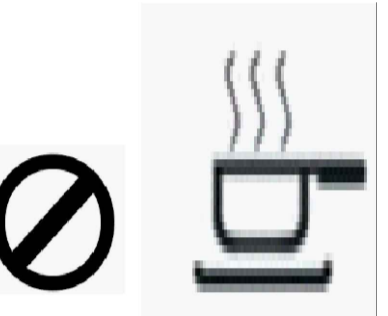

Assembly Instructions


CAUTION : You must read these Assembly Instruction before you proceed

Care & Maintenance

-  ● Not for commercial use. For residential use only.
-  ● Do not put hot items directly on furniture surface.
-  ● Do not clean furniture with harsh cleansers or polish.
-  ● To obtain the longest lifespan of your outdoor product minimizing exposure to direct sunlight is recommended.
-  ● Children should not climb or jump on the furniture.
-  ● Do not write on furniture without a padded barrier to protect the surface.
-  ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
-  ● Stains may be removed with mild soap solution and damp cloth.
-  ● Keep away from sources of ignition.
-  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look into the Seat Panel for hardware packs.

LOUNGE CHAISE






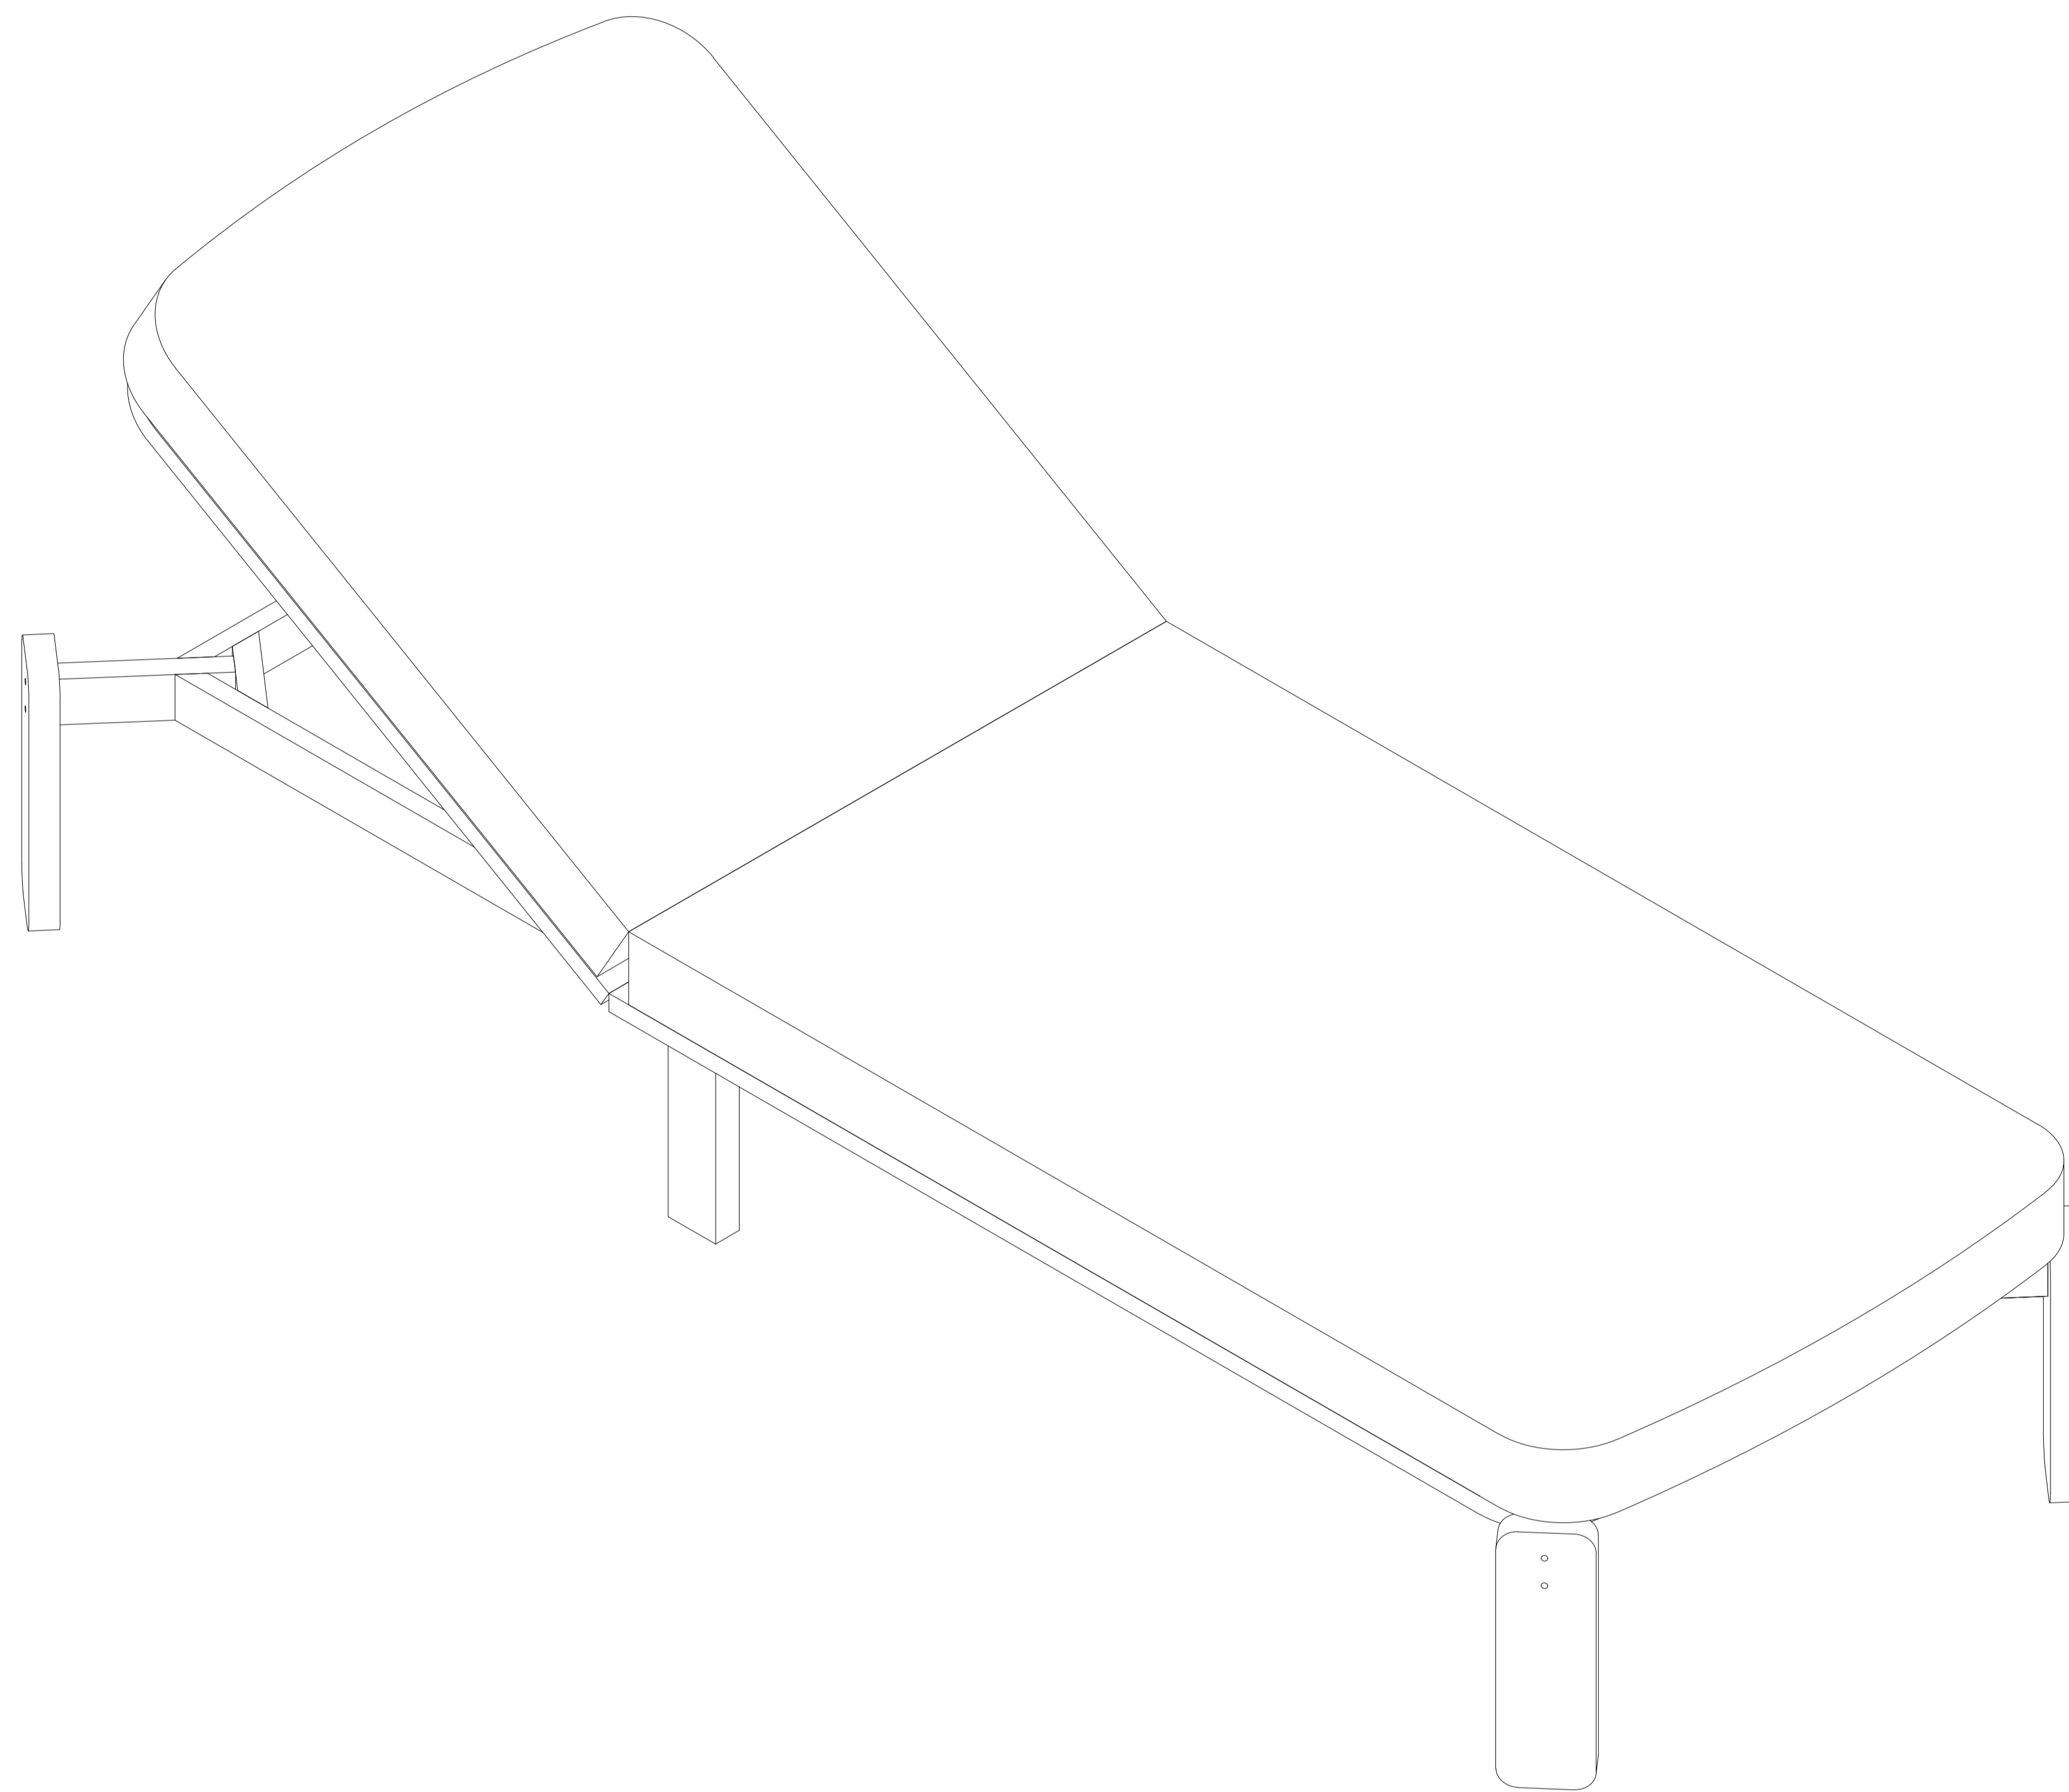


CAUTION: This **Lounge Chaise** is NOT a TOY



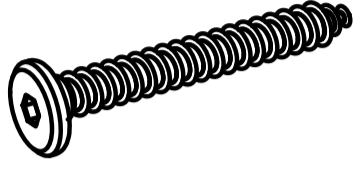



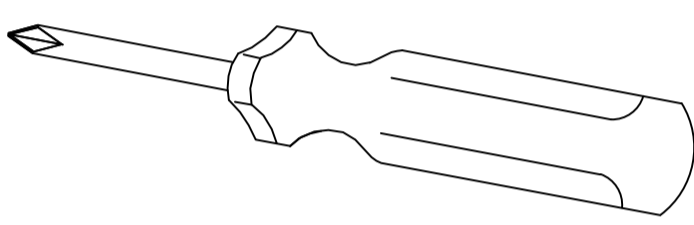
Keep your child / children at bay during the assembly process.

For turning the **Lounge Chaise** and to prevent damage to the **Chair**, 02 adults may be needed to execute this action

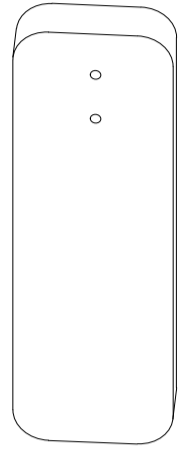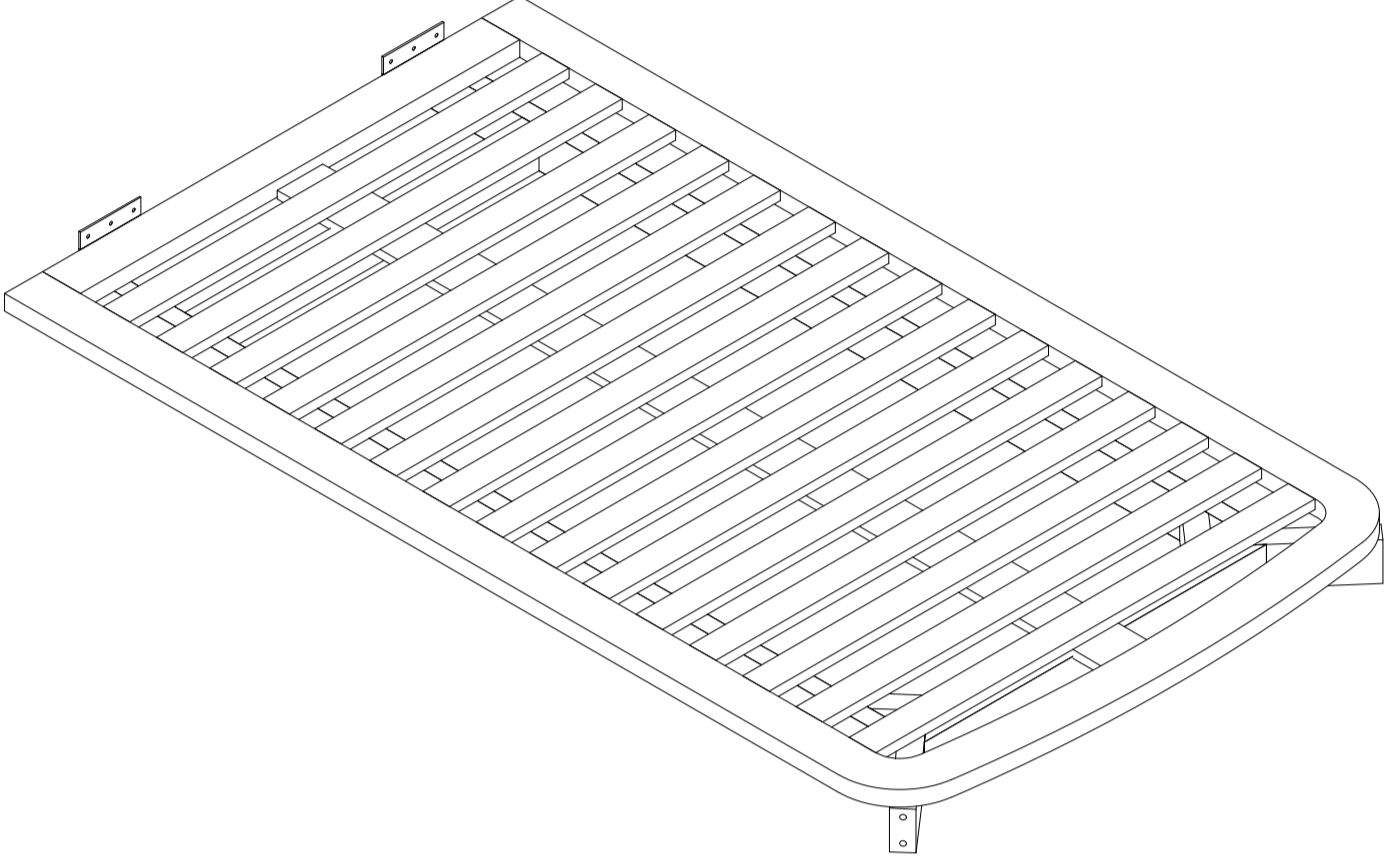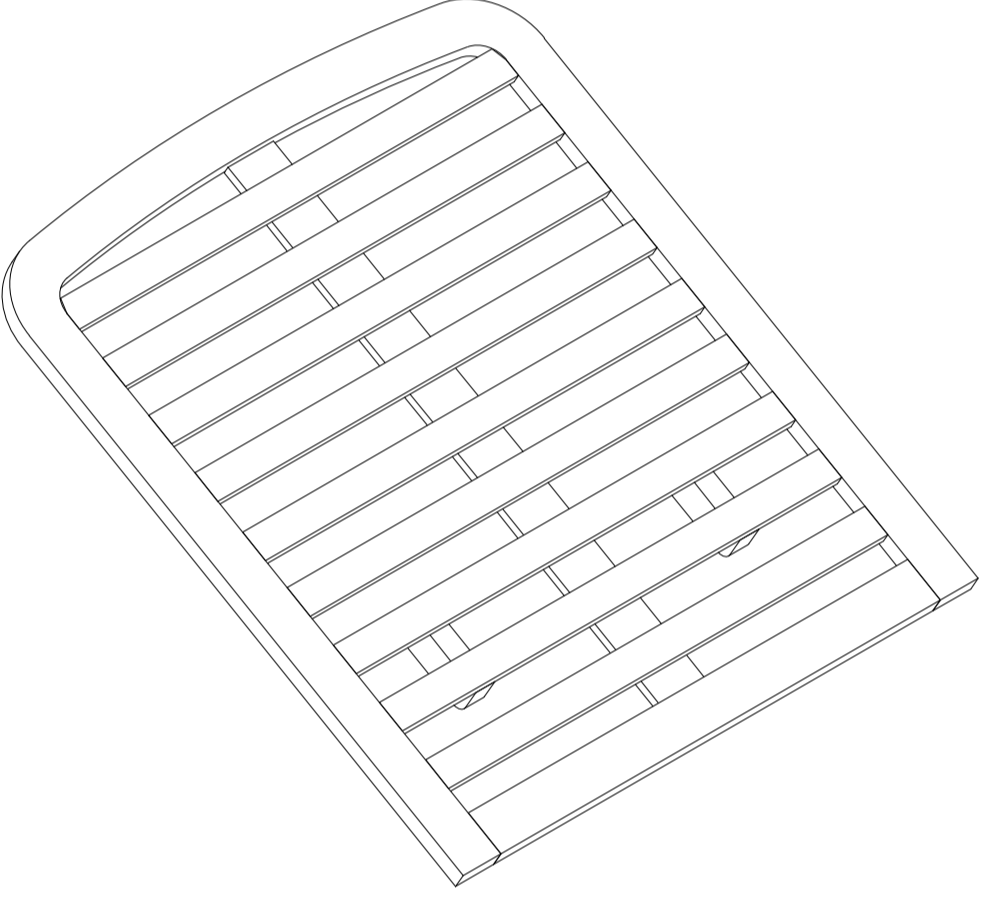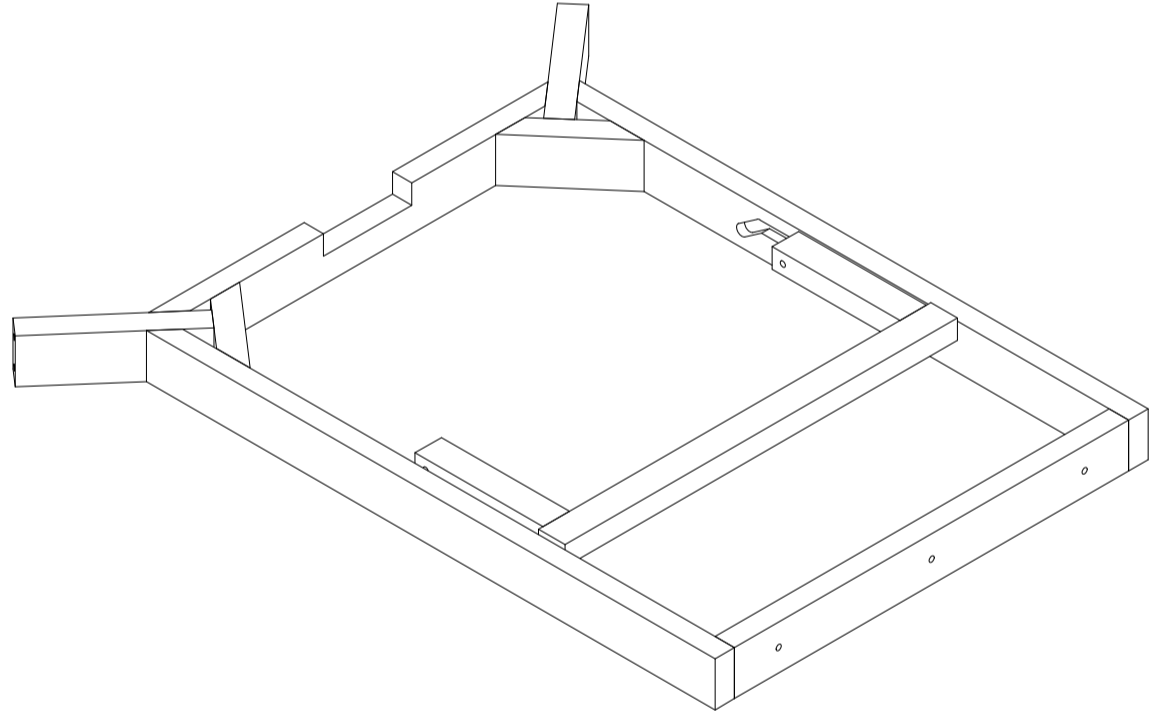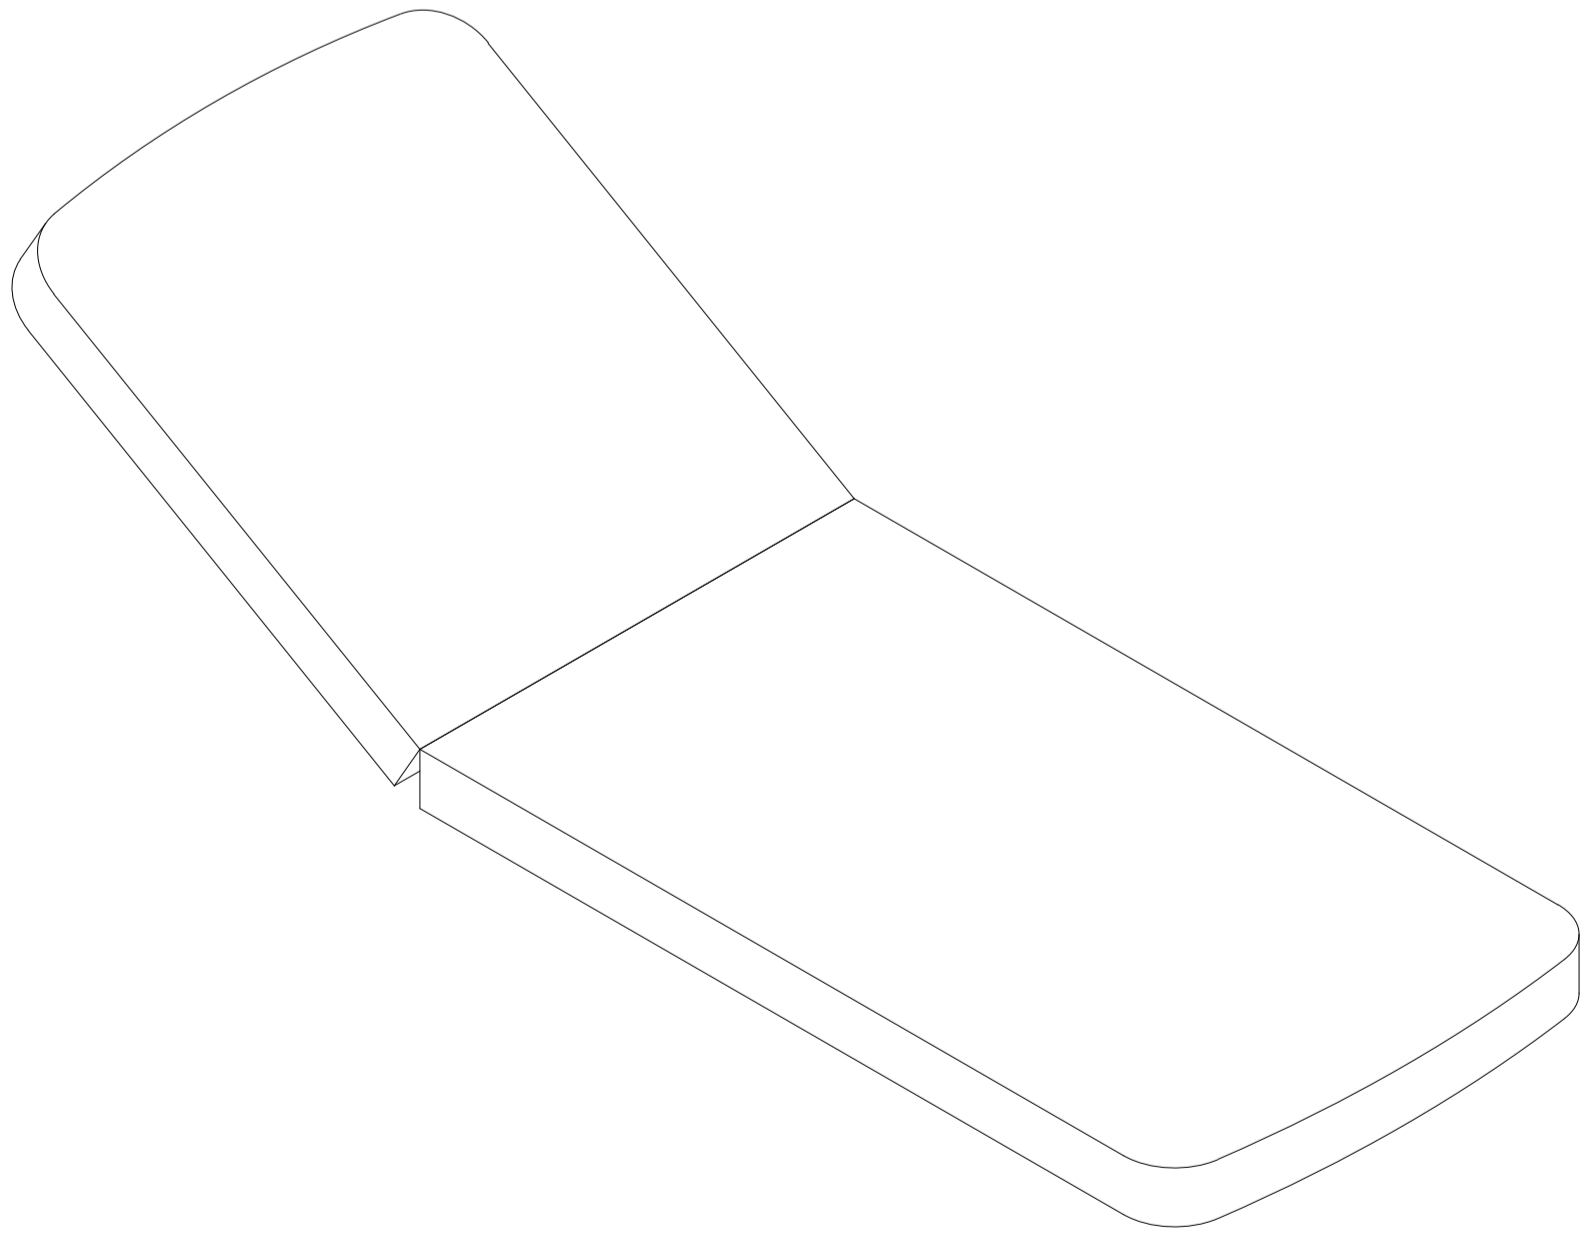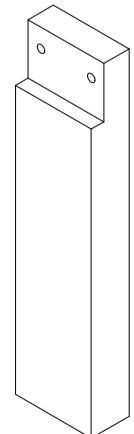Parts List


Label	Picture	Description	Qty
A		Leg	4
B		Seat Panel	1
C		Backrest Panel	1
D		Backrest Frame	1
E		Cushion	1
F		Support Leg	2

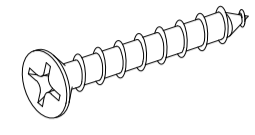Hardware:


No.	Picture	Description	Q.ty
①		Screw (M4x20)	7
②		Bolt (M6x45)	8
③		Screw (M6x60)	9
④		Bolt (M6x55)	3
⑤		Plastic Washer	3
⑥		Allen Wrench	2
⑦		Screwdriver	Not Provided

Assembly Preparation:

Before Beginning Assembly:

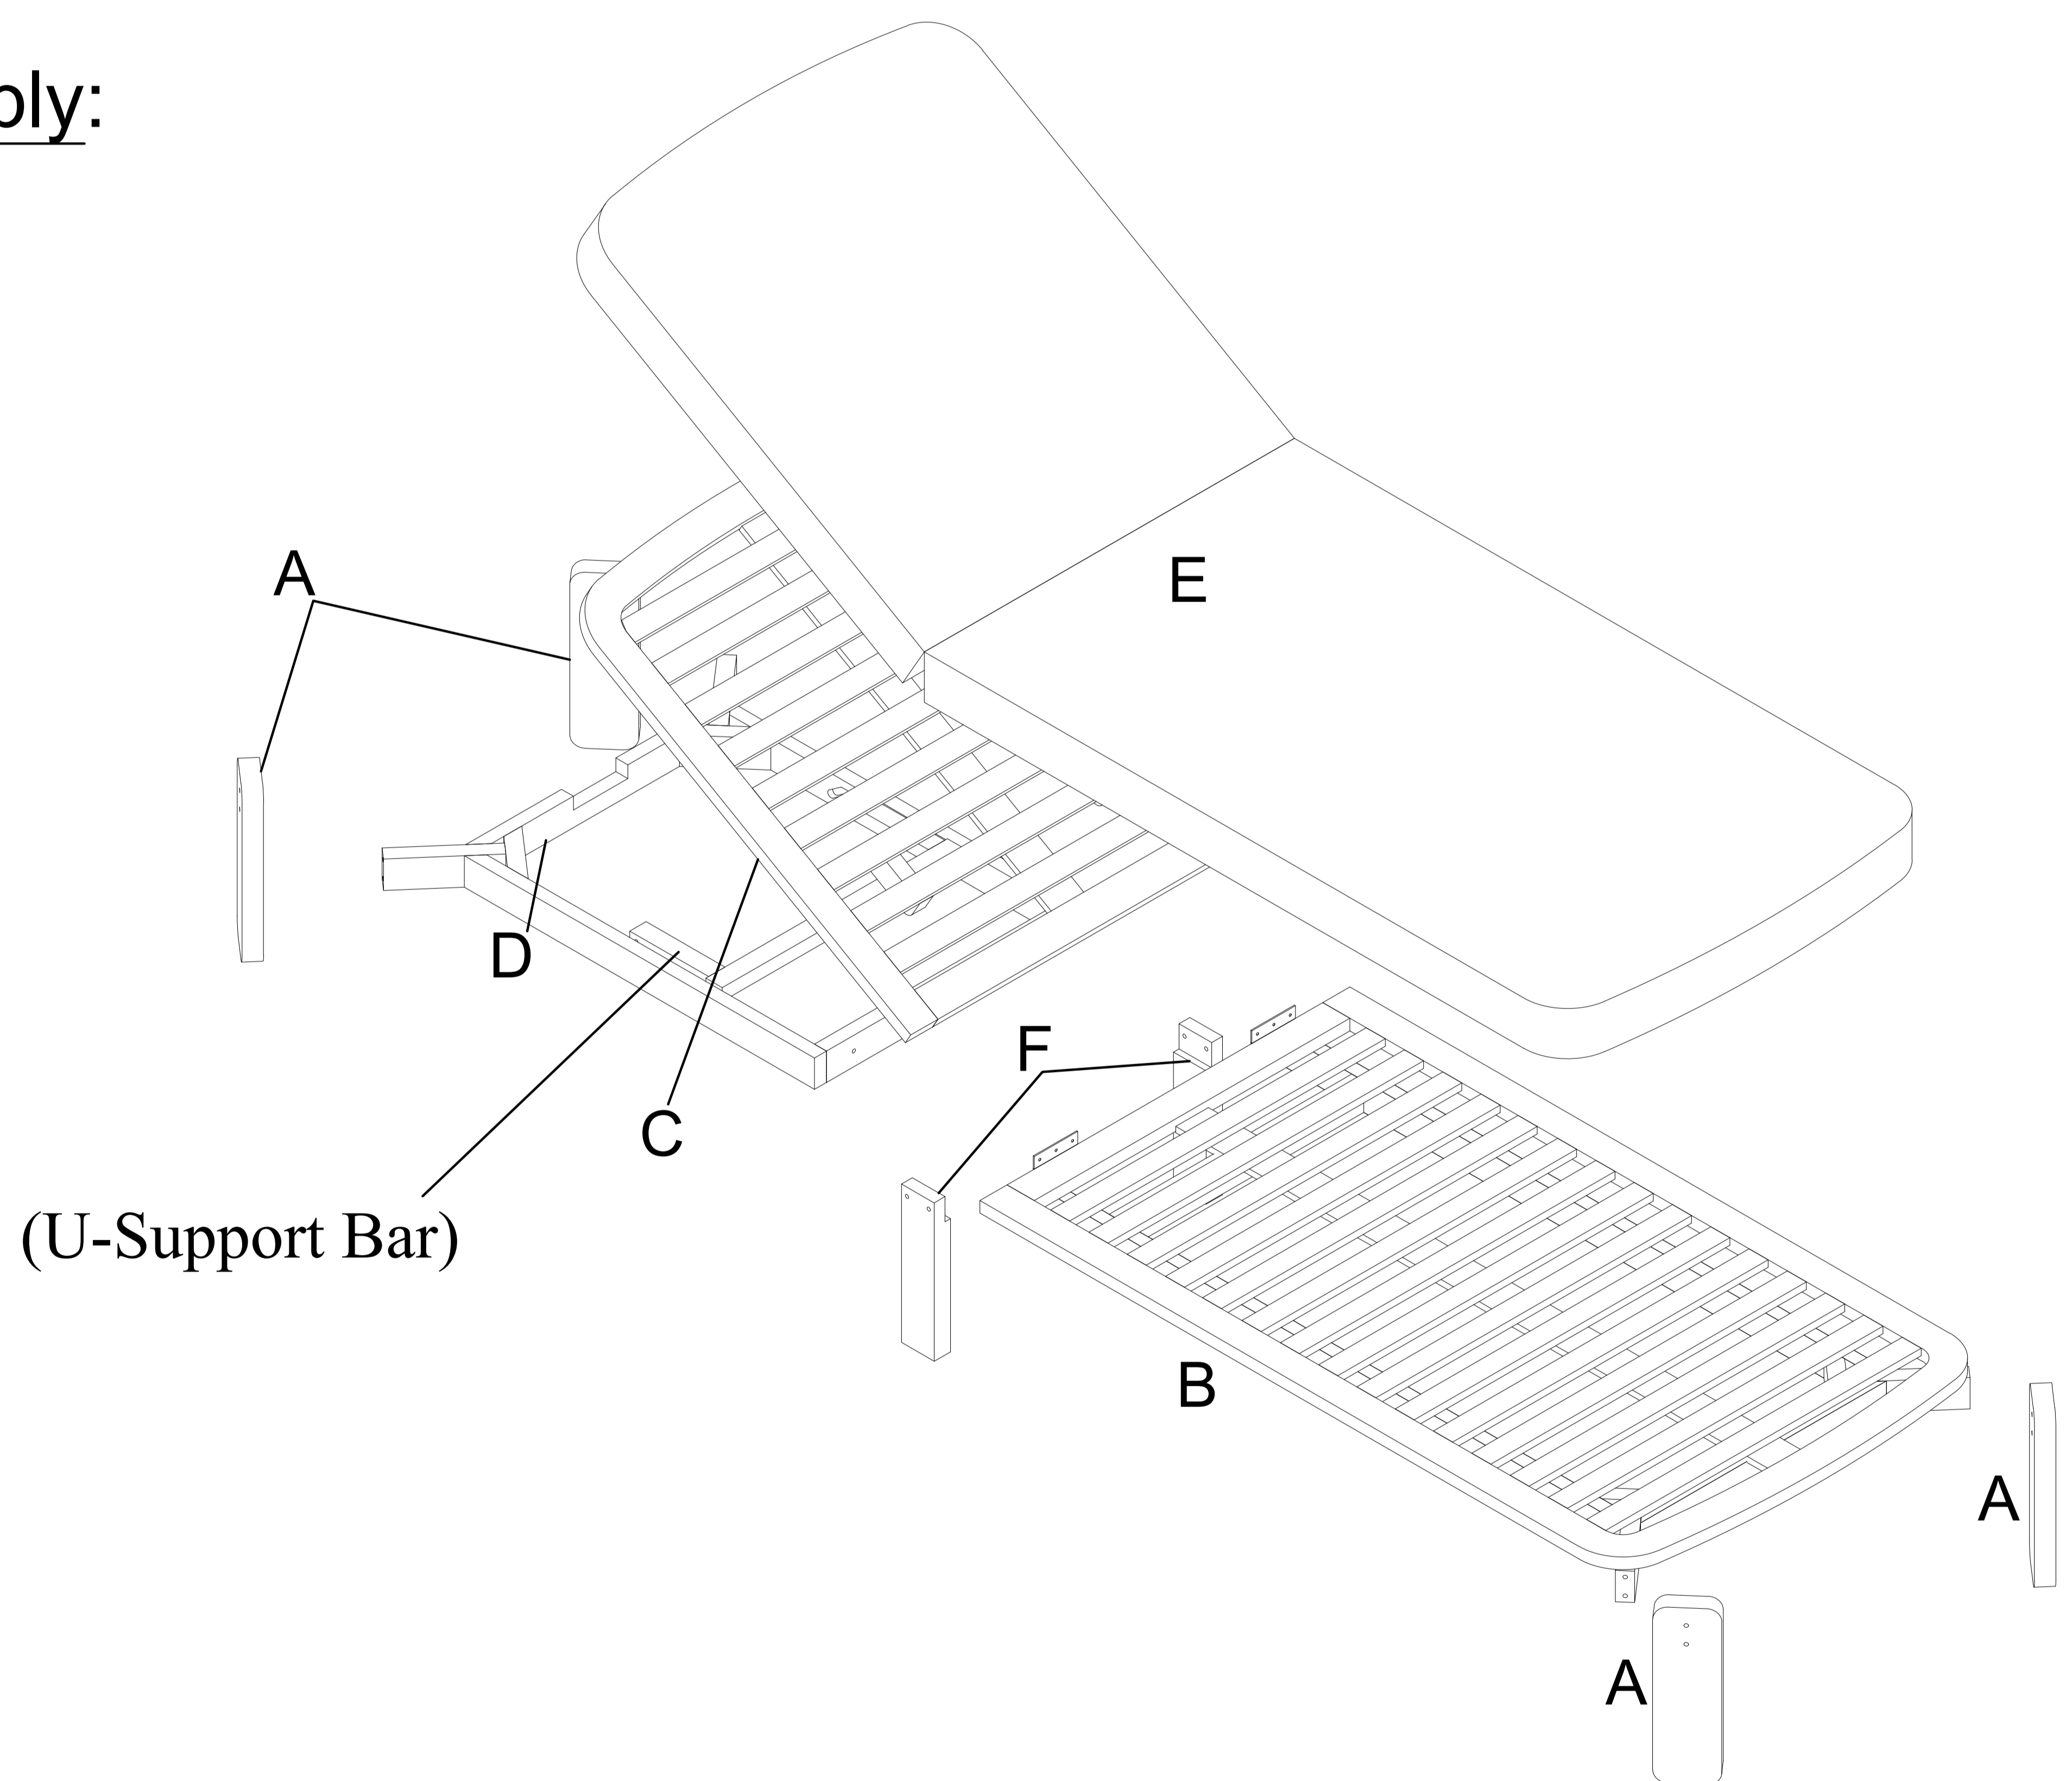

- Read instructions, cover to cover

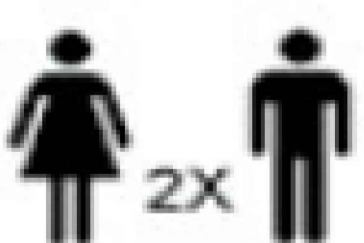

- Have 2 adults on hand for assembly



- Do not assemble on the flooring or carpet




- Assemble on a clean, non-marring surface (packing foam)




- Save all packaging until finished.

Assembly Steps:

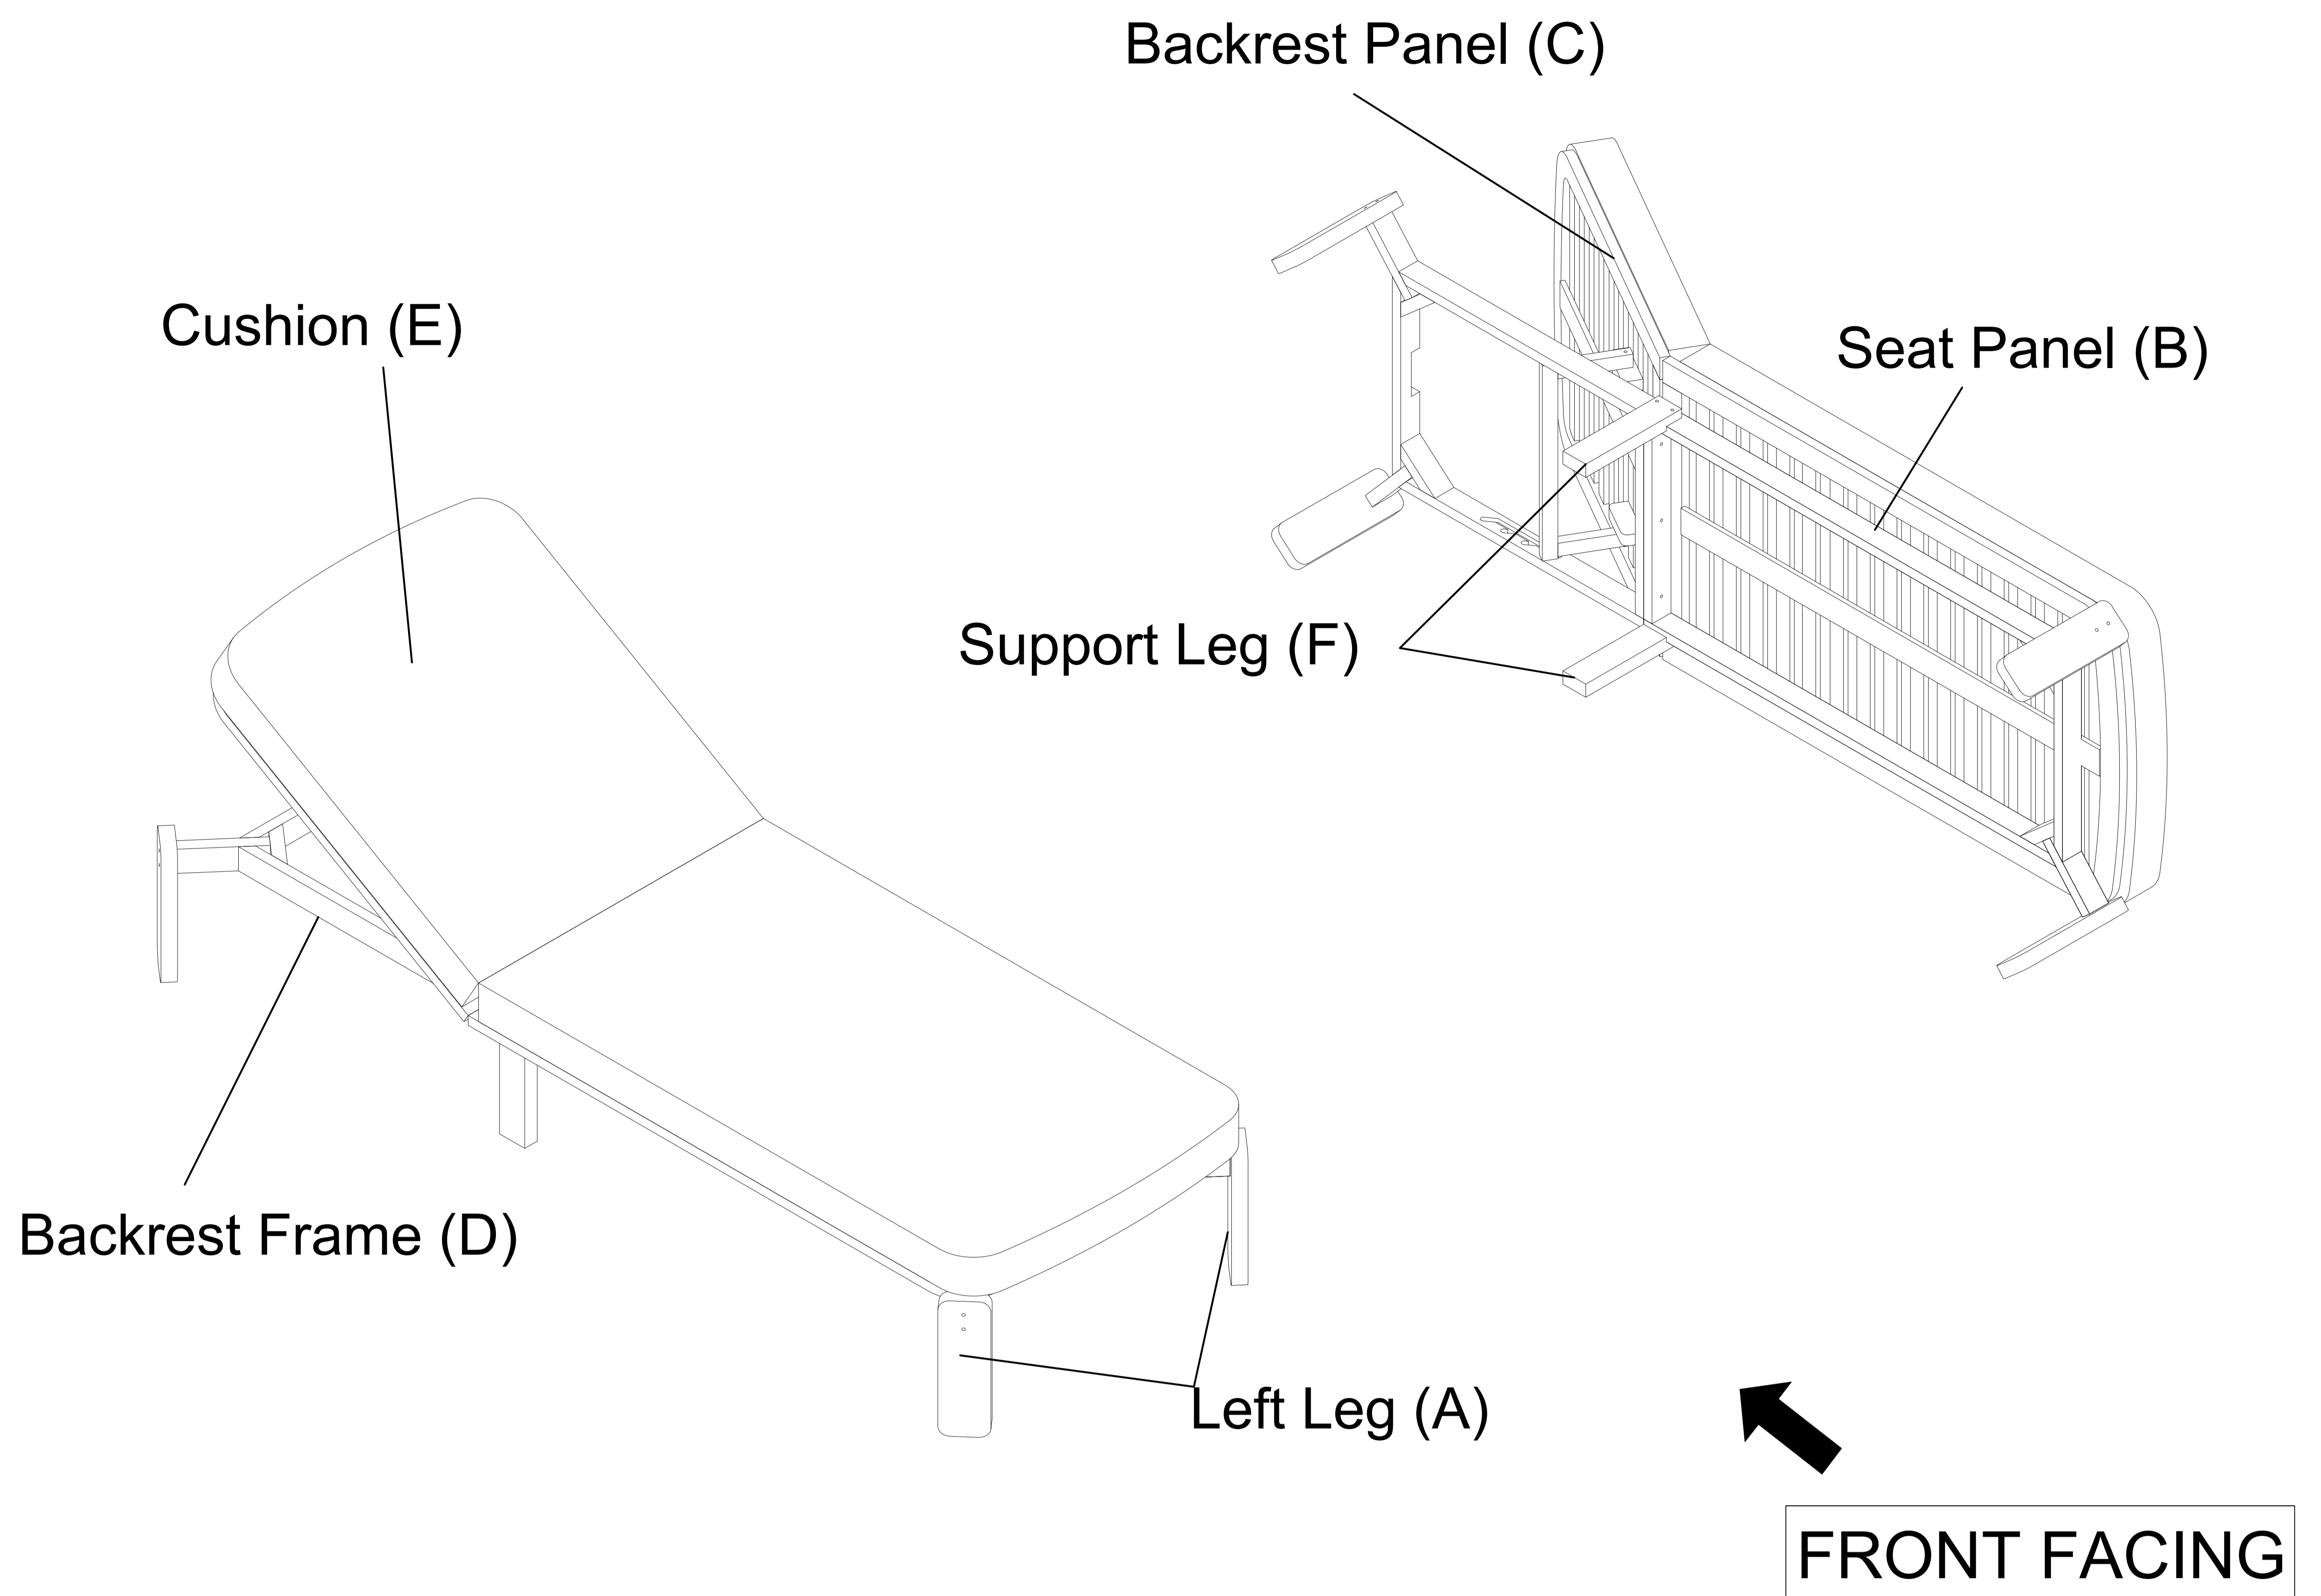


This **Lounge Chaise** has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the **Lounge Chaise** parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise the parts and steps before assembly.

Step 1:

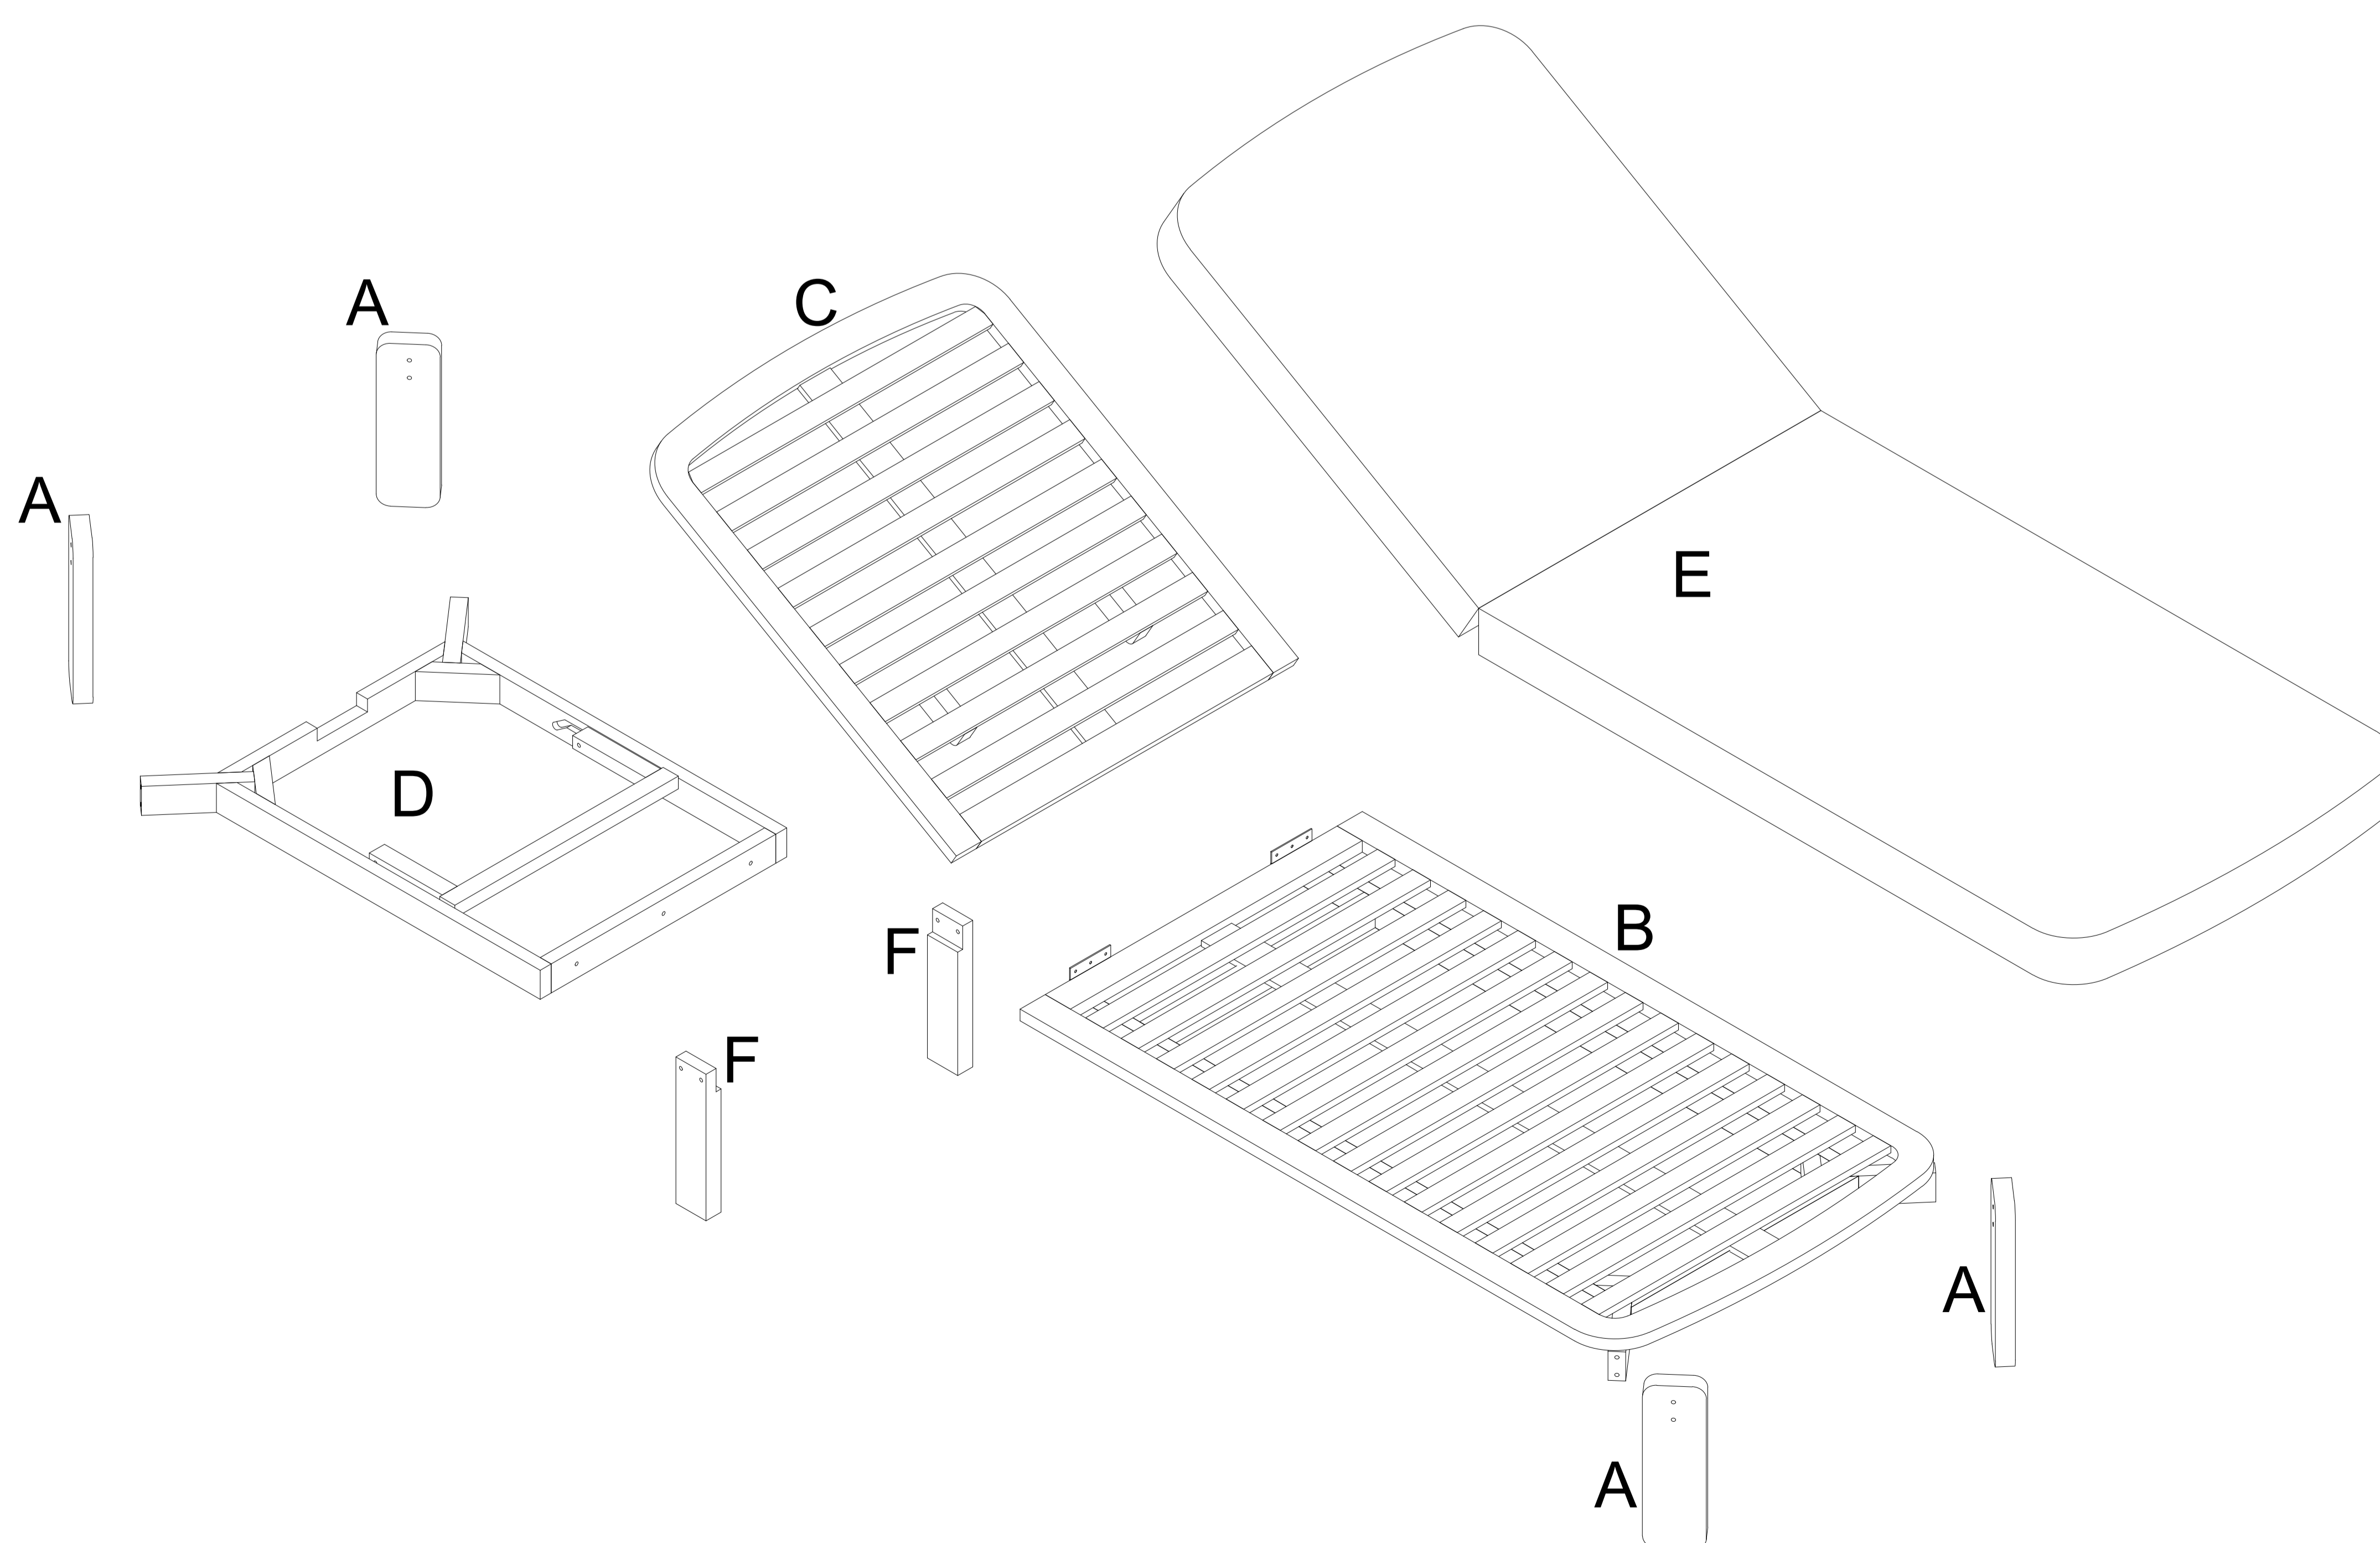


Unpack and place all the parts on a clean, non-marring surface.

Step 2:

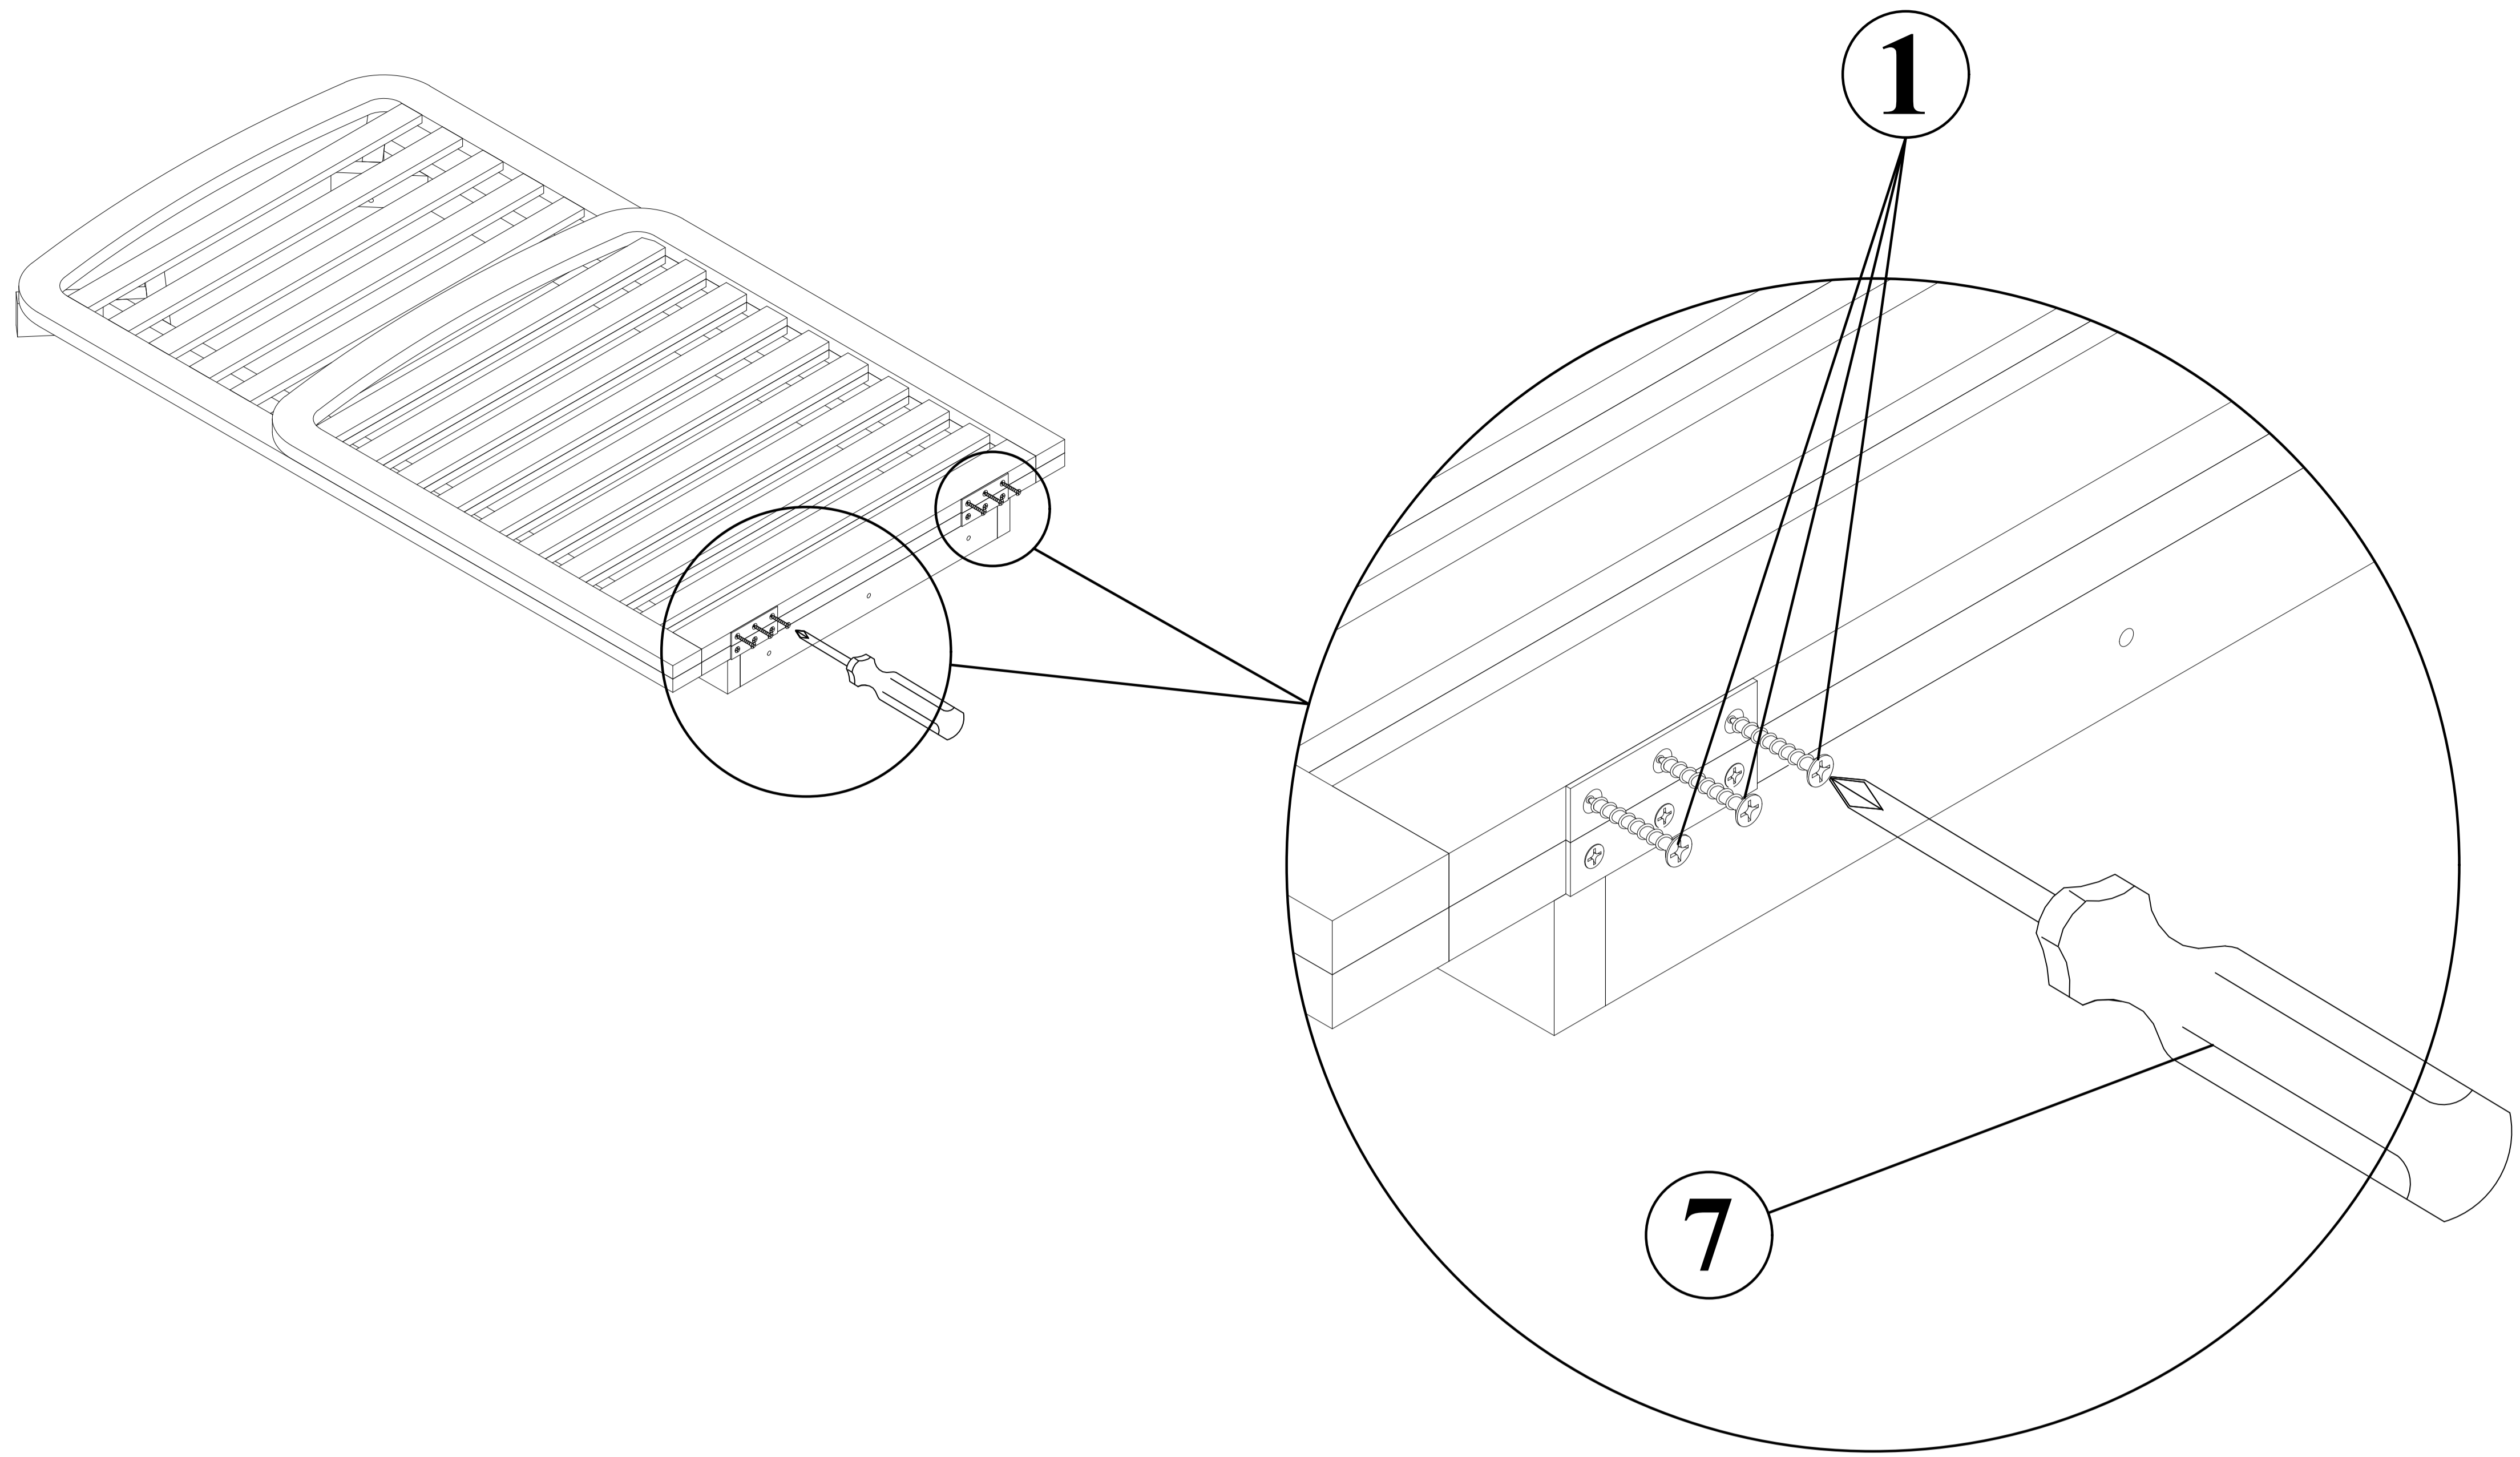


Fix the Backrest Panel (C) to Seat Panel (B) by using 6pcs Screw (①) by Screwdriver (⑦).
Fully tighten the Screws.

Step 3:

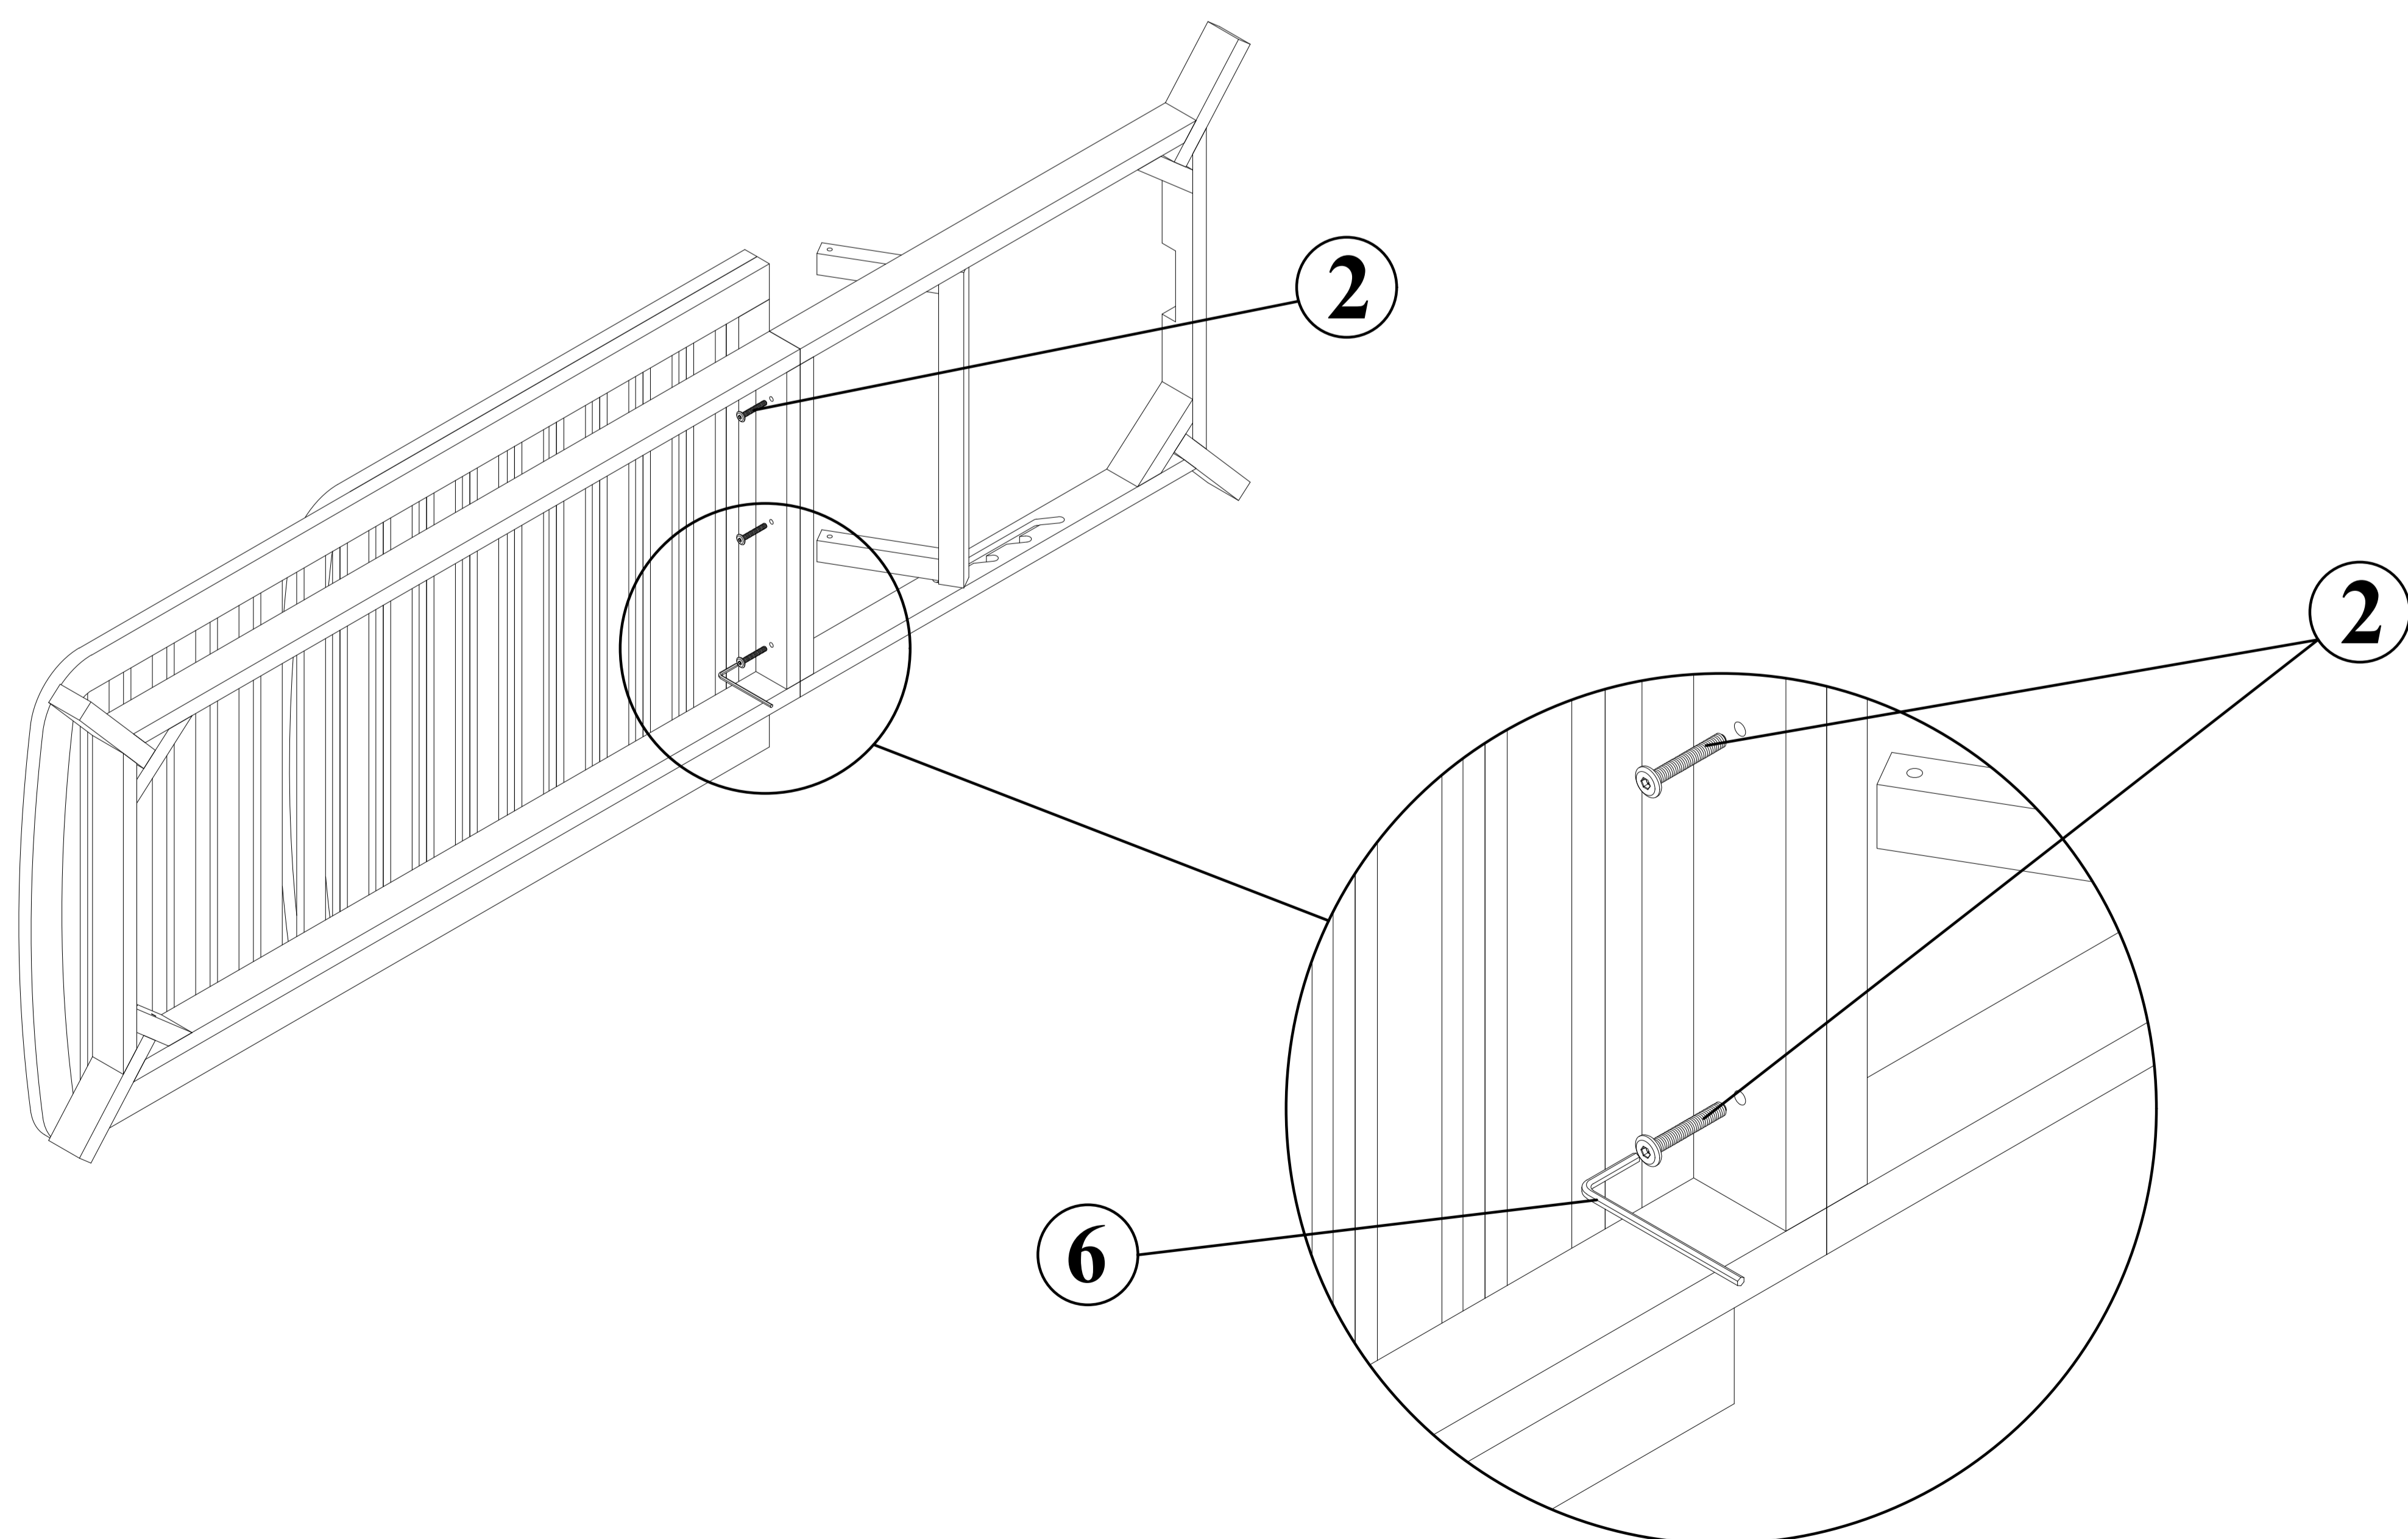

Fix the Backrest Frame (D) to the **Assembled parts in Step 2** by using 3pcs Bolt (②) by Allen Wrench (⑥).
DO NOT fully tighten the Bolts.

Step 4:

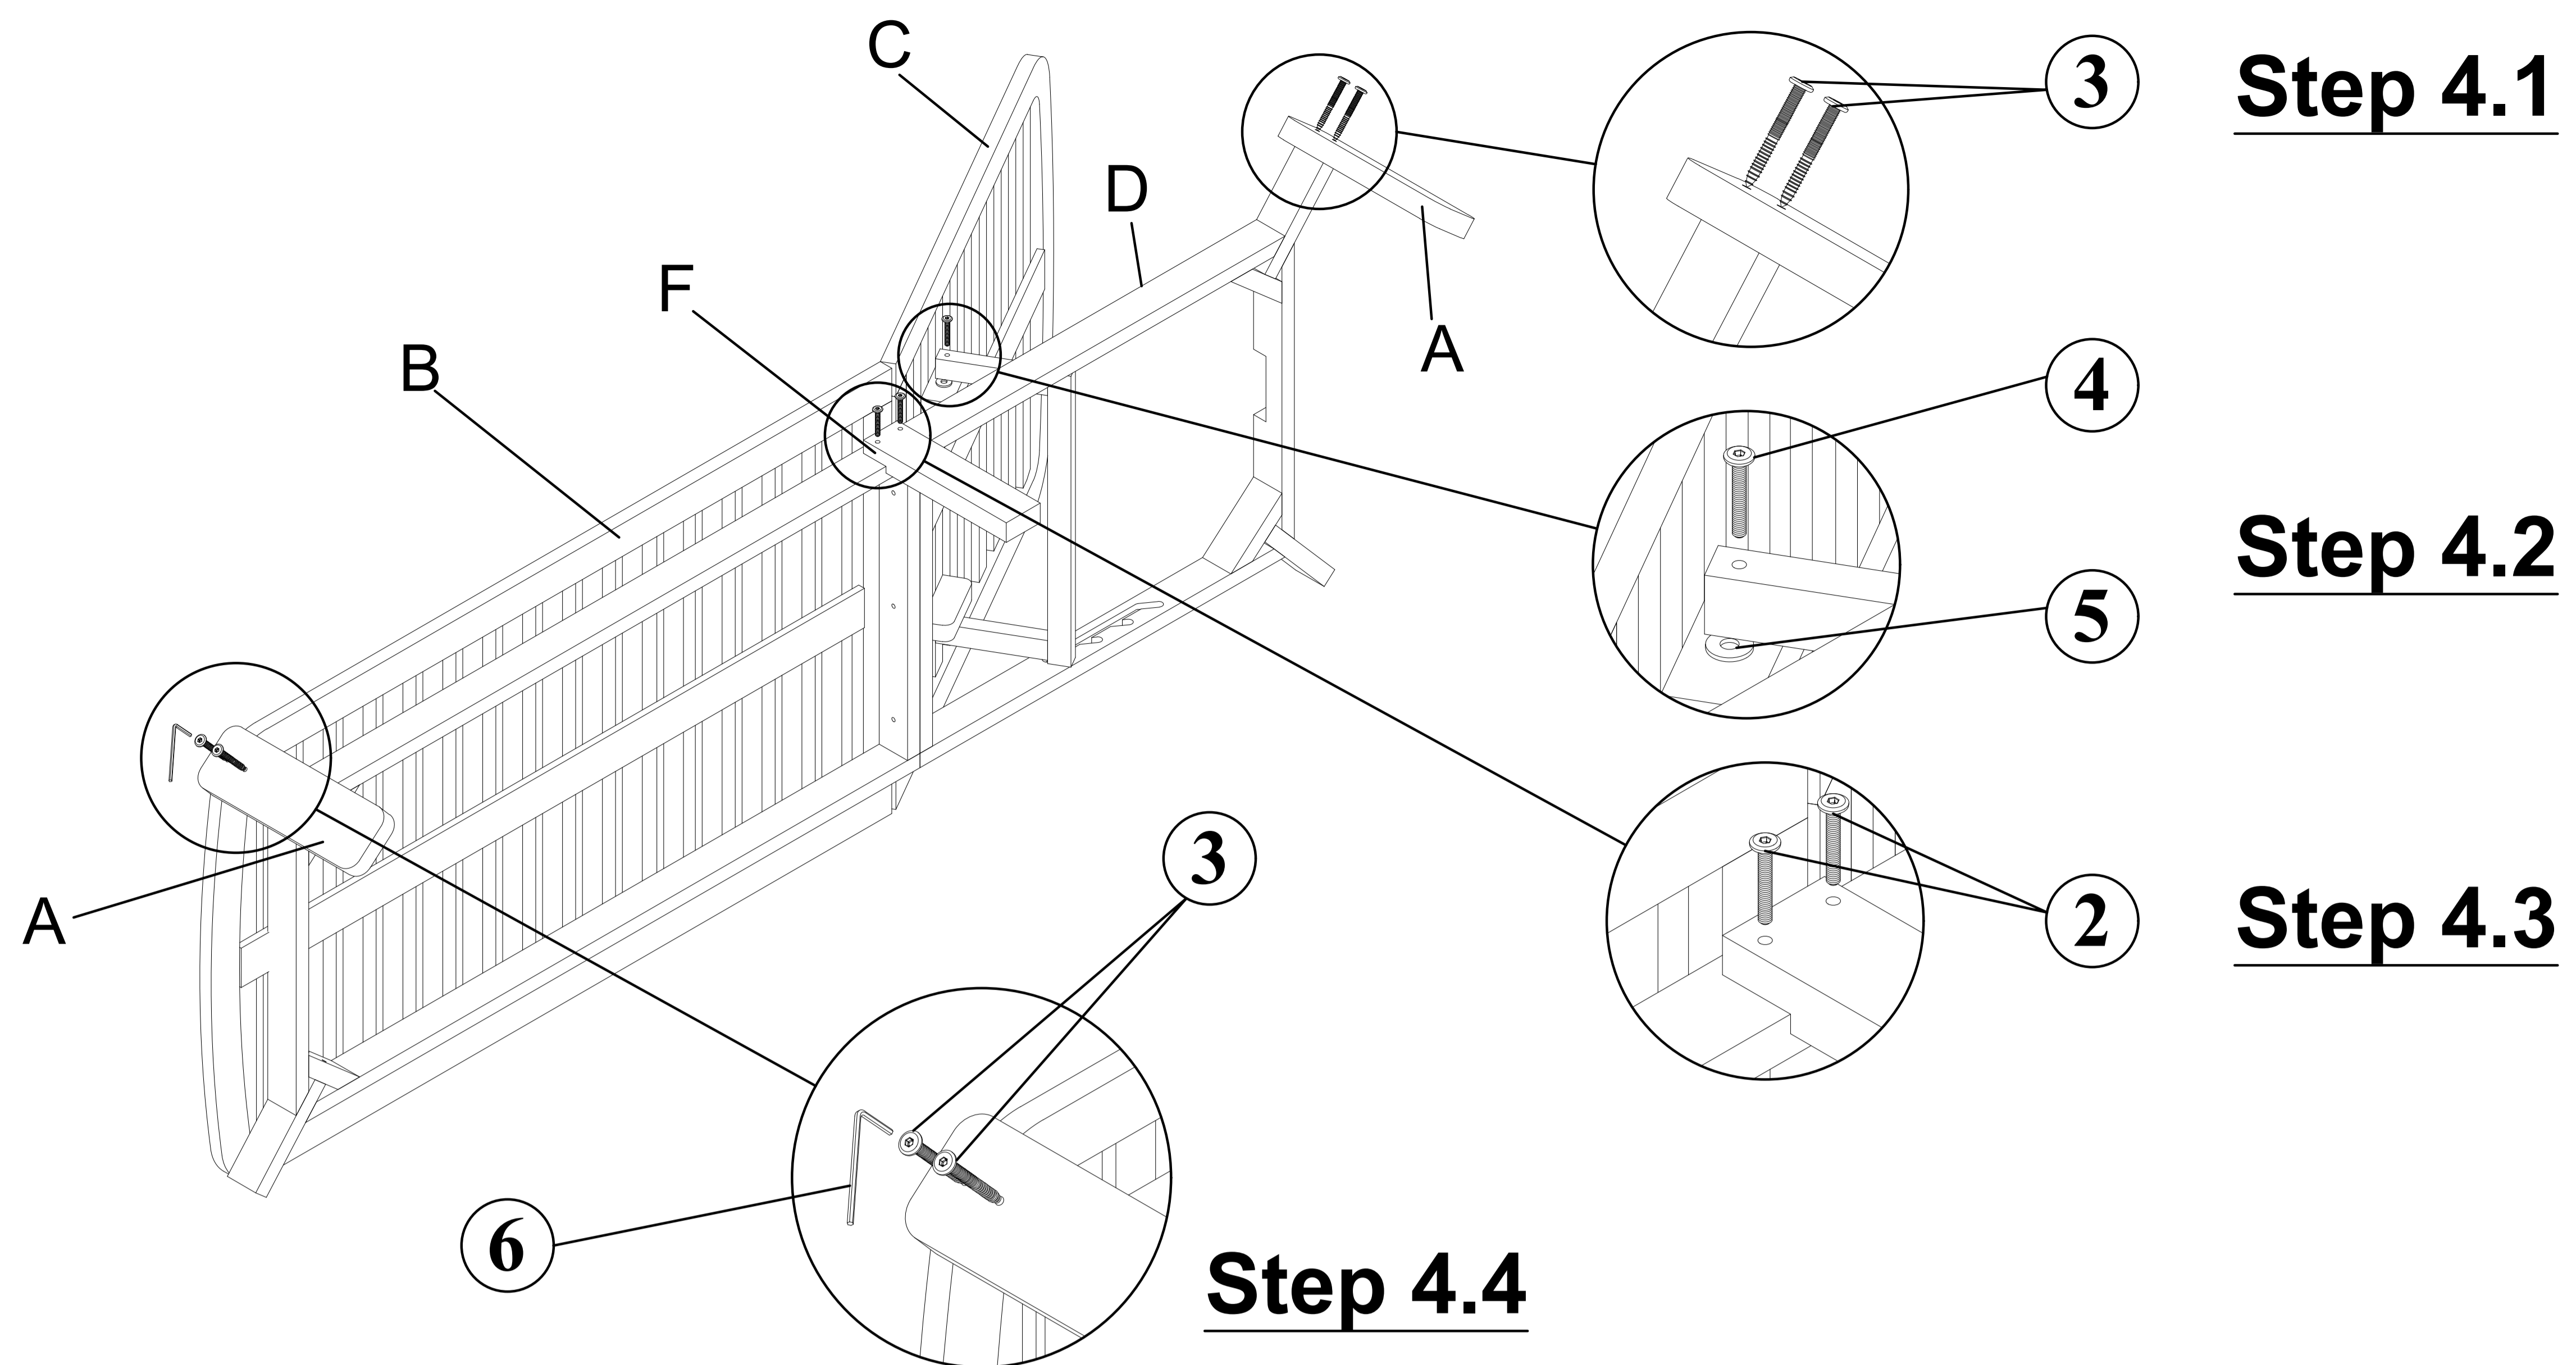

Step 4.1

Step 4.2

Step 4.3

Step 4.4

Step 4.1: Secure Leg (A) and Backrest Frame (D) by 2pcs Screw (3) by Allen Wrench (6)


Step 4.2: Insert Backrest Panel (C) to Backrest Frame (D) (**U-Support Bar**) then secure by Bolt (4) and Plastic Washer (5) by Allen Wrench (6)

Step 4.3: Secure Support Leg (F) and Seat Panel (B) by 2 pcs Bolt (2) by Allen Wrench (6)

Step 4.4: Secure Leg (A) and Seat Panel (B) by 2 pcs Screw (3) by Allen Wrench (6) as shown above.

DO NOT fully tighten the Screws and Bolts

Step 5:

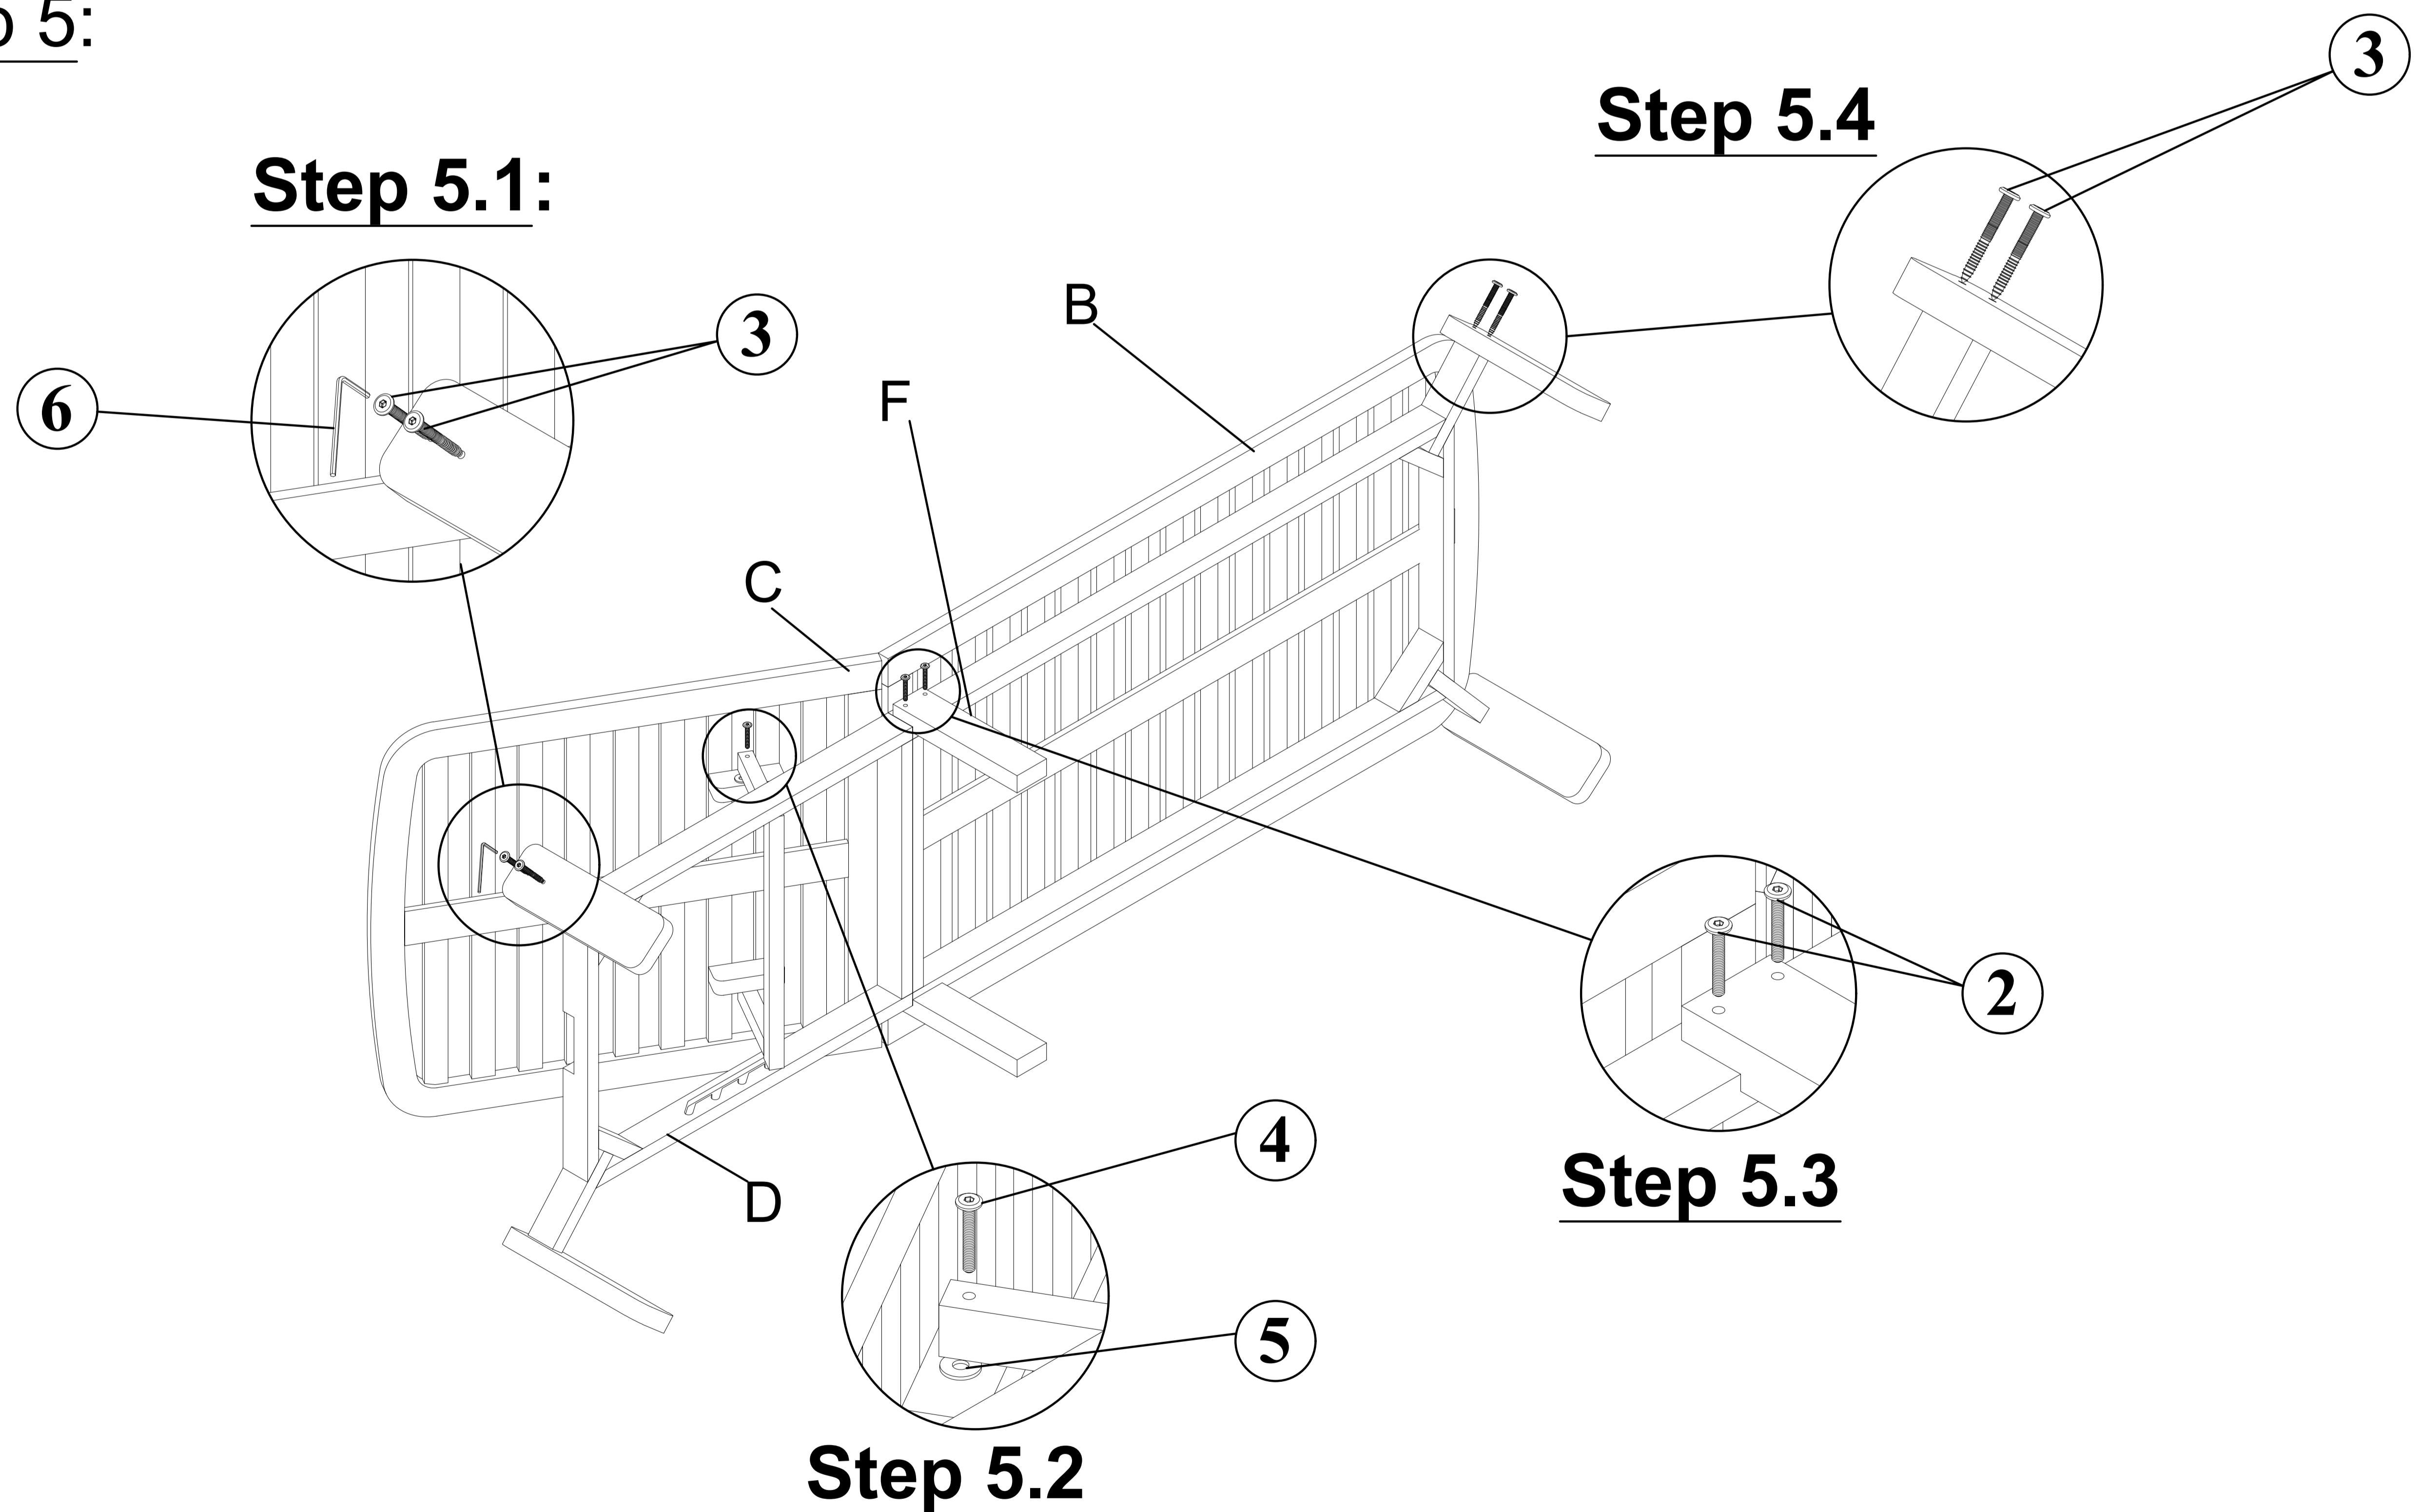

Step 5.1:

Step 5.4

Step 5.2

Step 5.3

Step 5.1: Secure Leg (A) and Backrest Frame (D) by 2pcs Screw (3) by Allen Wrench (6)


Step 5.2: Insert Backrest Panel (C) to Backrest Frame (D) (**U-Support Bar**) then secure by Bolt (4) and Plastic Washer (5) by Allen Wrench (6)

Step 5.3: Secure Support Leg (F) and Seat Panel (B) by 2 pcs Bolt (2) by Allen Wrench (6)


Step 5.4: Secure Leg (A) and Seat Panel (B) by 2 pcs Screw (3) by Allen Wrench (6) as shown above.

DO NOT fully tighten the Screws and Bolts

Step 6:

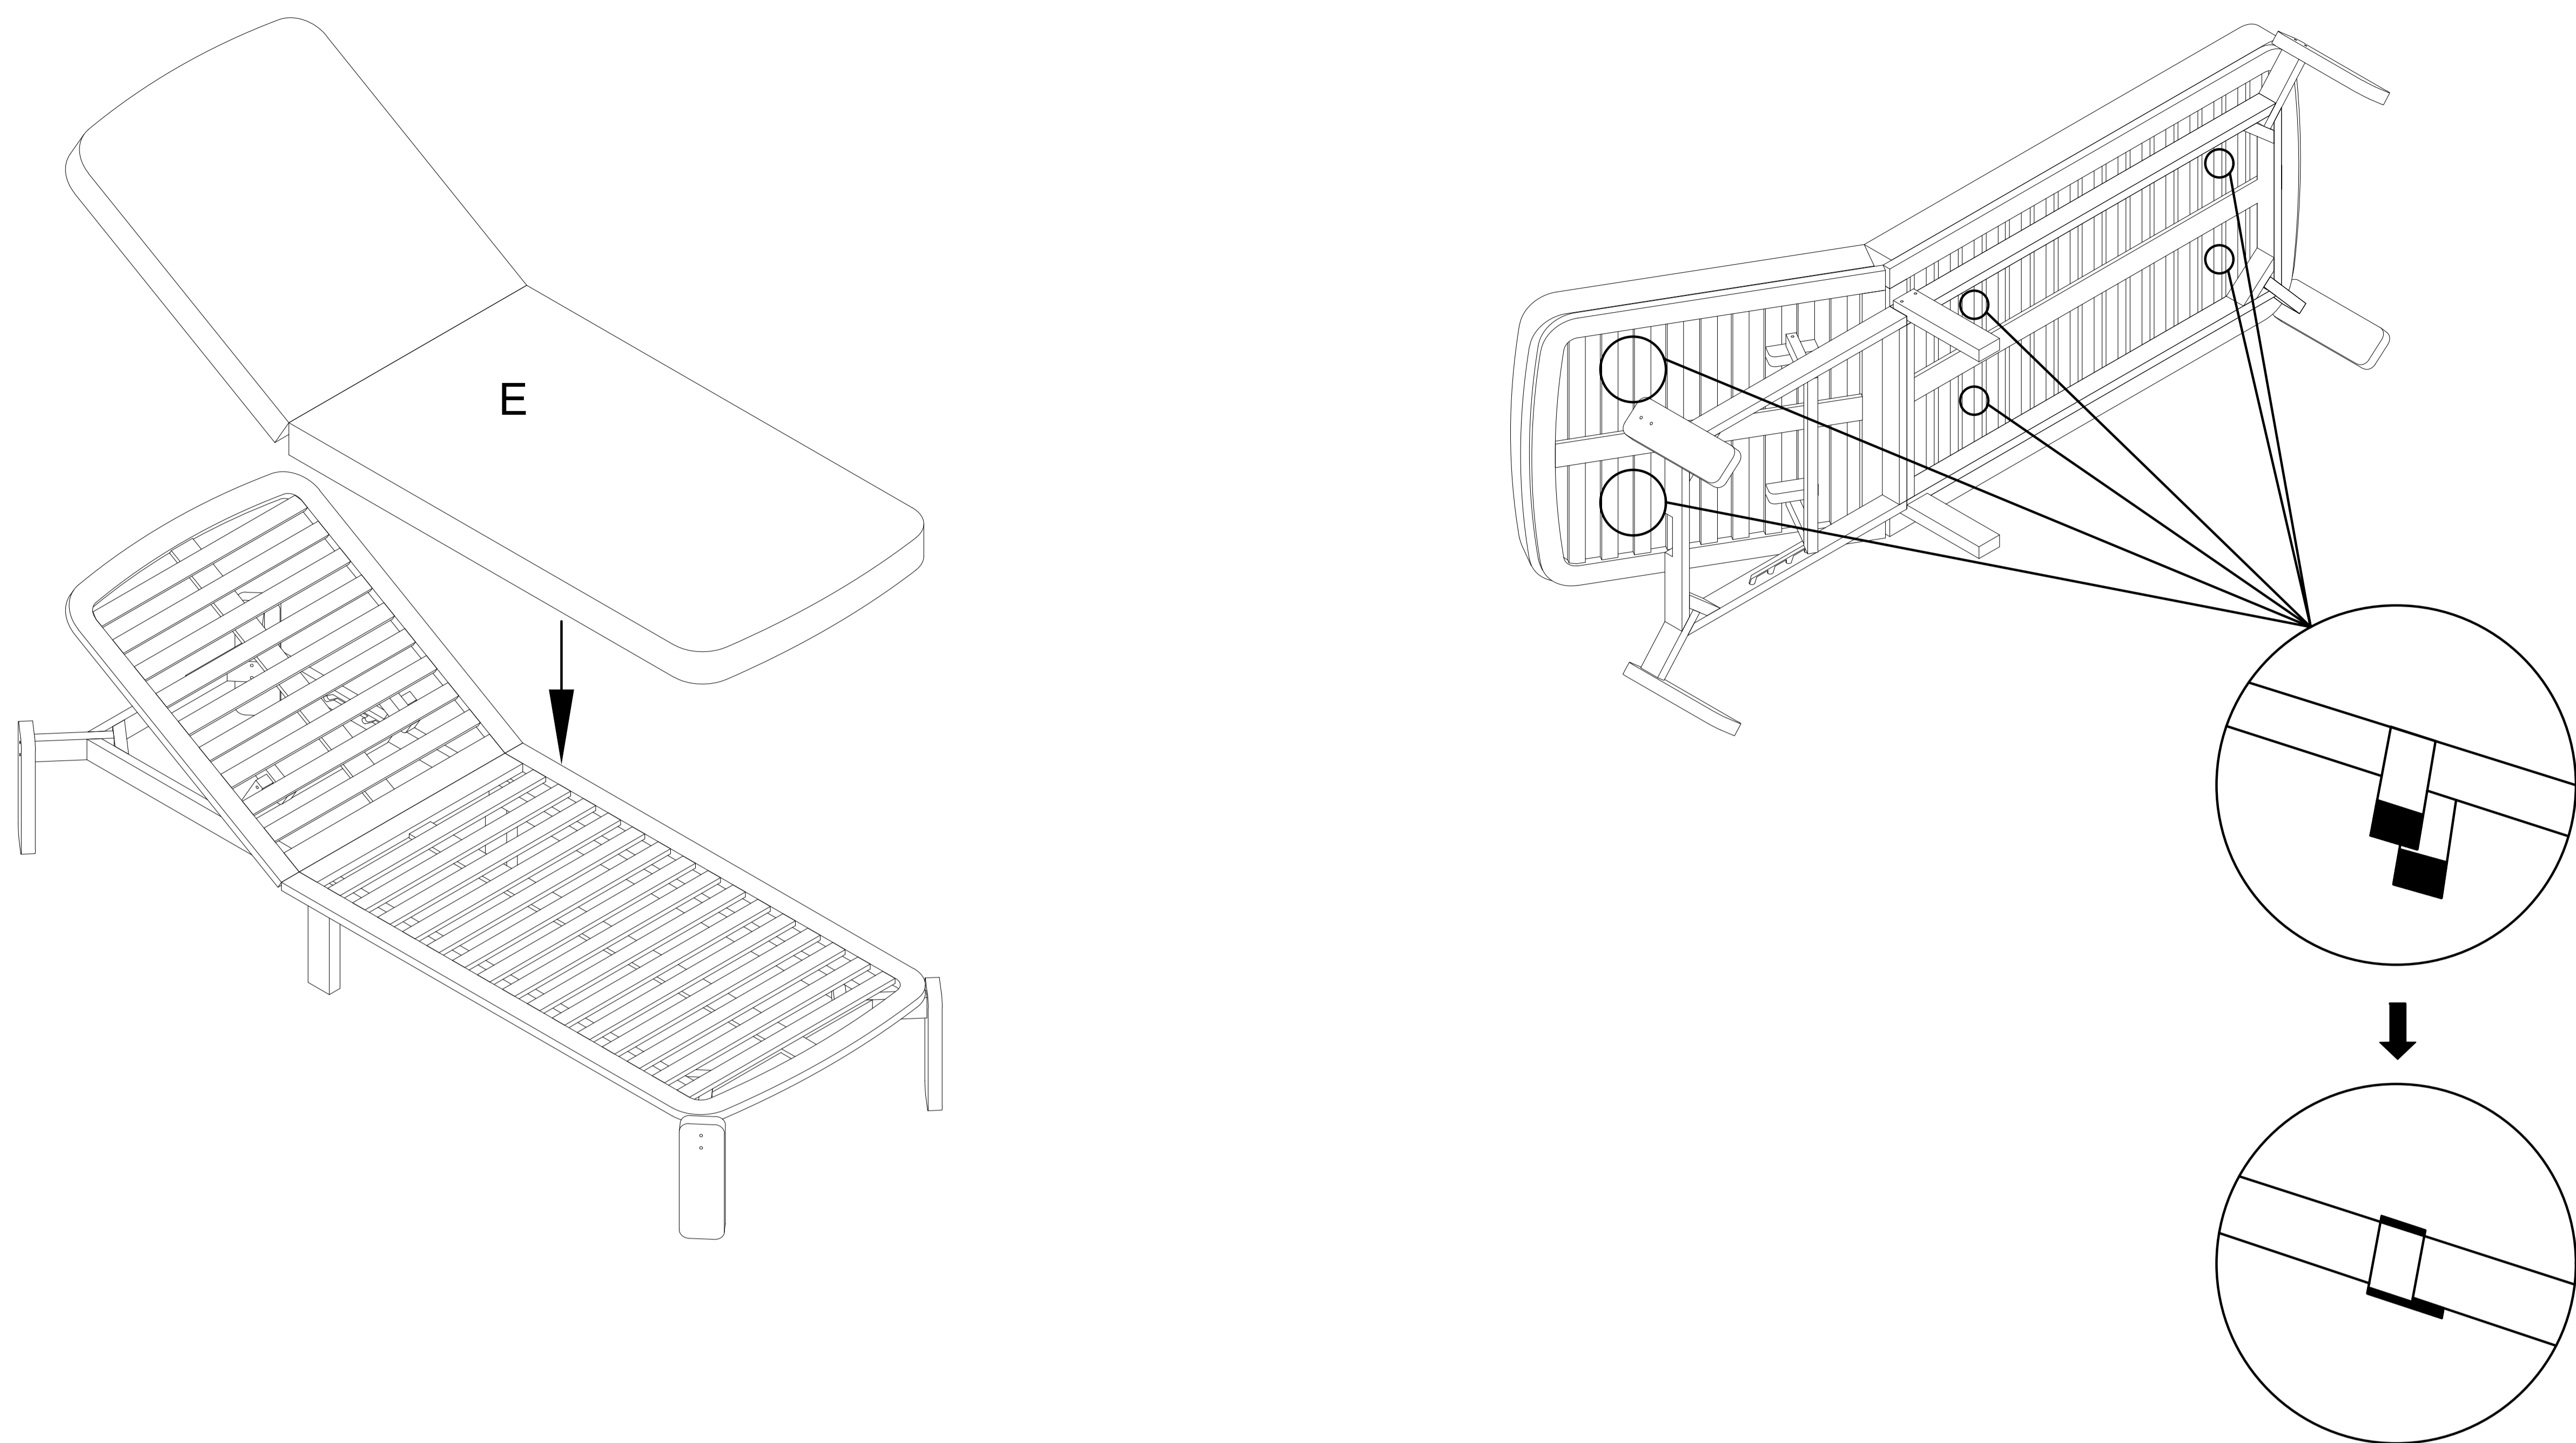

With the help of your adult partner, Turn over Lounge Chaise. Place the Cushion (E) on the Lounge Chaise. Then affix the Magic Tape Straps as shown above.

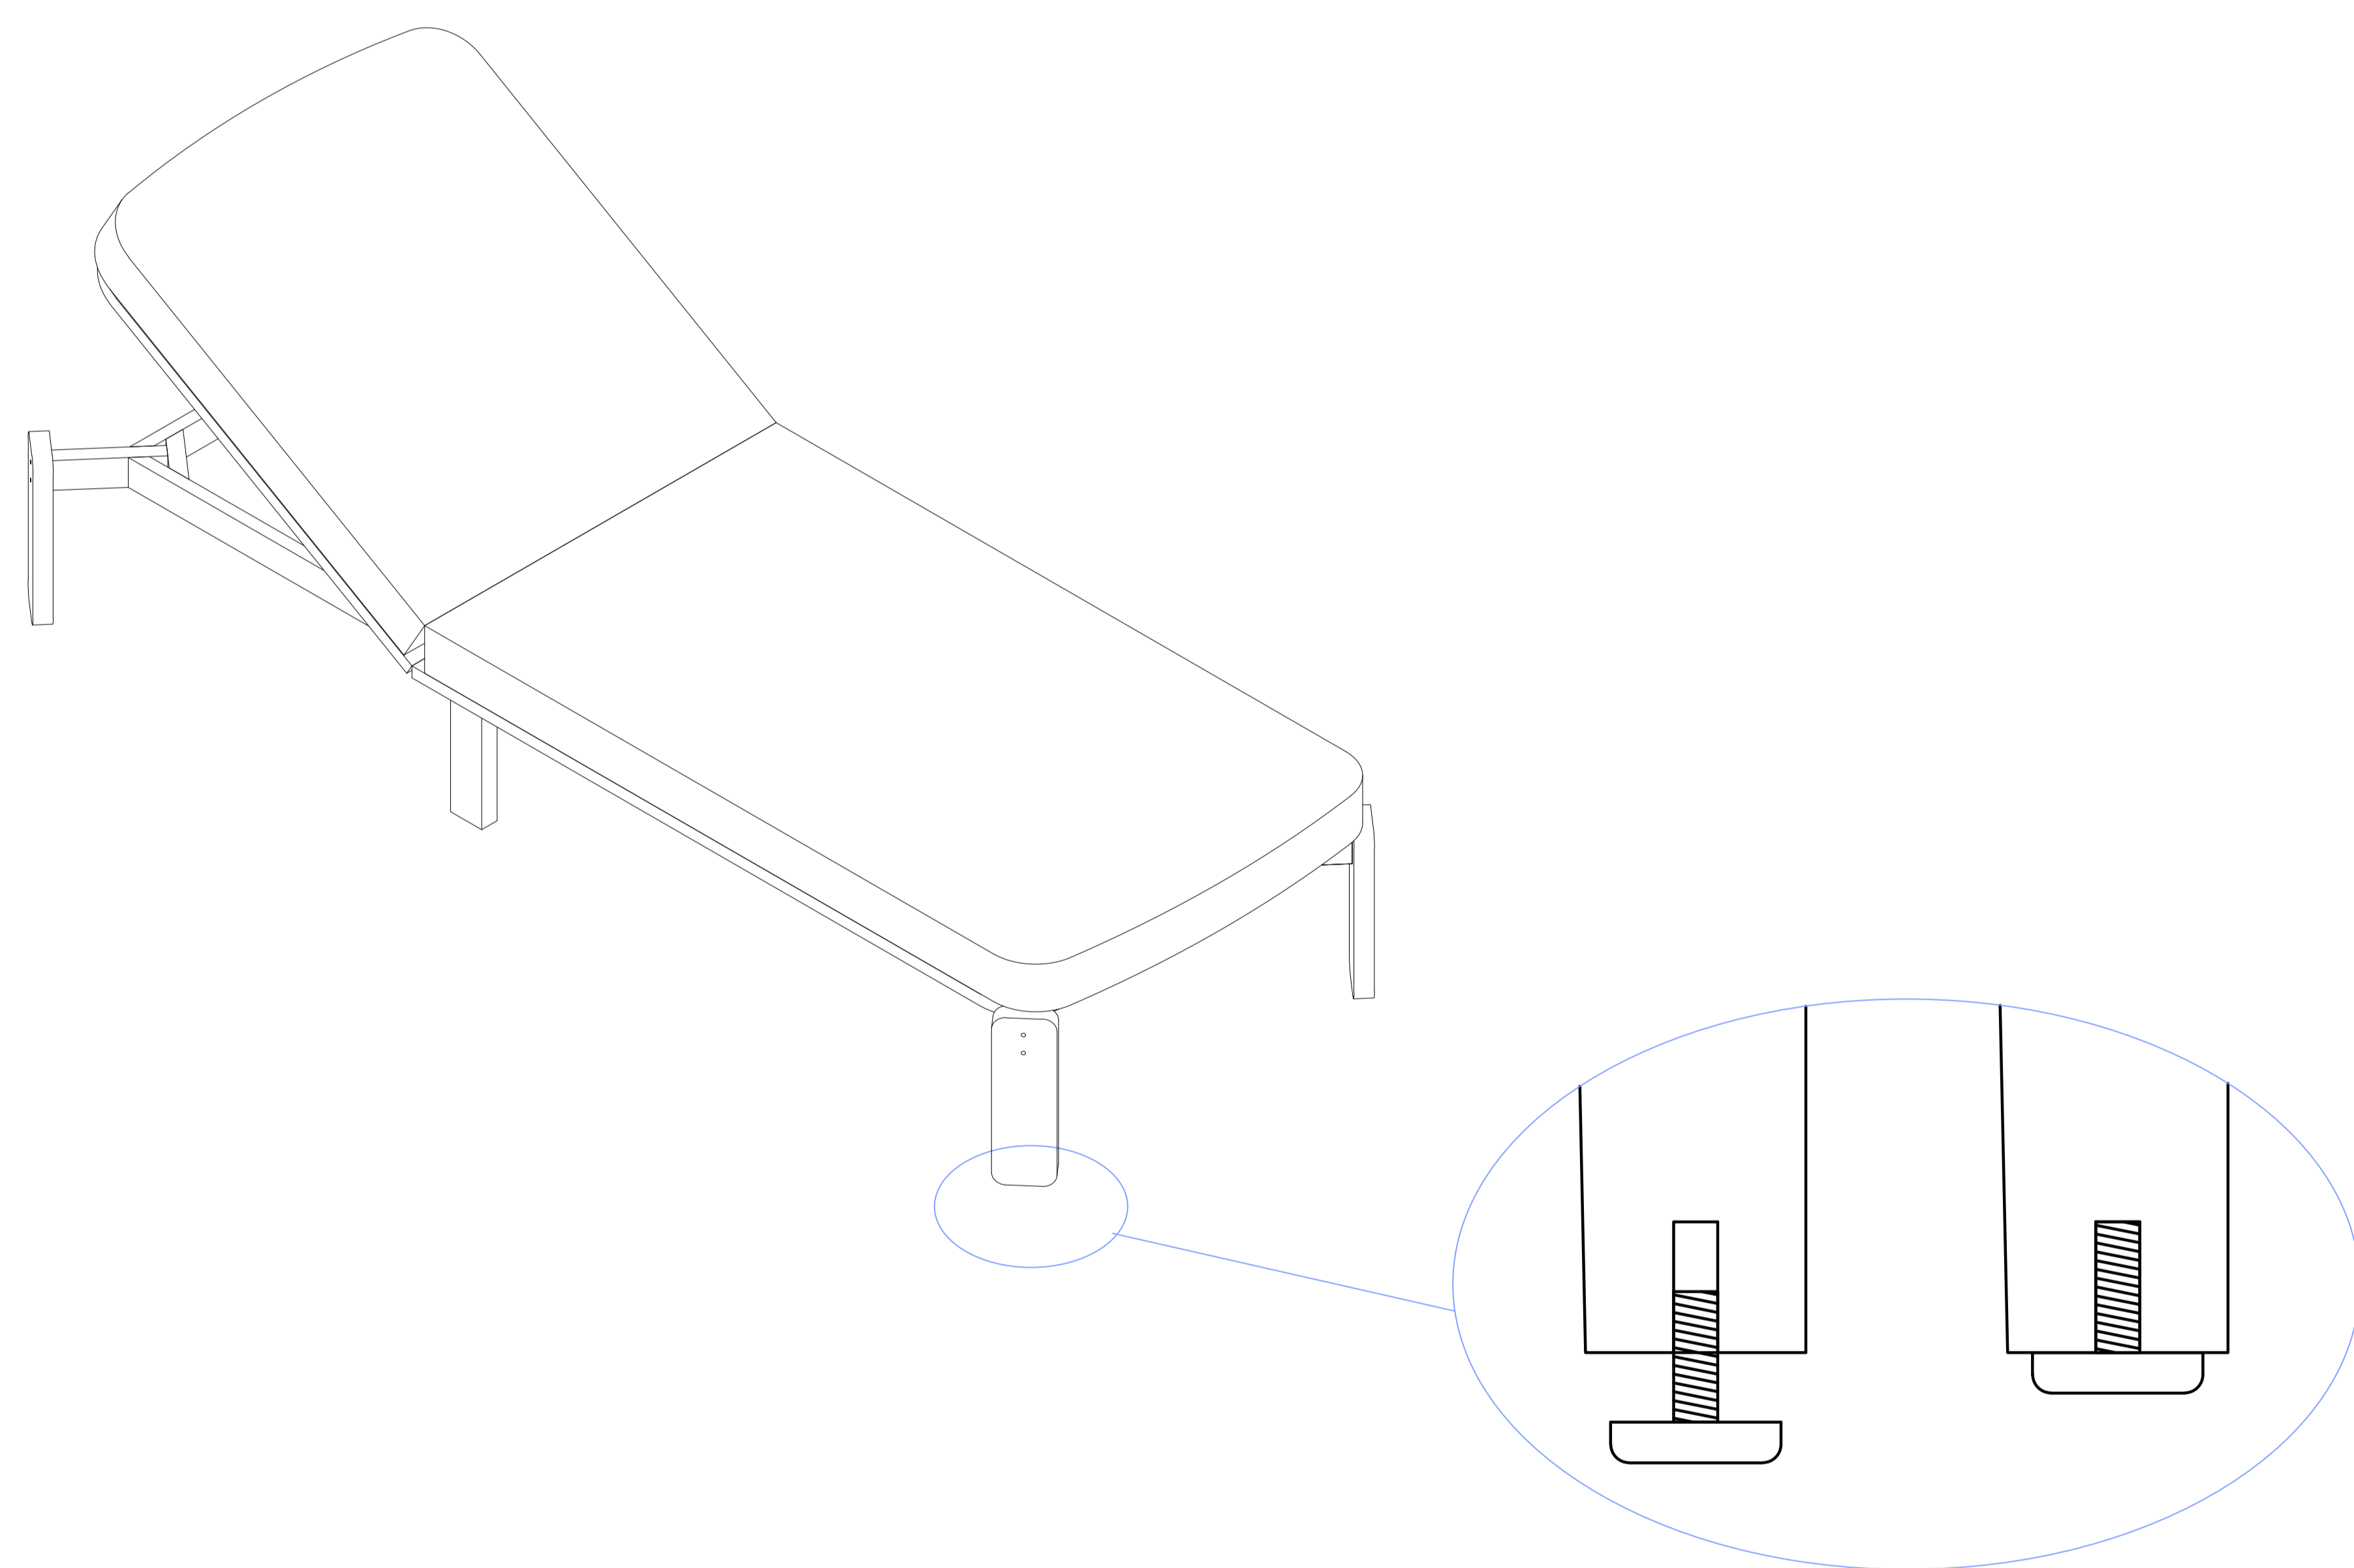

Adjust high for balance

Adjust low for balance

Adjust Pre-installed Levellers height for balance

Inspect it and make sure all parts are adequately connected.

Gently and gracefully, sit onto the all Lounge Chaise. This will help to align all the parts at all joint areas.

Then get off the Lounge Chaise and in a sequential manner, gradually tighten all Screws at all joints until evenly connected.

If there are still wobbles, loosen the Screws and execute this same process.

WARNING!! IF LOUNGE CHAISE IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Your Lounge Chaise is ready for use.

This Lounge Chaise can only be used on a flat, level surface.