

Product Care & Maintenance Guide

Timeless Elegance, Season After Season

General Cleaning & Upkeep

- Use a soft, non-abrasive cloth or soft-bristle brush with a mild soap solution (e.g. dish soap + warm water) to gently clean the cover.
- Rinse thoroughly with a garden hose to remove any soap, dirt, dust, or pollen.
- For tougher spots, gently scrub with a soft brush — do not use bleach, harsh detergents, or abrasive scrubbers.

Maintenance Tip: Clean before noticeable buildup or stains — regular upkeep helps preserve the cover's protective coating and extend its lifespan.

Drying & Re-covering

- After rinsing, let the cover fully air dry before placing it back on the furniture.
- Never fold and store the cover while it's still damp — trapped moisture can lead to mold or mildew over time.
- Avoid dragging the cover across rough or sharp surfaces, which can cause snags or tears in the fabric.

Use Fit & Guidelines

- Ensure the cover fits snugly and securely over your chair — using built-in drawstrings, tie-downs, or fasteners if provided — especially in windy conditions.
- Always place the cover on clean, dry furniture to avoid trapping dirt or moisture between the cover and the surface.
- Avoid contact with rough, sharp, or abrasive objects to minimize risk of punctures or fabric damage.

Seasonal Care & Long-term Storage

- Designed for year-round outdoor protection.
- For off-season storage, clean and fully dry before putting away.
- Fold loosely and store in a cool, dry place away from sunlight and sharp objects.
- Clean every few months, especially during high-dust or heavy-pollen seasons.
- After heavy rain or snow, shake off pooled water to protect seams.
- Inspect regularly for small rips or seam wear and repair promptly.
- Use a breathable storage bag or container to prevent moisture buildup.