


DESCRIPTION: ENTERTAIMENT TV STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:

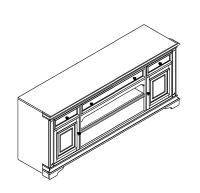

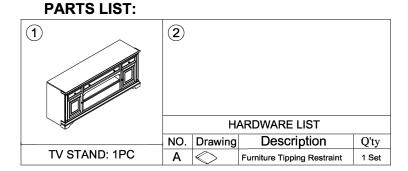


HOW TO REMOVE DRAWER

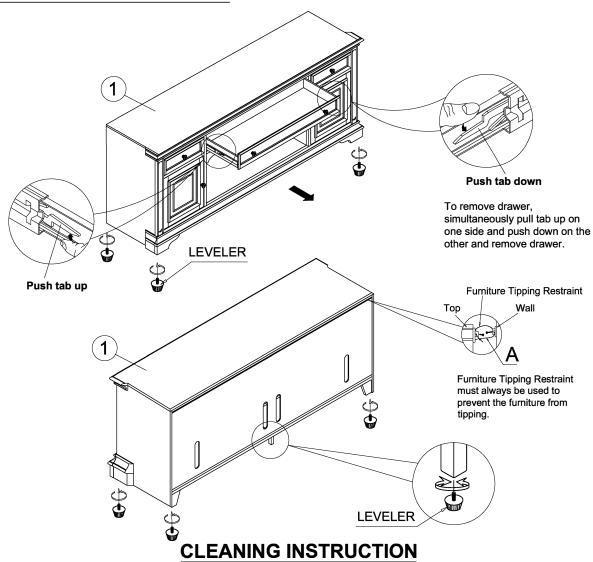

Clean the TV Stand surface with a furniture polish and a soft cloth.

DESCRIPTION: LEFT PIER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:

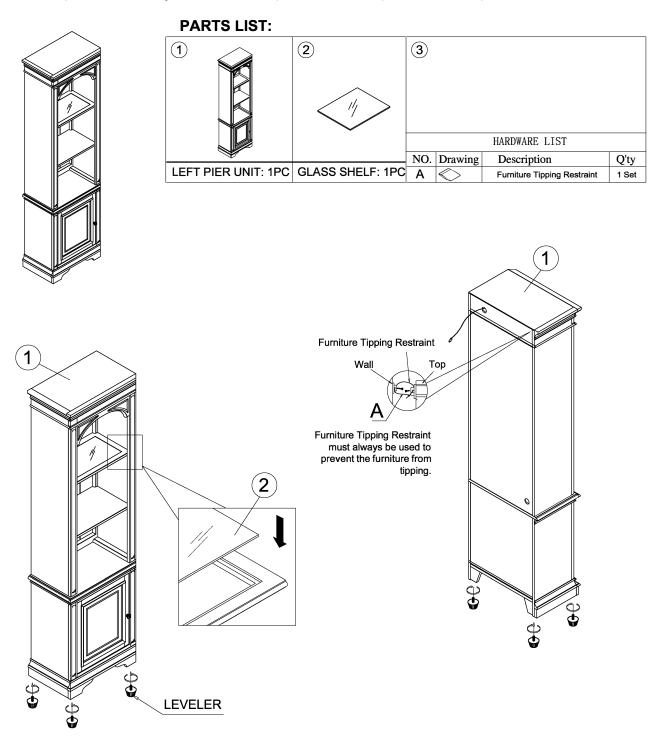


CLEANING INSTRUCTION

Clean the Left Pier surface with a furniture polish and a soft cloth.

DESCRIPTION: RIGHT PIER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:

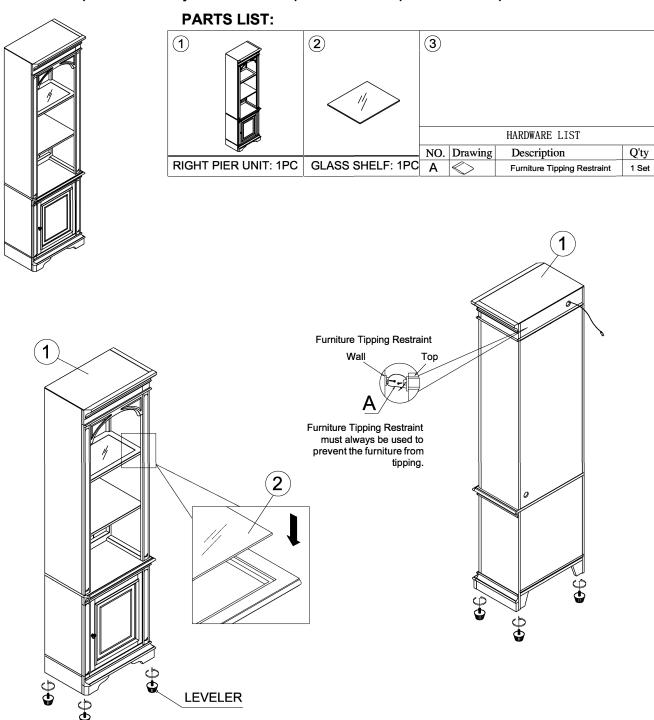

CLEANING INSTRUCTION

Clean the Right Pier surface with a furniture polish and a soft cloth.

DESCRIPTION: ENTERTAIMENT HUTCH
ENTERTAIMENT TV STAND
LEFT PIER
RIGHT PIER

WALL UNIT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:





HUTCH PART LIST:












 
(4)

(6)







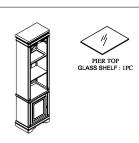





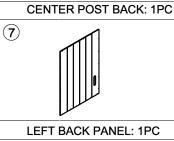


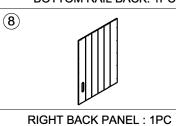

9

HARDWARE LIST

LEFT PIER UNIT : 1PC RIGHT PIER UNIT : 1PC

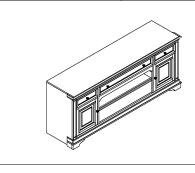


ΓV	STAND:	1PC

;	NO.	Drawing	Description		
	Α	0	Bolt Ø1/4"x1-1/4"	4pcs	
	В	9	Flat washer (Ø1/4"x16mm)	4pcs	
	С	0	Spring washer (Ø1/4")	4pcs	
	D		Shelf support	6pcs	
	E	0	Cover cap plastic(Ø20xØ18x7mmH)	4pcs	
	F	0	Wood screw(Ø8*3/4")	34pcs	
	G	() THE	Wood screw(Ø8*3/4")	6pcs	
	Н	(mas-	Wood screw(Ø6*5/8")	6pcs	
	ı) THE	Wood screw(Ø8*1-1/4")	6pcs	

Allen wrench (4mm)


CLEANING INSTRUCTION

Clean the wall unit surface with a furniture polish and a soft cloth.

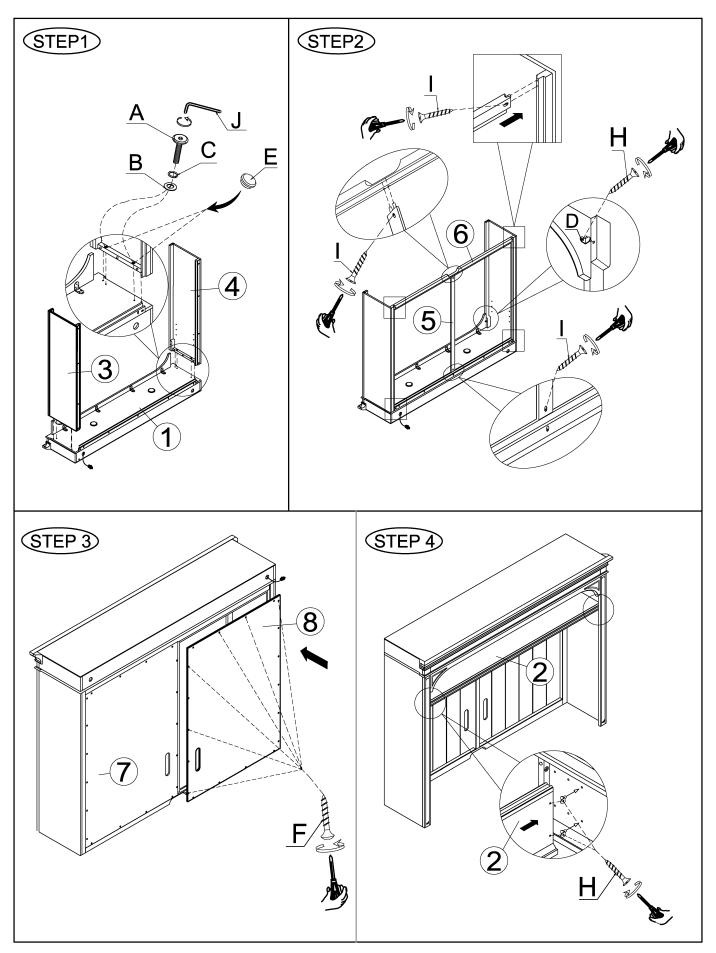

CLEANING INSTRUCTION

Clean the wall unit surface with a furniture polish and a soft cloth.

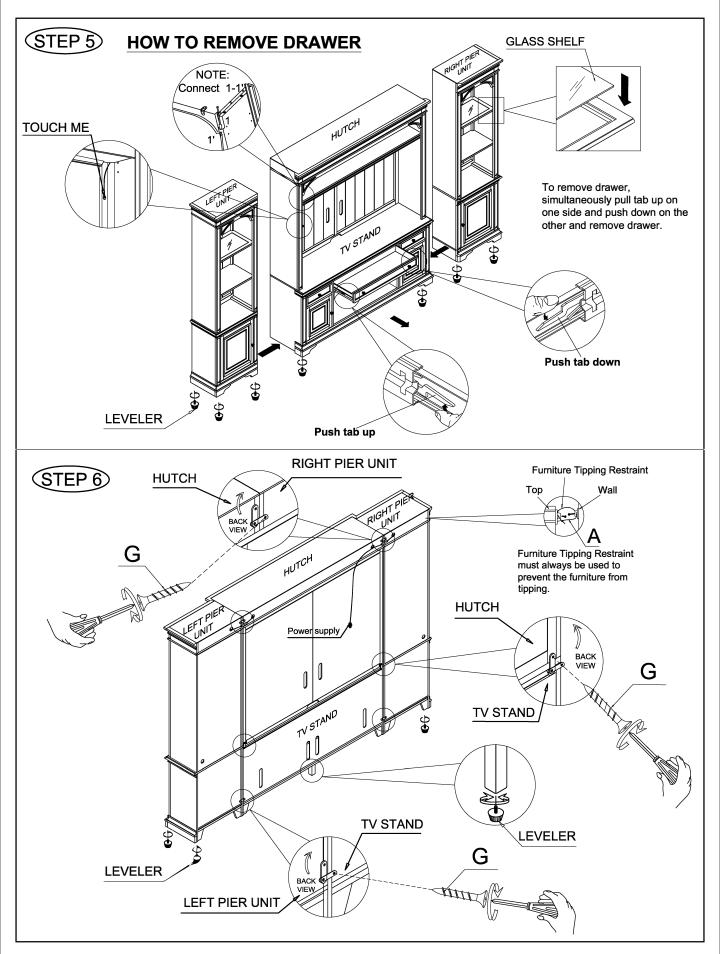

CLEANING INSTRUCTION

Clean the wall unit surface with a furniture polish and a soft cloth.