



Operation Instructions



Massage Chair

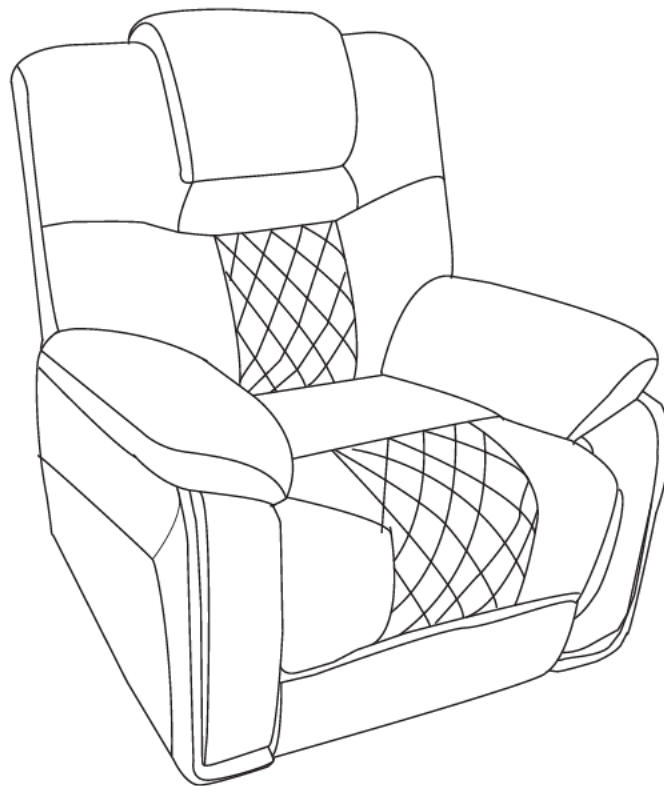

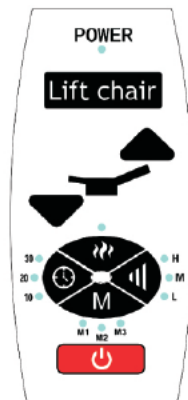




ELECTRIC LIFTING & RECLINING







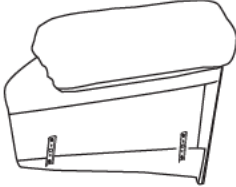
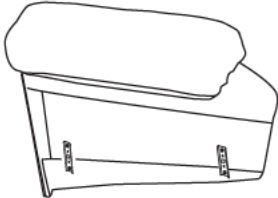
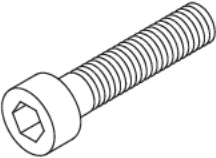
 
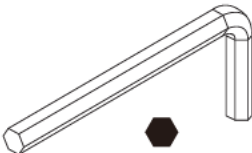
Operation Instructions

First of all, check if local voltage is consistent with the transformer power supply. If available, then plug in, to set up an electric circuit.

The top of the hand controller comes with a USB port to facilitate charging of electronic products such as mobile phones.

- Product require DC 29V Power, Boot indicator light up after electrify;
- LIFT: Automatic lift function button. Just one click, the chair will lift up to top position;
- RECLINE: Automatic recline function button. Just one click, the chair will recline to max unfold position;
- LIFT/RECLINE the 2 buttons can be changed at any time. For safety, when you click new button, the last function will stop, and execute new function.
-  Up arrow button: should keep pressing to work, the chair will get down, then unfold to max recliner position.
-  Down arrow button: should keep pressing to work, the back & footrest will revover, then lift up to top position.
-  "Heat" key: Individual control switch, if users want the product to have the spontaneous heat, they can press heating switch key for heating. The maximum heating value is 65°C and it takes about 15 minutes to reach the maximum heating value. There is a built-in protective chip in the product, and the continuous heating will not make the heat value exceed the maximum peak value.
-  "Time" key: timing regulation key. Press "10-20-30" to regulate the time and the corresponding mode indication lamp will be on.
-  "Intensity" key: it has three-gear strength regulation key H-M-L. Press the key, the strength indication lamp will flicker and the strength will change as per the sequence: M-L-H cycling.
-  "Mode" key: it has three-mode switchover key. When the vibrating motor is in a start state, the key can realize vibrating mode switchover, such as M1 → M2 → M3 → M1 and the corresponding indication lamp will be on in certain mode.
-  Power On / Off, vibration massage power.

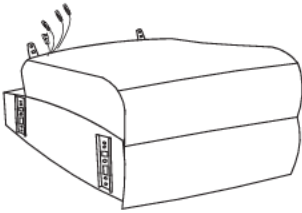
PART LIST

<p>A. Seat frame</p> 	<p>B. Backrest</p> 	<p>C. Remote</p> 
<p>QTY:1pc</p>	<p>QTY:1pc</p>	<p>QTY:1pc</p>
<p>D. Transformer</p>  <p>QTY:1pc</p>	<p>E.Arm(not replaceable)</p> <p>Arm(L)</p> 	<p>Arm(R)</p> 
<p>F</p>  <p>M8*60mm QTY:2pc</p>	<p>G</p>  <p>QTY:2pc</p>	<p>H</p>  <p>QTY:1pc</p>


Step 3 :

Find the white and red electric wires in the back of main frame (A). Connect by inserting the pin into the socket according to the color. Attach the remote (C) to the chair by inserting the pin into the big socket in the back of main frame (A).


Attach the transformer (D) to the chair by inserting the pin into the small socket on the back of main frame (A).

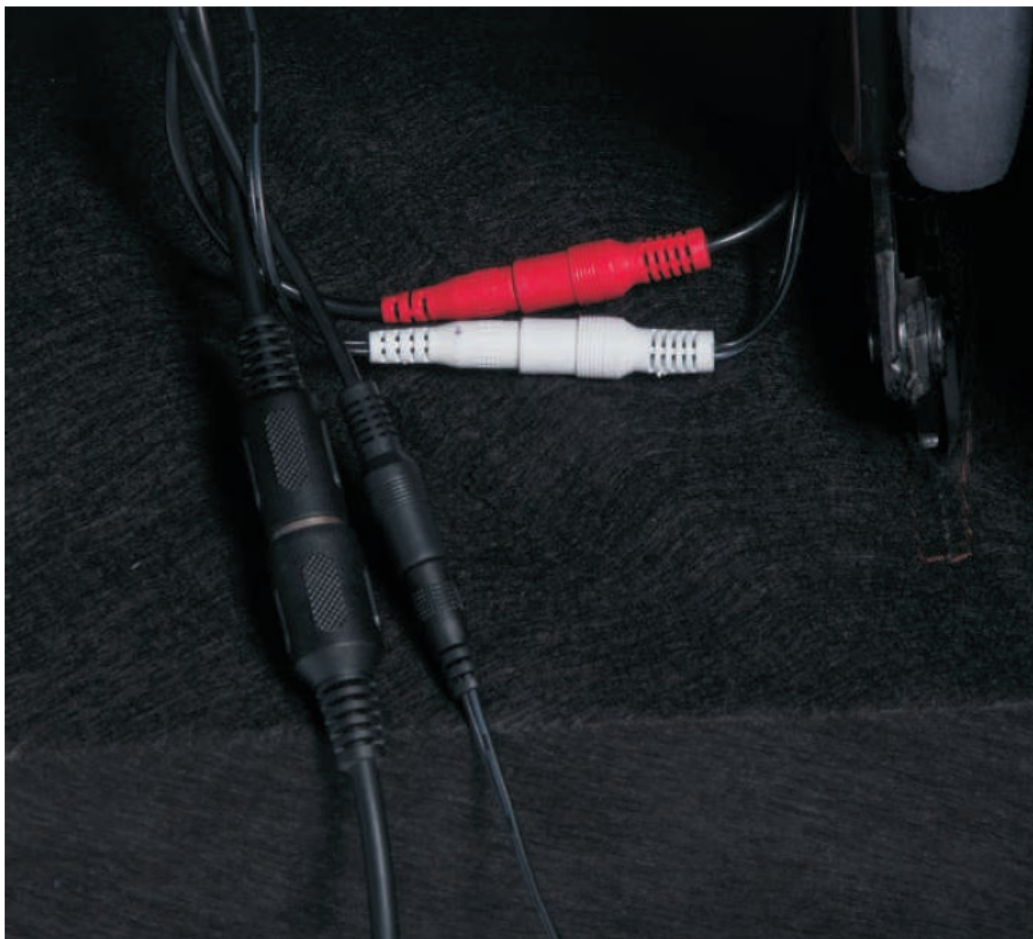


Step 1:

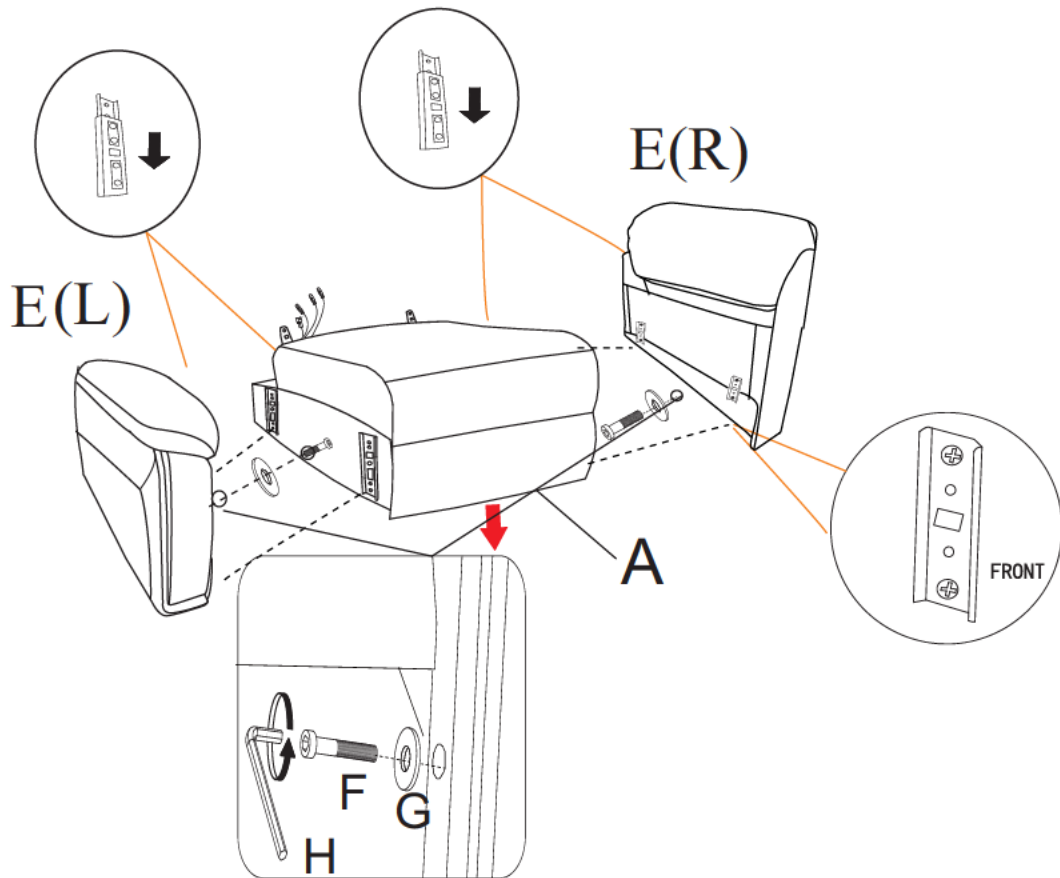


Step 2:

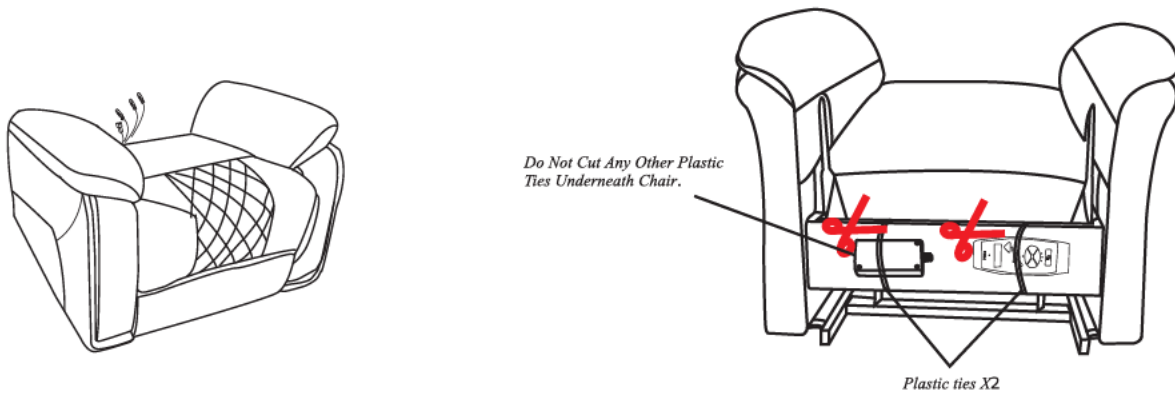


Step 3:

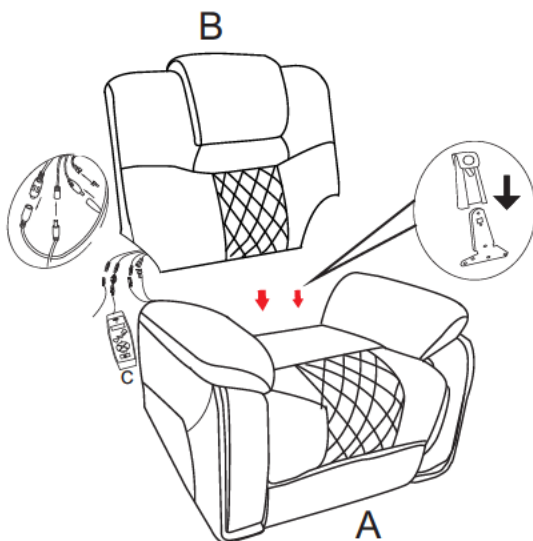

Step 4 :

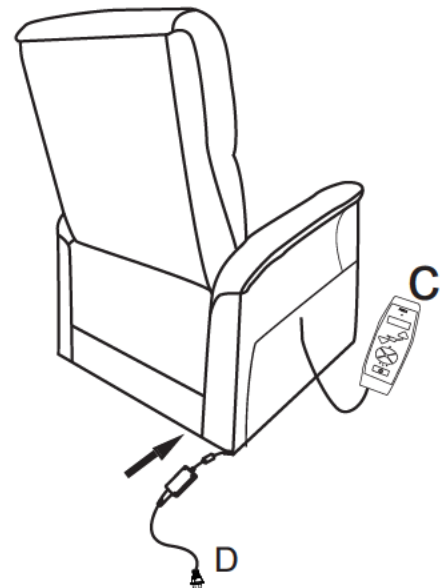

Step 5

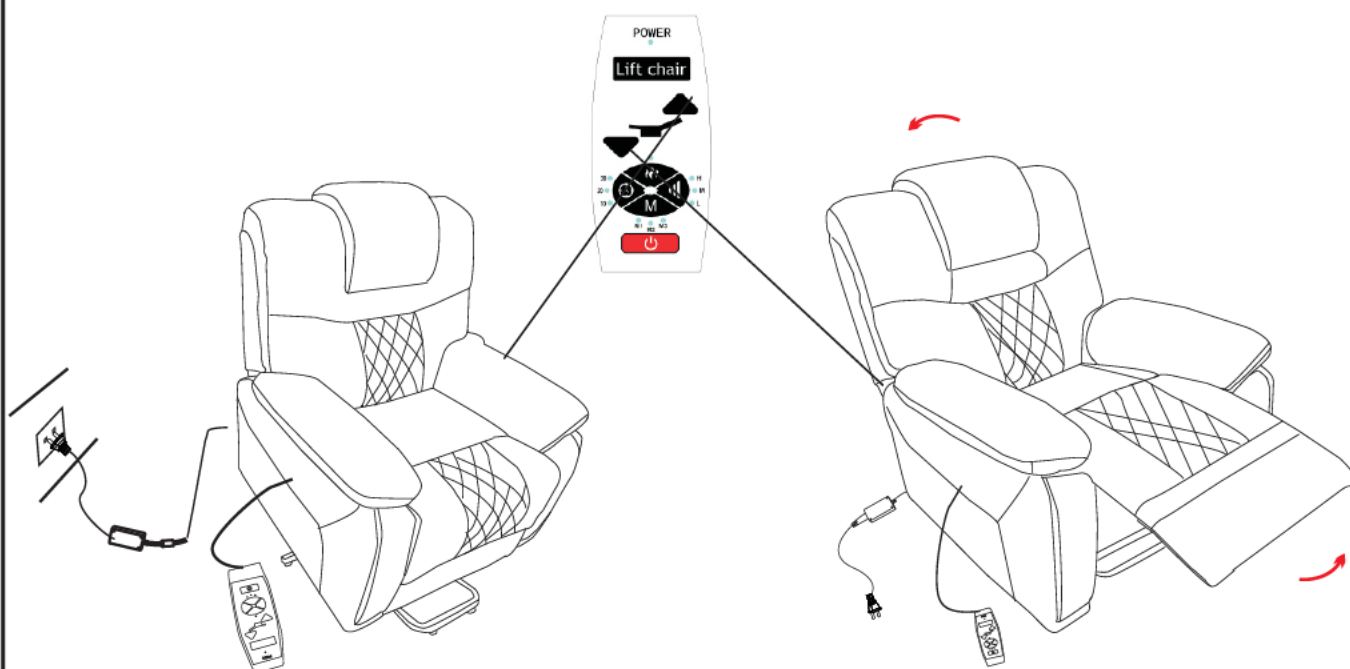

Press the \triangle button to recline the sofa.

Press the ∇ button to make the sofa lifted.

Step6 :

