



W

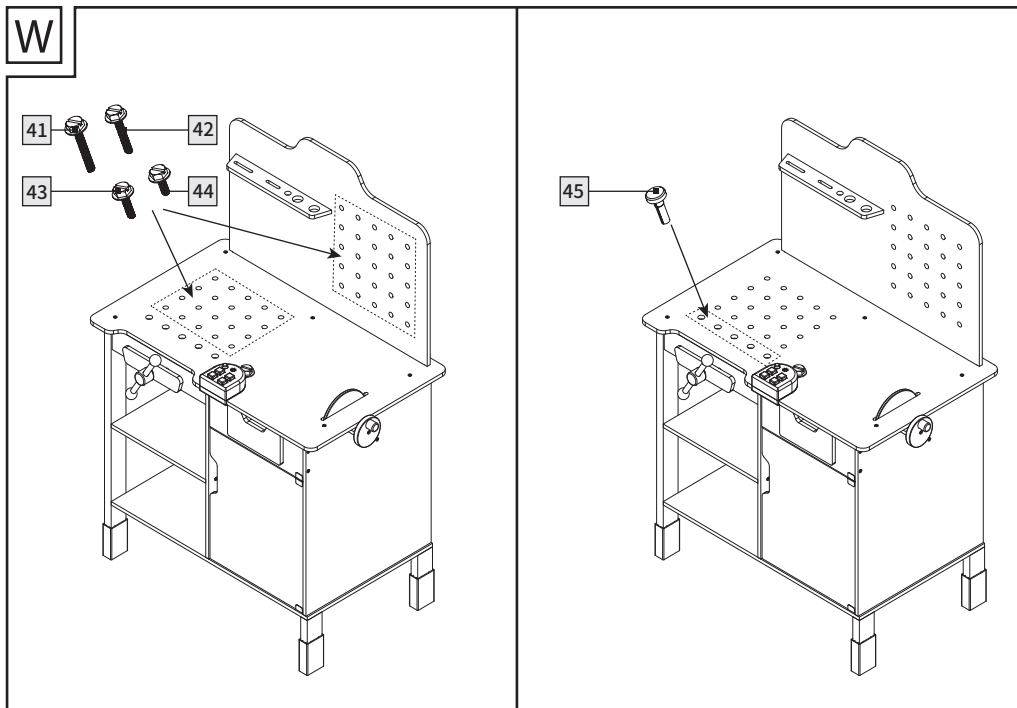

Tool rack

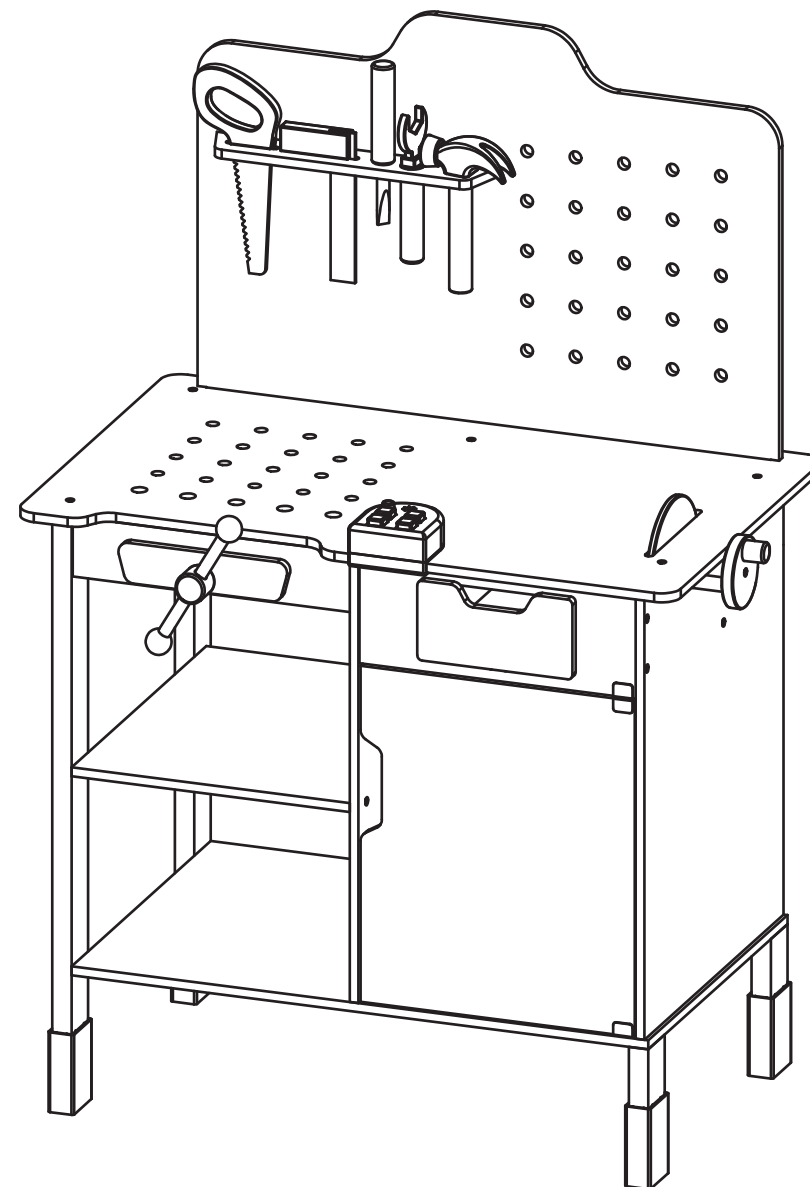

- Uses 4 AAA batteries: 2 for the plastic electric screwdriver and 2 for the sound unit. (Batteries not included.)
- Do not mix different types of batteries or new and used batteries.
- Use only the same or equivalent types of batteries as recommended.
- Insert batteries with the correct polarity.
- Remove exhausted batteries from the toy.
- Do not short-circuit the power terminals.
- Do not dispose of exhausted batteries in household waste.

Maintenance and Care:



Remove batteries if the product will not be used for a long period.
Wipe stains with a dry cloth.




Warning!

Not suitable for children under 3 years old. Contains small parts. This product must be assembled by an adult and used under adult supervision. Keep away from fire! Please store the packaging materials promptly. The packaging contains important information—please keep it for future reference.


A

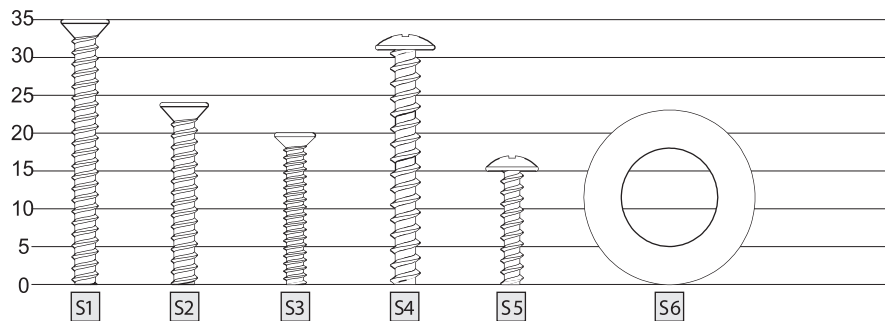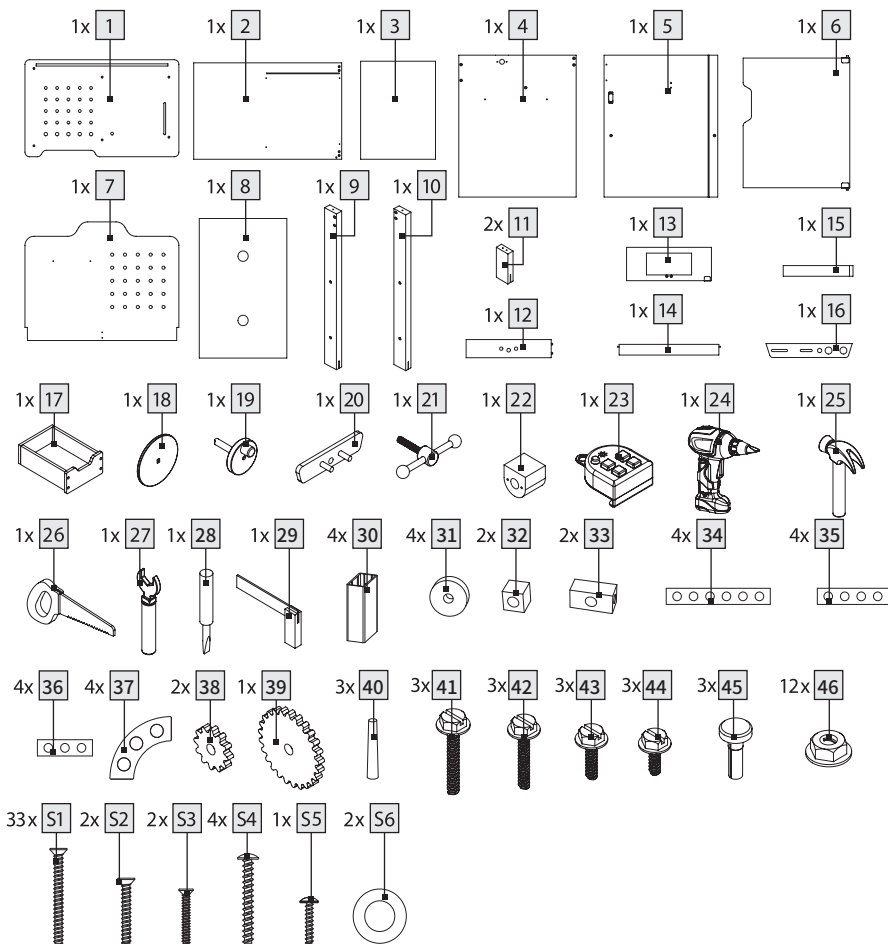


T





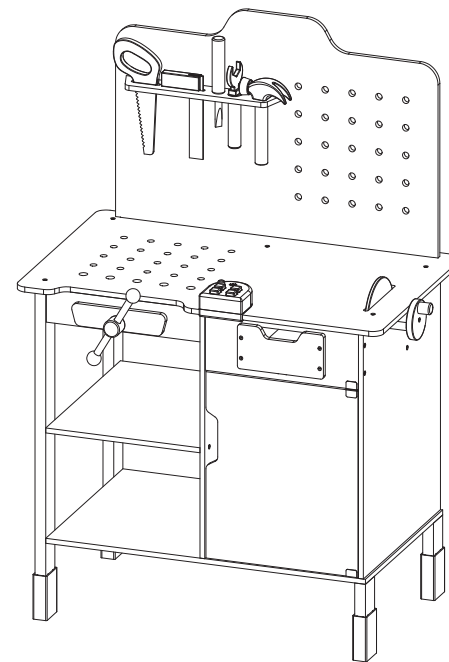







U

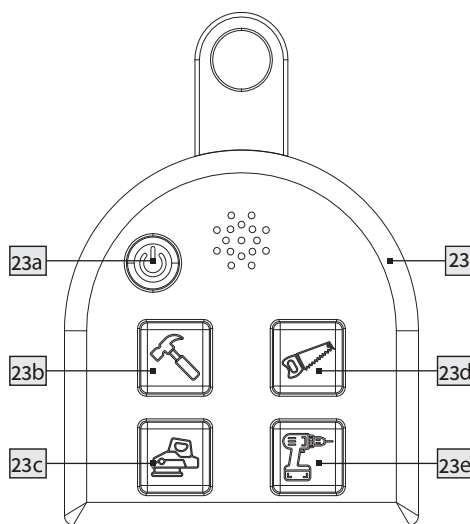



V

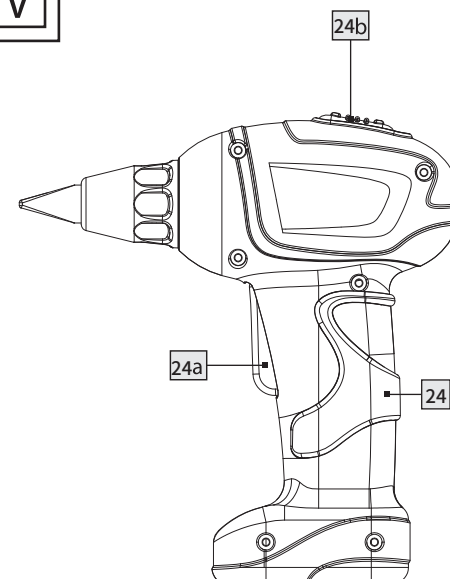

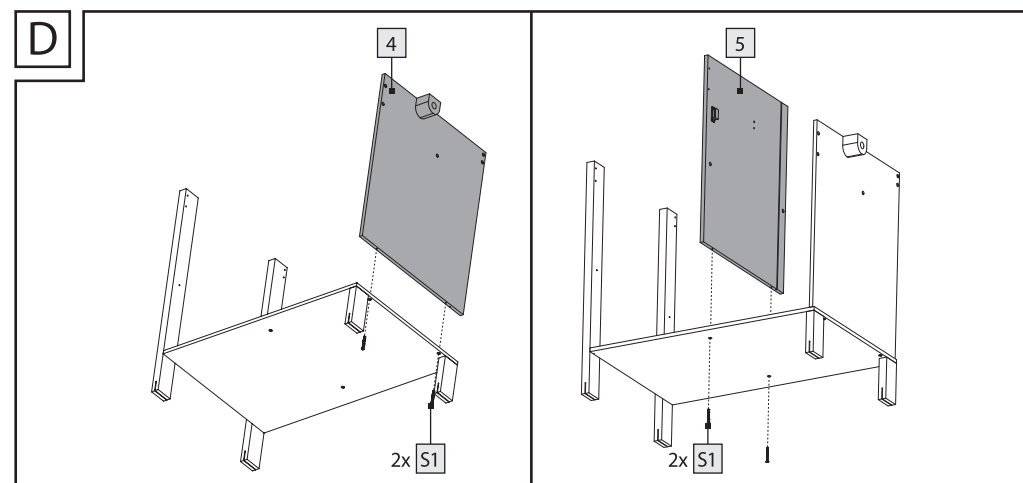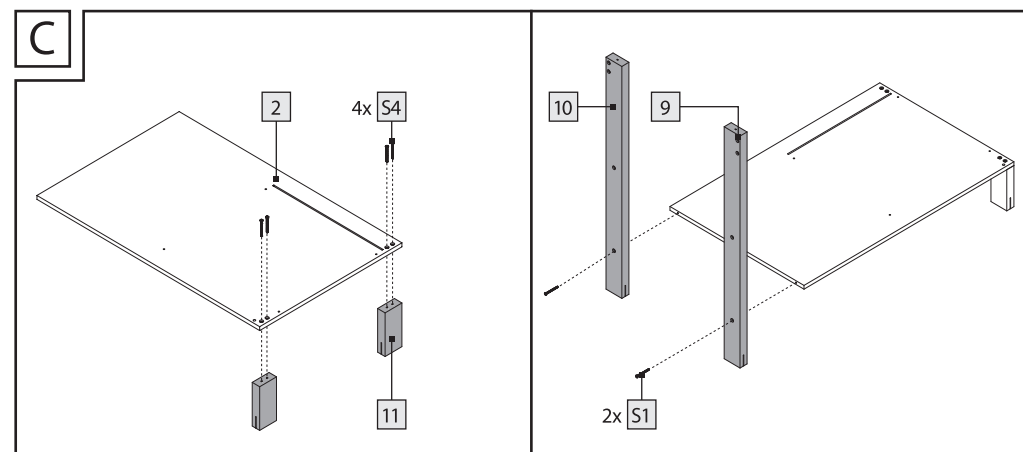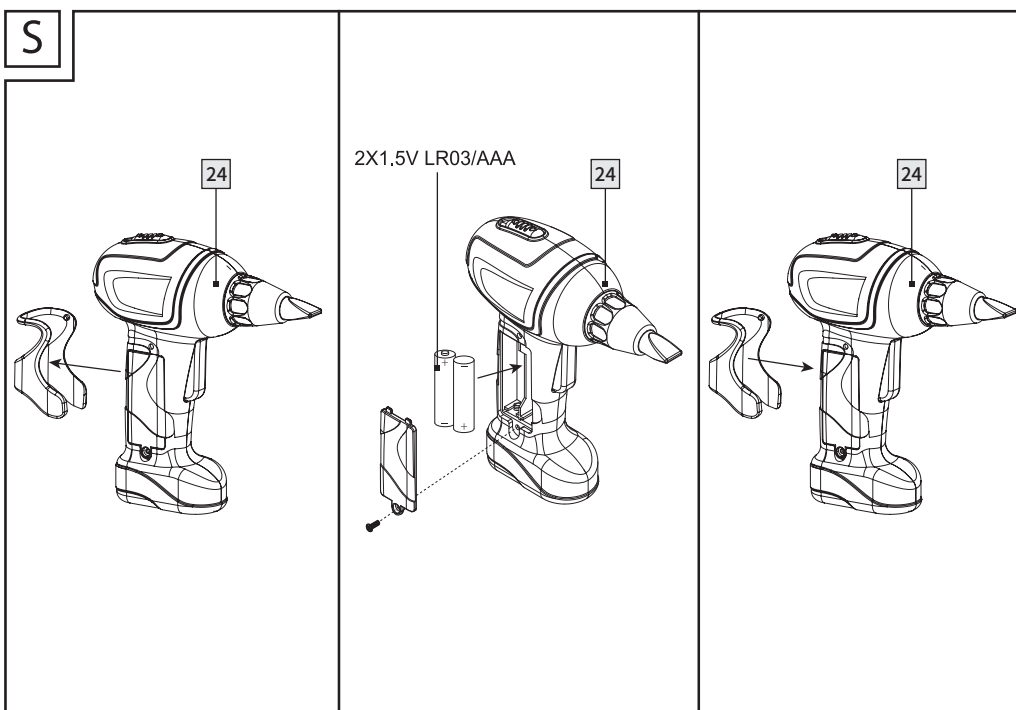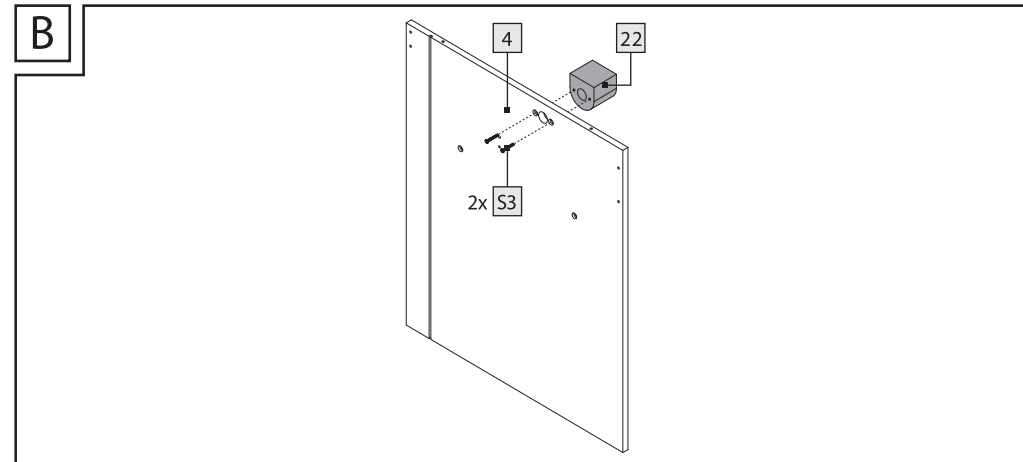
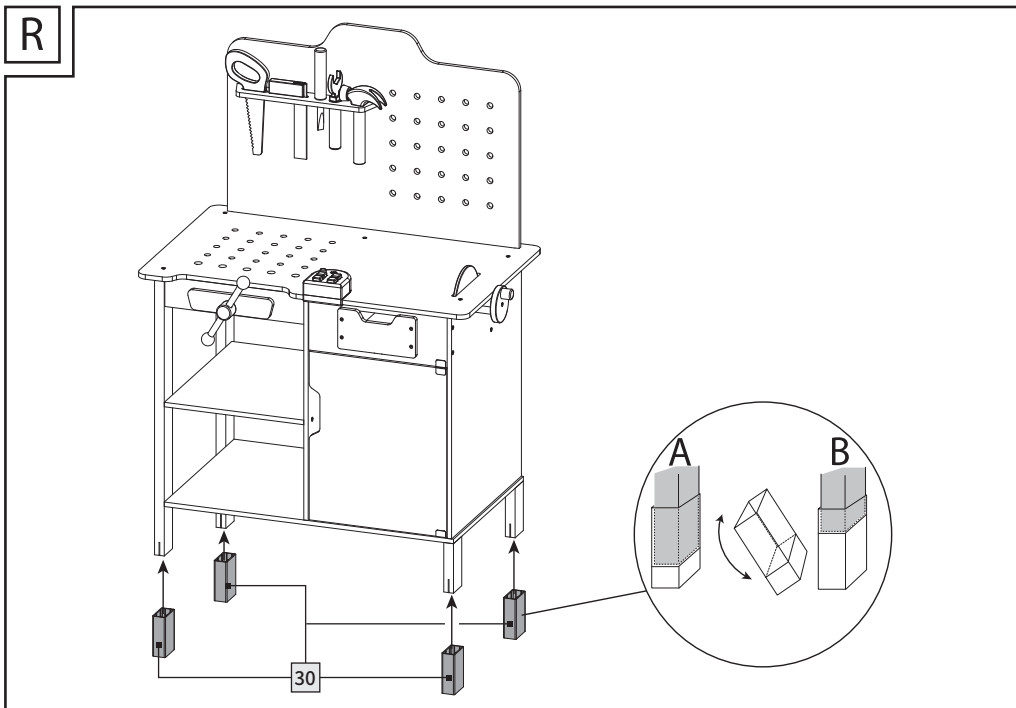


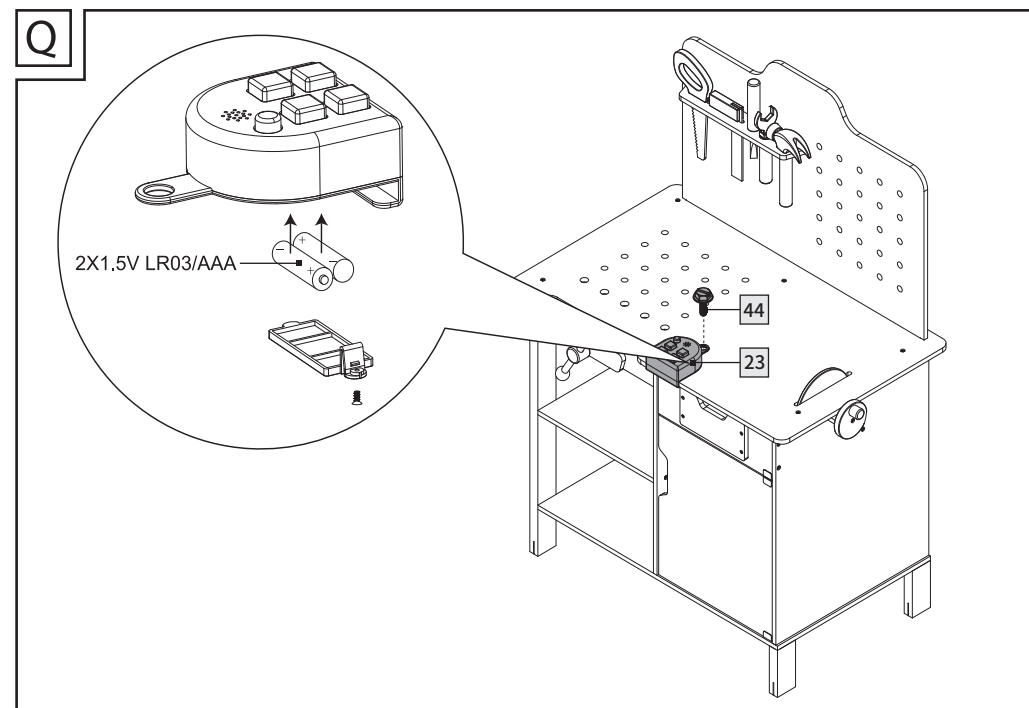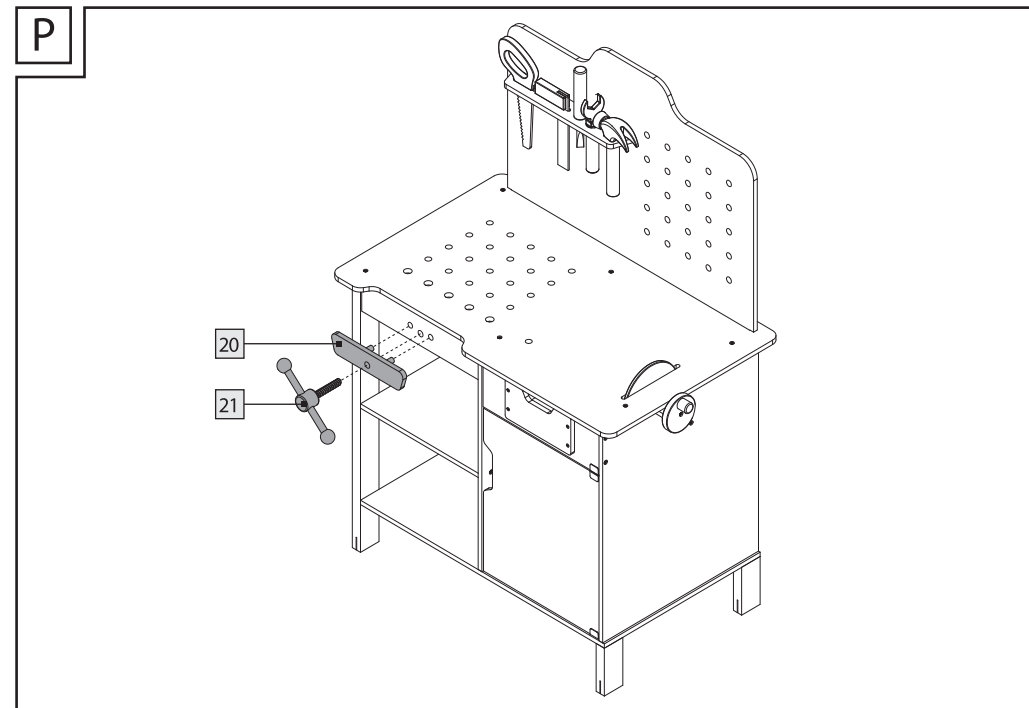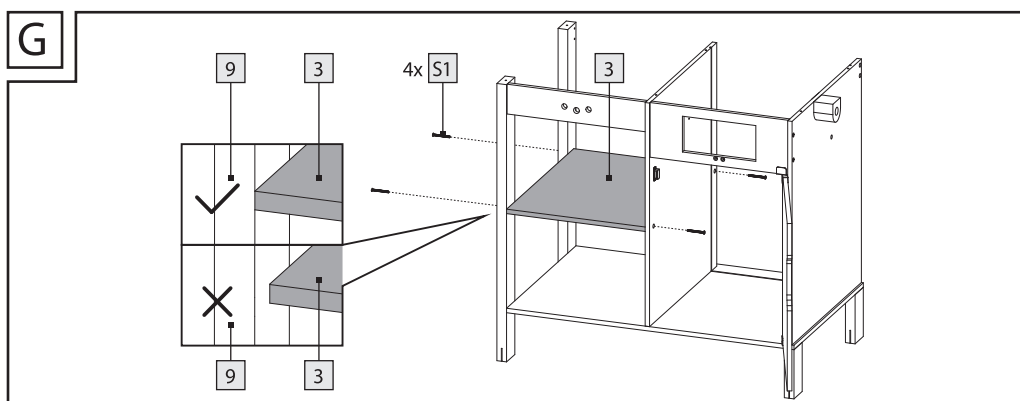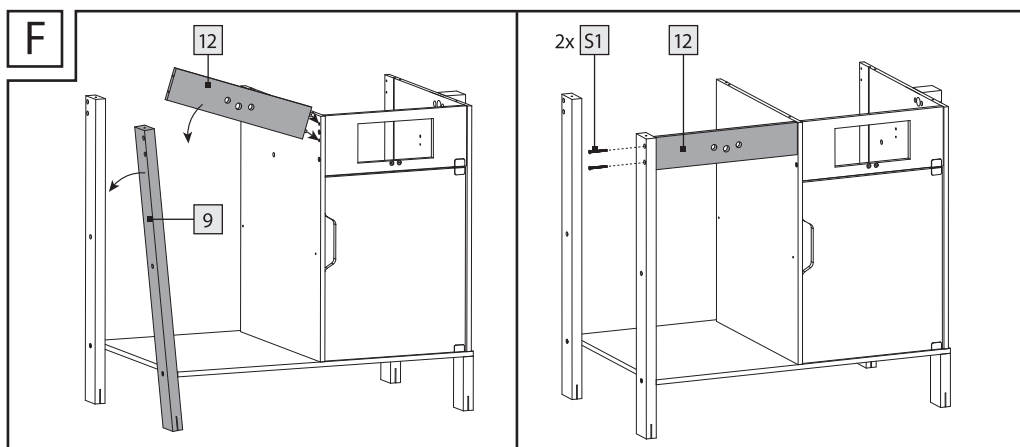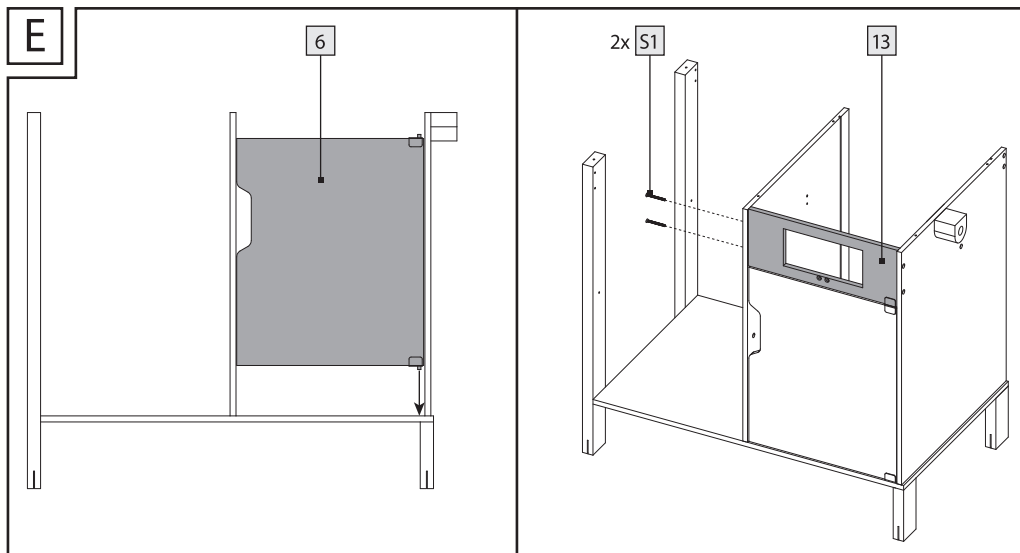



N

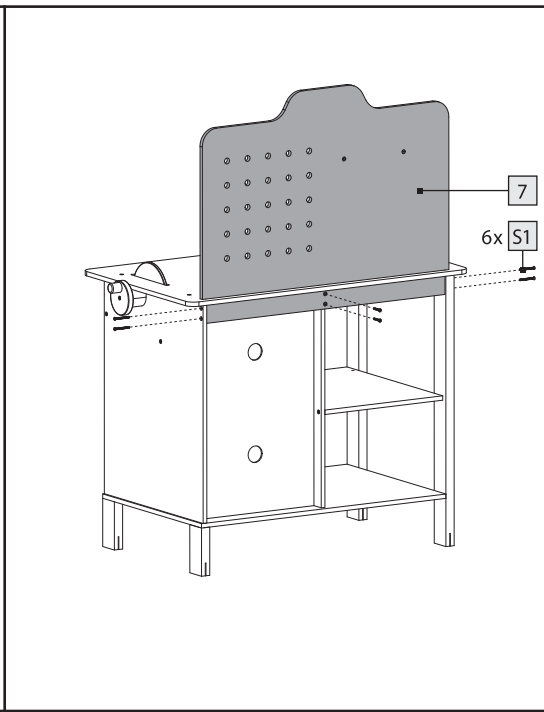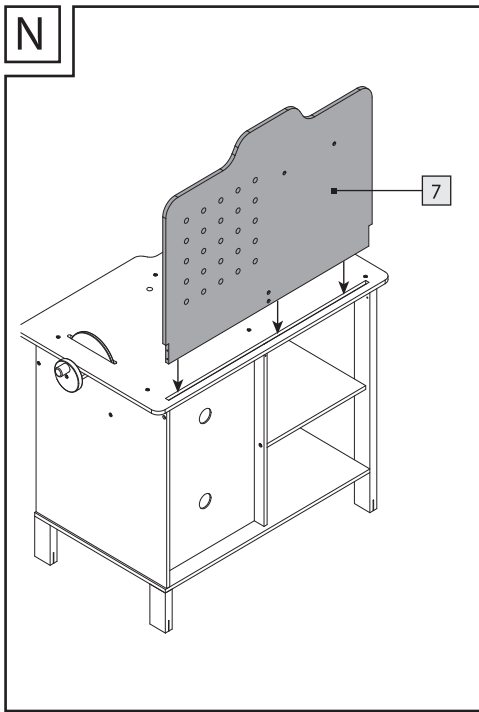

H

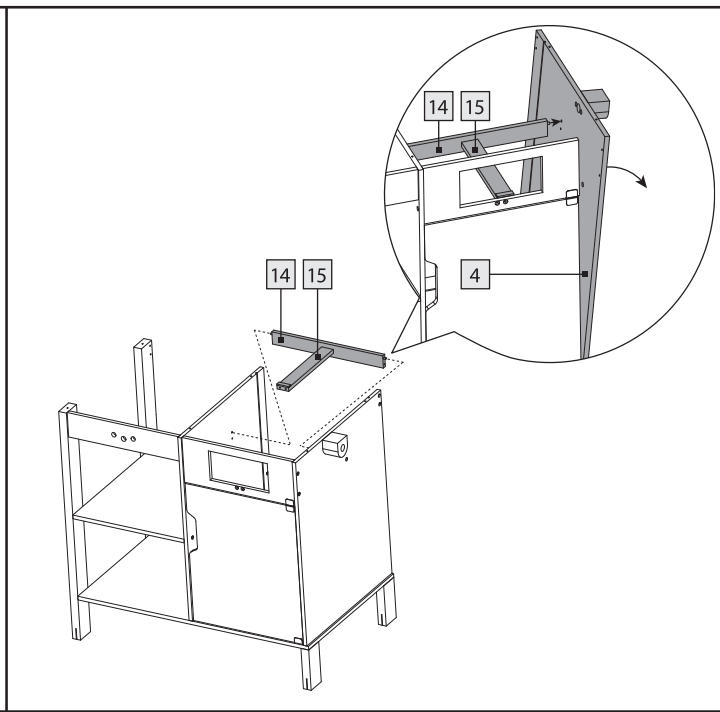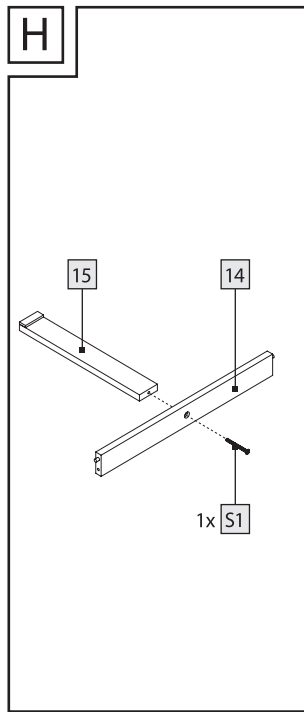

O

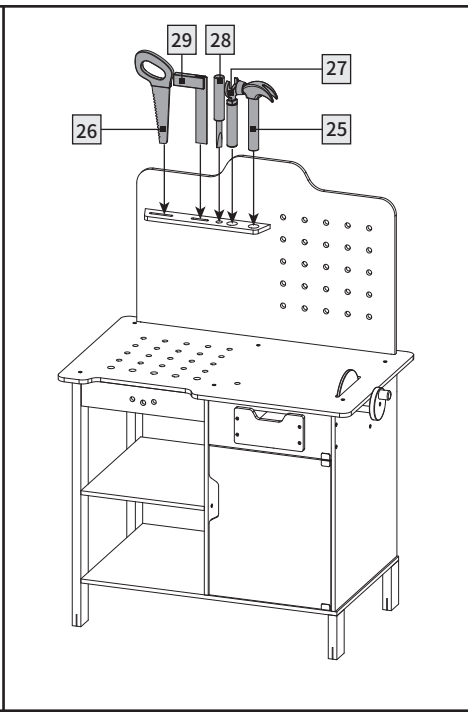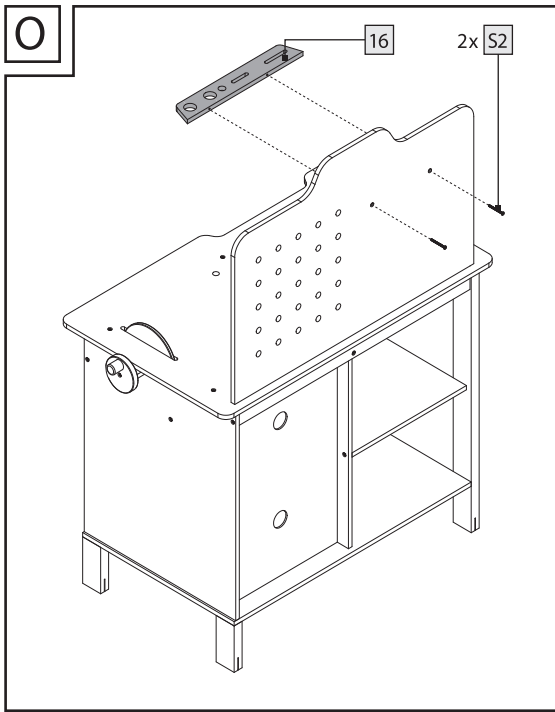

I

