



Phonograph User Manual

*Thank you for reading this manual. We wish you a pleasant journey with its use!

User manual.

Thank you very much for purchasing our phonograph series products. Please read this user manual carefully before using this product for the first time and follow the instructions in the manual for actual operation!

Precautions:


- This product is only suitable for use in a gentle indoor environment; do not expose it to direct sunlight or place it near radiators, stoves, or other high-temperature heat sources.
- Keep it away from environments such as bathrooms and swimming pools; do not use it in areas with running water, dampness, dripping water, or spray.
- Do not place objects containing liquids on top of this product, such as vases, cups, etc.
- Keep it away from open flames, such as candles, etc.
- Do not touch the power cord with wet hands; to avoid the risk of electric shock, do not touch the internal components of the machine; non-professional technicians should not attempt to repair this product.
- Do not pull or twist the power cord forcefully.
- Do not alter the power cord in any way or connect peripheral devices that are not specifically designed for this product.
- For safety and energy conservation, please remember: during thunderstorms or when the machine is not in use for an extended period, ensure that the power supply is completely disconnected or the power cord is fully removed from the power outlet.

Placement Requirements for the Machine:

- To ensure proper ventilation and heat dissipation, maintain at least a 10CM gap around the machine's casing. When using this machine, prevent items such as newspapers, tablecloths, or curtains from blocking the ventilation holes. Do not place the machine on thick carpets or in areas with poor air circulation.
- If you need to move the machine while it is in use, please turn off the power and wait for 2 hours before proceeding.


Phonograph Configuration Table

1. Vinyl Playback Function: Speed adjustable, compatible with all types of vinyl records available on the market.
2. Radio Function: Capable of tuning into FM (AM) radio stations.
3. HI-FI Bluetooth Playback Function: High-fidelity audio reproduction.
4. USB Playback Function: Capable of decoding 99% of audio formats.
5. Original High-Power Low-Distortion Amplifier, with THD $\leq 0.1\%$.
6. High-Power Subwoofer + Independent Bass and Treble Adjustment System, to meet the audio quality requirements of different sound sources.

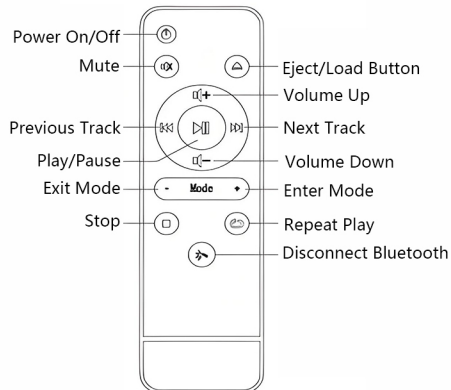

Function and Maintenance of Consumables:

- When using the phonograph's vinyl turntable function, it is best to limit playback time to within 3 hours.
- The vinyl stylus and needle are consumable items. Under normal playback at 33.3 RPM, their lifespan is approximately 300 hours. Please take care to protect them to extend their service life. When not using the phonograph's vinyl turntable function, please return the tonearm to its rest and place the milky white stylus cover on it. To clean the stylus, you can gently wipe the stylus area with a weakly alkaline cleaning solution.
- Since existing vinyl records are all collector's items and have been around for a long time, it is recommended to first use a soft, dust-free cloth dipped in a small amount of weakly alkaline cleaning solution to wipe along the edge of the vinyl record in a clockwise direction from the outside to the inside several times until it is clean. After enjoying a record, please place it vertically on a well-ventilated and dry vinyl record rack

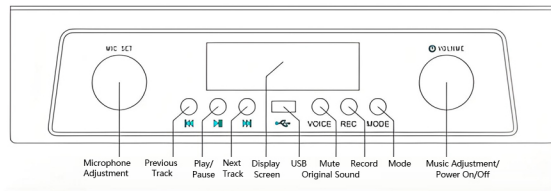

Coaxial Function Operation Method:

Turn on the power switch the function selection to COA mode. (To use the coaxial function, you need to first connect the phonograph to the TV using an RCA cable. The TV port is usually labeled as "Coaxial," "coaxial," or "SPDIF." Note that some TVs do not have a coaxial output.) adjust the volume knob to achieve the best listening volume.

Vinyl Turntable Function Operation Method:

Turn on the power rotate the main volume knob to a suitable volume level switch the function selection to LP(PH) mode follow the operation diagram to proceed.

Bluetooth Function Operation Method:

1. Turn on the power.
2. Rotate the main volume knob to a suitable volume level.
3. Switch the function selection to Bluetooth mode.
4. Turn on the Bluetooth device you want to connect and start the device search.
5. When you see "NOBLESONIC" in the search results, click to connect.
6. When the device is successfully connected, you will hear two "beep" sounds. You can then open the player to play the desired tracks.
7. You can also lightly press the buttons on the panel or remote control to perform the required operations (some players may not be controllable).
8. Adjust the volume knob again to achieve the best listening volume.

USB Function Operation Method:

1. Turn on the power.
2. Rotate the main volume knob to a suitable volume level.
3. Insert the USB drive.
4. The machine will automatically recognize it and start playing in sequence from the first track.
5. Lightly press the previous or next track button on the panel (or remote control) to select your preferred tracks.
6. Adjust the volume knob again to achieve the best listening volume.

Radio Function Operation Method:

1. Turn on the power.
2. Switch the function selection to FM mode.
3. Rotate the main volume knob to a suitable volume level.
4. The machine will automatically search for radio stations.
5. Once the search is complete, use the previous or next track buttons to find your preferred station.
6. You can also press the "Play/Pause" button to re-search for stations.
7. Adjust the volume knob again to achieve the best listening volume.