 


INSTALLATION

 
 
Product Manual

Version: 210394US-01-26A-AA

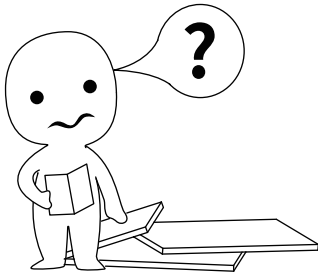



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

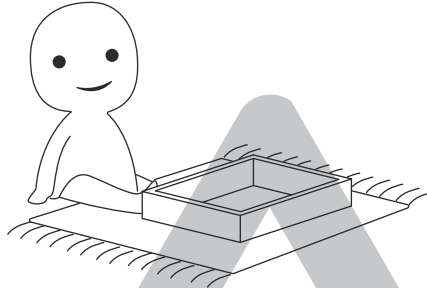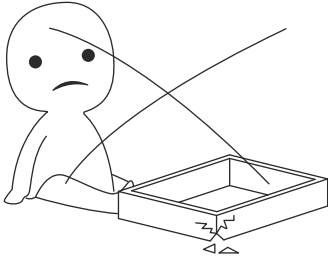





AVOID SCRATCHES!

  In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

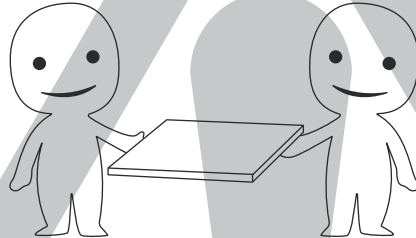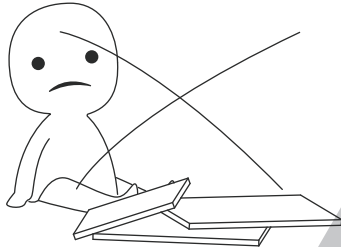

IMPROVE EFFICIENCY !

    Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

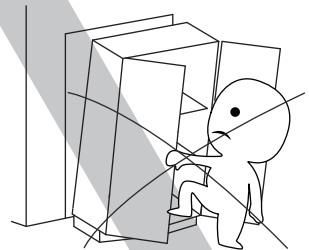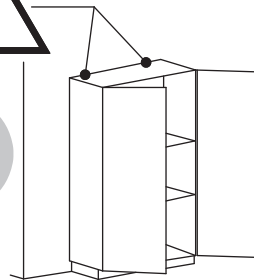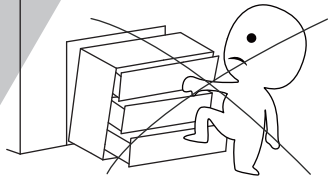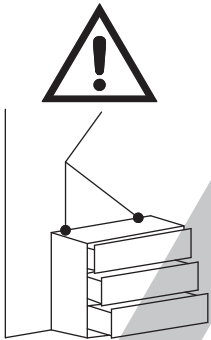

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

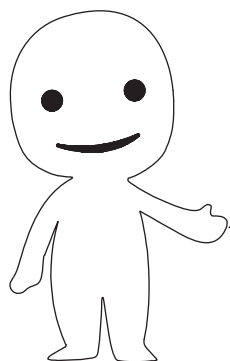

Please prepare the following tools

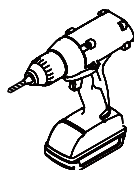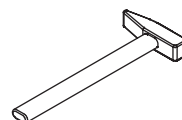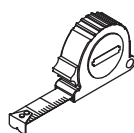     


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 78




CRB1595A

 B x 72



CRA0635B

 C x 72




D x 59




CRF0630A

 E x 18

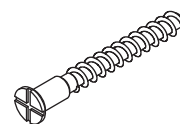


CRC0540A

 F x 1




224-400 mm

 G x 2




CRE0420A

 H x 8

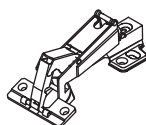


DGA861A

 
J x 2



K x 2

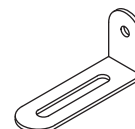 


L x 54

 

CRD3514A

 M x 45



P x 1



 
Q x 2



R x 6




S x 6




Ø 6 x 48mm

 T x 2

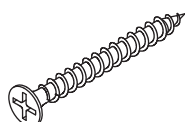

CRD3535A

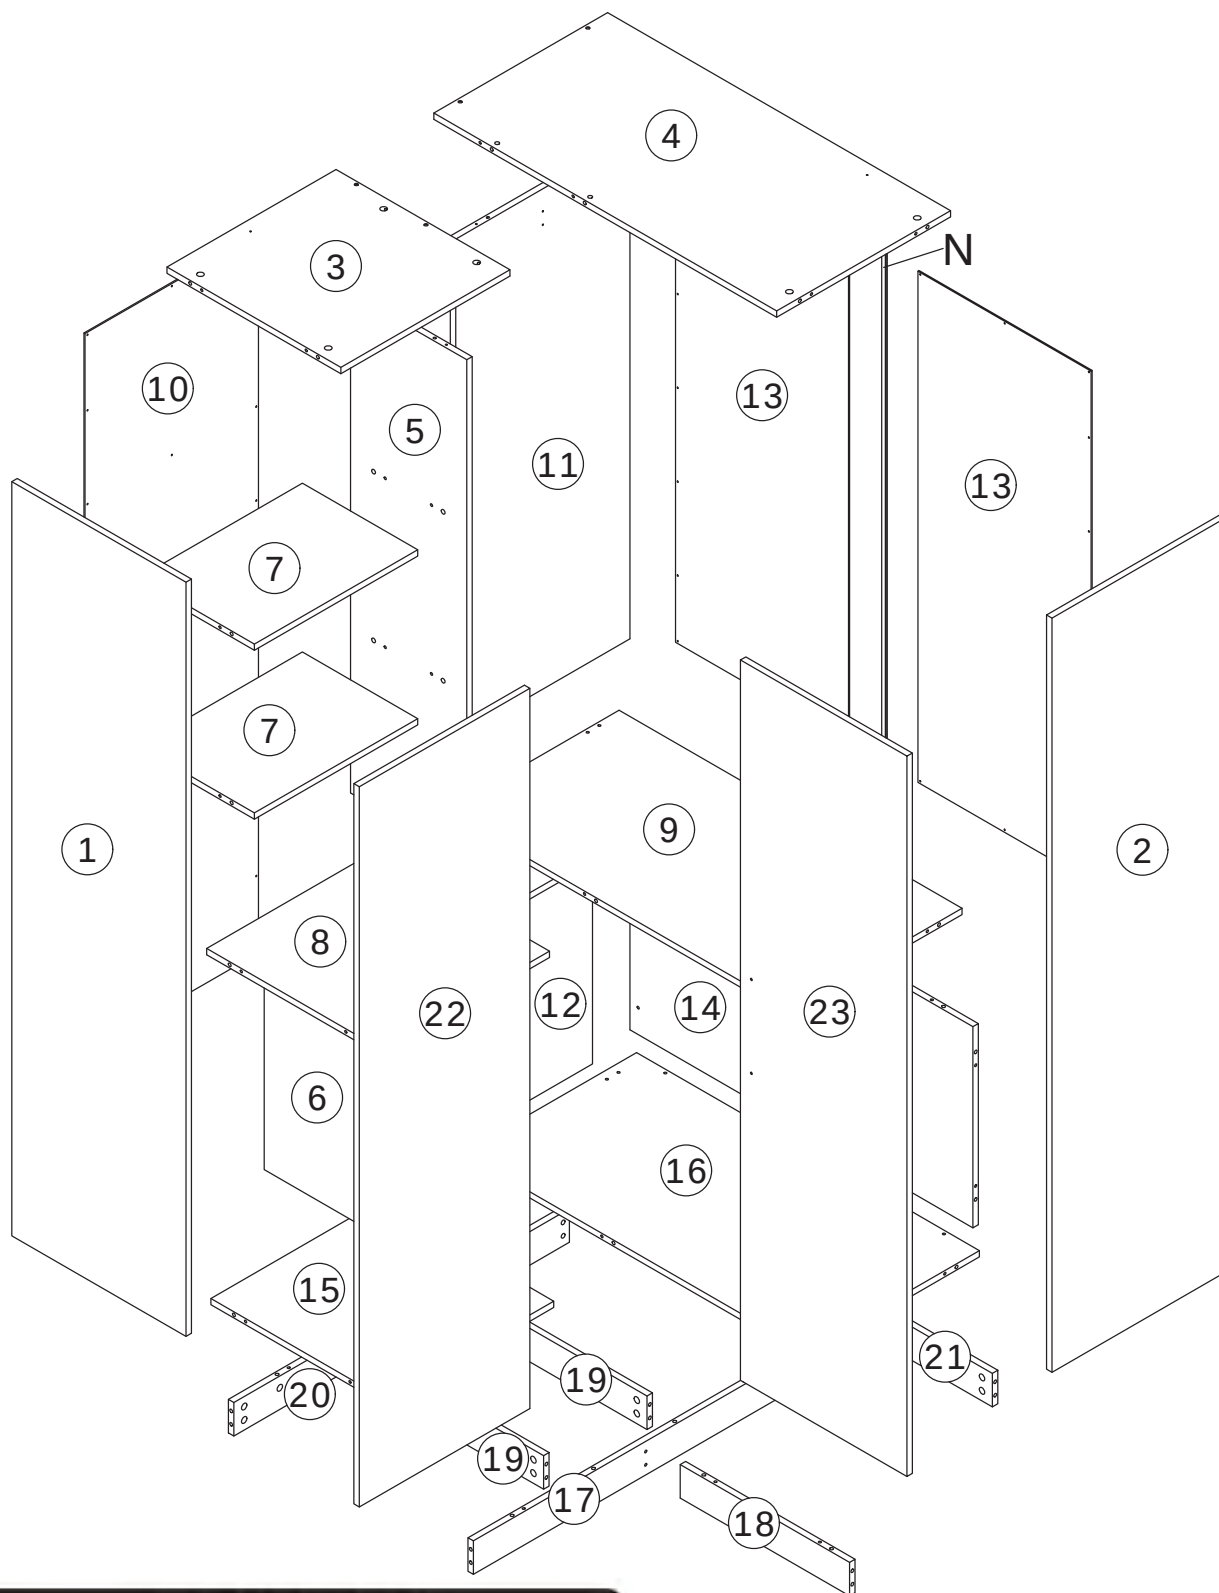 


⚠ WARNING


Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

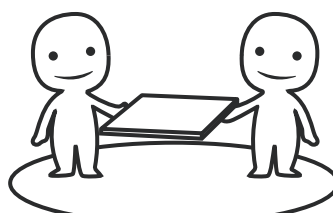


ASSEMBLED BY 2 ADULTS

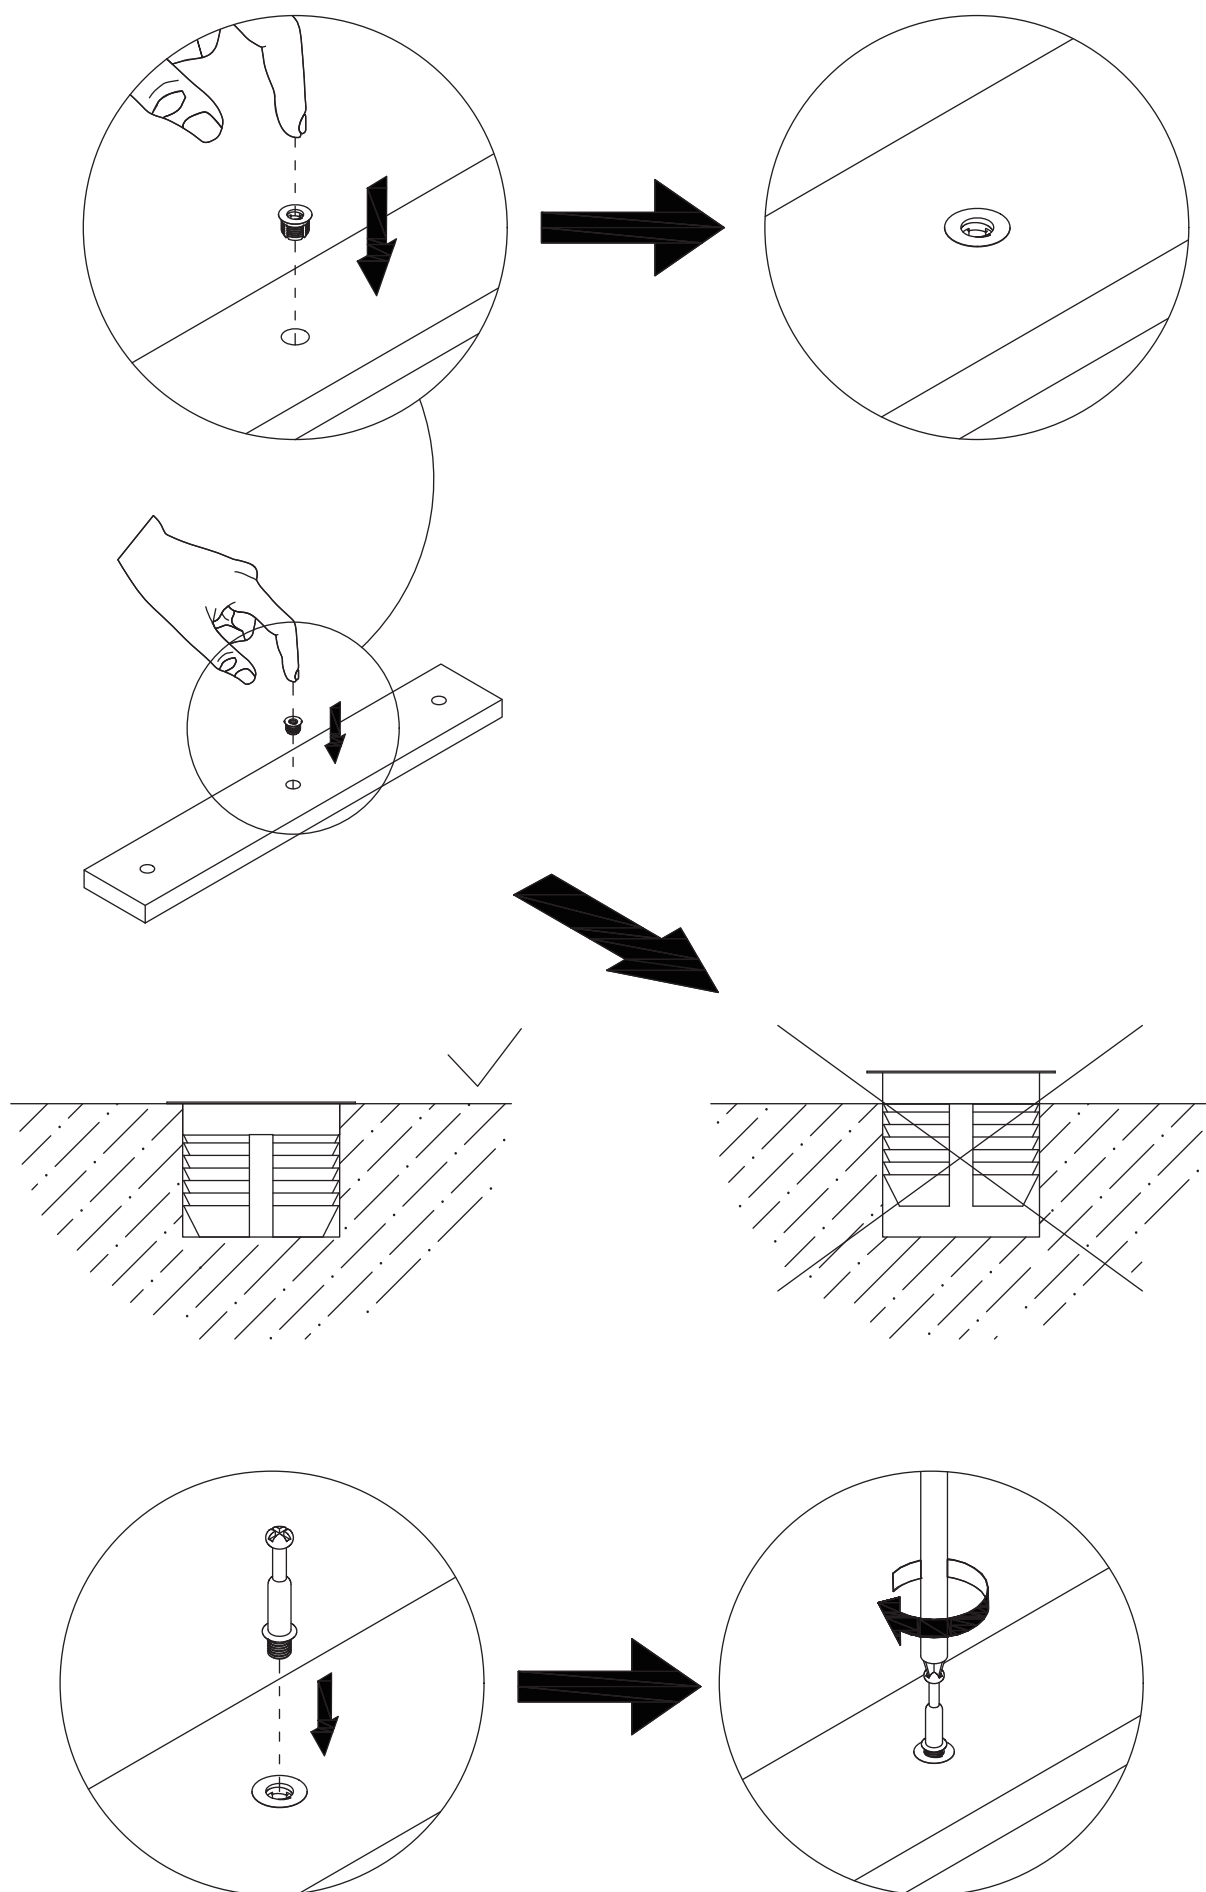 


1


 
R x 2





Install nut (R) onto panel 4.

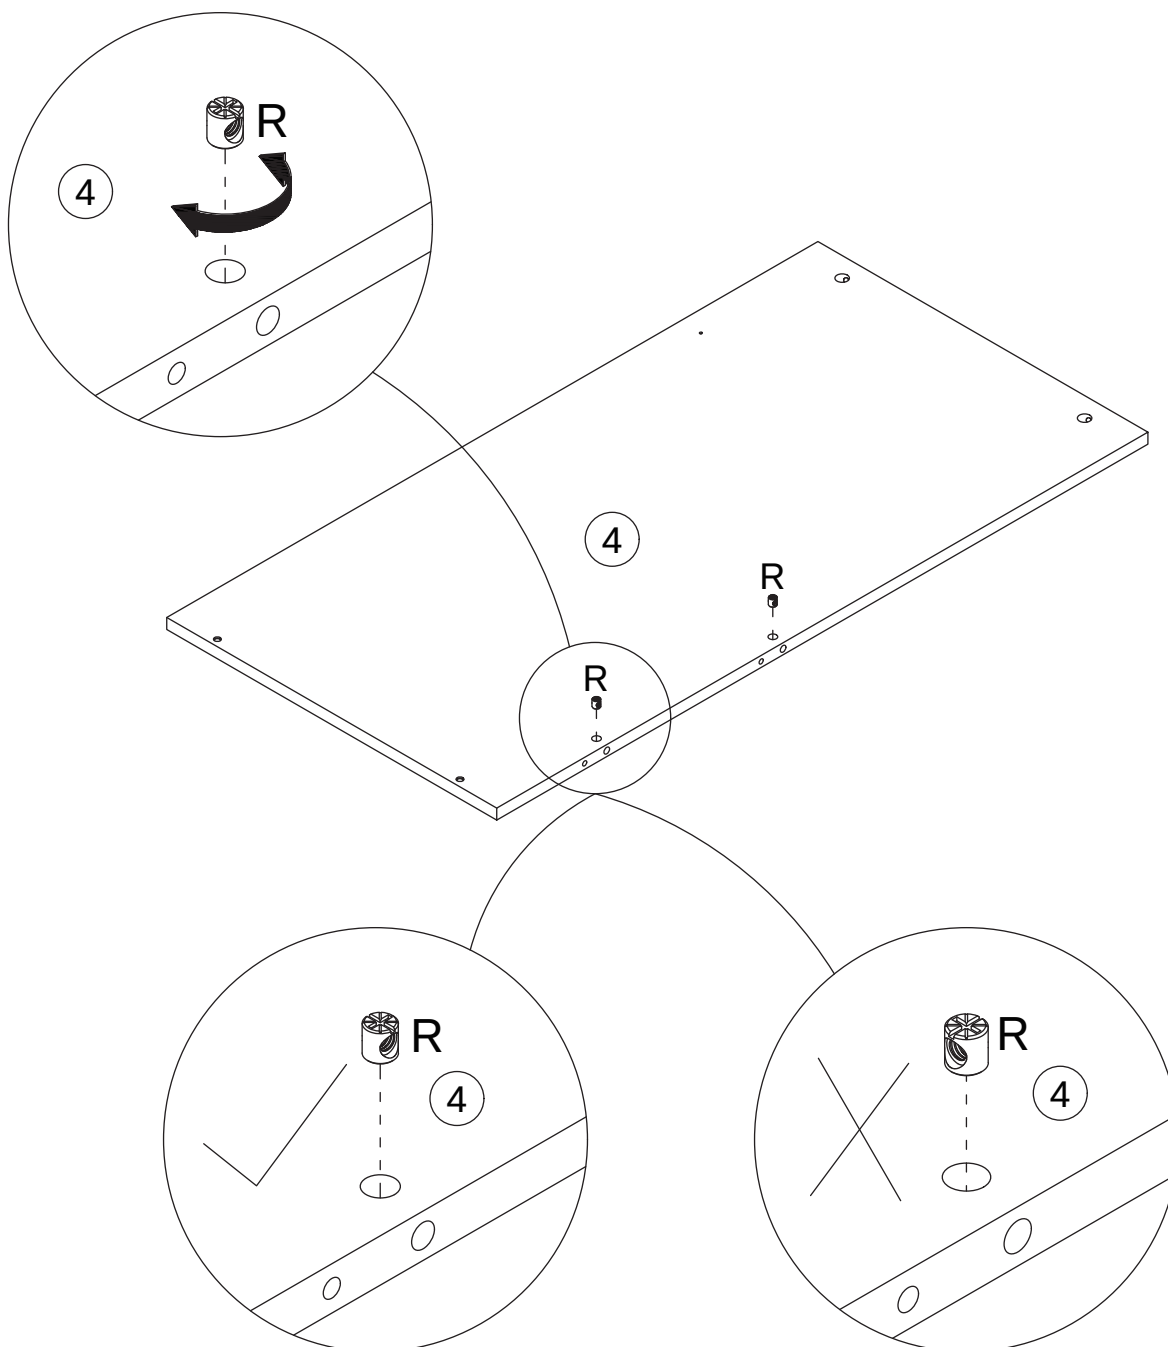 

2

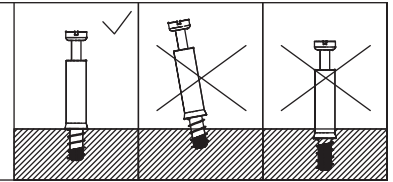  

Screw eccentric rod (S) into panel 4.

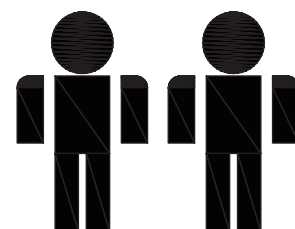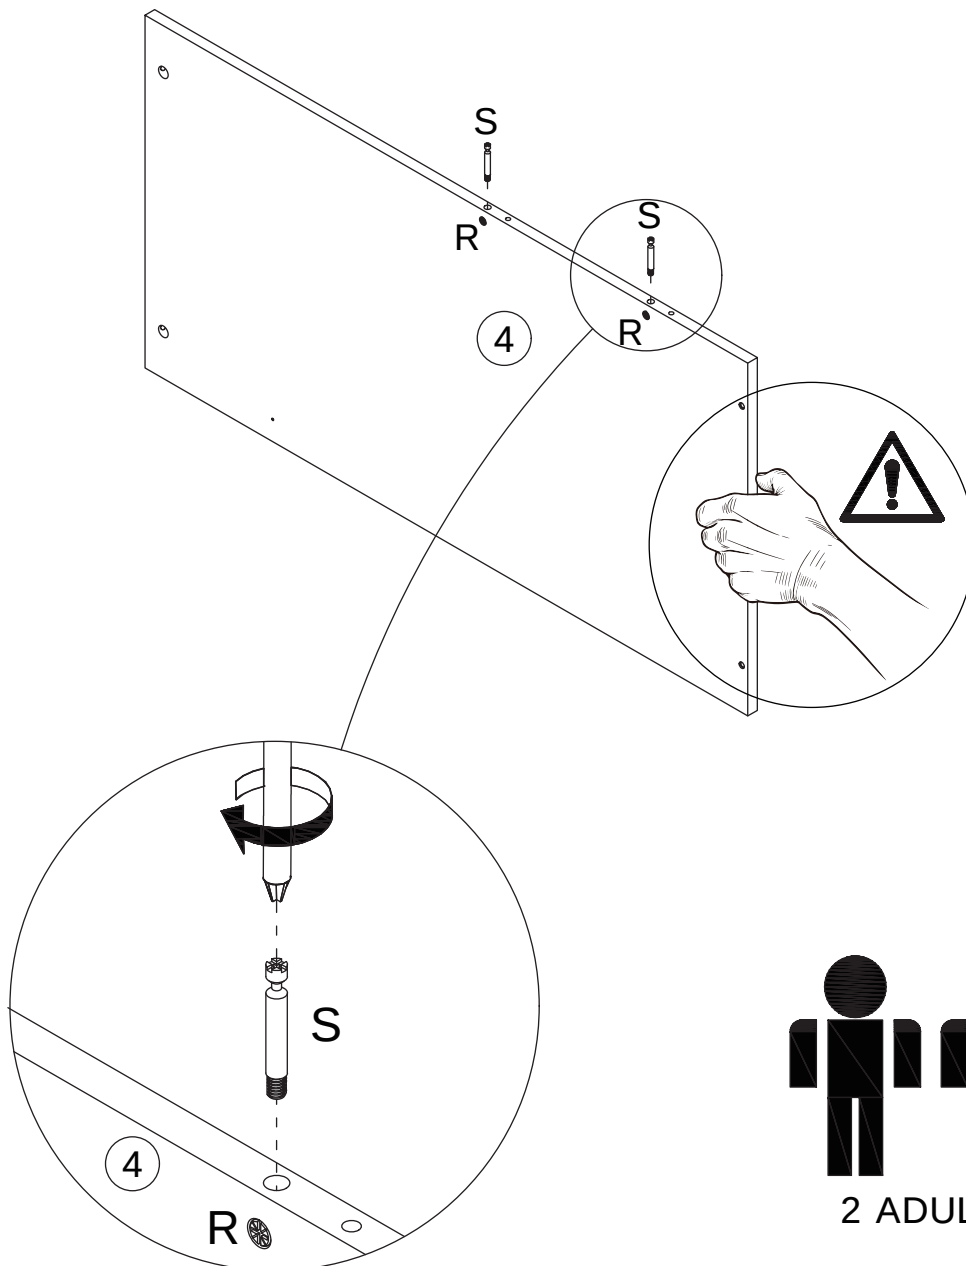  

2 ADULTS


3

A x 2





CRB1595A

 
D x 2



CRF0630A

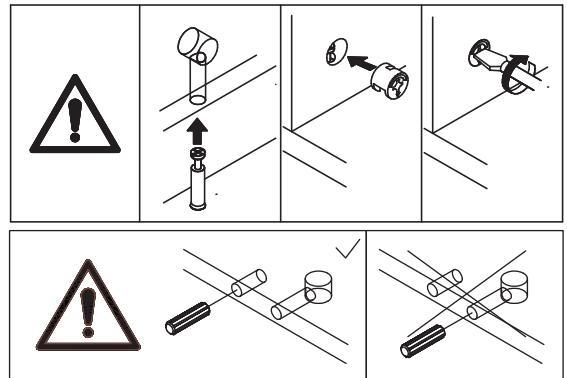  

 
Connect panel 3 to panel 4 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

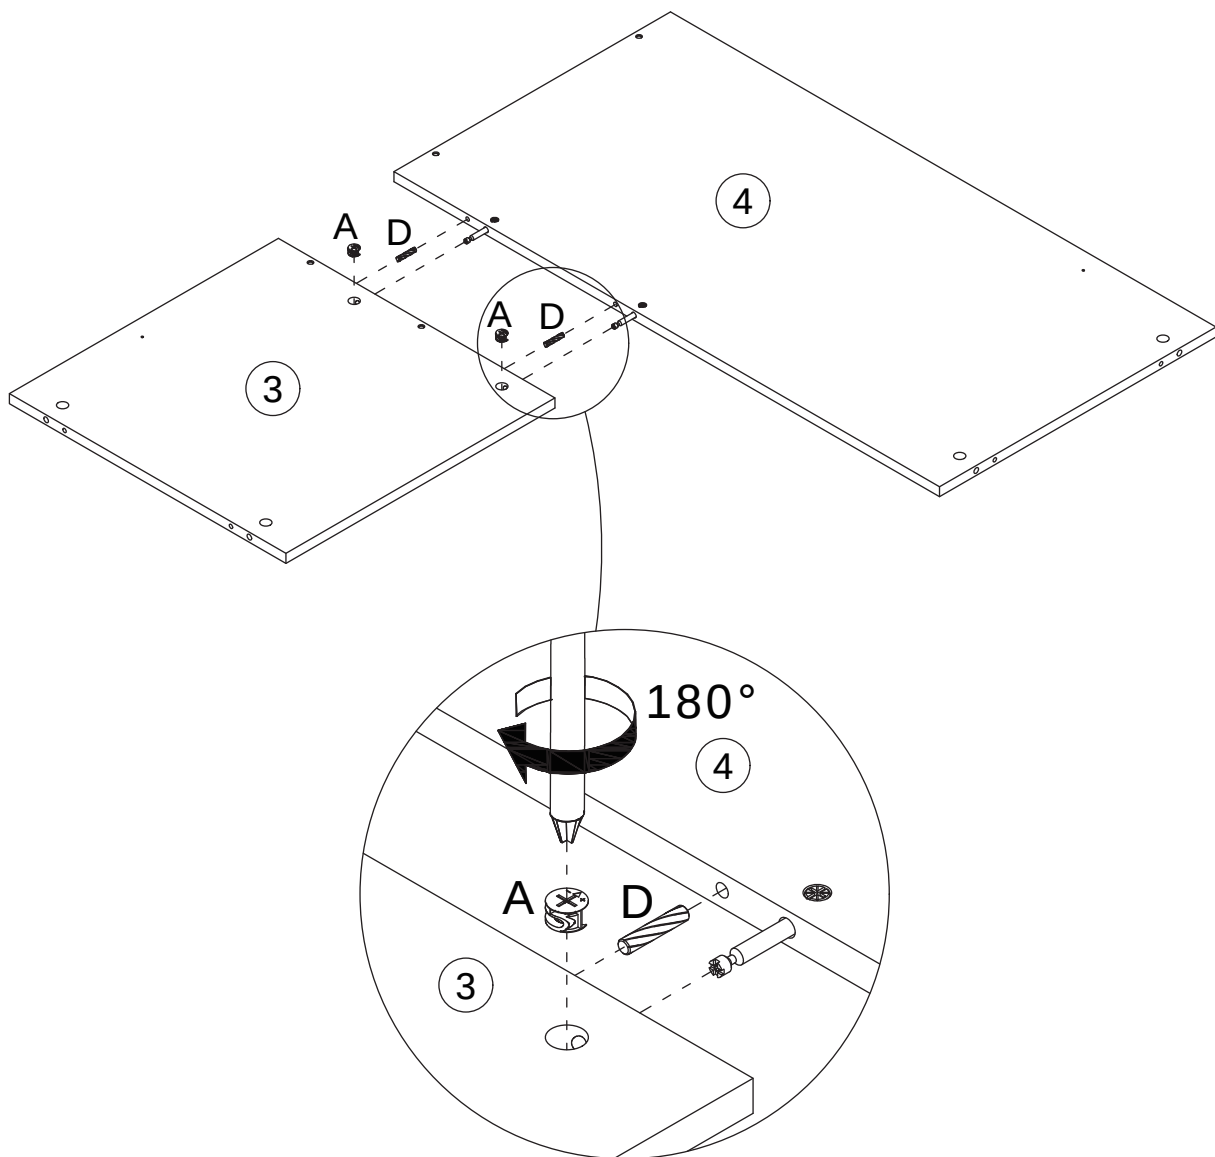




4



 First, install plug (C) to **both sides of** panel 5, then screw self-tapping screw (B) into panel 5.

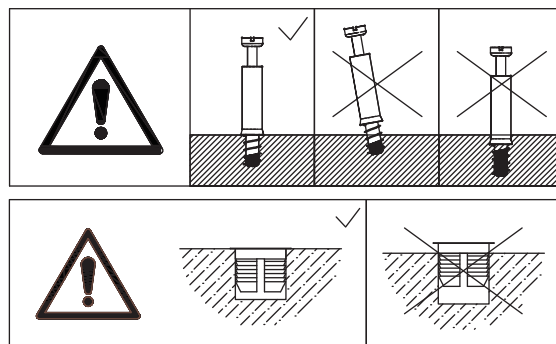



Flip to the other side

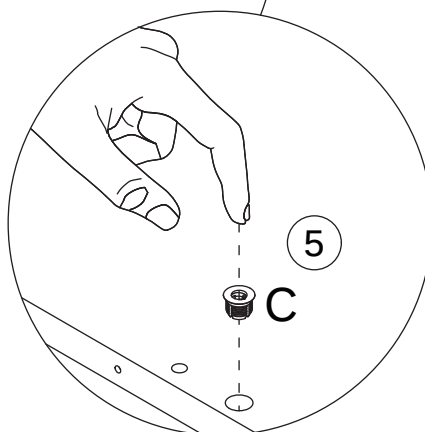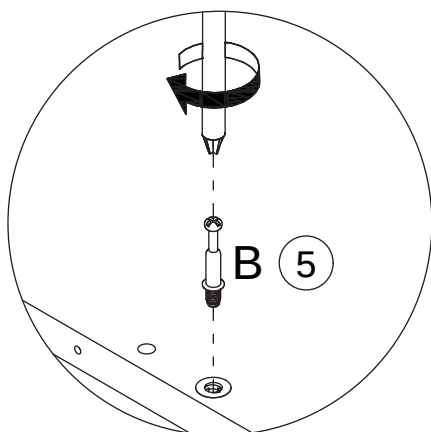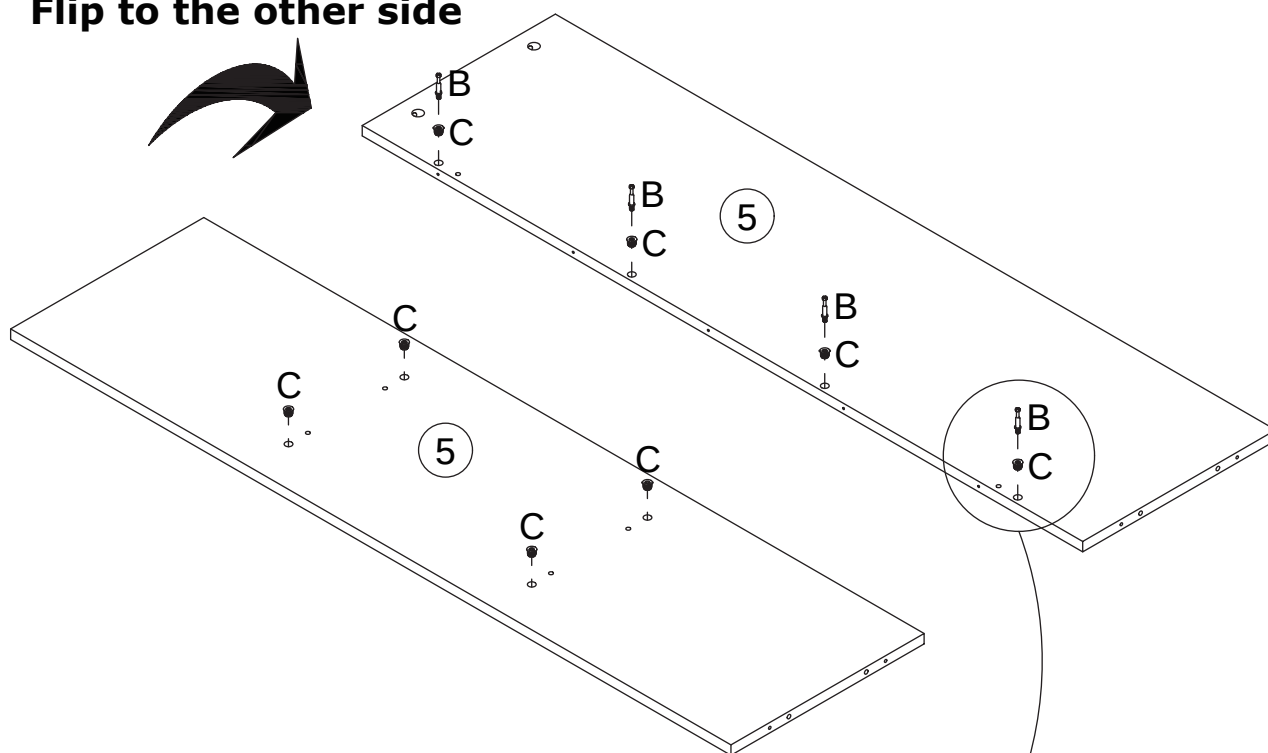   



5

A x 4 CRB1595A	D x 2 CRF0630A	L x 2 CRD3514A	Q x 1	
------------------------------	------------------------------	------------------------------	--------------	--

  
Connect panel 5 to panel 11 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.
Secure part (Q) to panel 11 using screw (L).

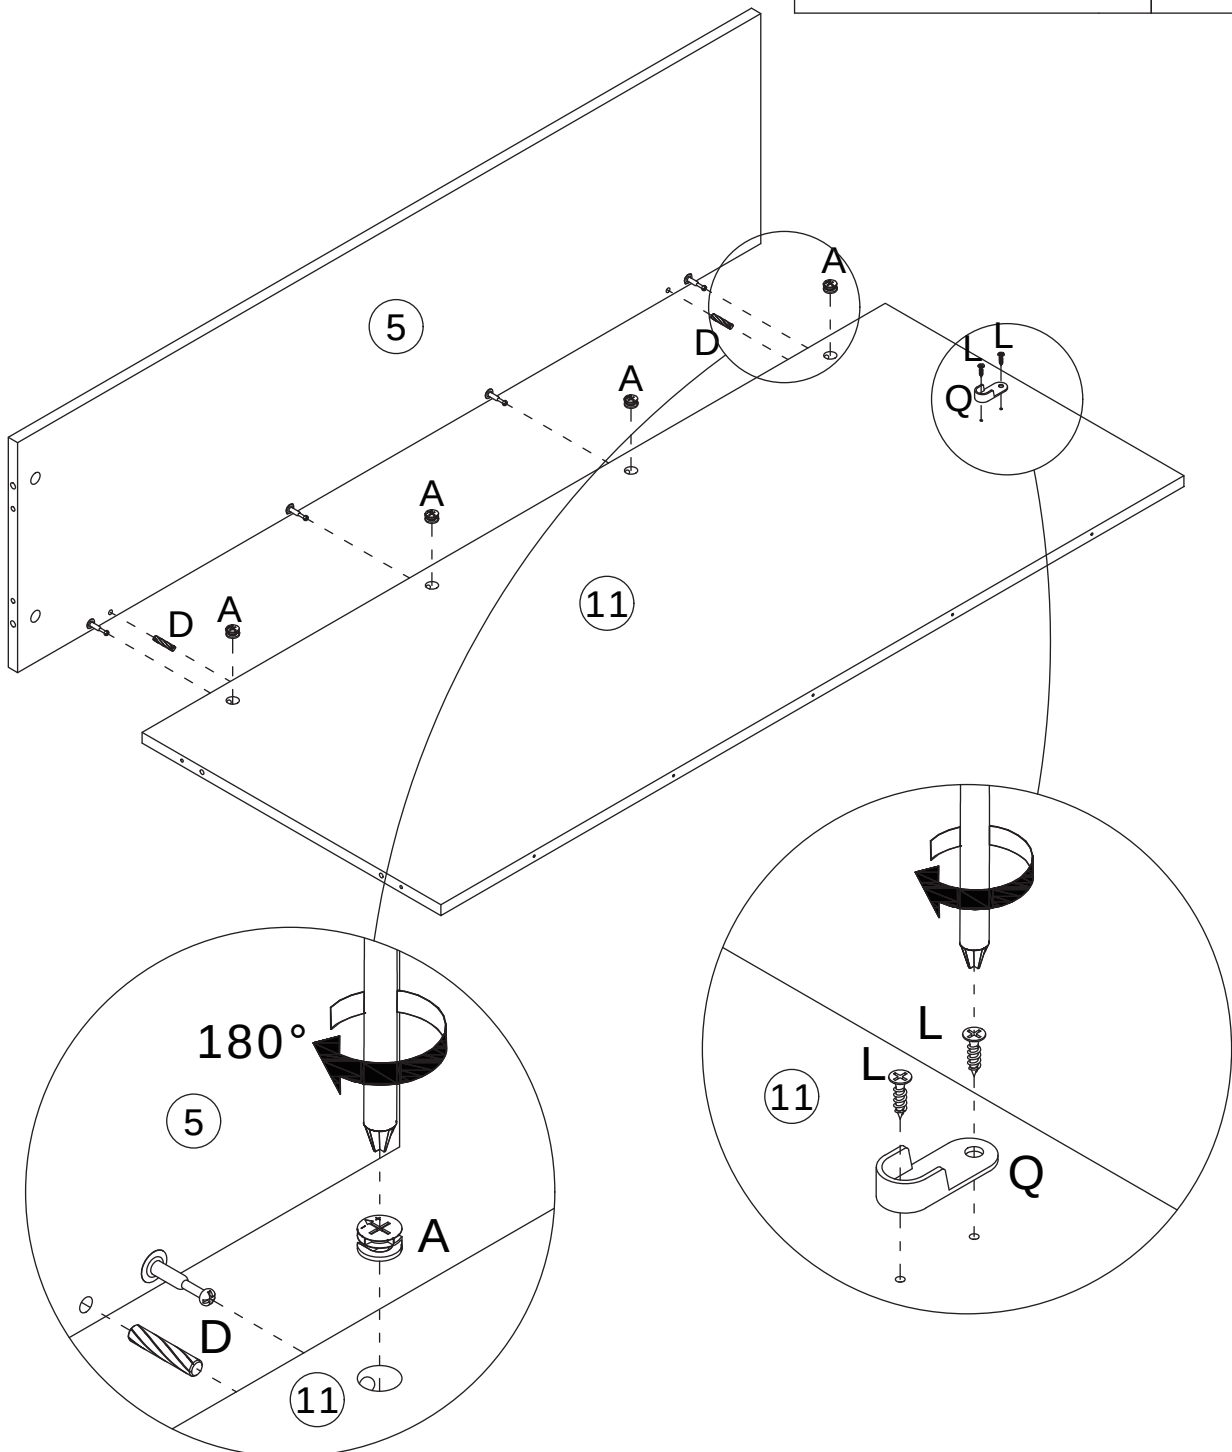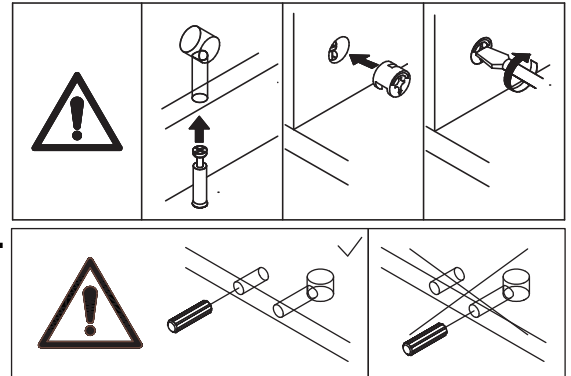

6

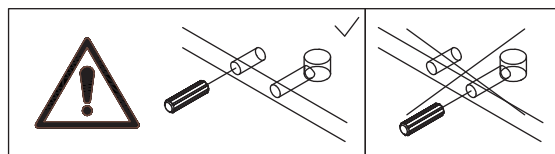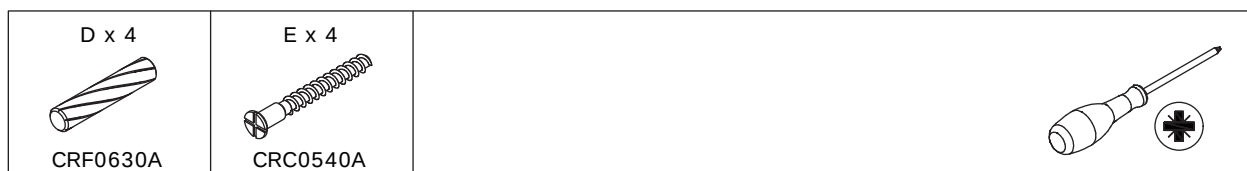  


 Connect panels 3 and 4 to panels 5 and 11 using wooden dowel (D), and secure them with screw (E).

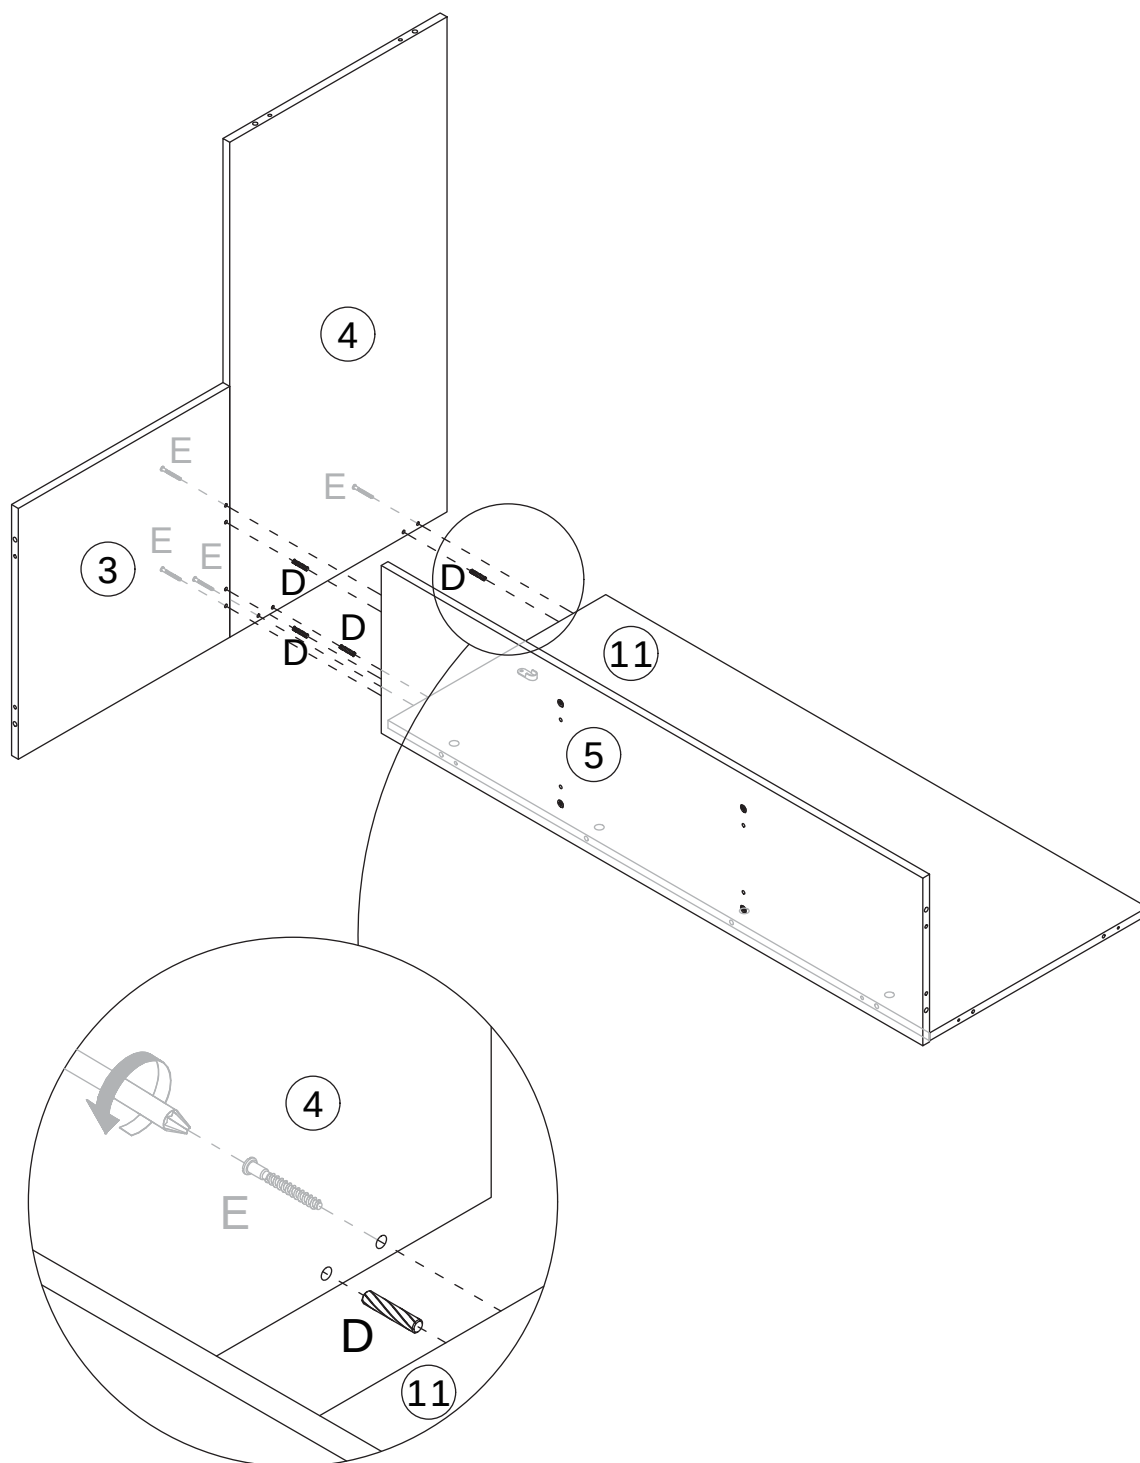


7


 
R x 2





Install nut (R) onto panel 9.

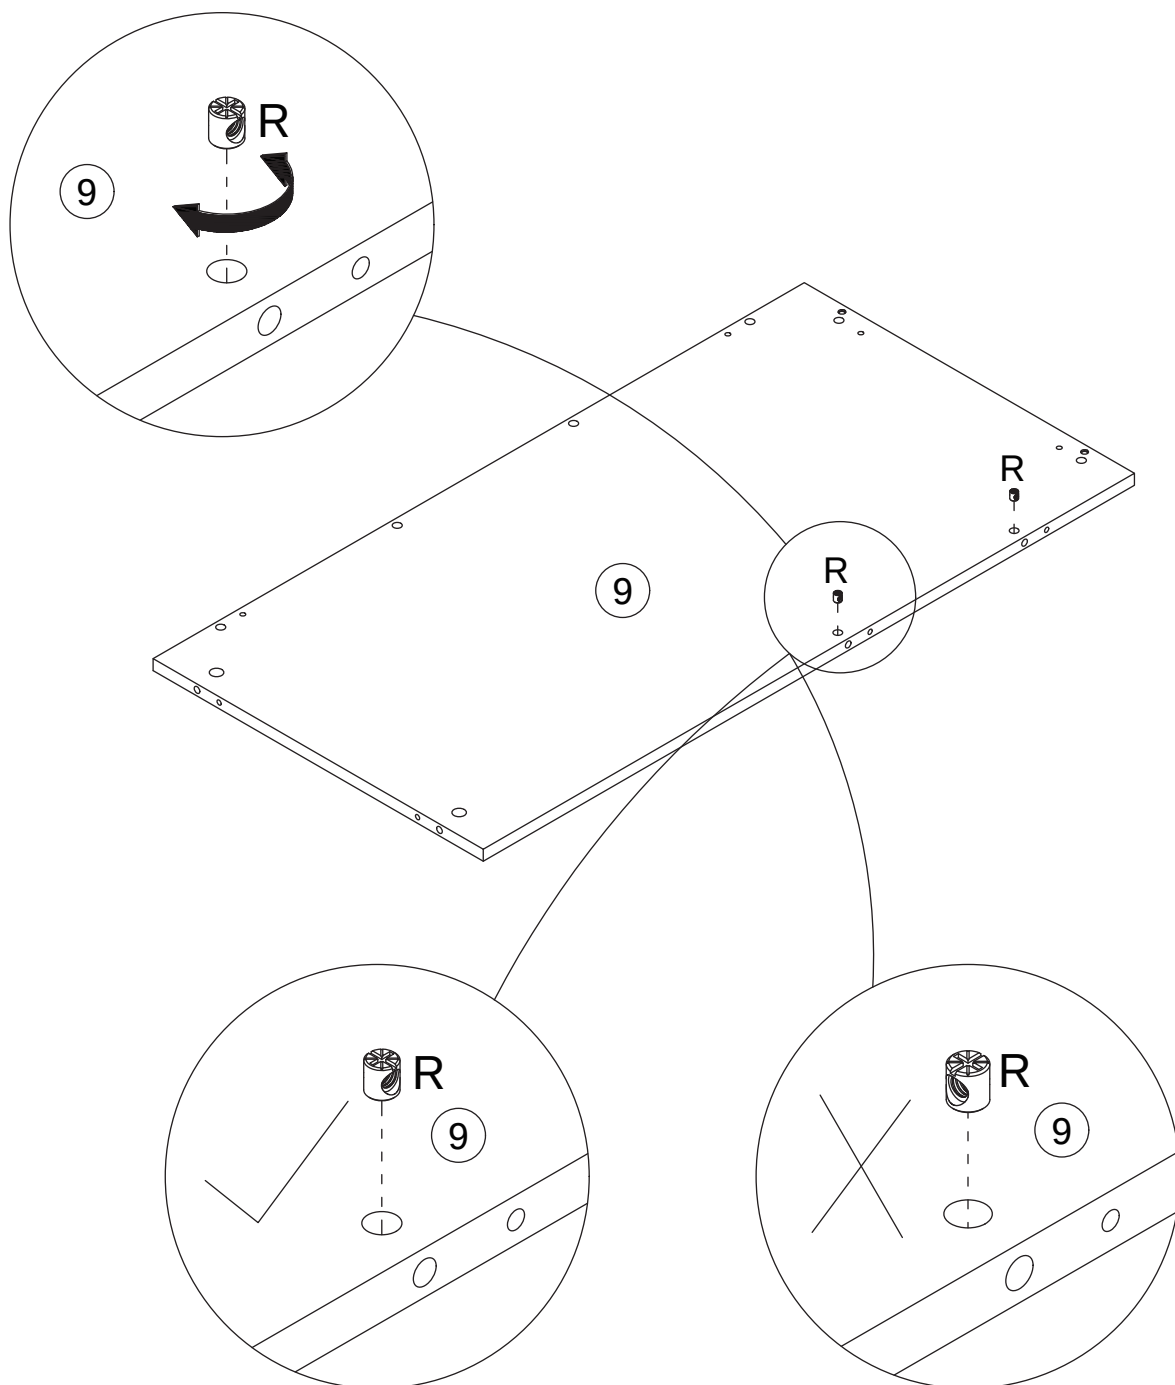 

8

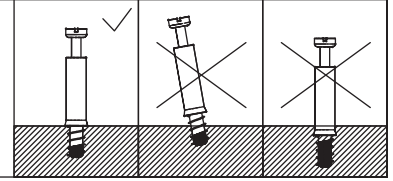  


Screw eccentric rod (S) into panel 9.

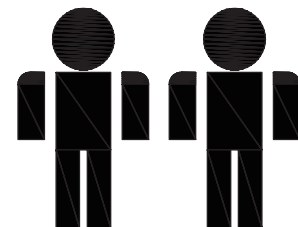 
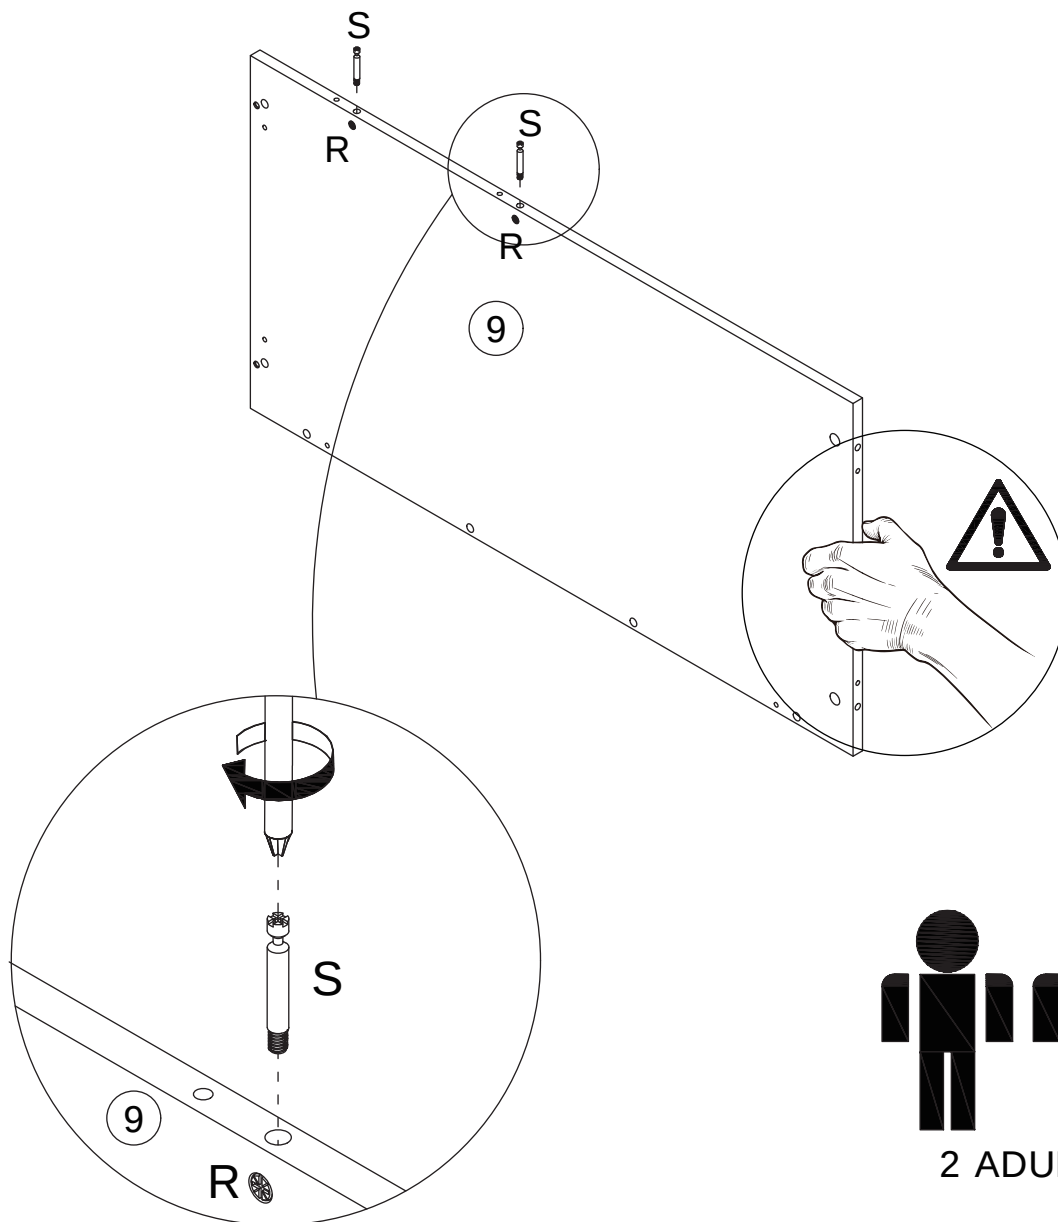 


2 ADULTS

 9

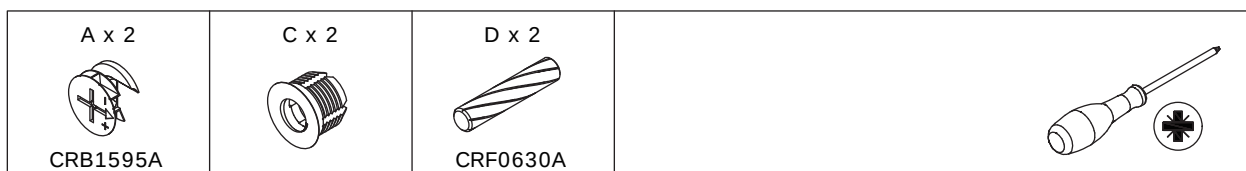


  Install plug (C) to panel 8.
Connect panel 8 to panel 9 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

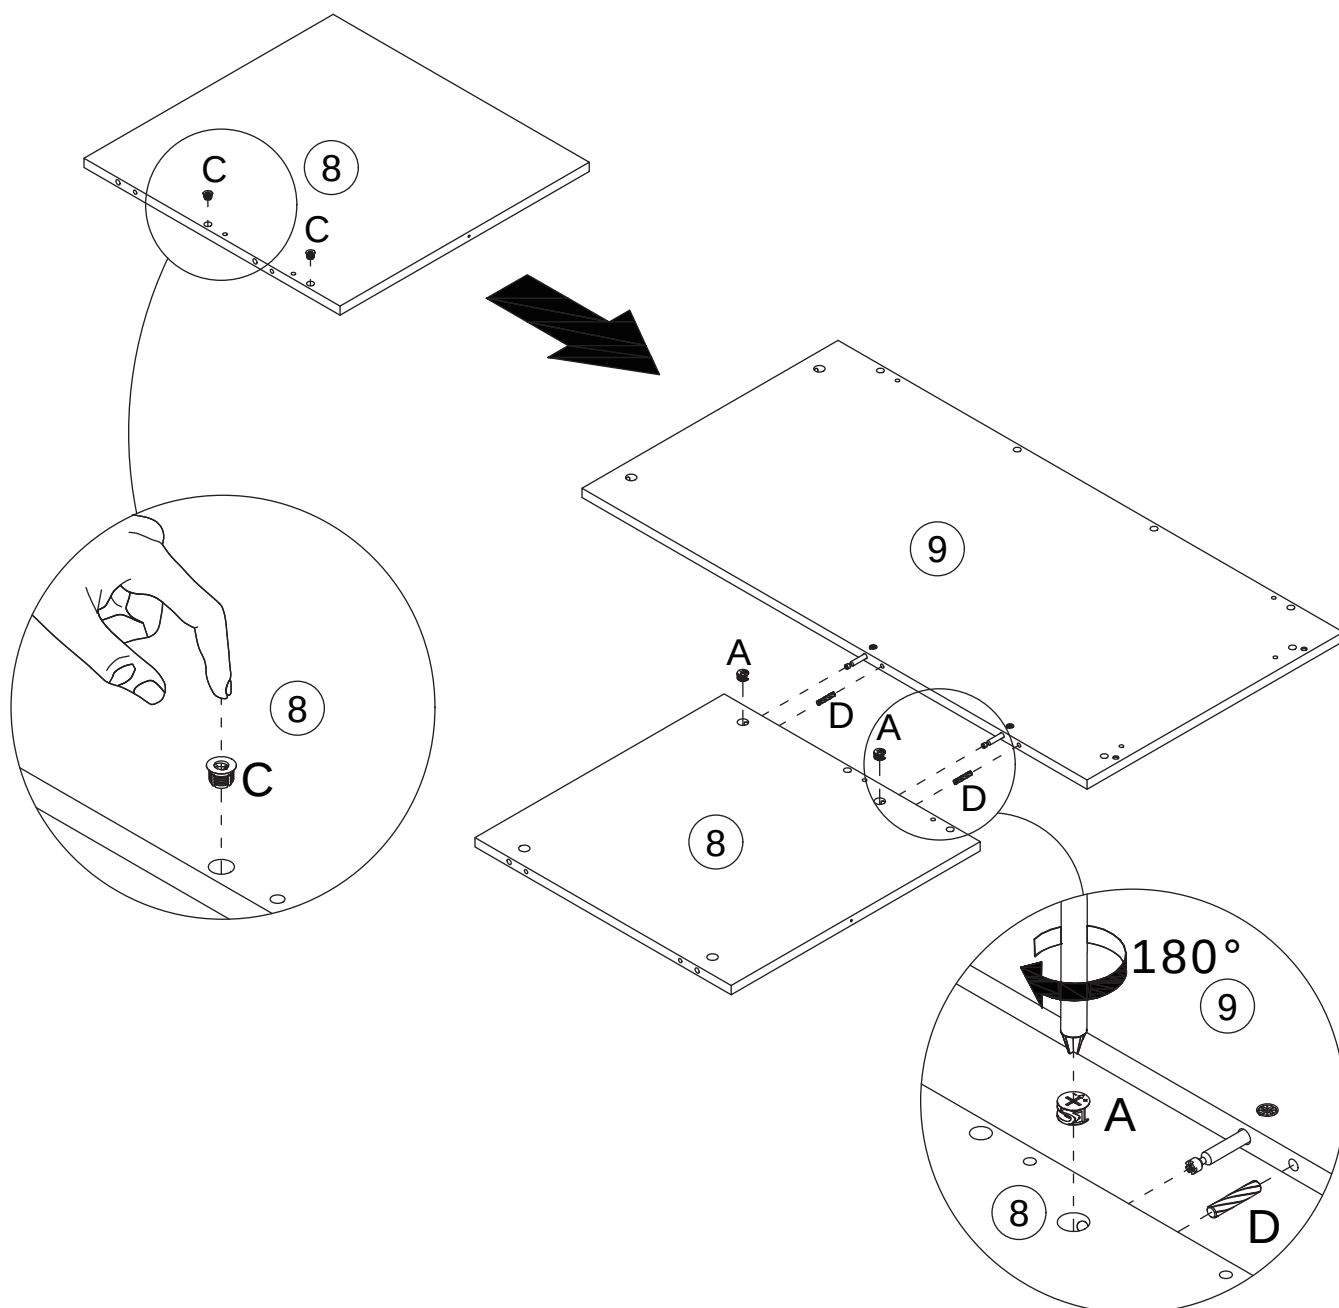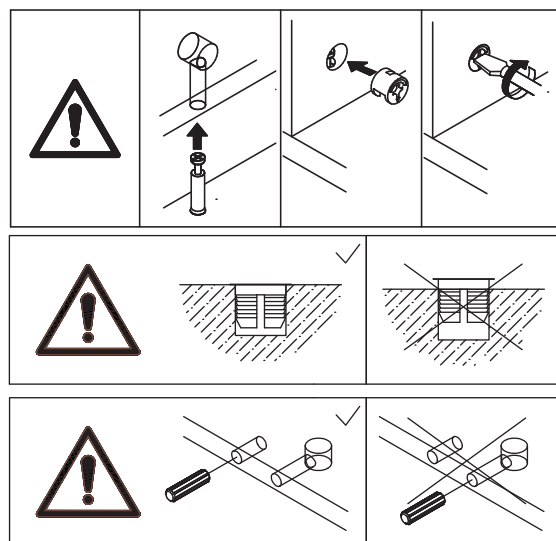


10

 B x 10








CRA0635B

 
C x 10



     
First, install plug (C) to panels 6, 8, and 9, then screw self-tapping screw (B) into panels 6, 8, and 9.

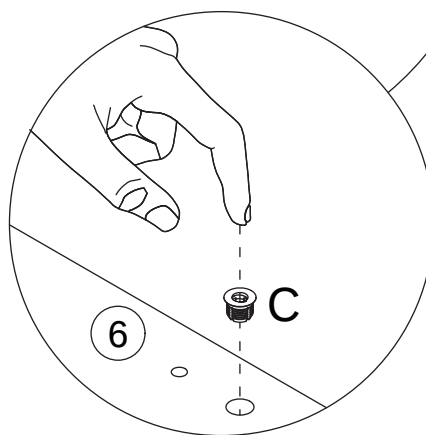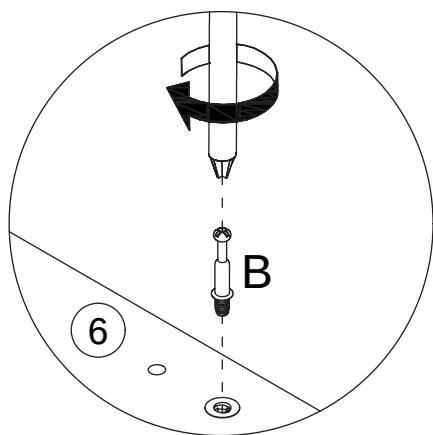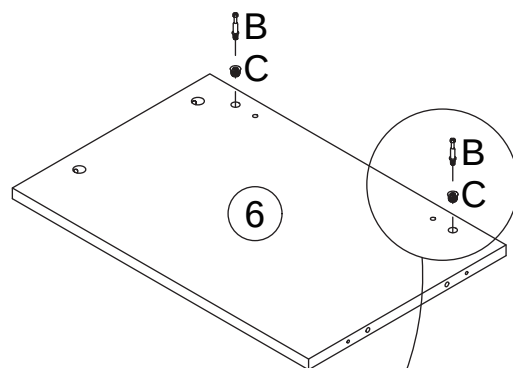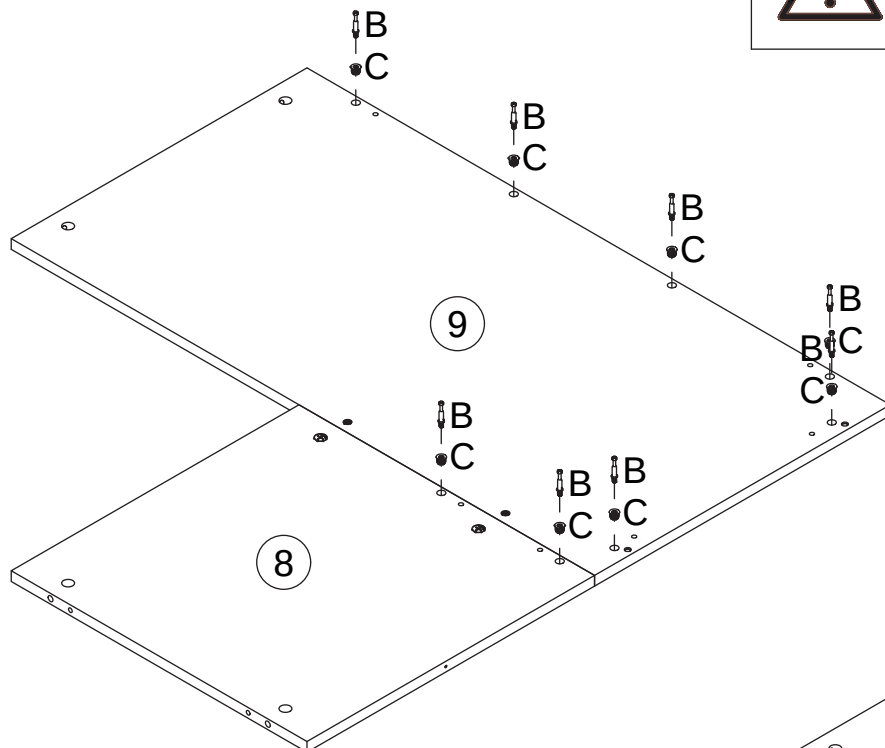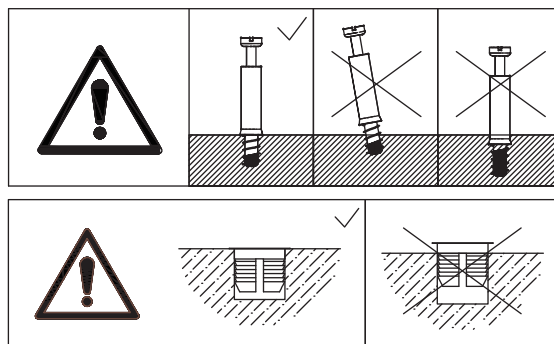

11

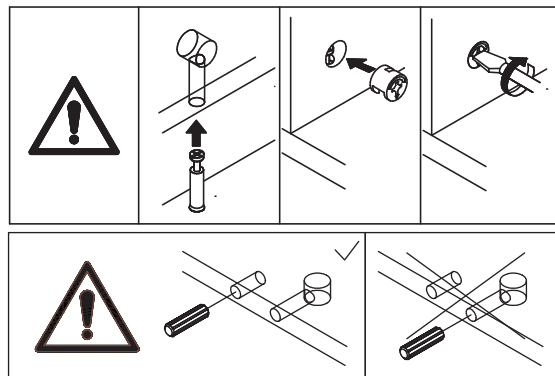 


 
Connect panel 6 to panel 12 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

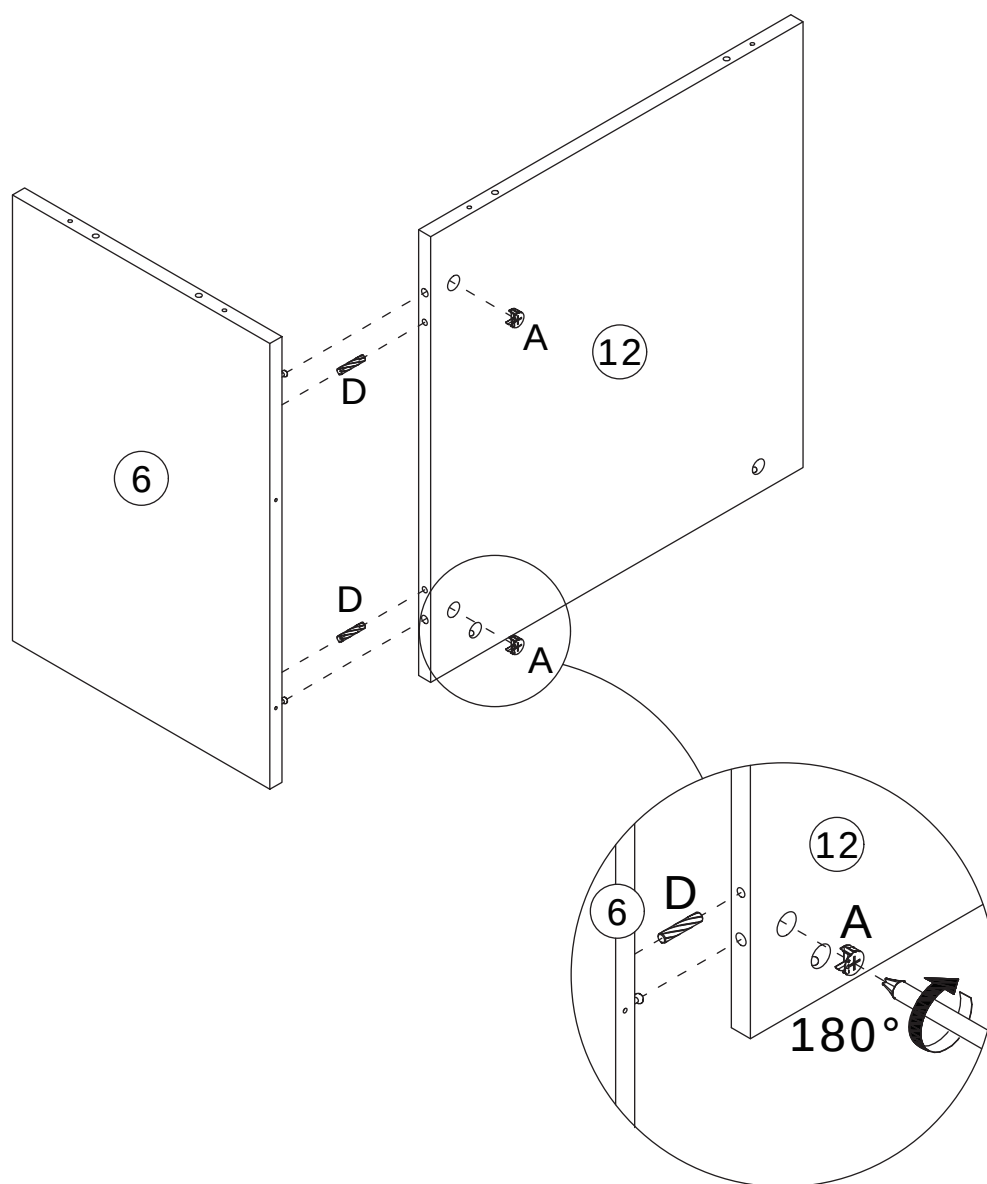



12



  
Connect panels 6 and 12 to panels 8 and 9 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

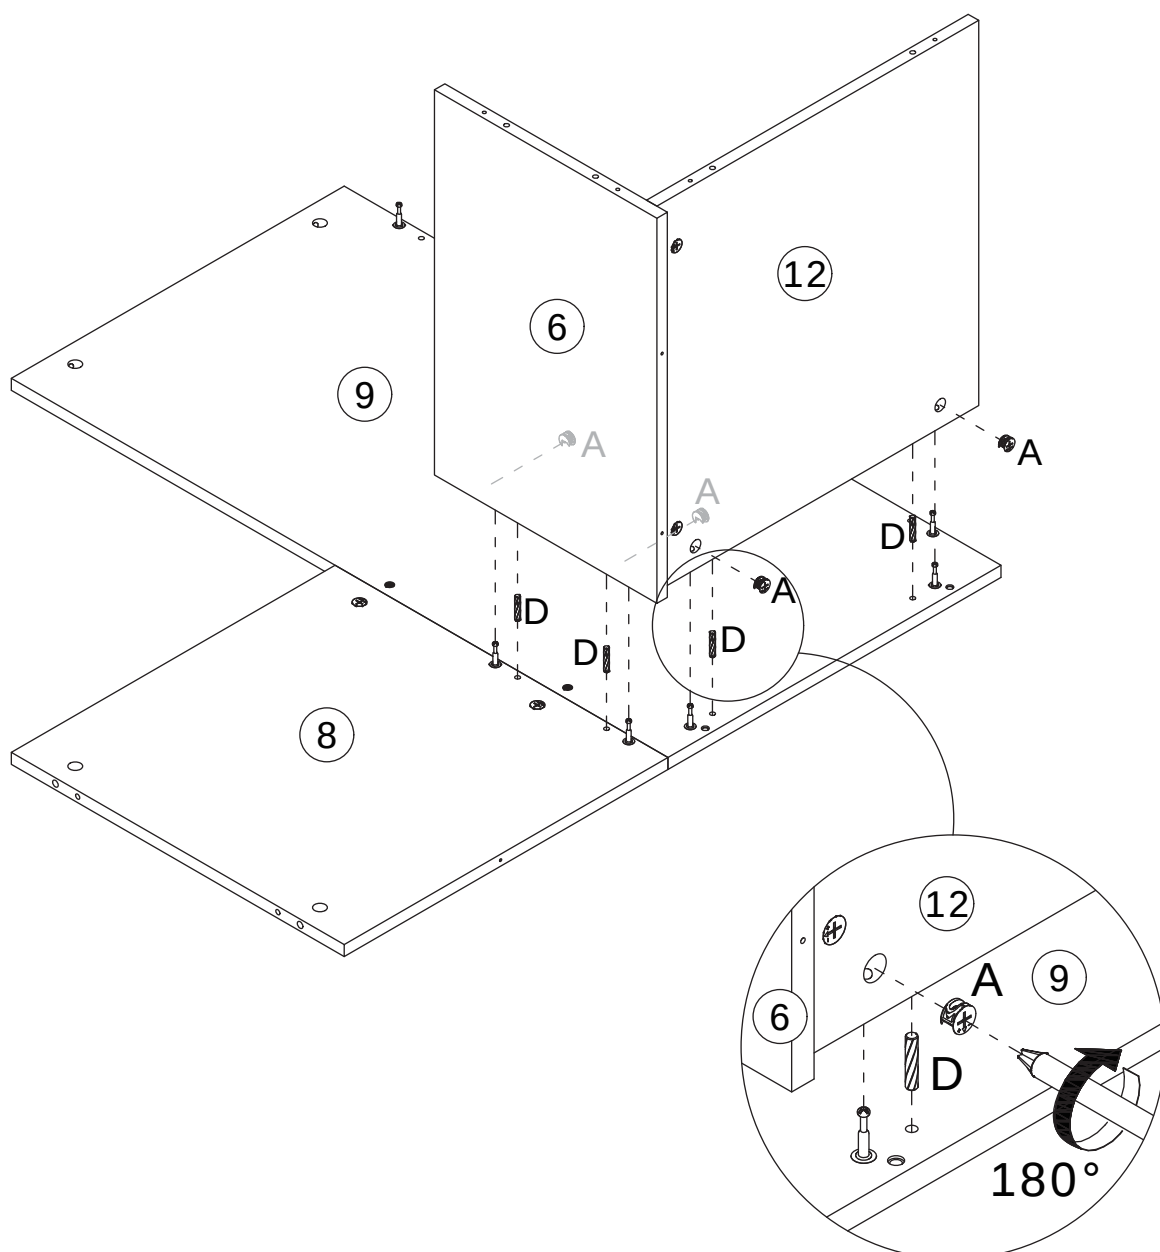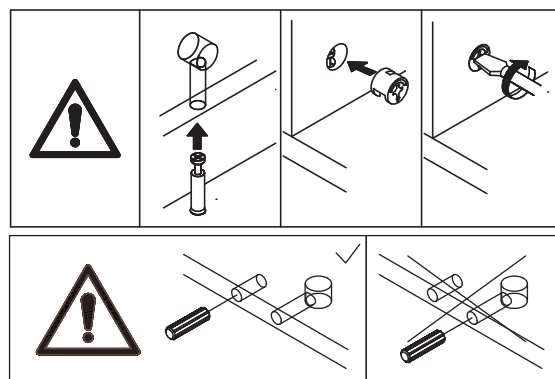



13

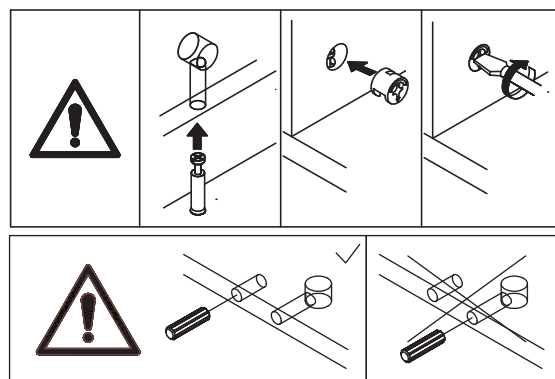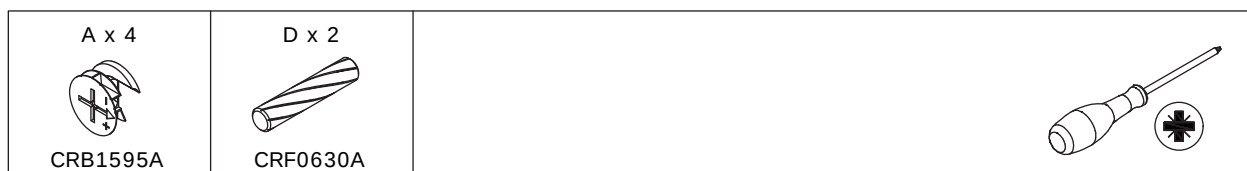  

 
Connect panel 14 to panel 9 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

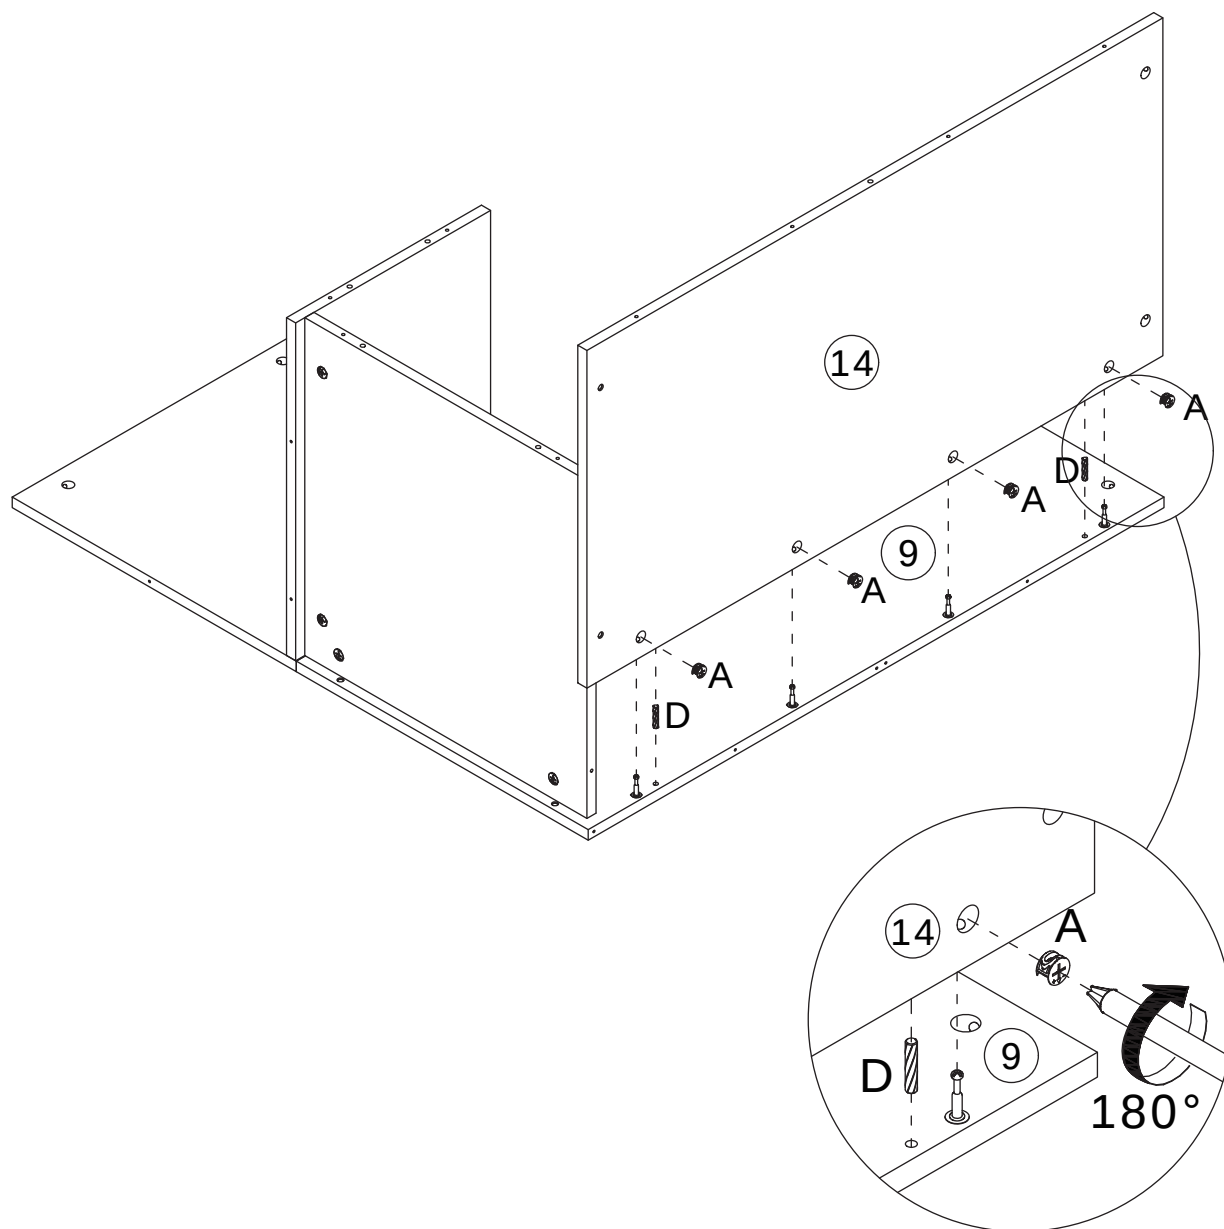




14

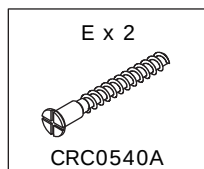  

 
Secure panel 14 to panel 12 using screw (E).

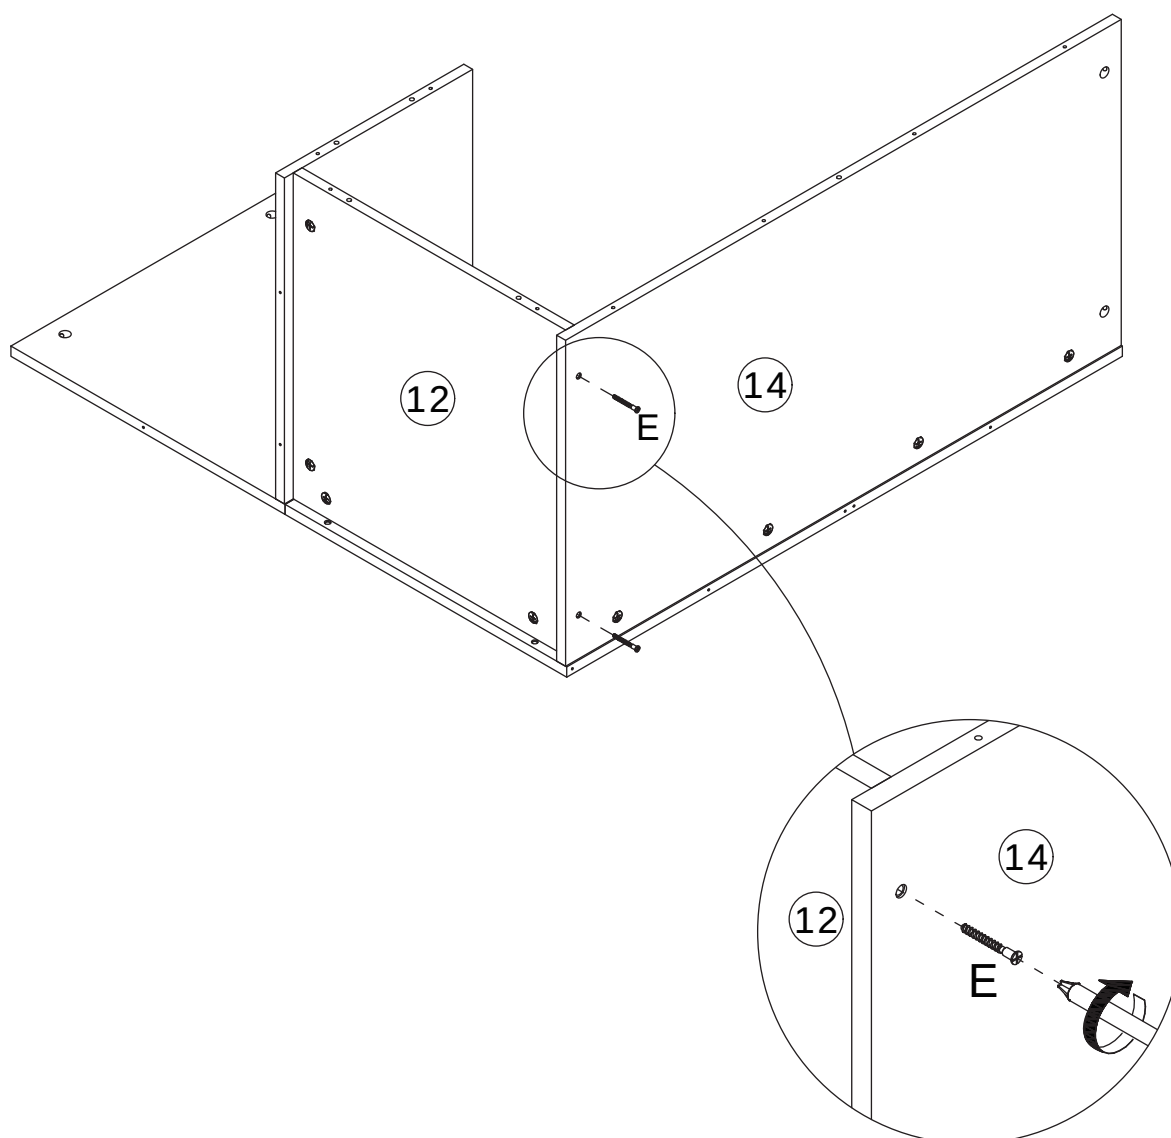


15

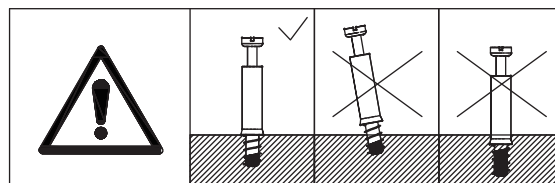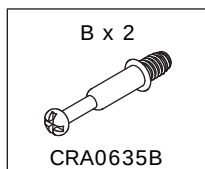   


 
Turn the cabinet upside down and screw self-tapping screw (B) into panel 8.

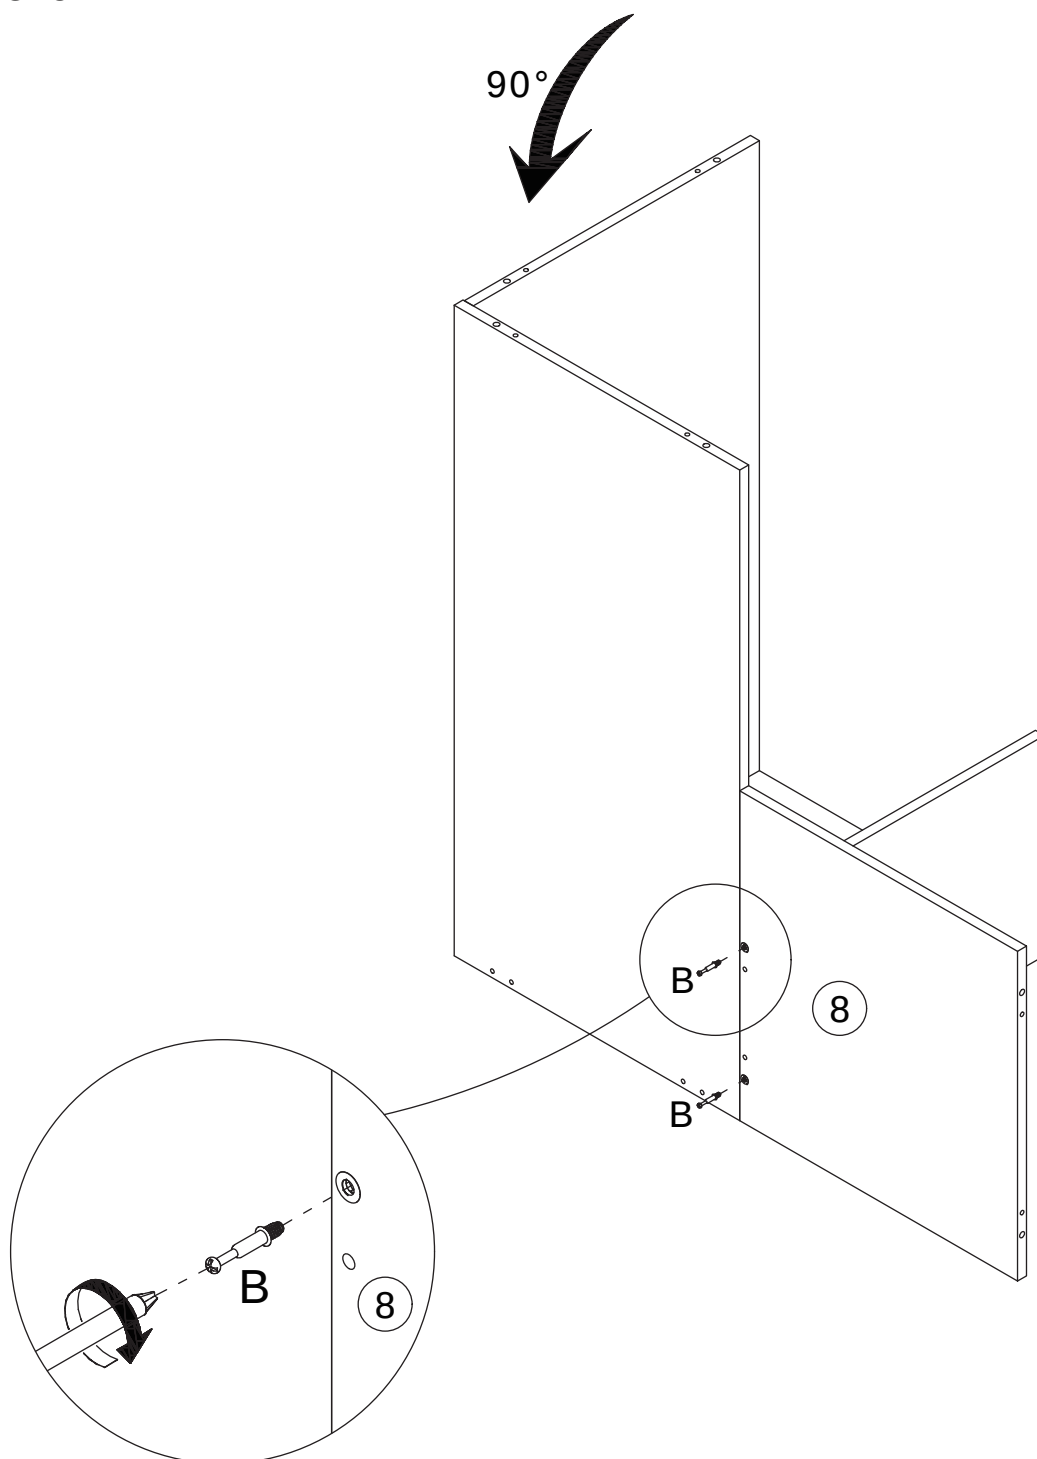

16

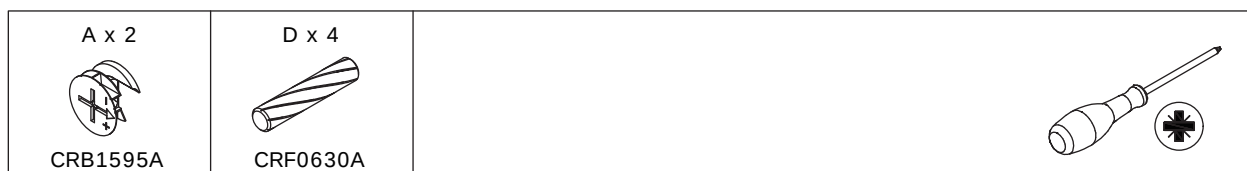 


  Connect panels 8 and 9 to panels 5 and 11 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

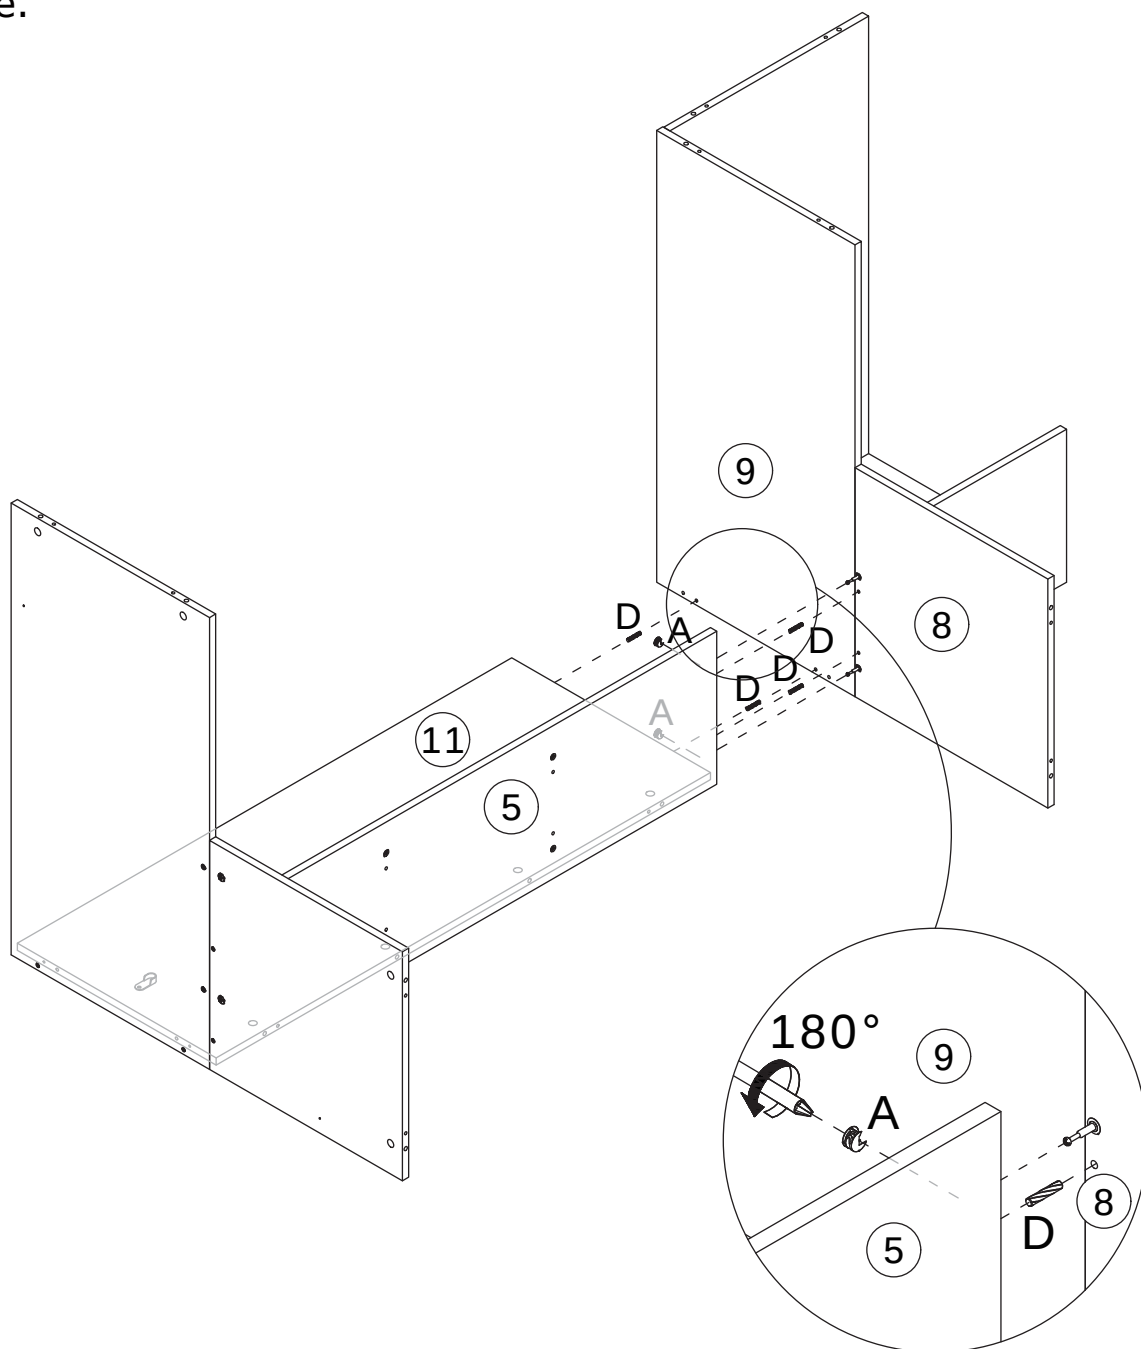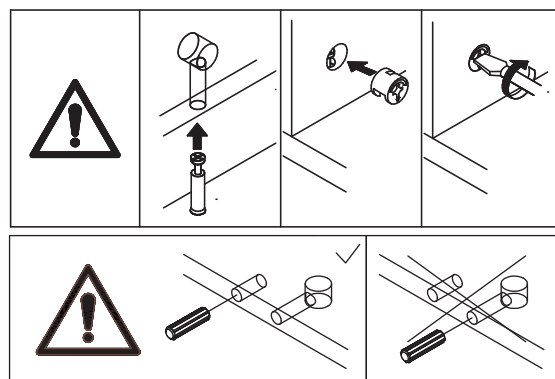


17



 
R x 2





Install nut (R) onto panel 16.

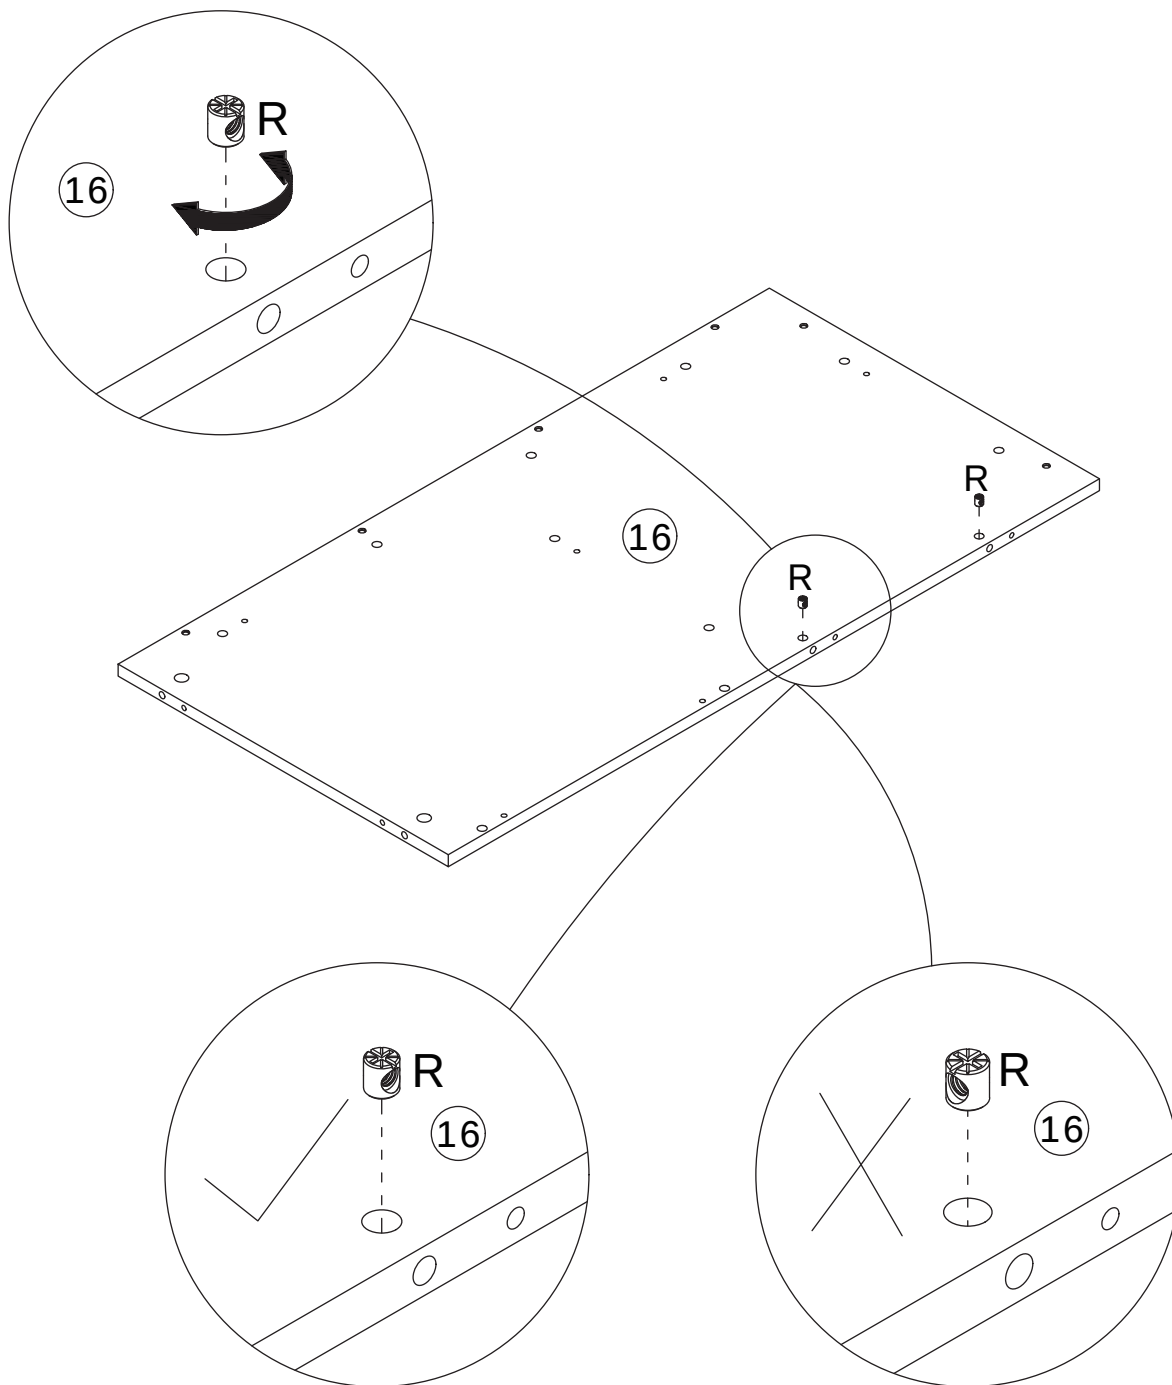 



18

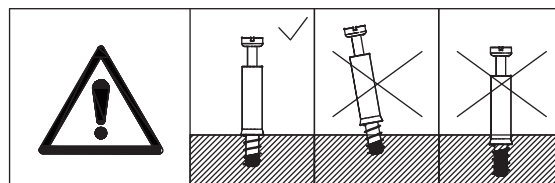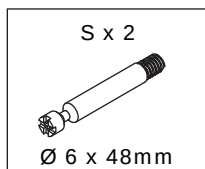   


Screw eccentric rod (S) into panel 16.

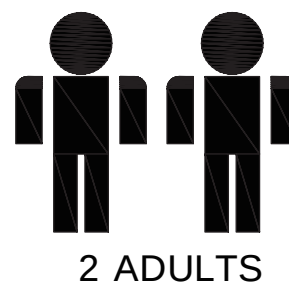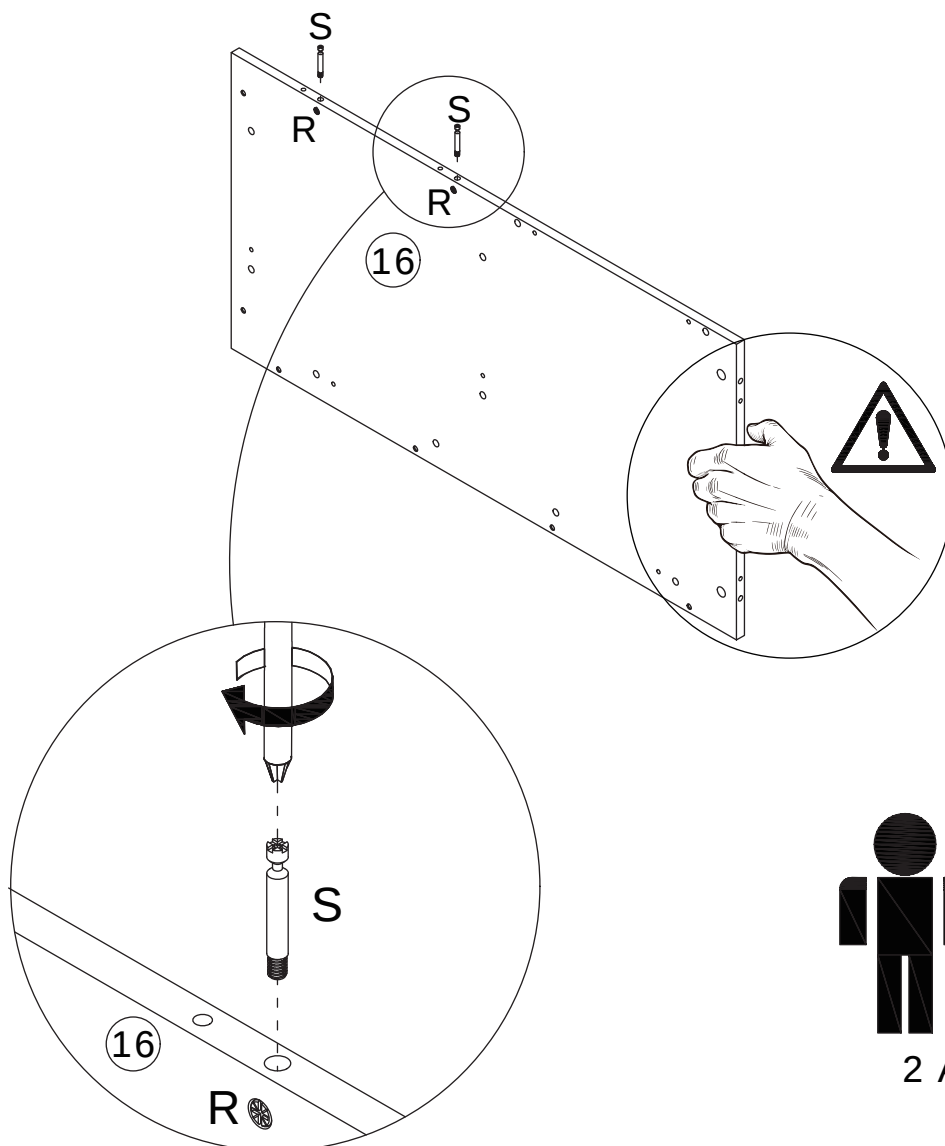  

19

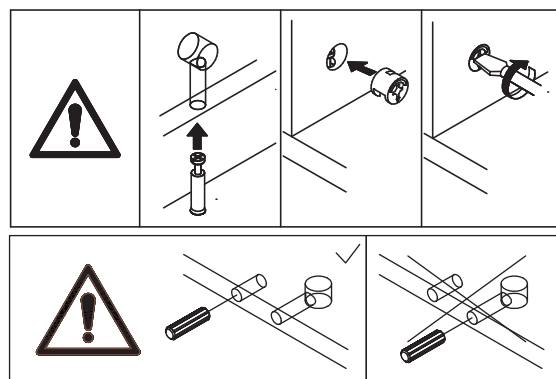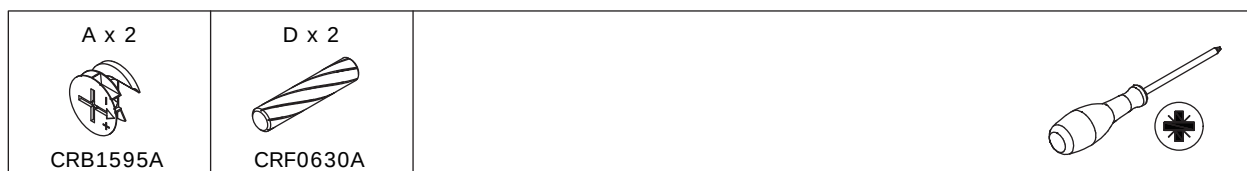  


 Connect panel 15 to panel 16 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

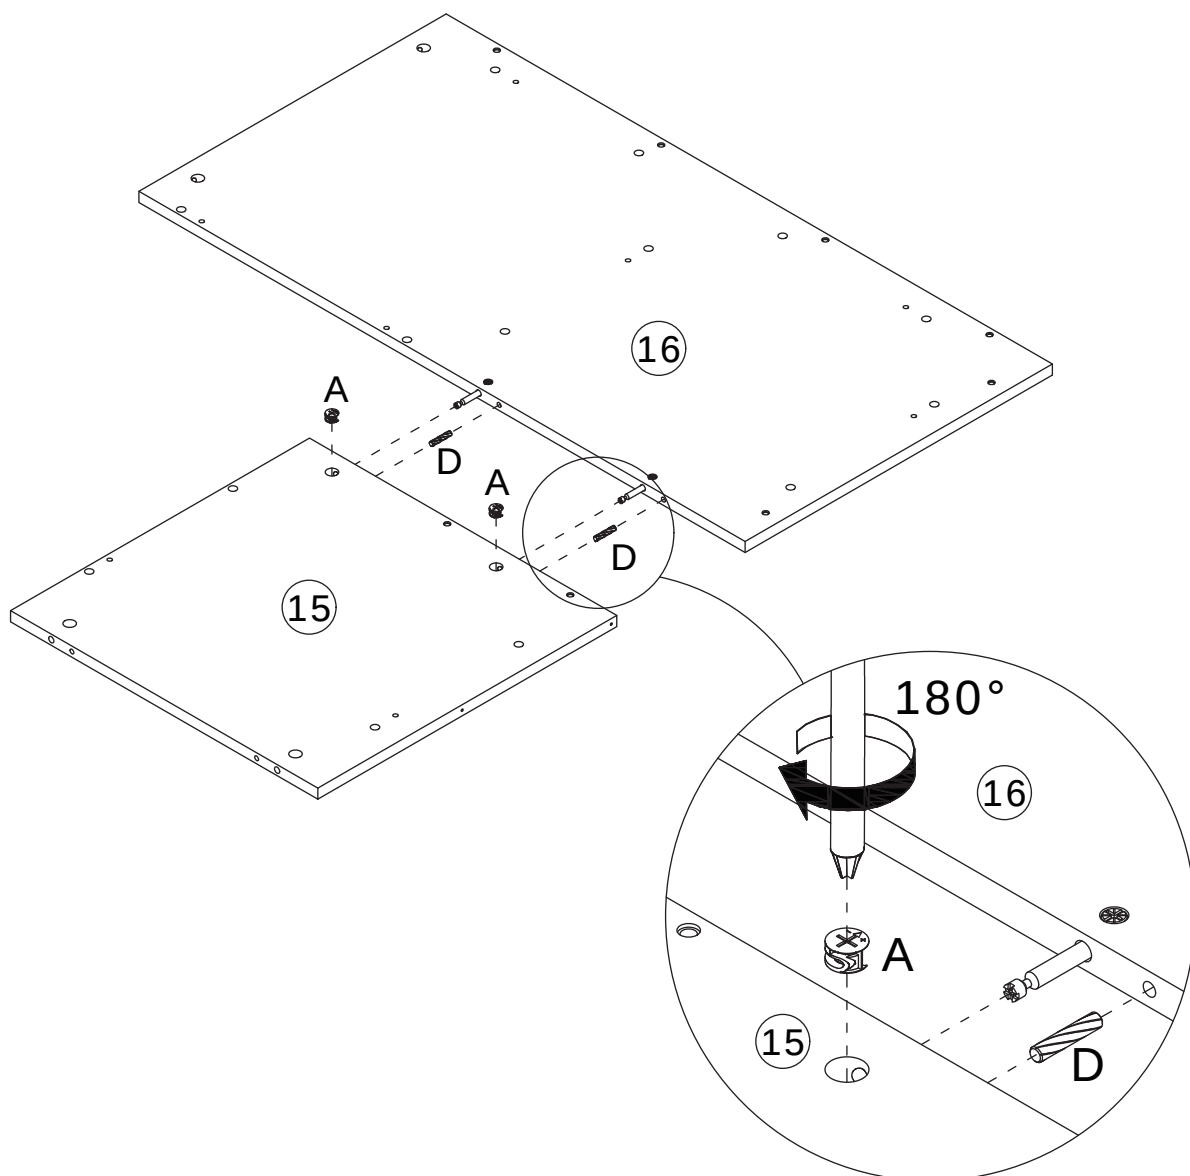




20

 B x 14






CRA0635B

  
 
C x 14

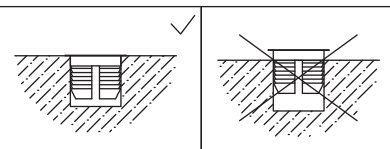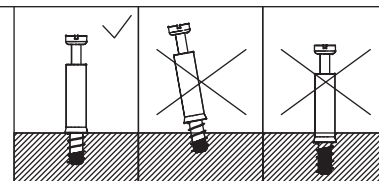

   
First, install plug (C) to panels 15 and 16, then screw self-tapping screw (B) into panels 15 and 16.

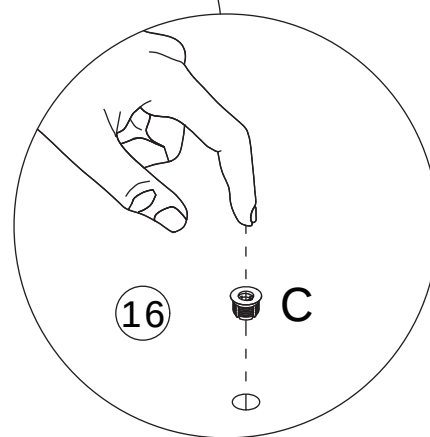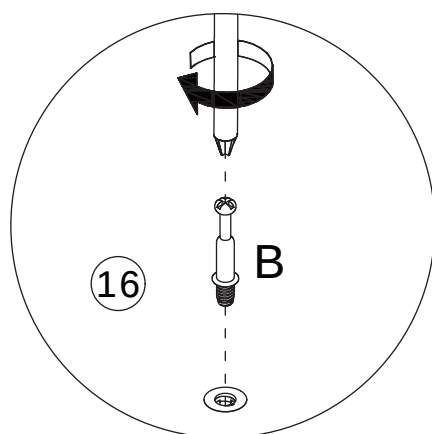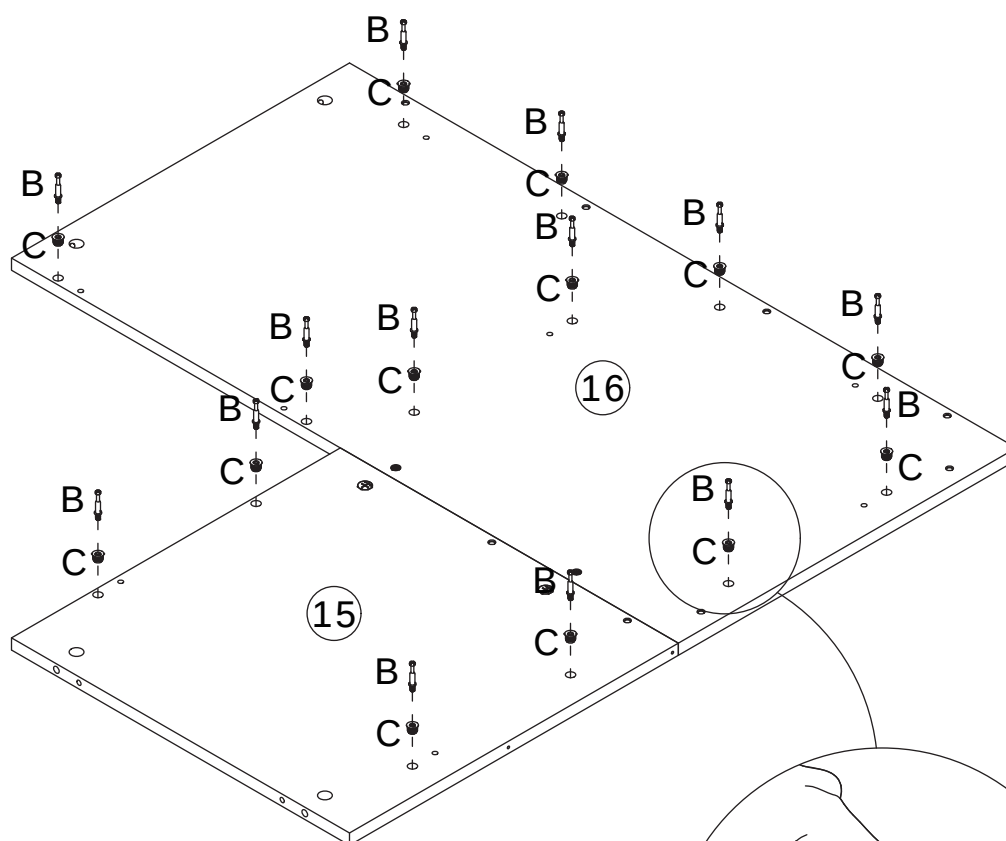

21

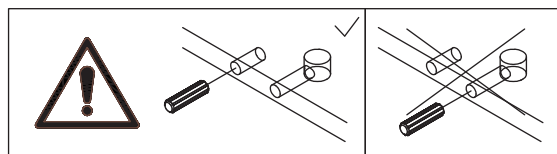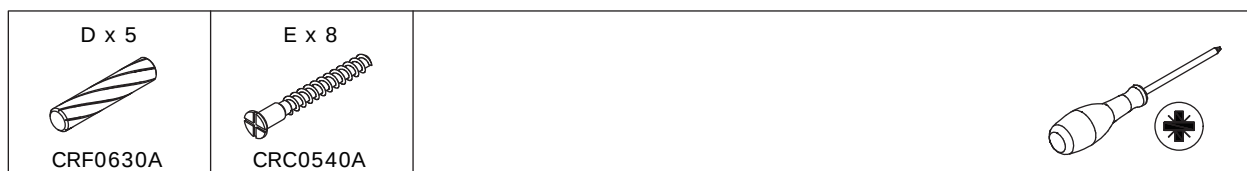  


 Connect panels 15 and 16 to panels 6, 12, and 14 using wooden dowel (D), and secure them with screw (E).

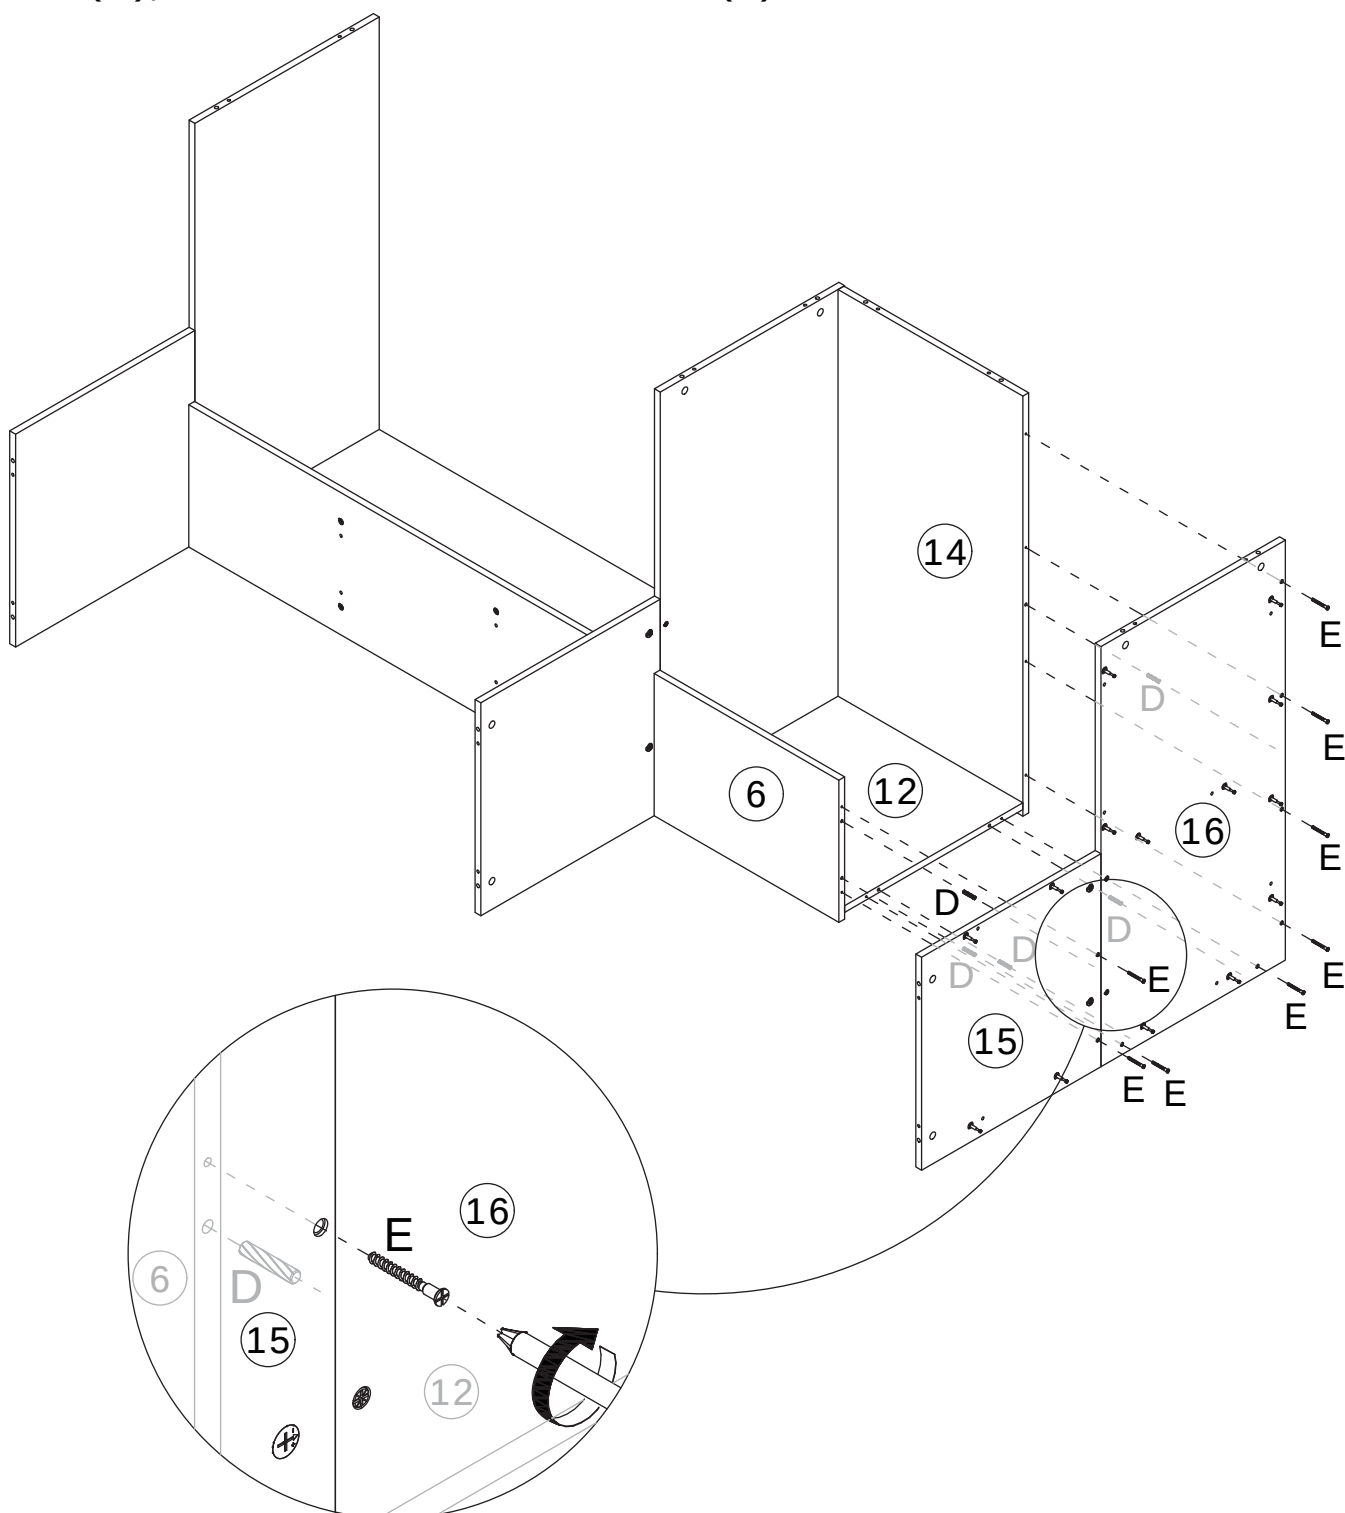


22

 B x 12





CRA0635B

 C x 12



  First, install plug (C) to panels 17, 21, and 20, then screw self-tapping screw (B) into panels 17, 21, and 20.

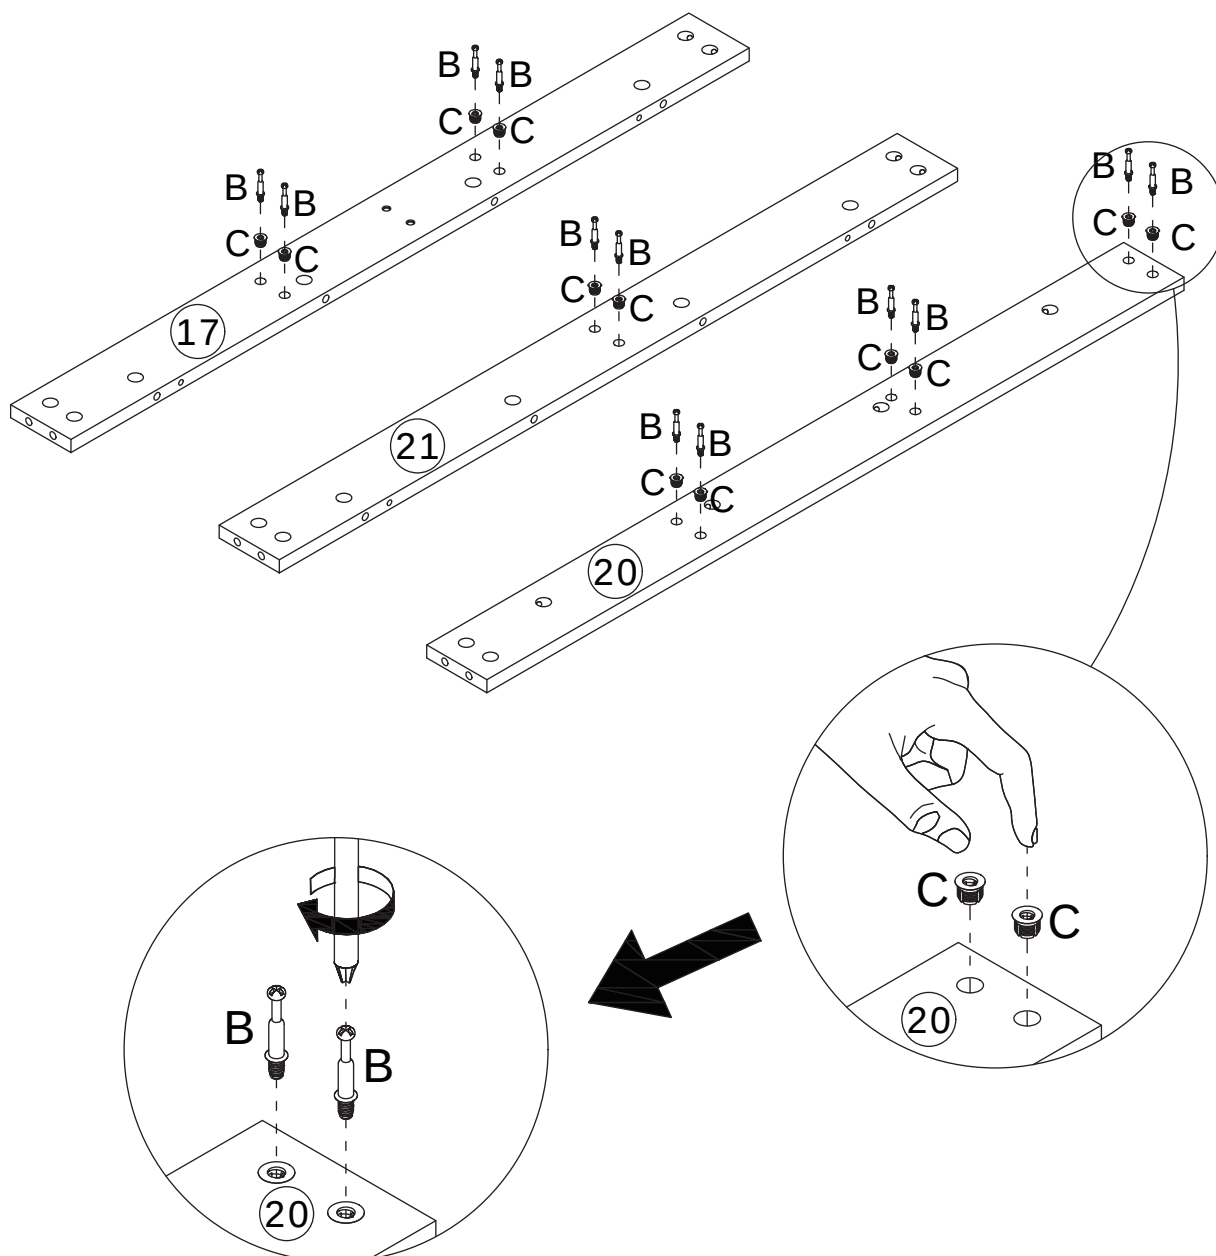
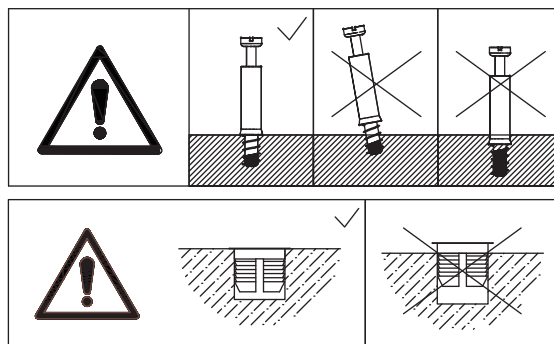


23


A x 2



  CRB1595A

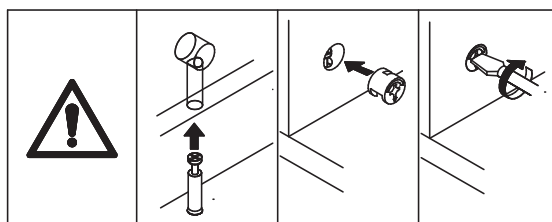

 Connect panel 21 to panel 17, and tighten by turning eccentric wheel (A) clockwise.


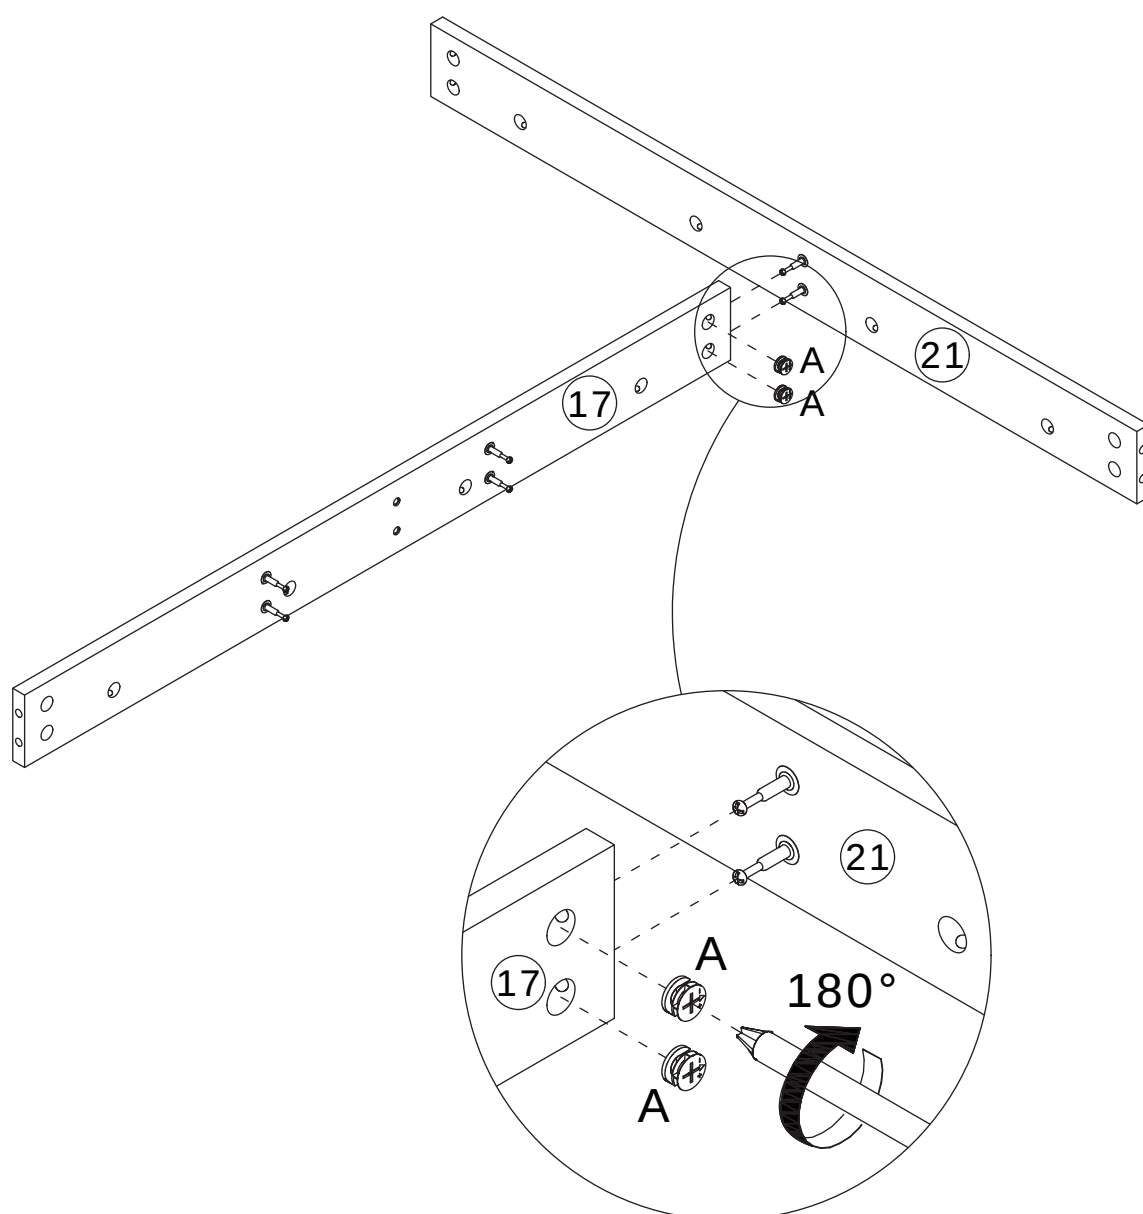


24


A x 4



  CRB1595A

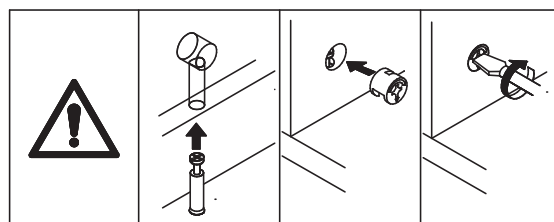

 Connect panel 19 to panel 17, and tighten by turning eccentric wheel (A) clockwise.


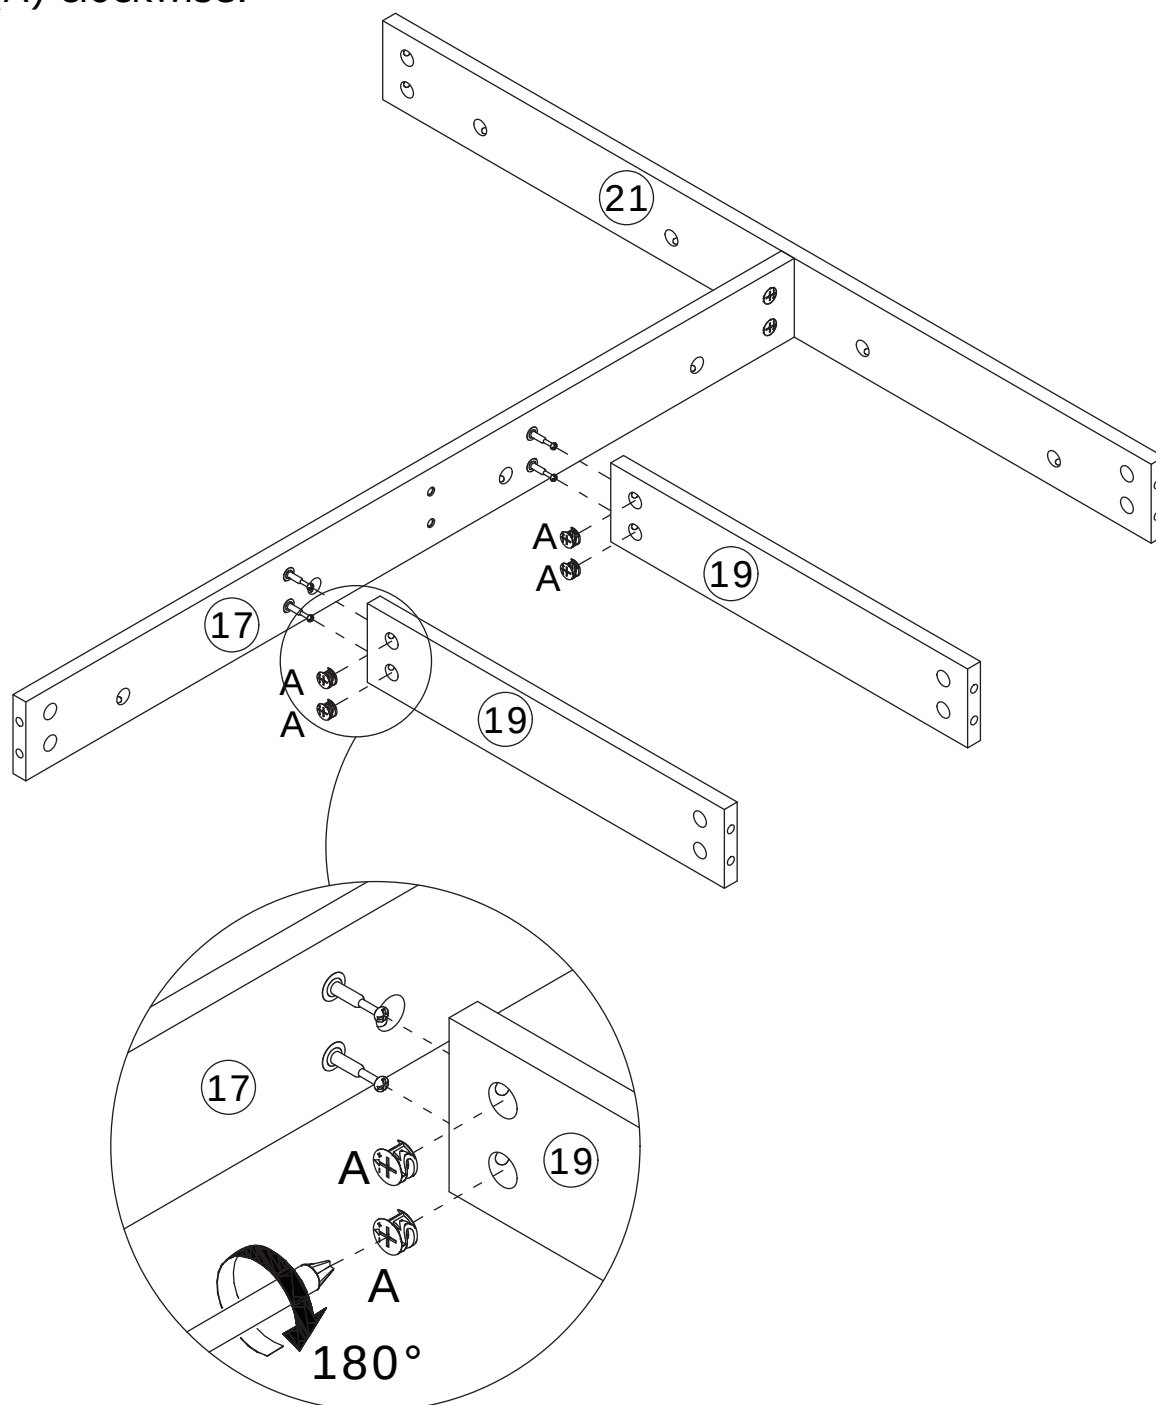


25


A x 6



  CRB1595A

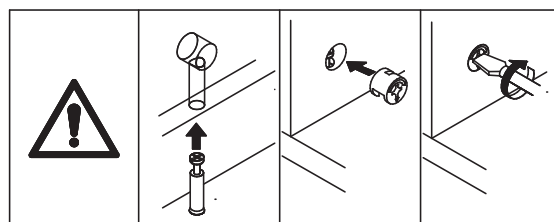

 Connect panel 20 to panels 19 and 21, and tighten by turning eccentric wheel (A) clockwise.

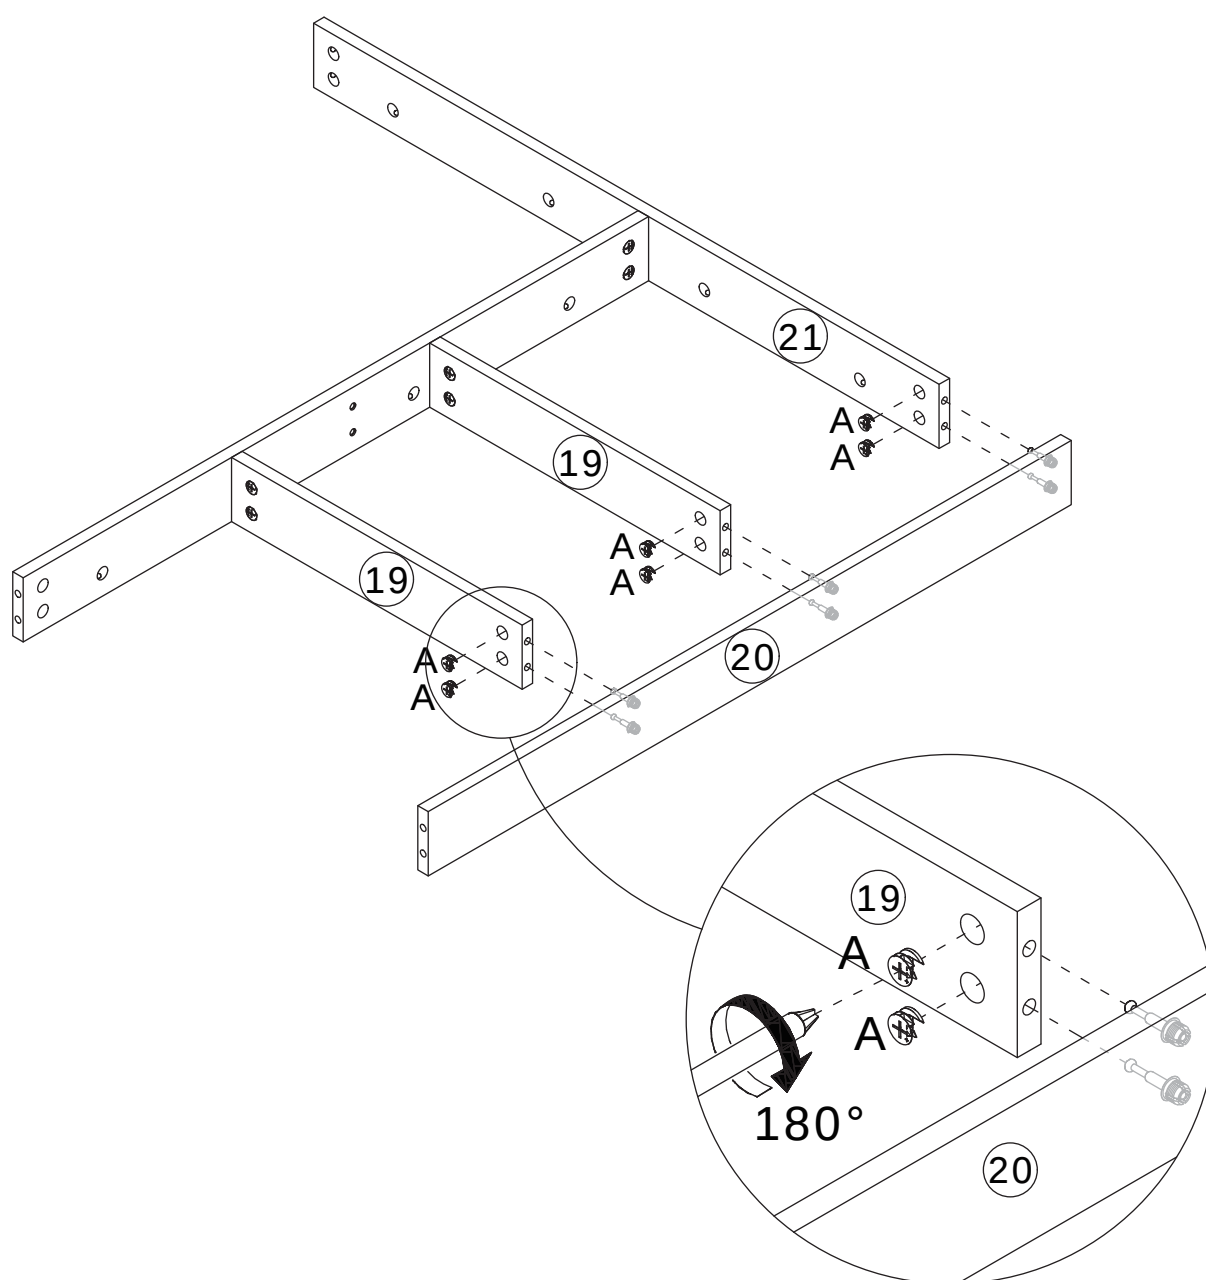


26

A x 12




CRB1595A


 
D x 6



CRF0630A

 

 
 
Connect panels 17, 20, and 21 to panels 15 and 16 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

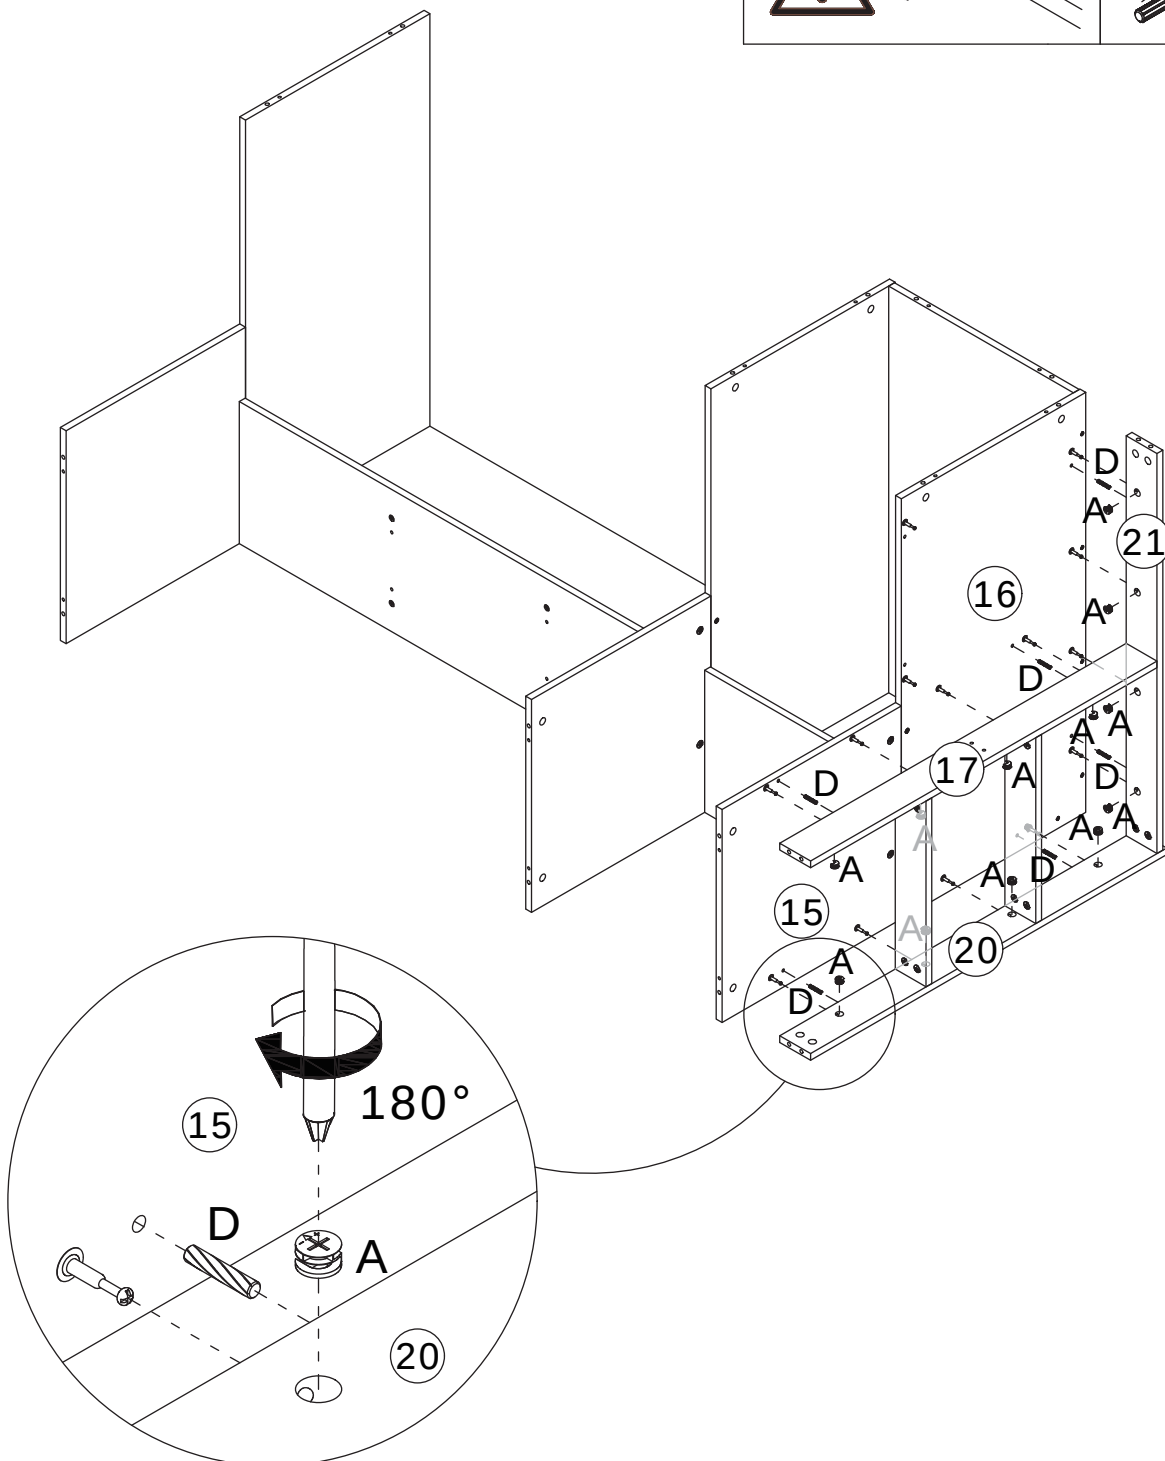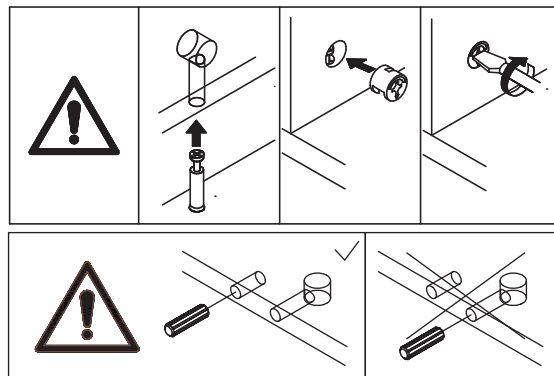



27



  
Connect panel 18 to panel 16 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

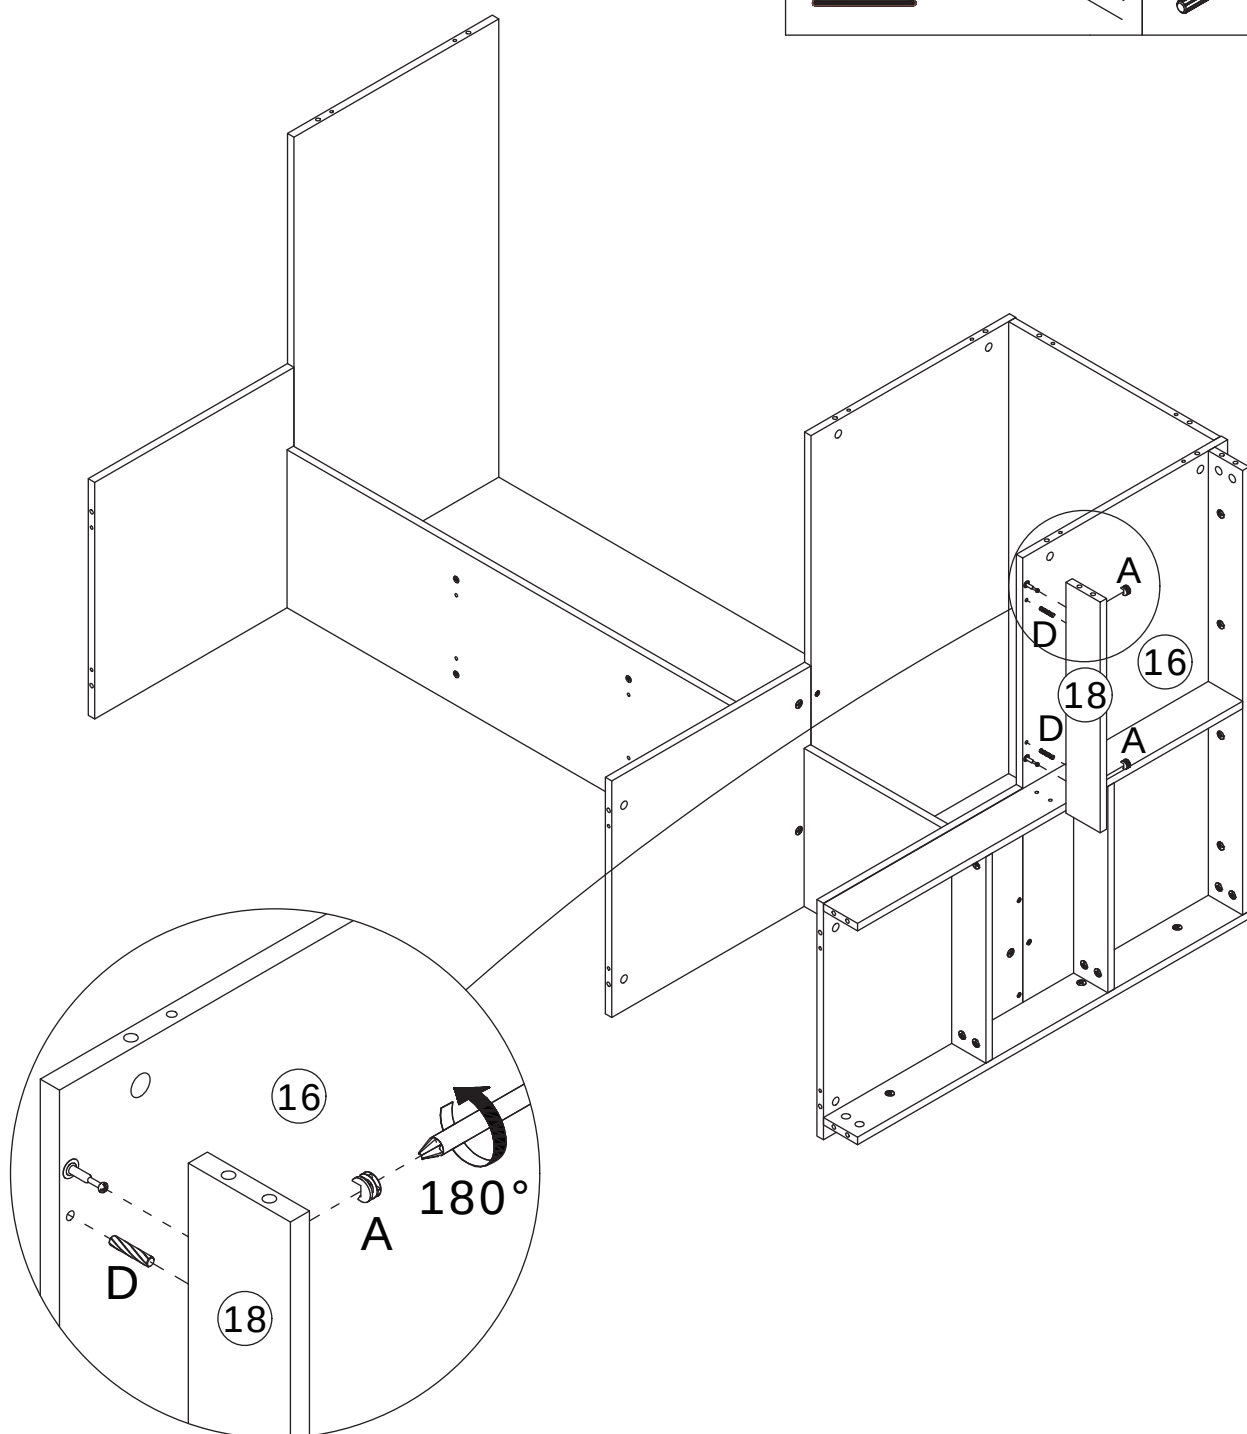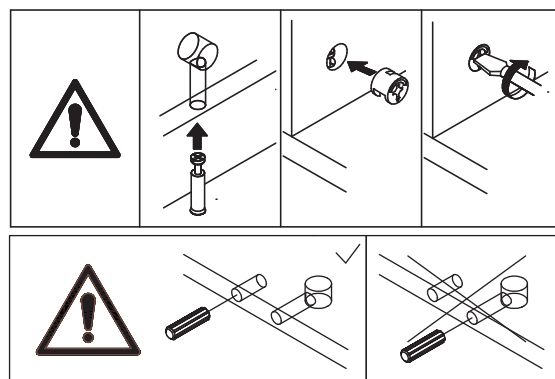

28

 
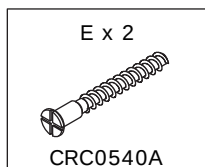 


 Secure panel 17 to panel 18 using screw (E).

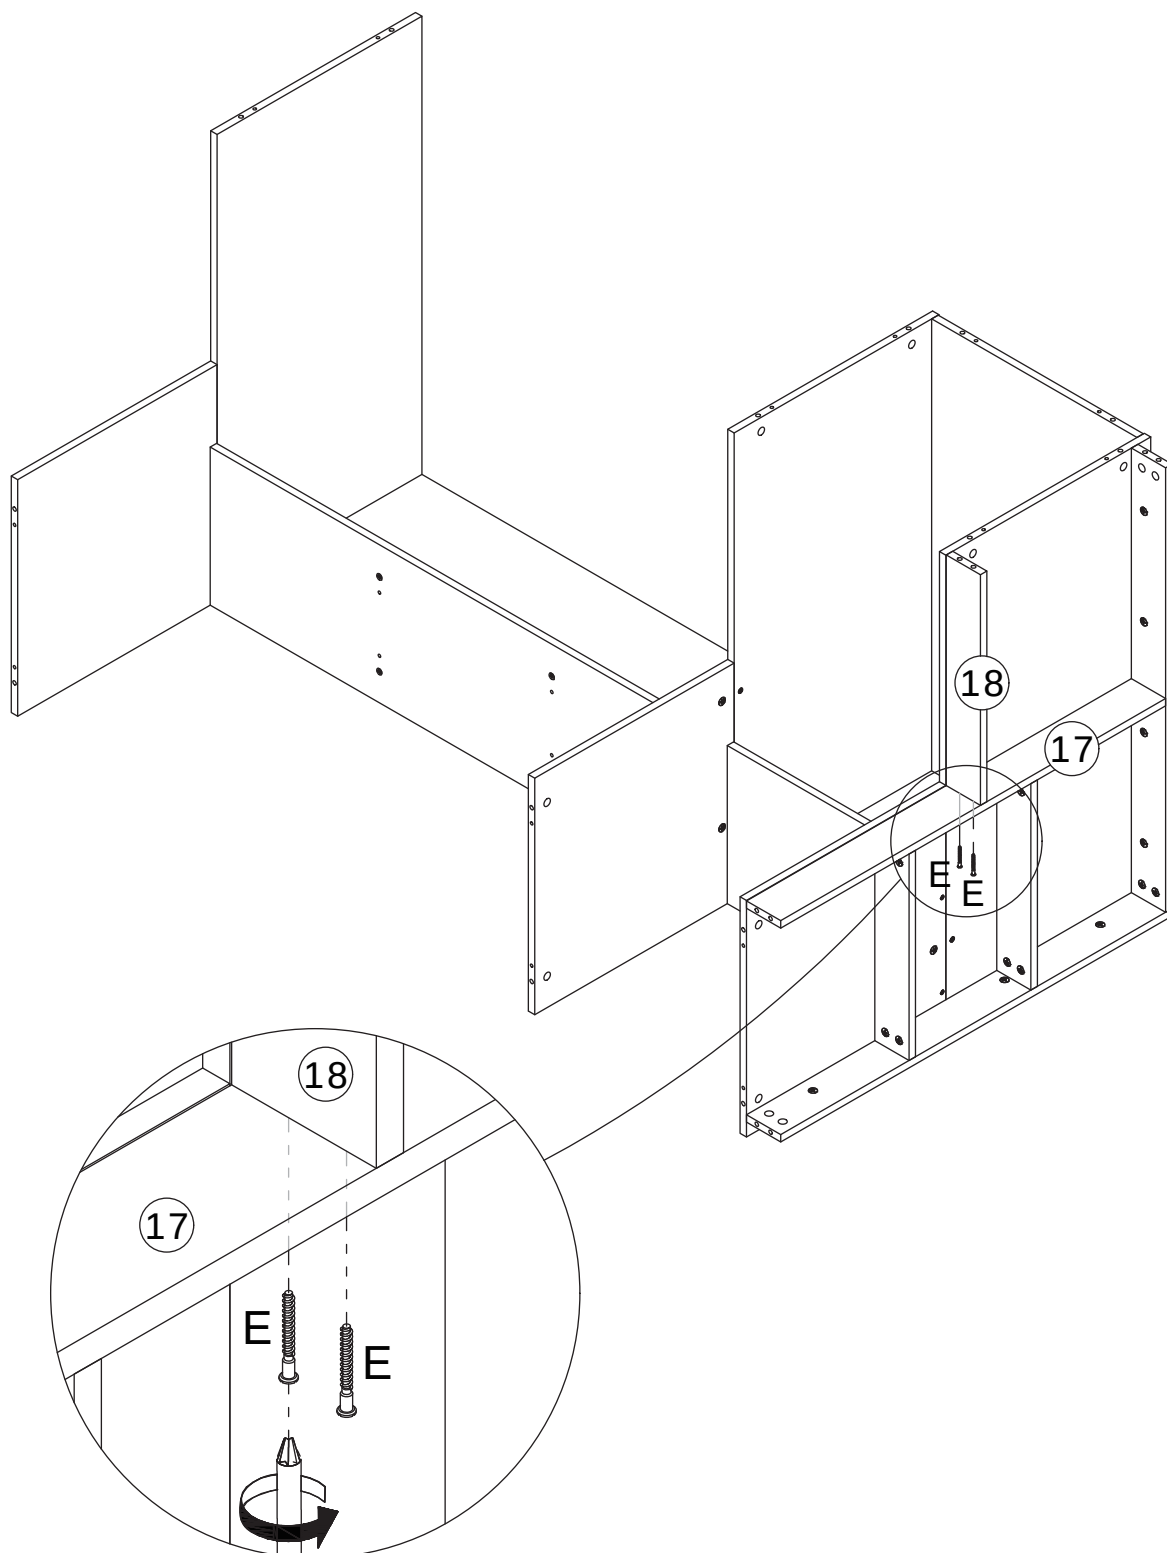


29


 
 
D x 8
CRF0630A

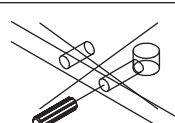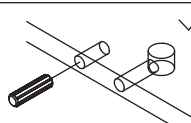


 
Insert wooden dowel (D) to panels 4, 9, 14, and 16.

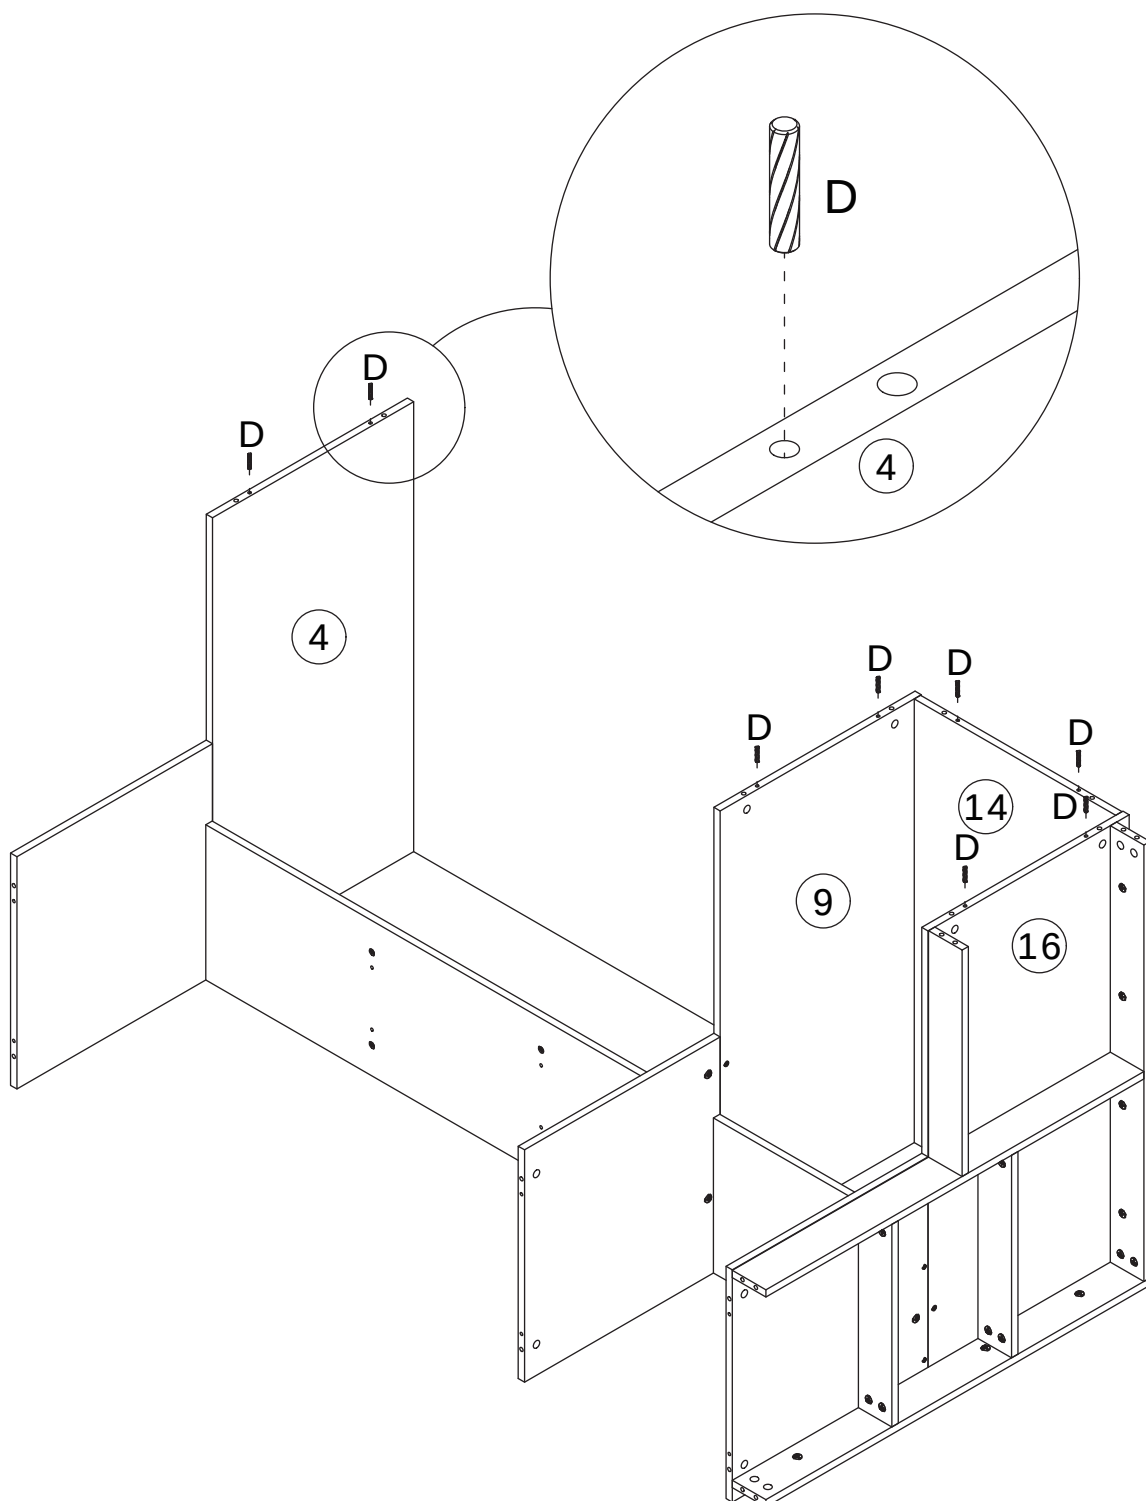

30

   B x 12  CRA0635B	C x 12 	L x 2  CRD3514A	Q x 1 	
---	---	--	---	---

  First, install plug (C) to panel 2, then screw self-tapping screw (B) into panel 2.
Secure part (Q) to panel 2 using screw (L).

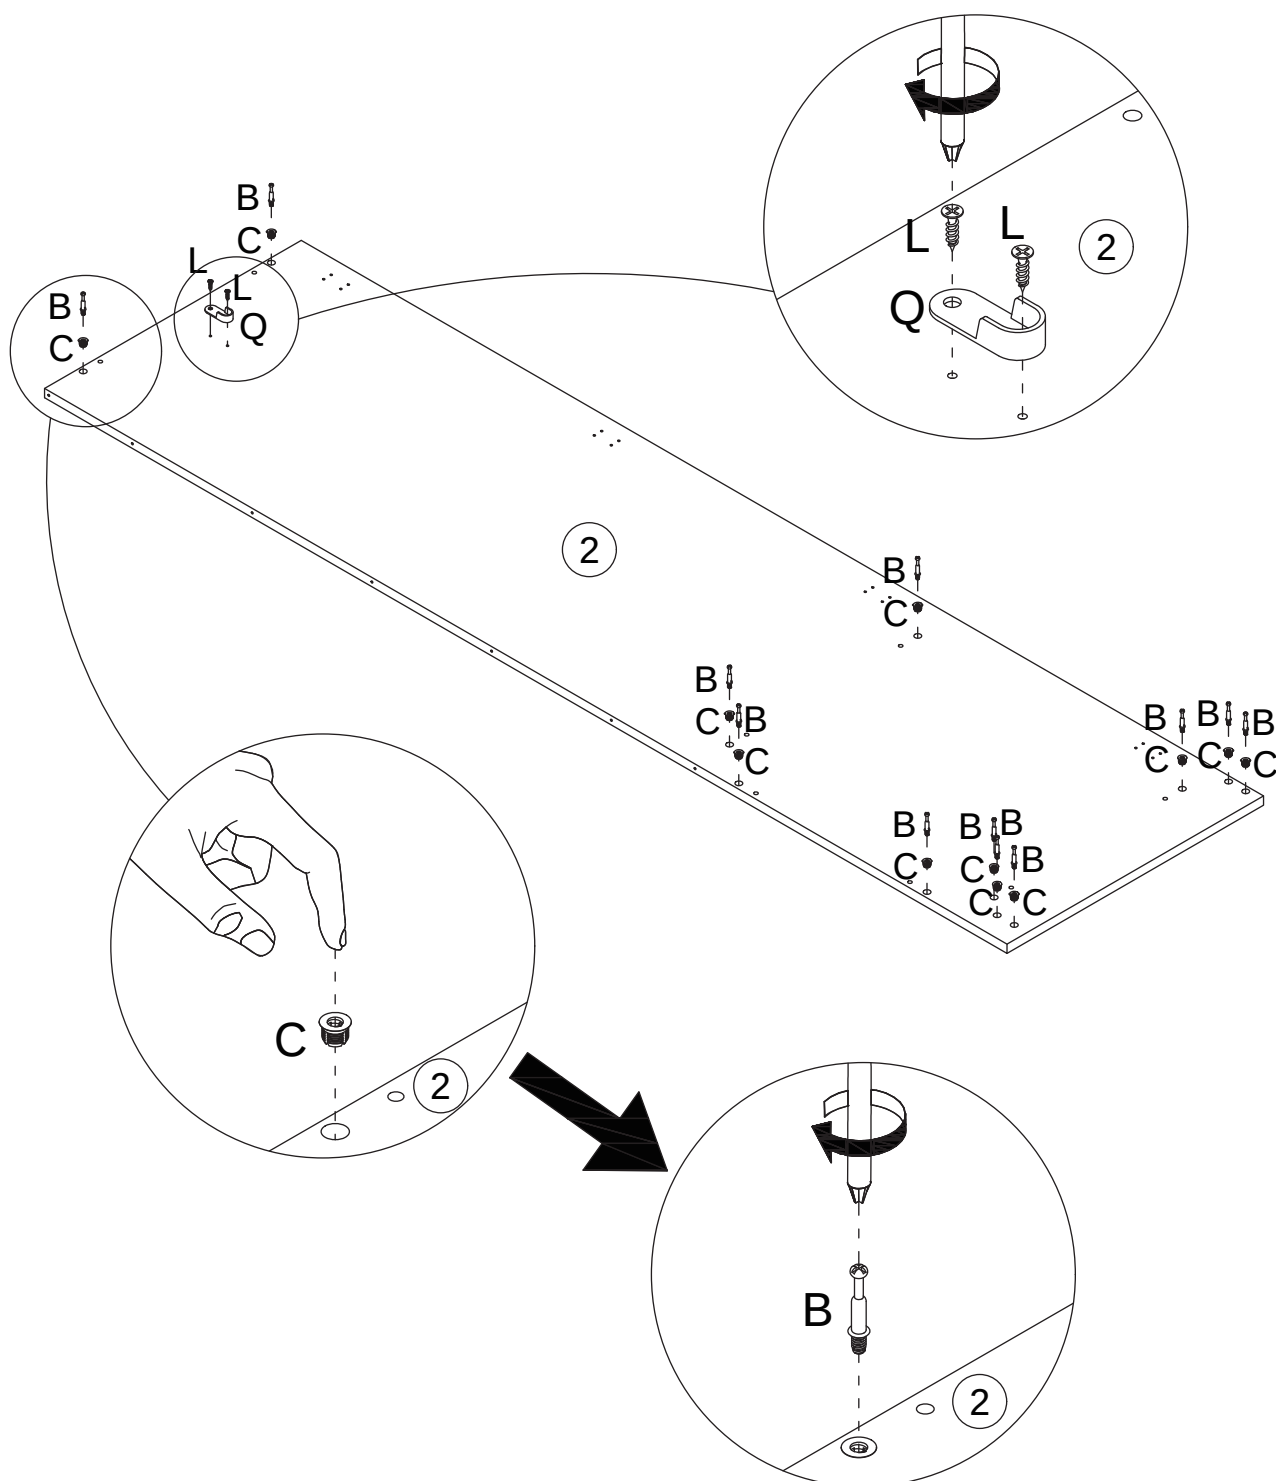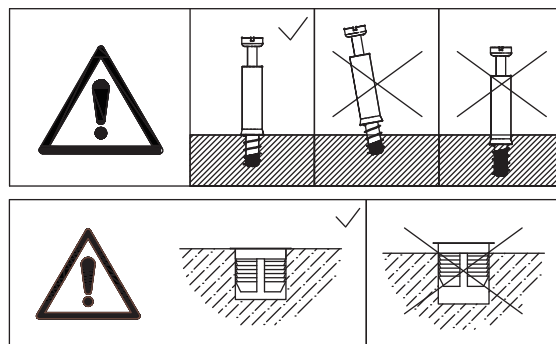


31



A x 12



 CRB1595A




  Connect panel 2 to the mounting unit,
and tighten by turning eccentric wheel (A)
clockwise.

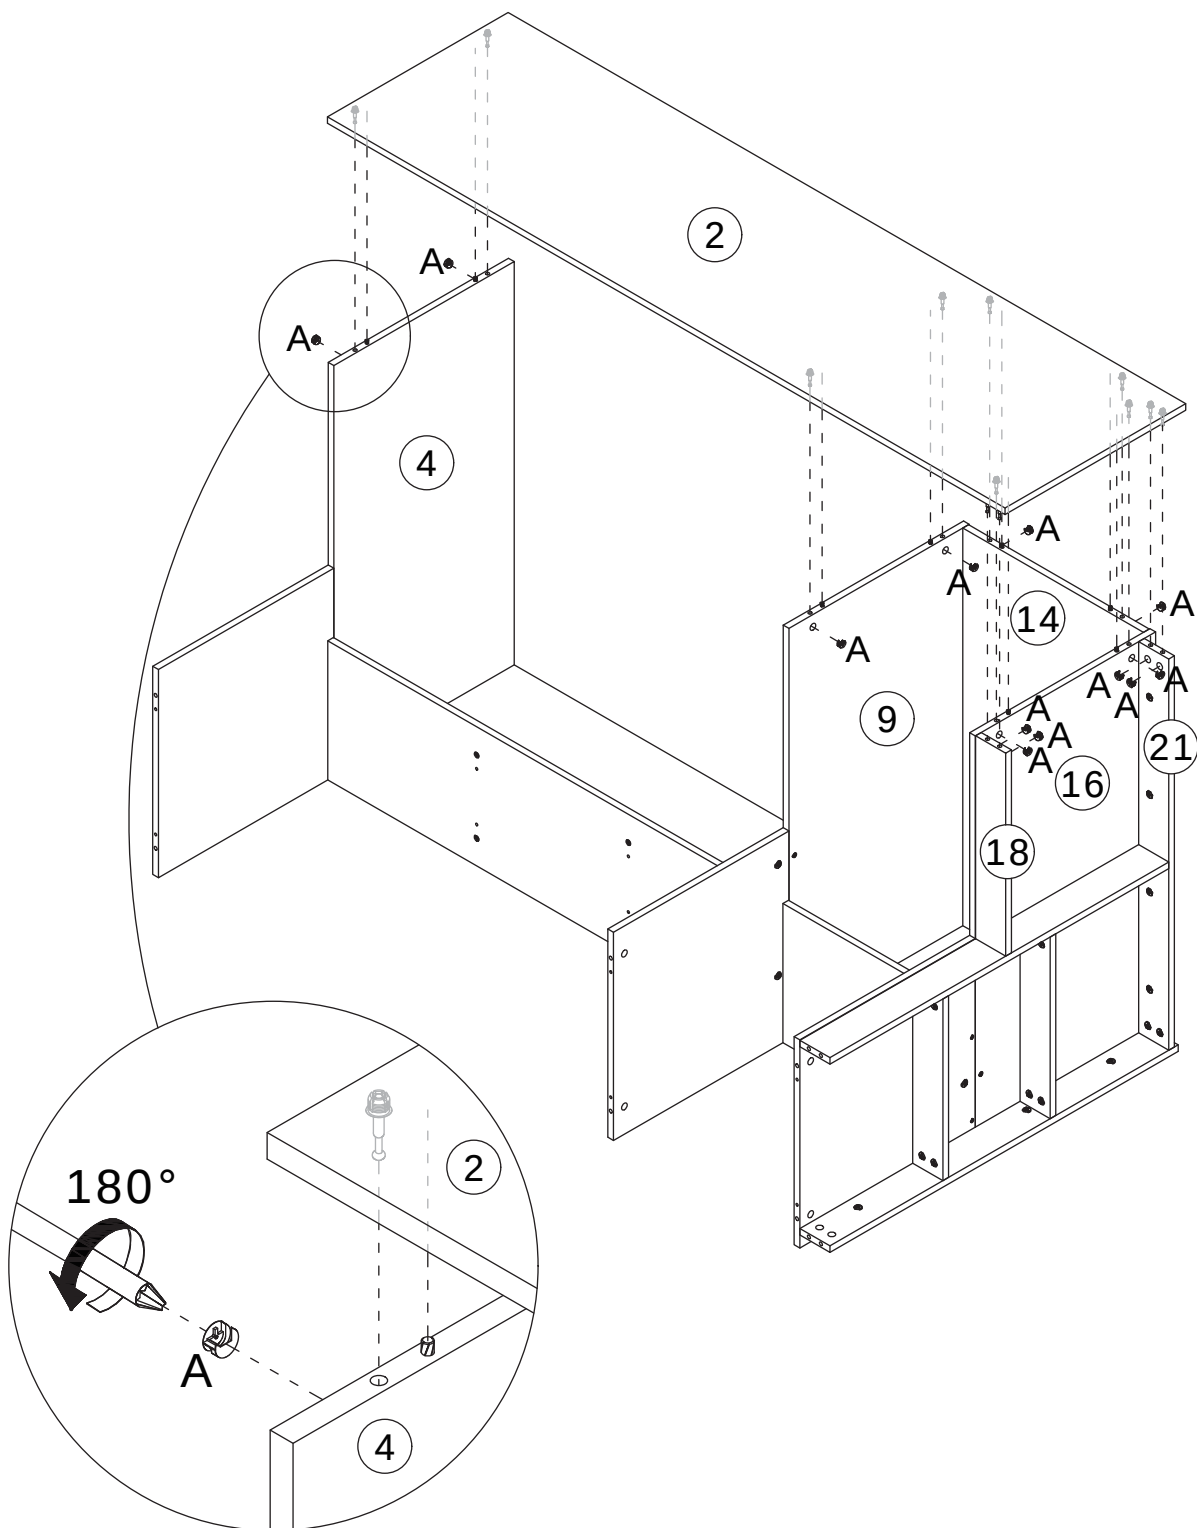
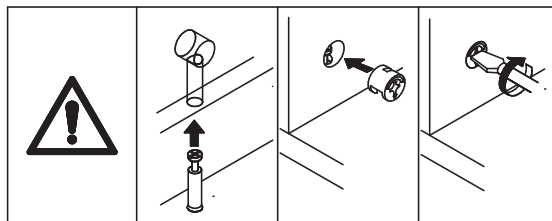


32

 
B x 4



CRA0635B

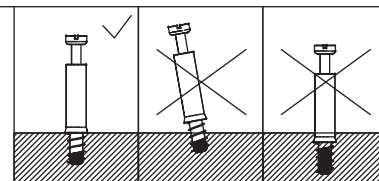  

 Screw self-tapping screw (B) into panel 5.

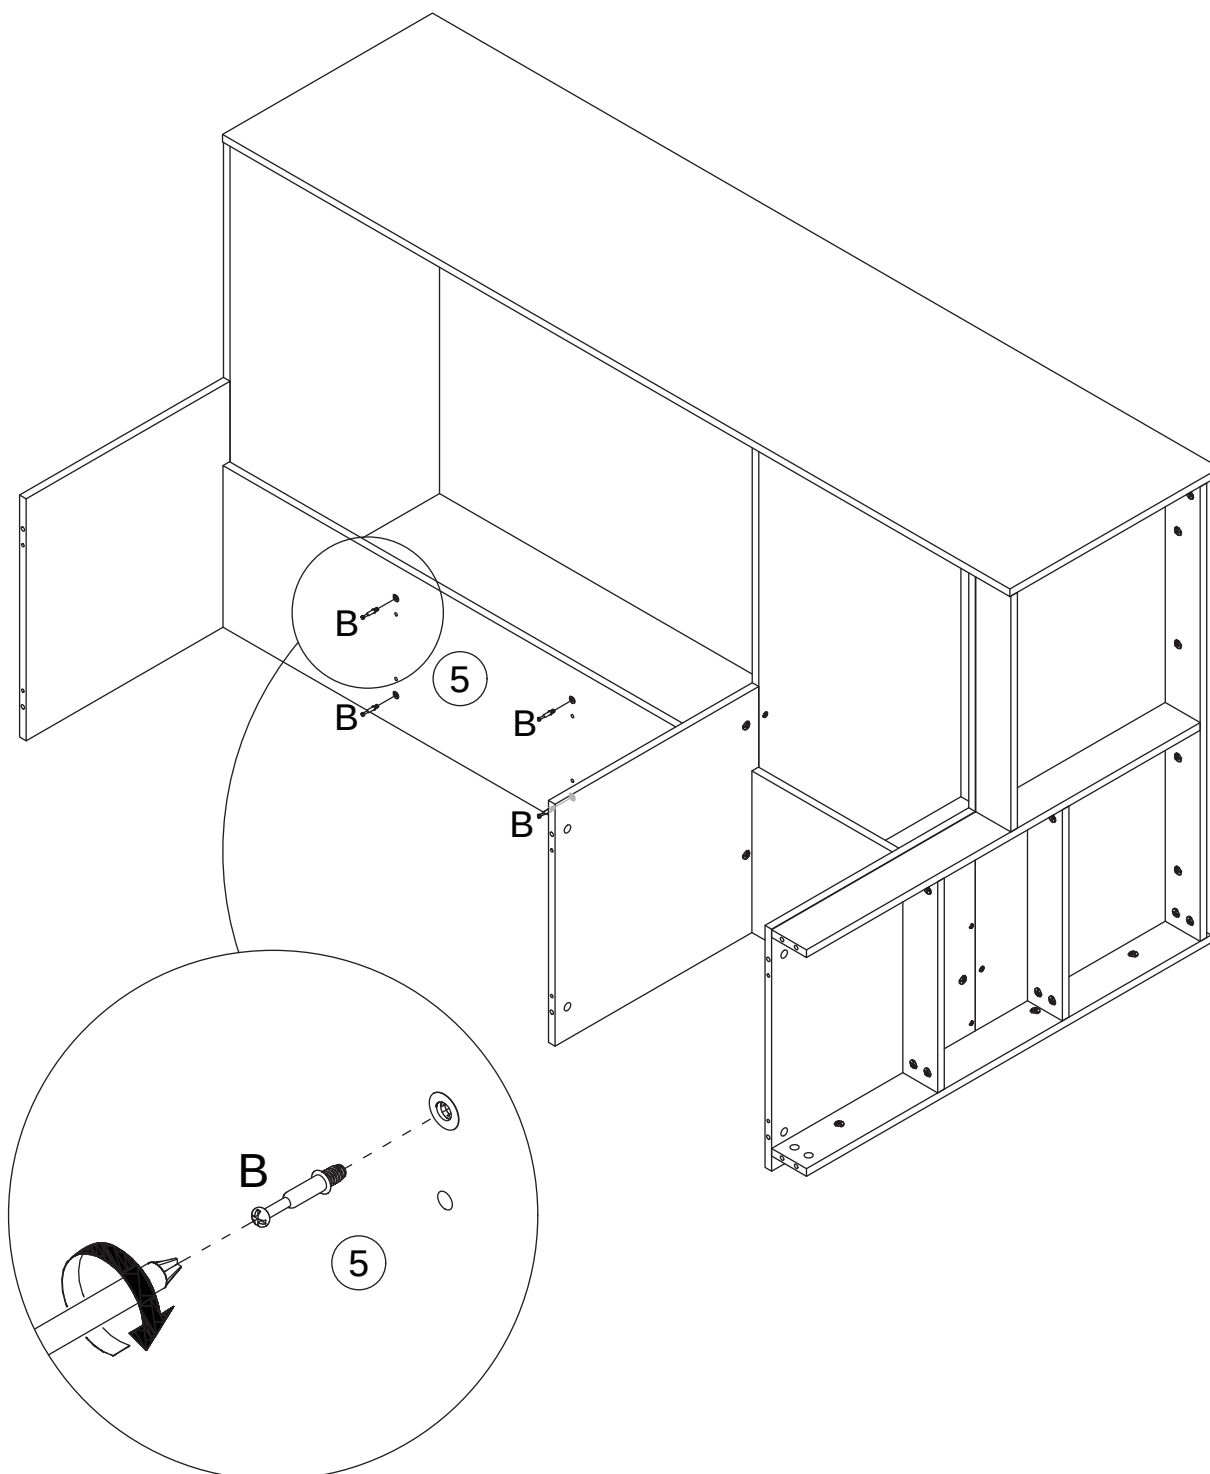


33

A x 4




CRB1595A



 
D x 4



CRF0630A

 

   Connect panel 7 to panel 5 using wooden dowel (D), and tighten by turning eccentric wheel (A) clockwise.

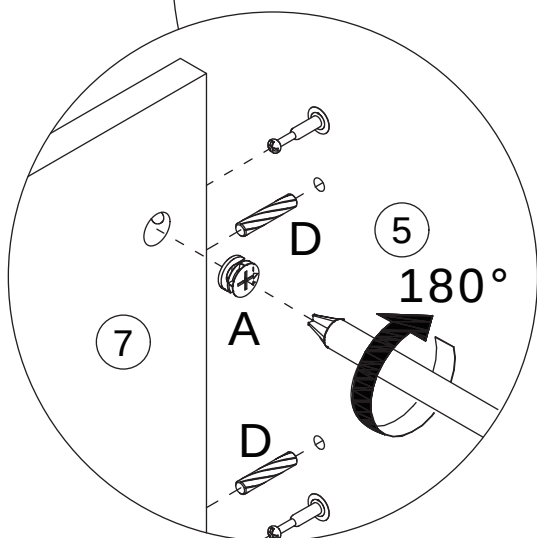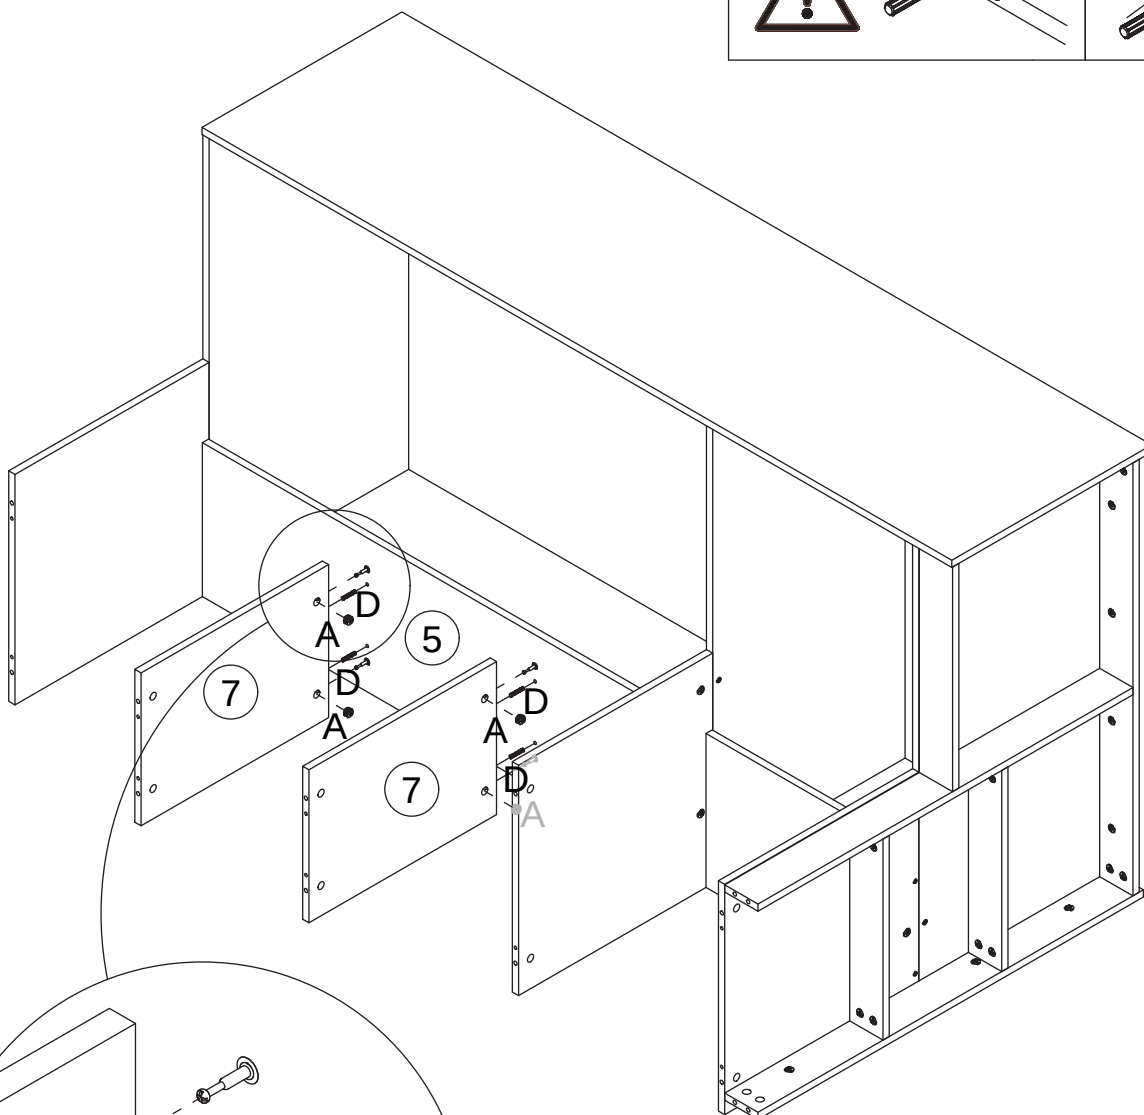
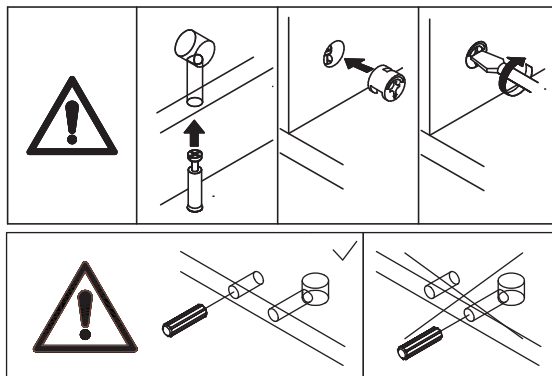


34


D x 10



  CRF0630A




 Insert wooden dowel (D) into the mounting unit.

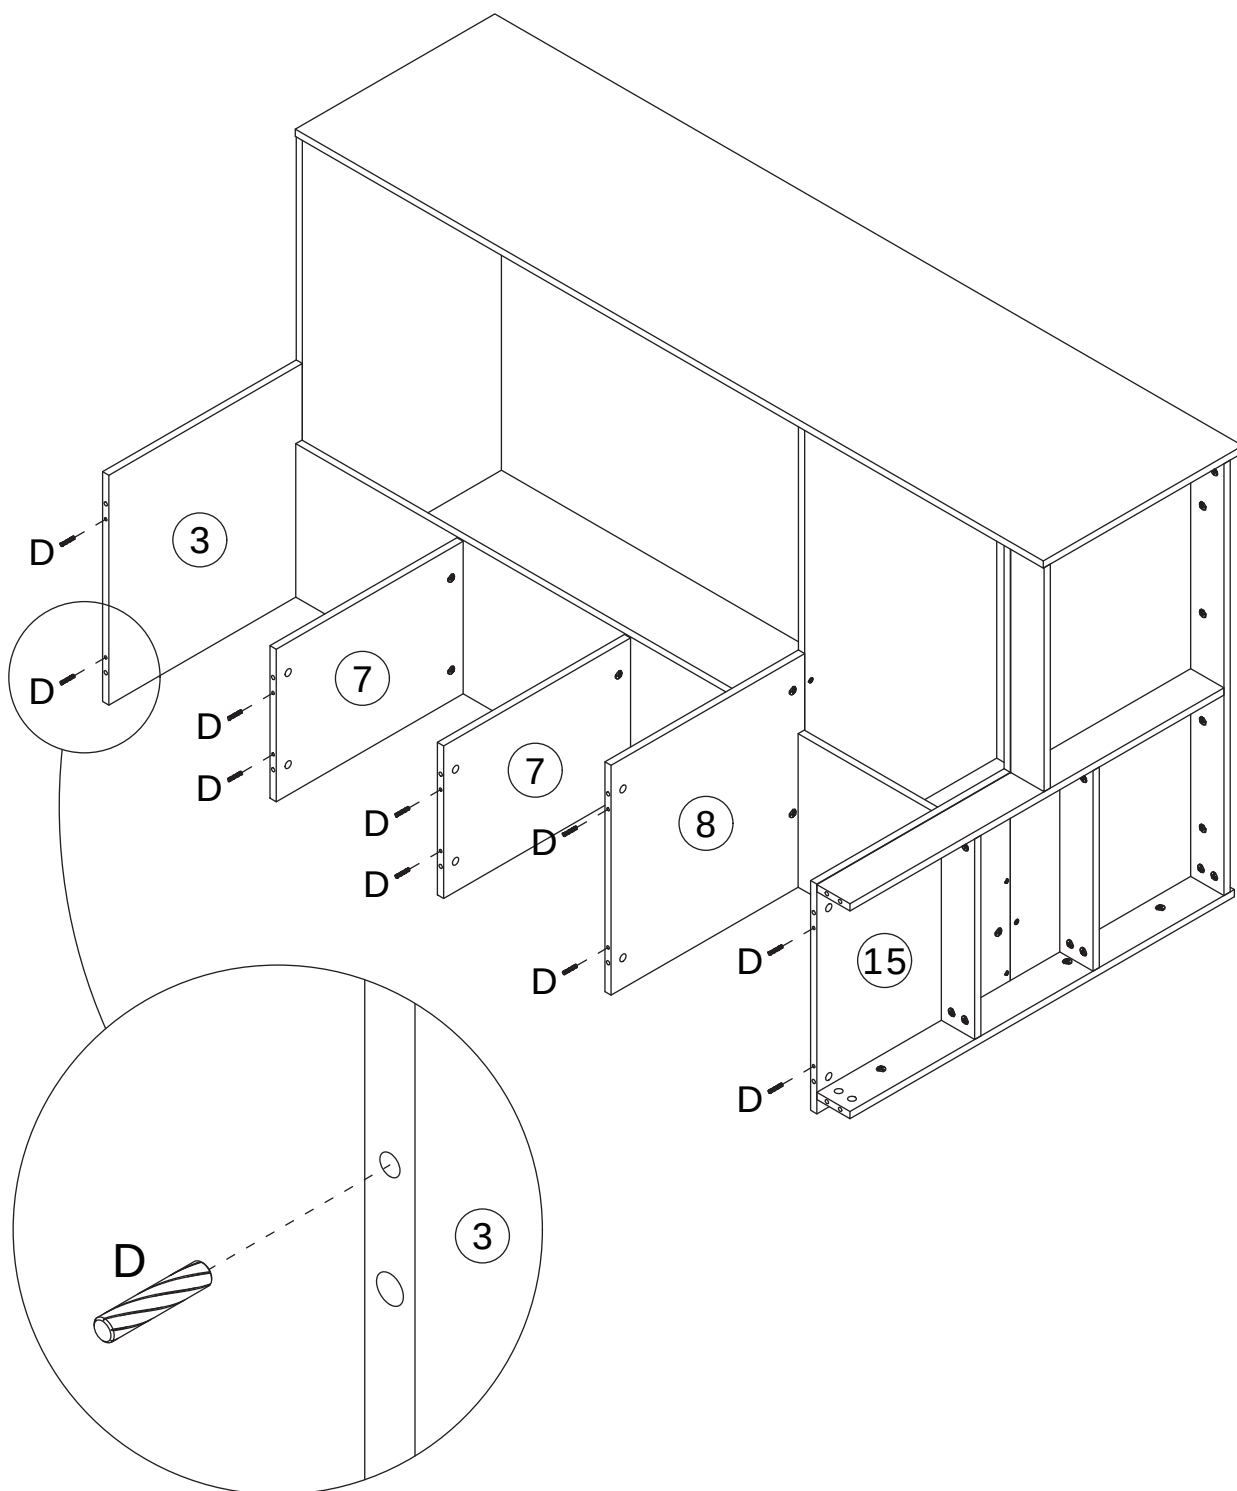




35

 B x 14




CRA0635B

   C x 14

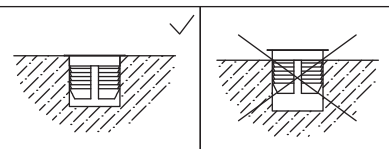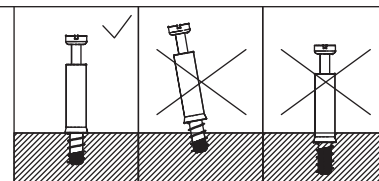

 First, install plug (C) to panel 1, then screw self-tapping screw (B) into panel 1.

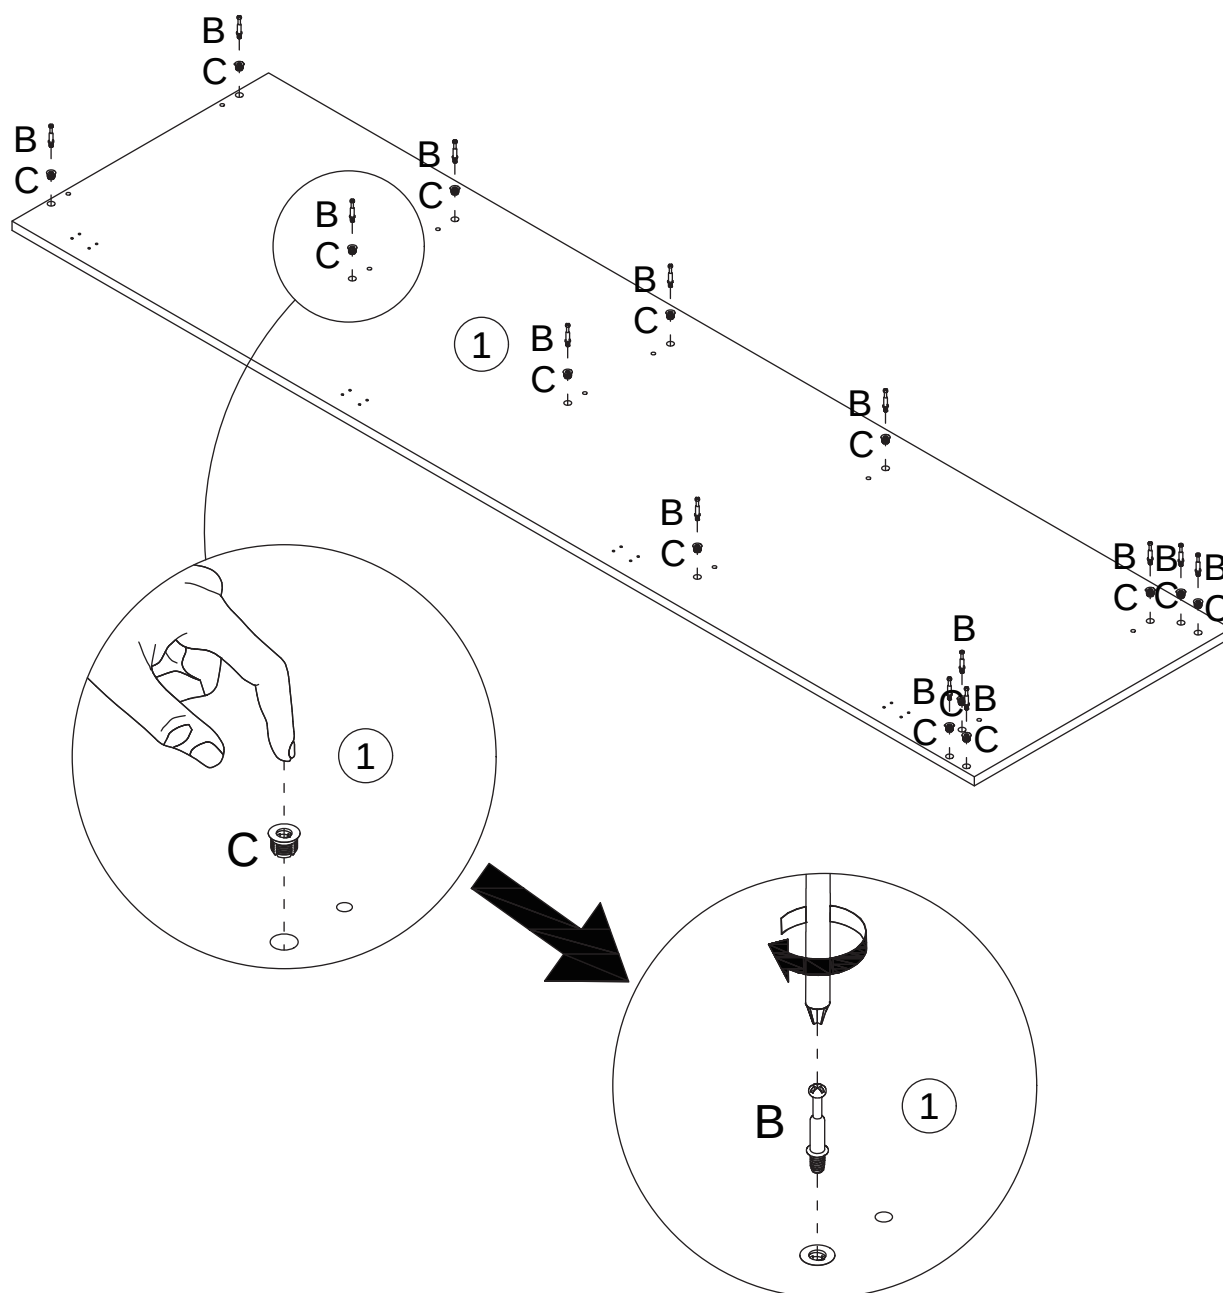


36




A x 14



 CRB1595A




   Connect panel 1 to the mounting unit, and tighten by turning eccentric wheel (A) clockwise.

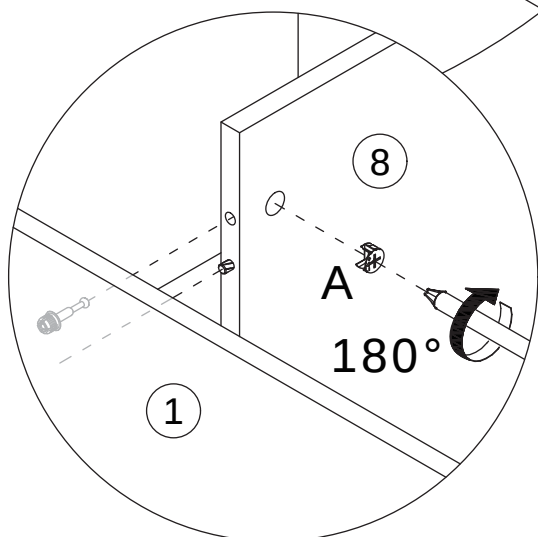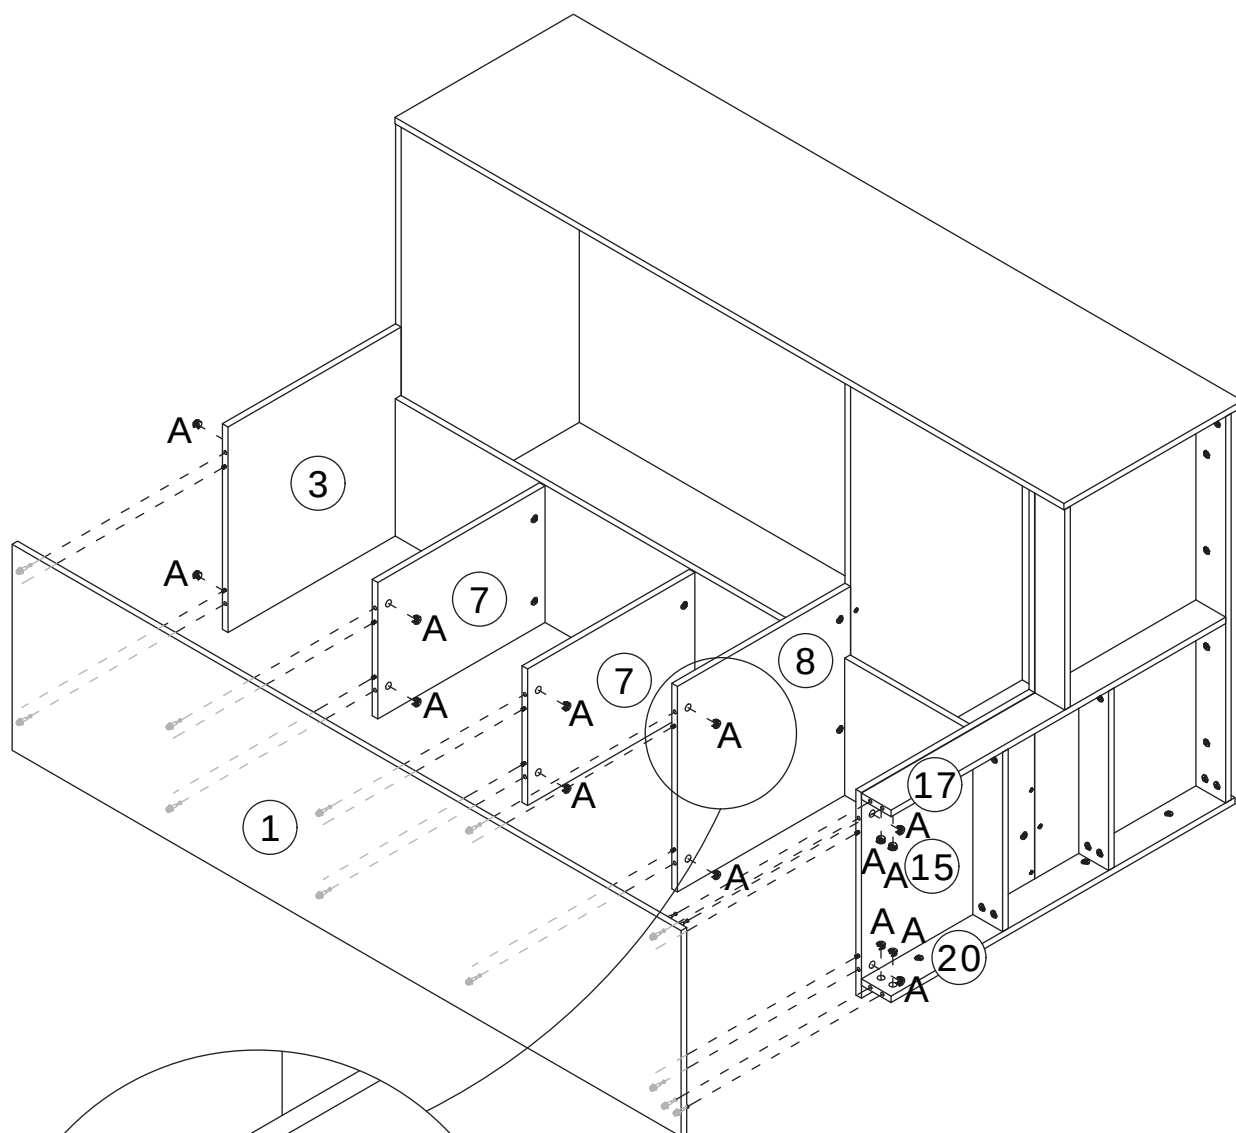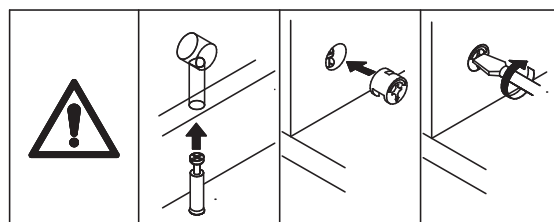


37

 E x 2
CRC0540A




 Turn the cabinet upside down and secure panel 9 to panel 11 using screw (E).


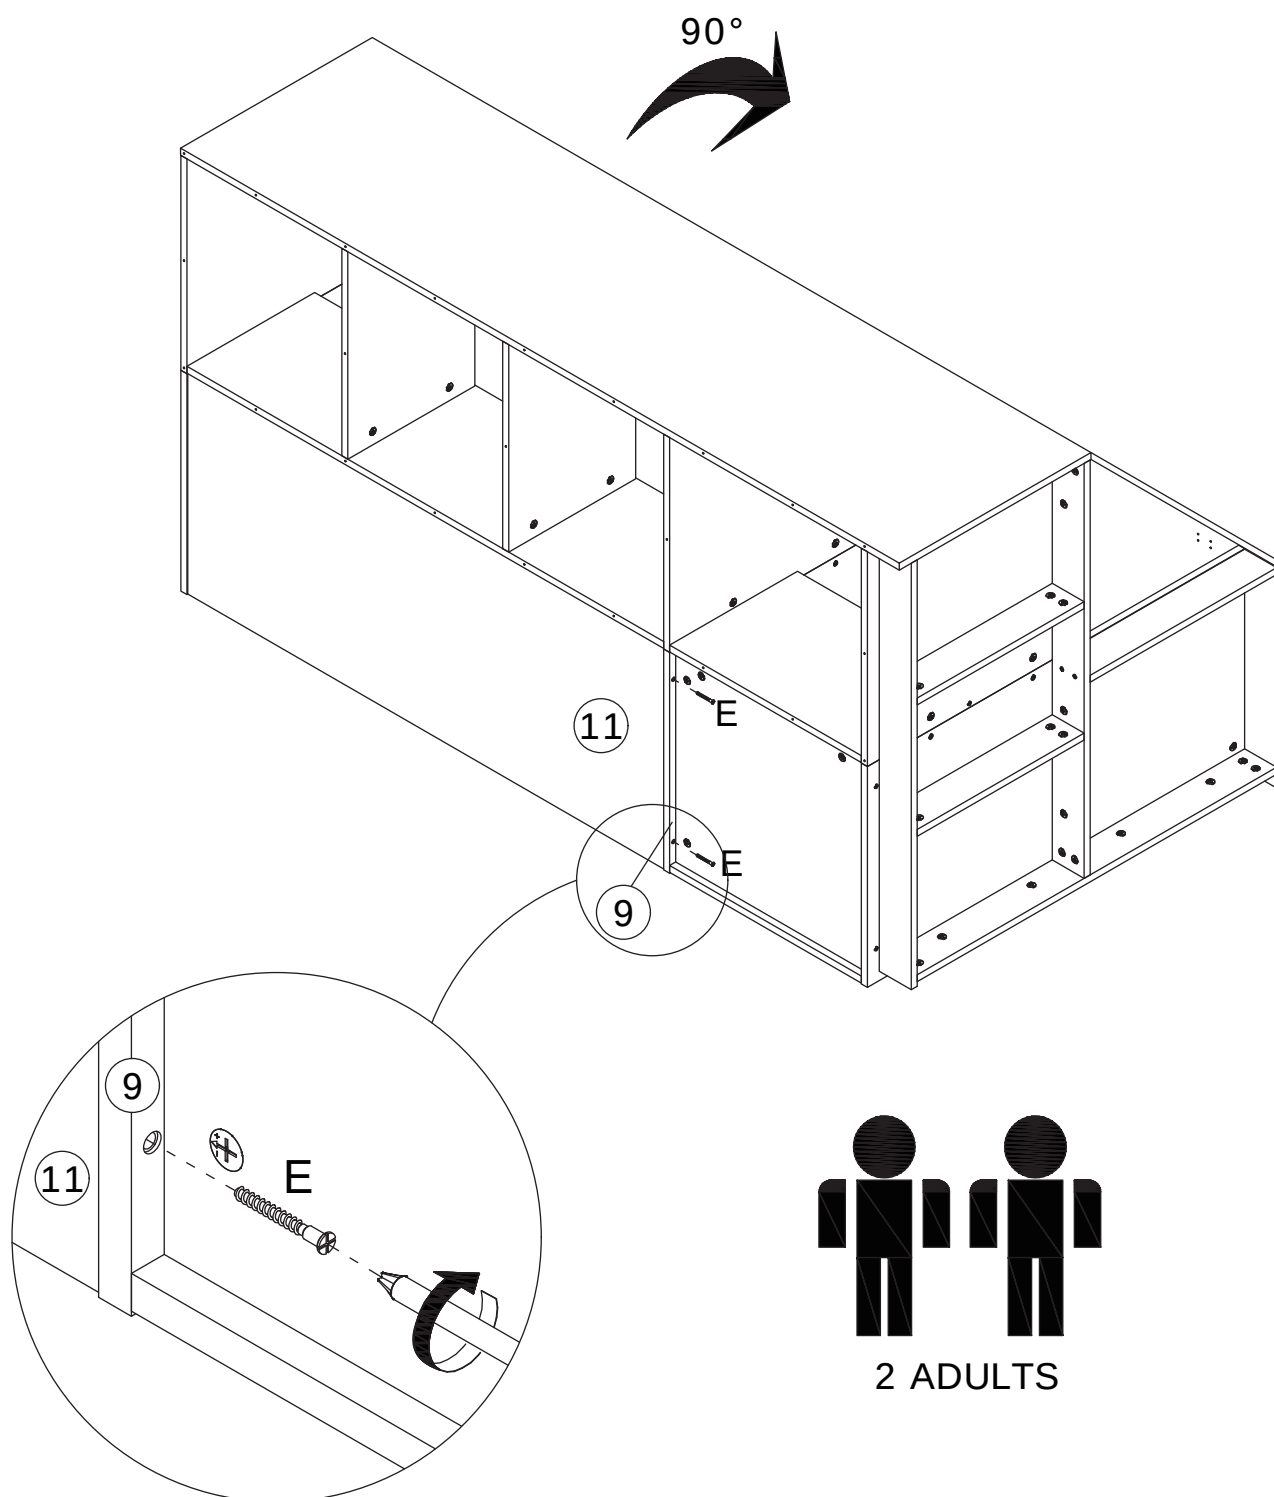


38

 M x 23




  Turn the cabinet upside down and attach panel 10 to the mounting unit using nail (M).

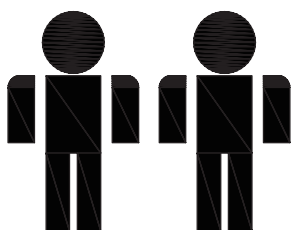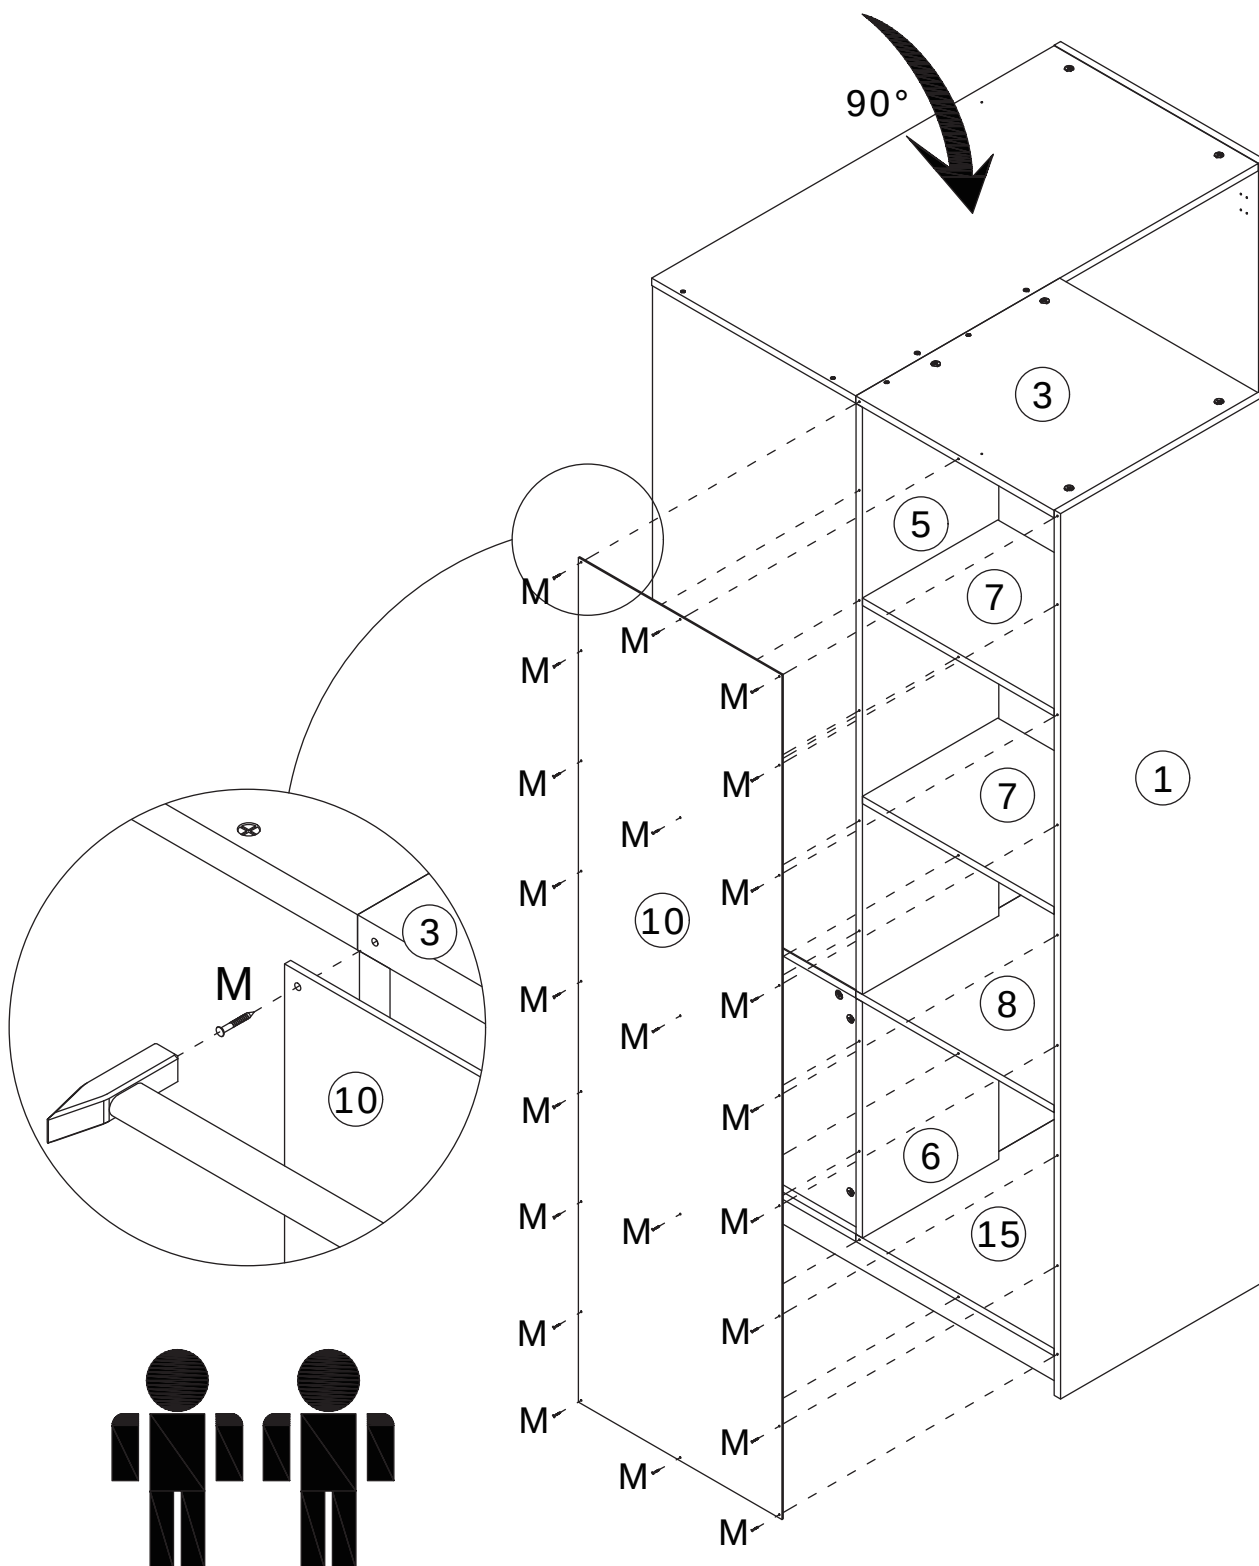


2 ADULTS

 Connect two panel 13 to strip (N).


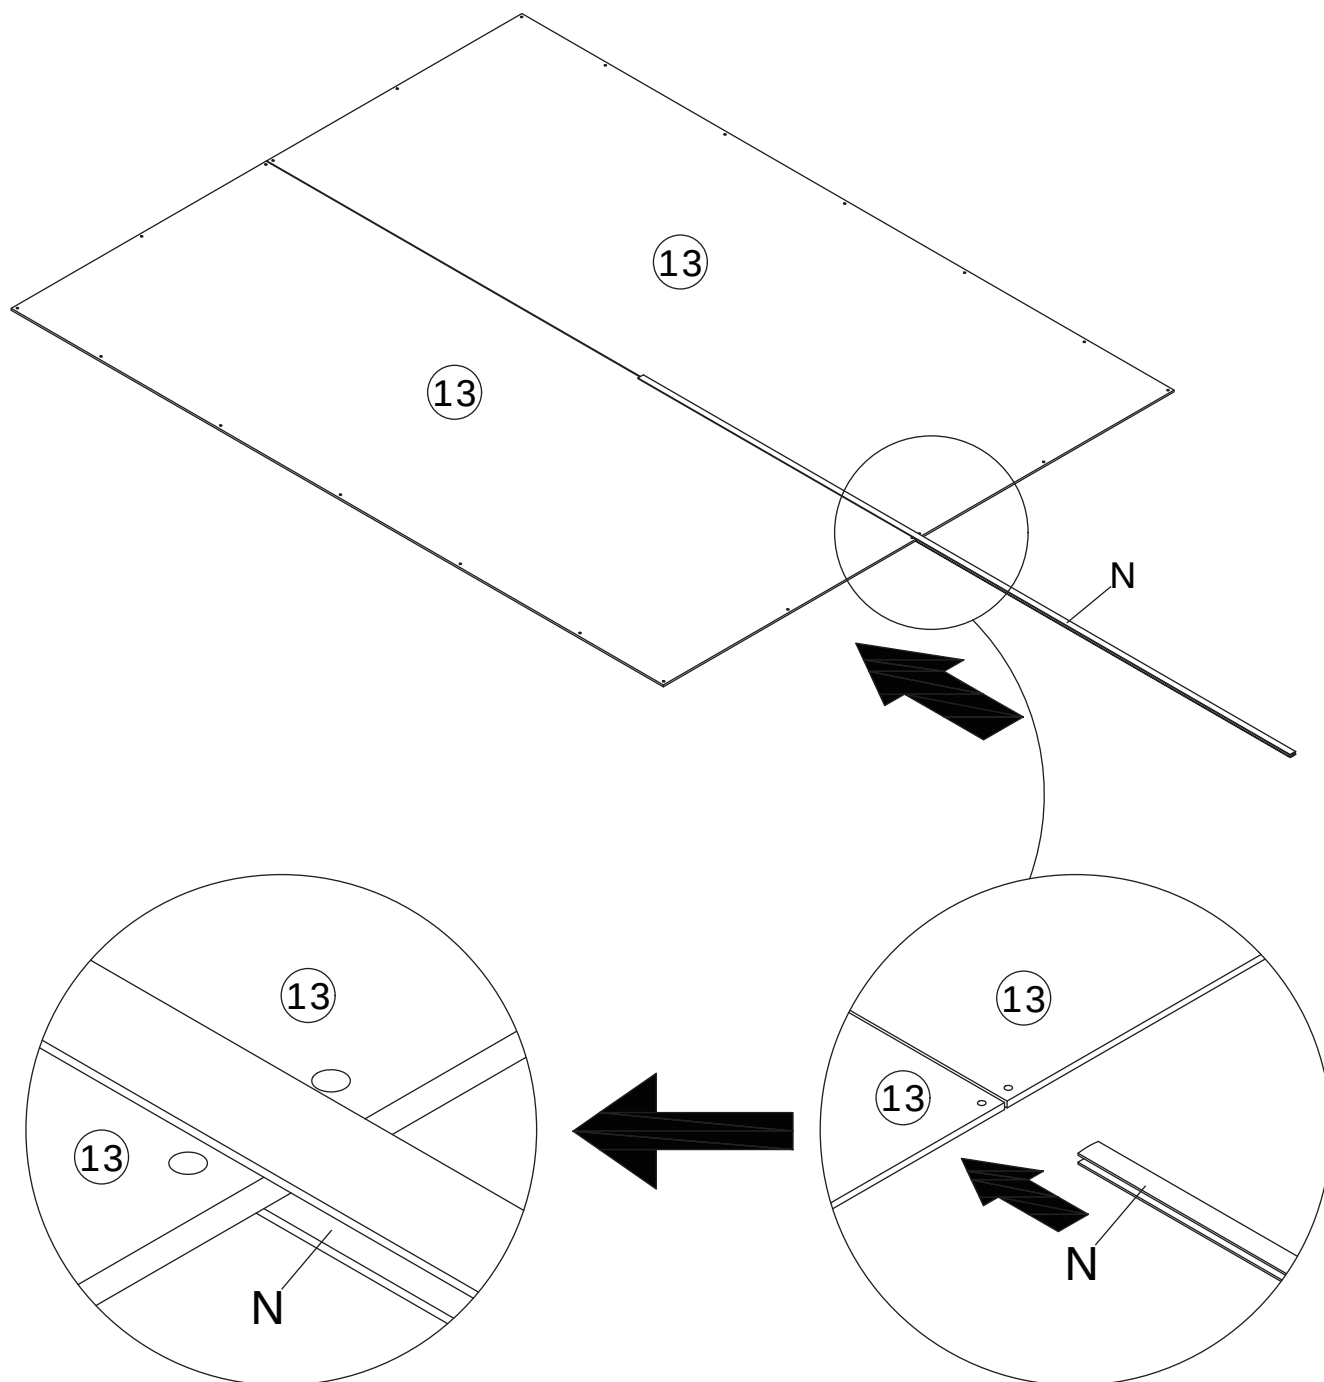


40

 M x 22

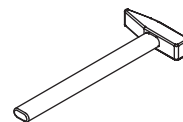

  Attach panel 13 to the mounting unit using nail (M).

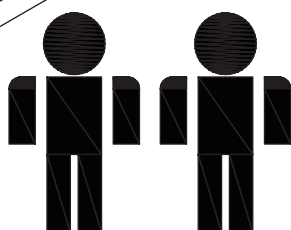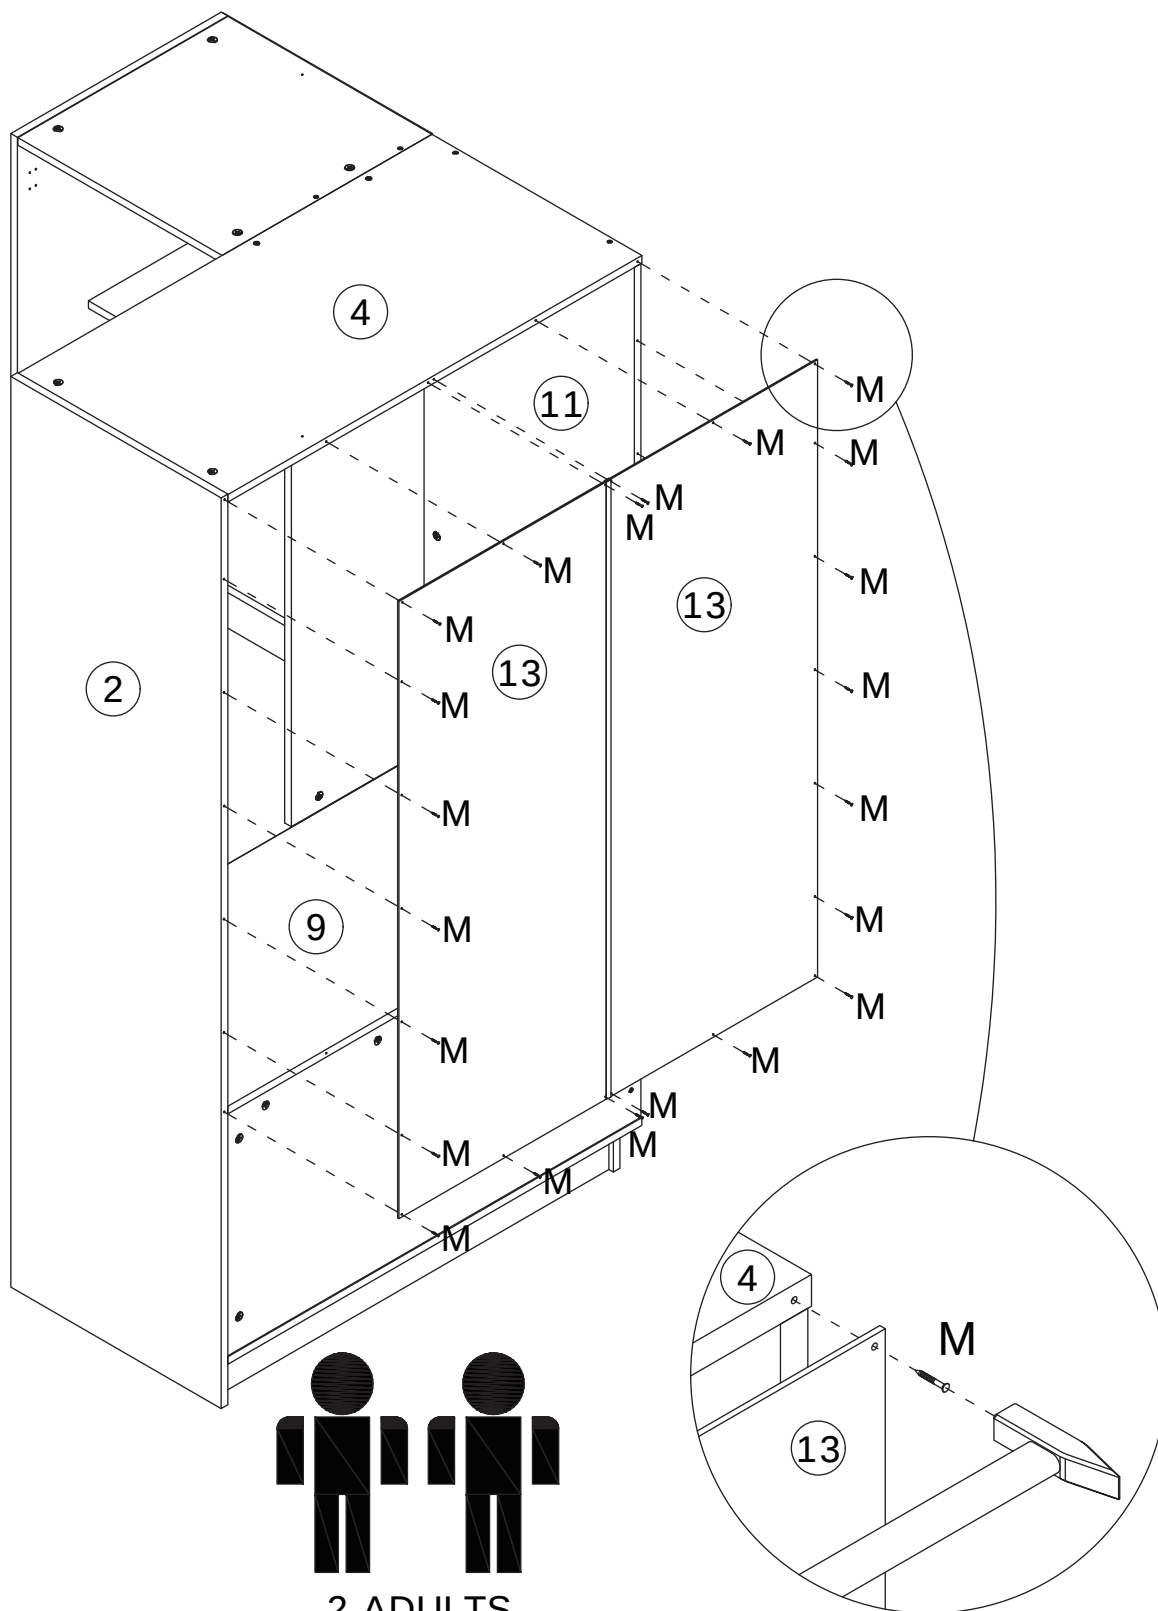


2 ADULTS

41



 Secure part (K) to panels 3 and 4 using screw (L).

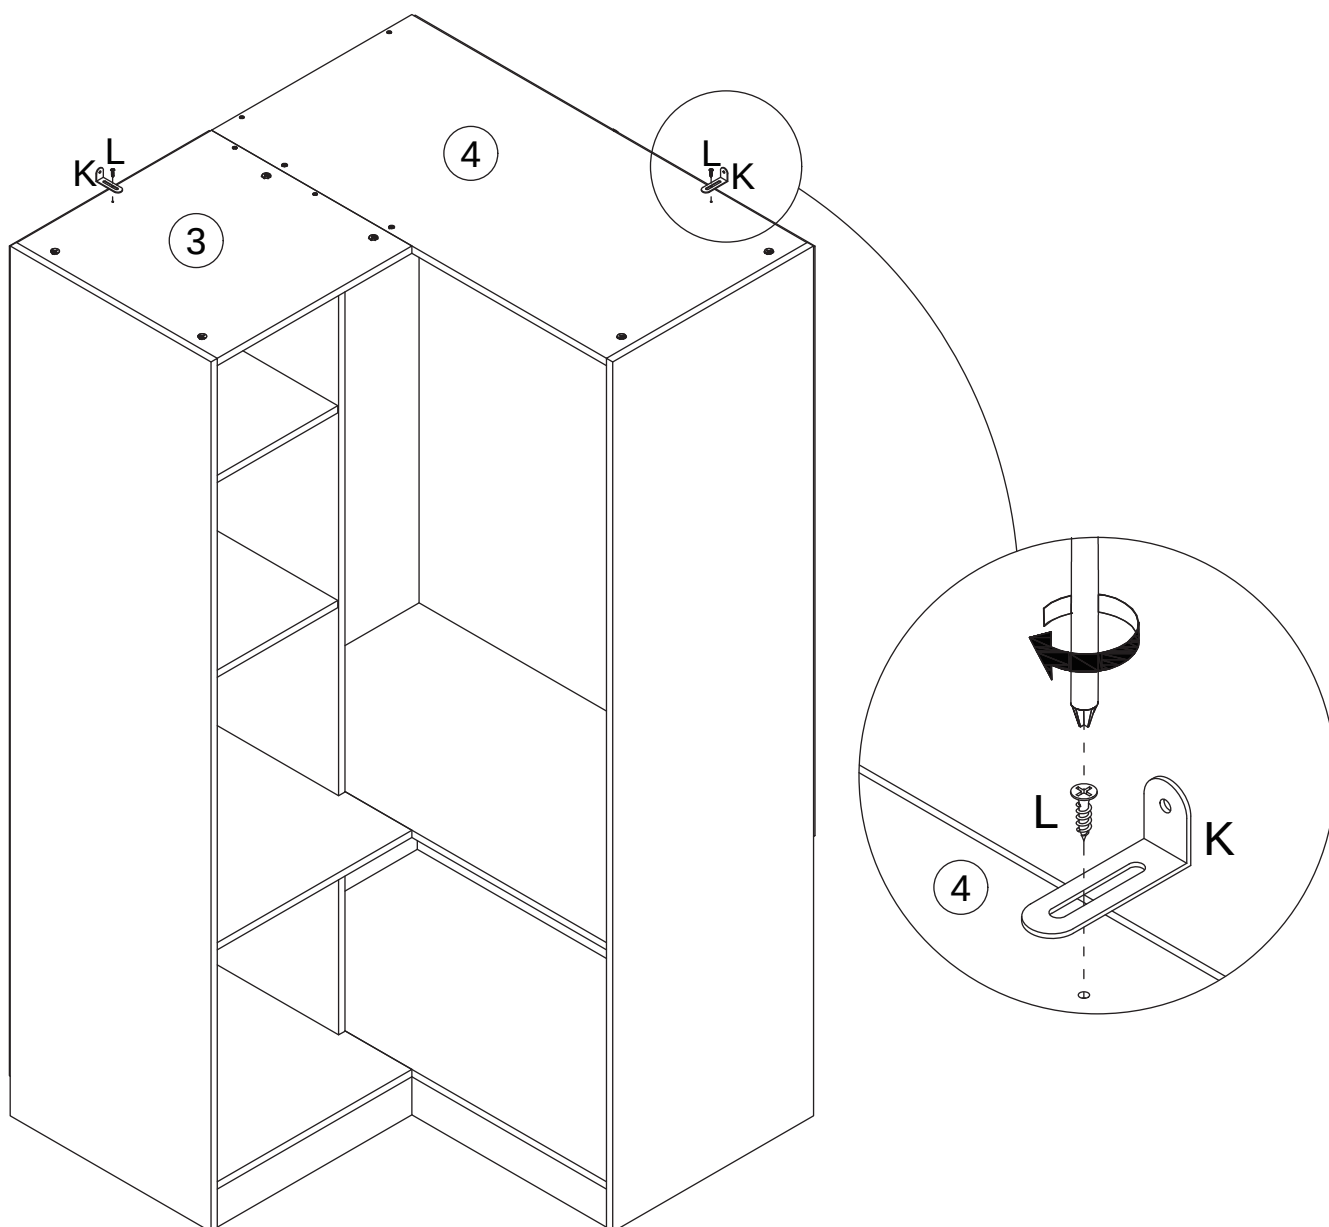


42




J x 2



 T x 2



CRD3535A

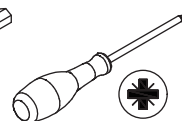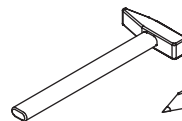   


Install an anti-tip device.


WALL

WALL

 
1.




 
2.

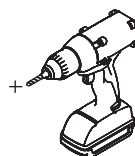

 3.



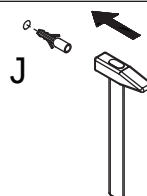


  4.

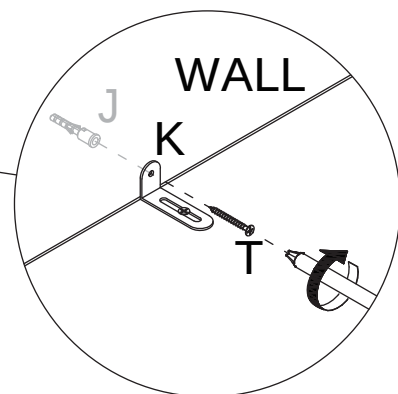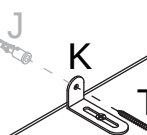

43

   P x 1

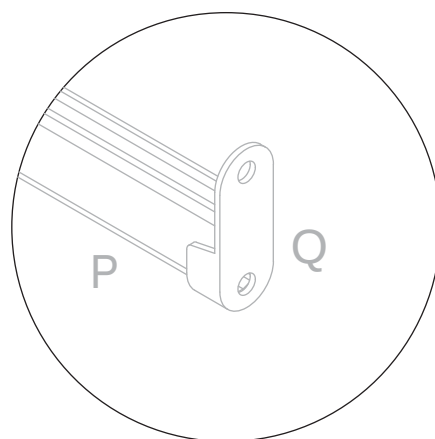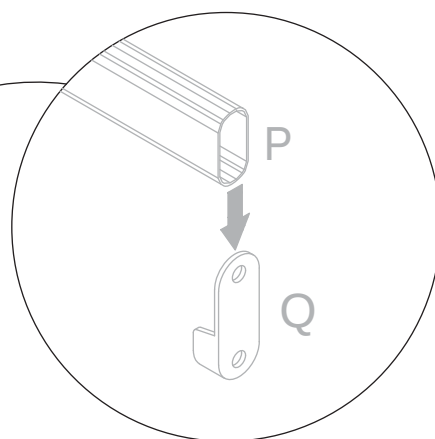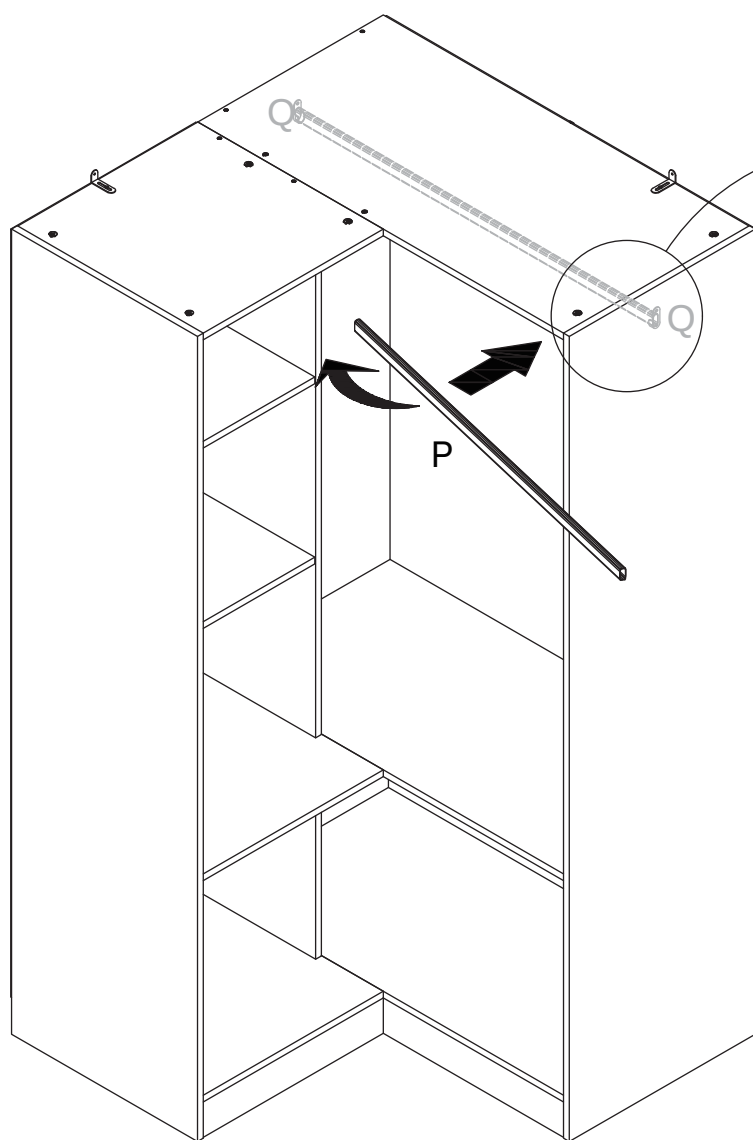


Rotate part (P) by a certain angle before assembling it to the main body.


44

H x 4
DGA861A

 L x 8
CRD3514A




 Secure hinge (H) to panel 22 using screw (L).

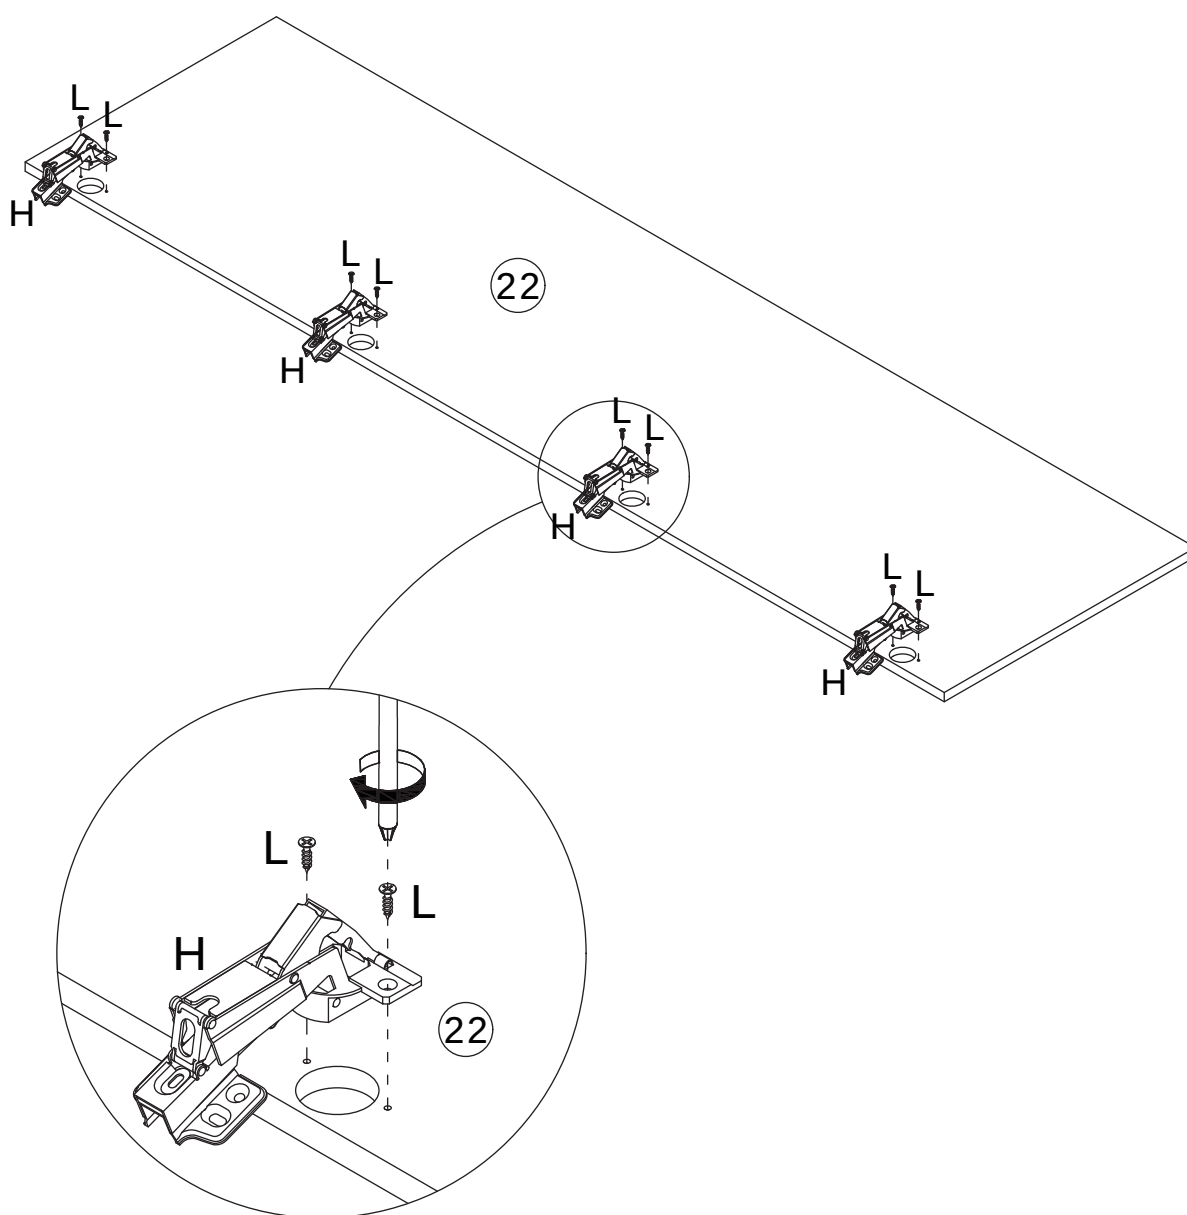


45

 
L x 16



CRD3514A

 

 
Connect panel 22 to panel 1 via hinges using screw (L).

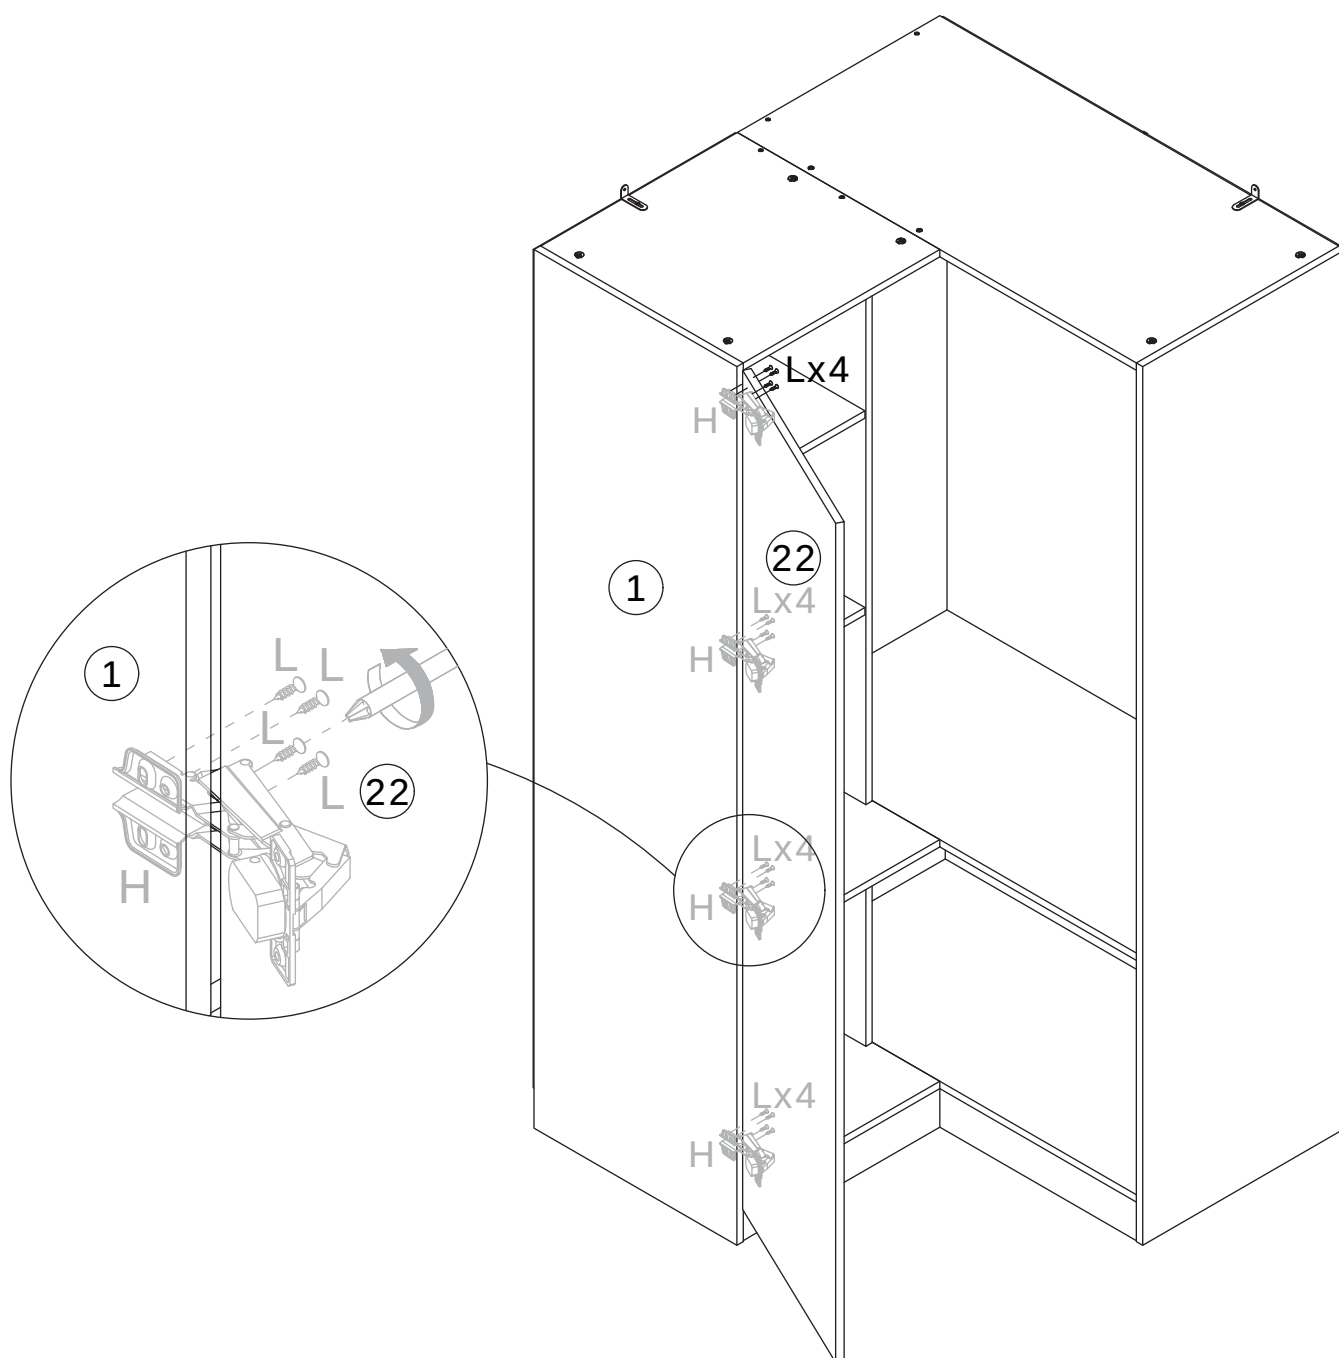

46

H x 4
DGA861A

 
L x 8
CRD3514A



Secure hinge (H) to panel 23 using screw (L).




 Note: Only panel 23 has handle holes. Don't confuse it with panel 22.

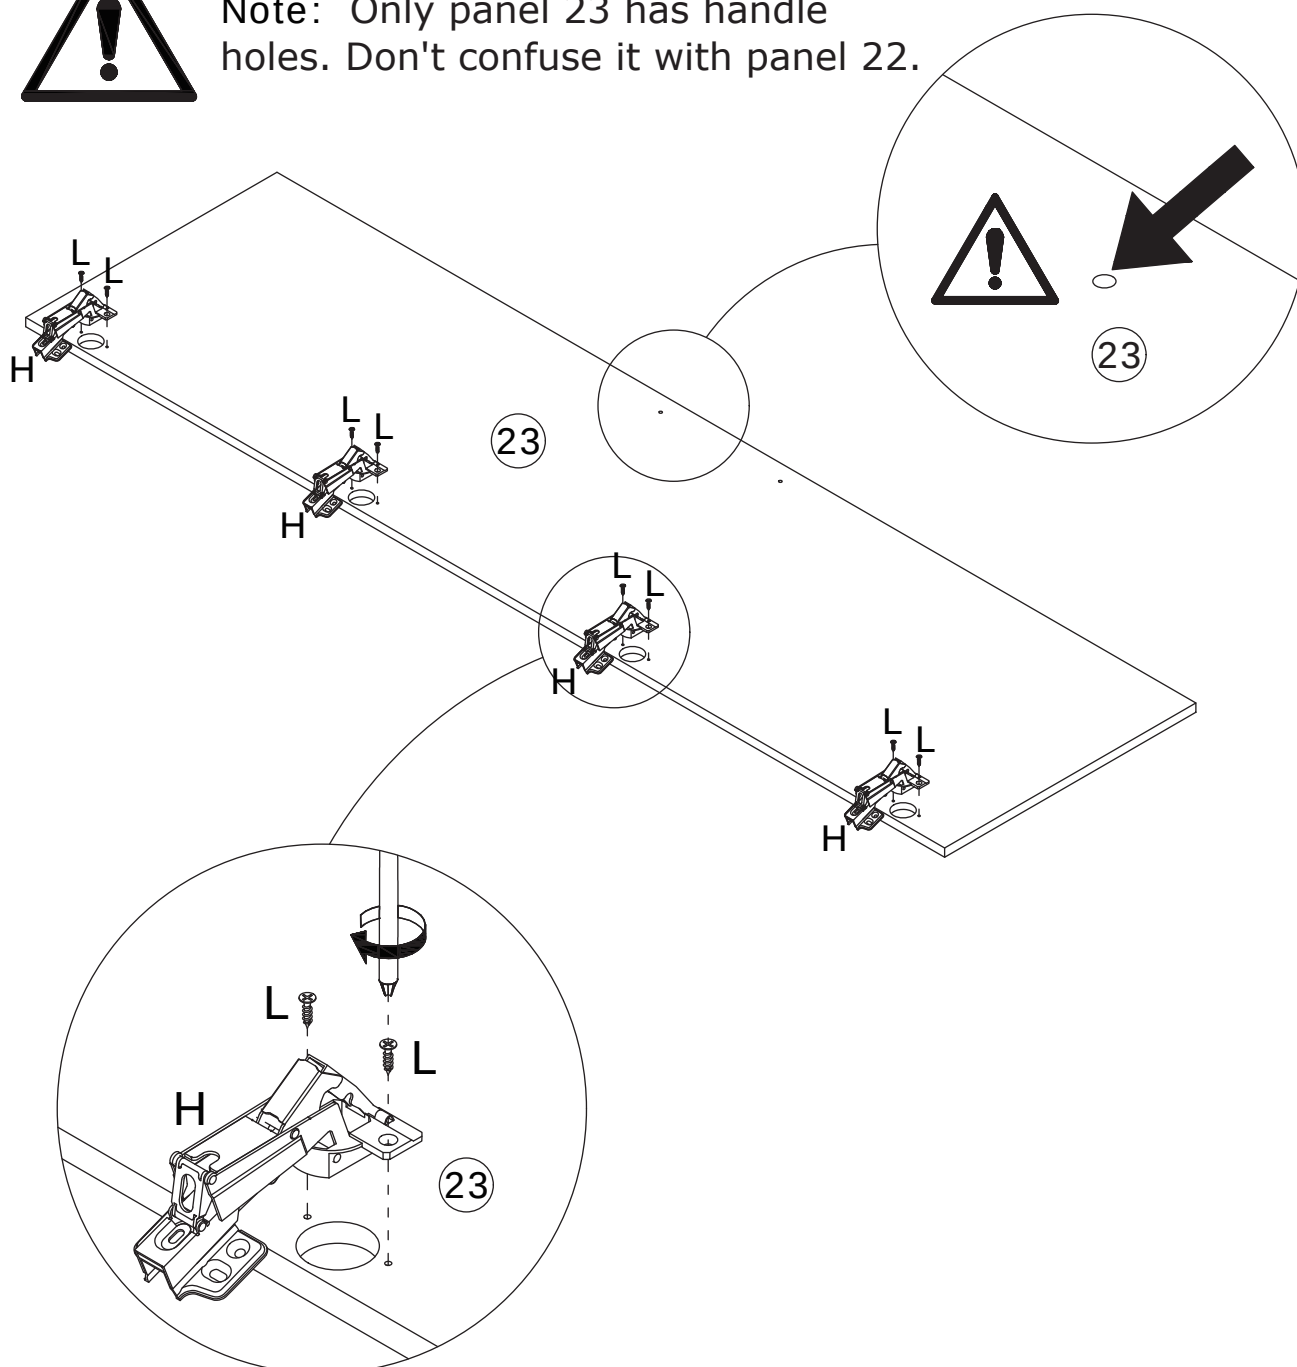


47

 
L x 16



CRD3514A

 


 Connect panel 23 to panel 2 via hinges using screw (L).

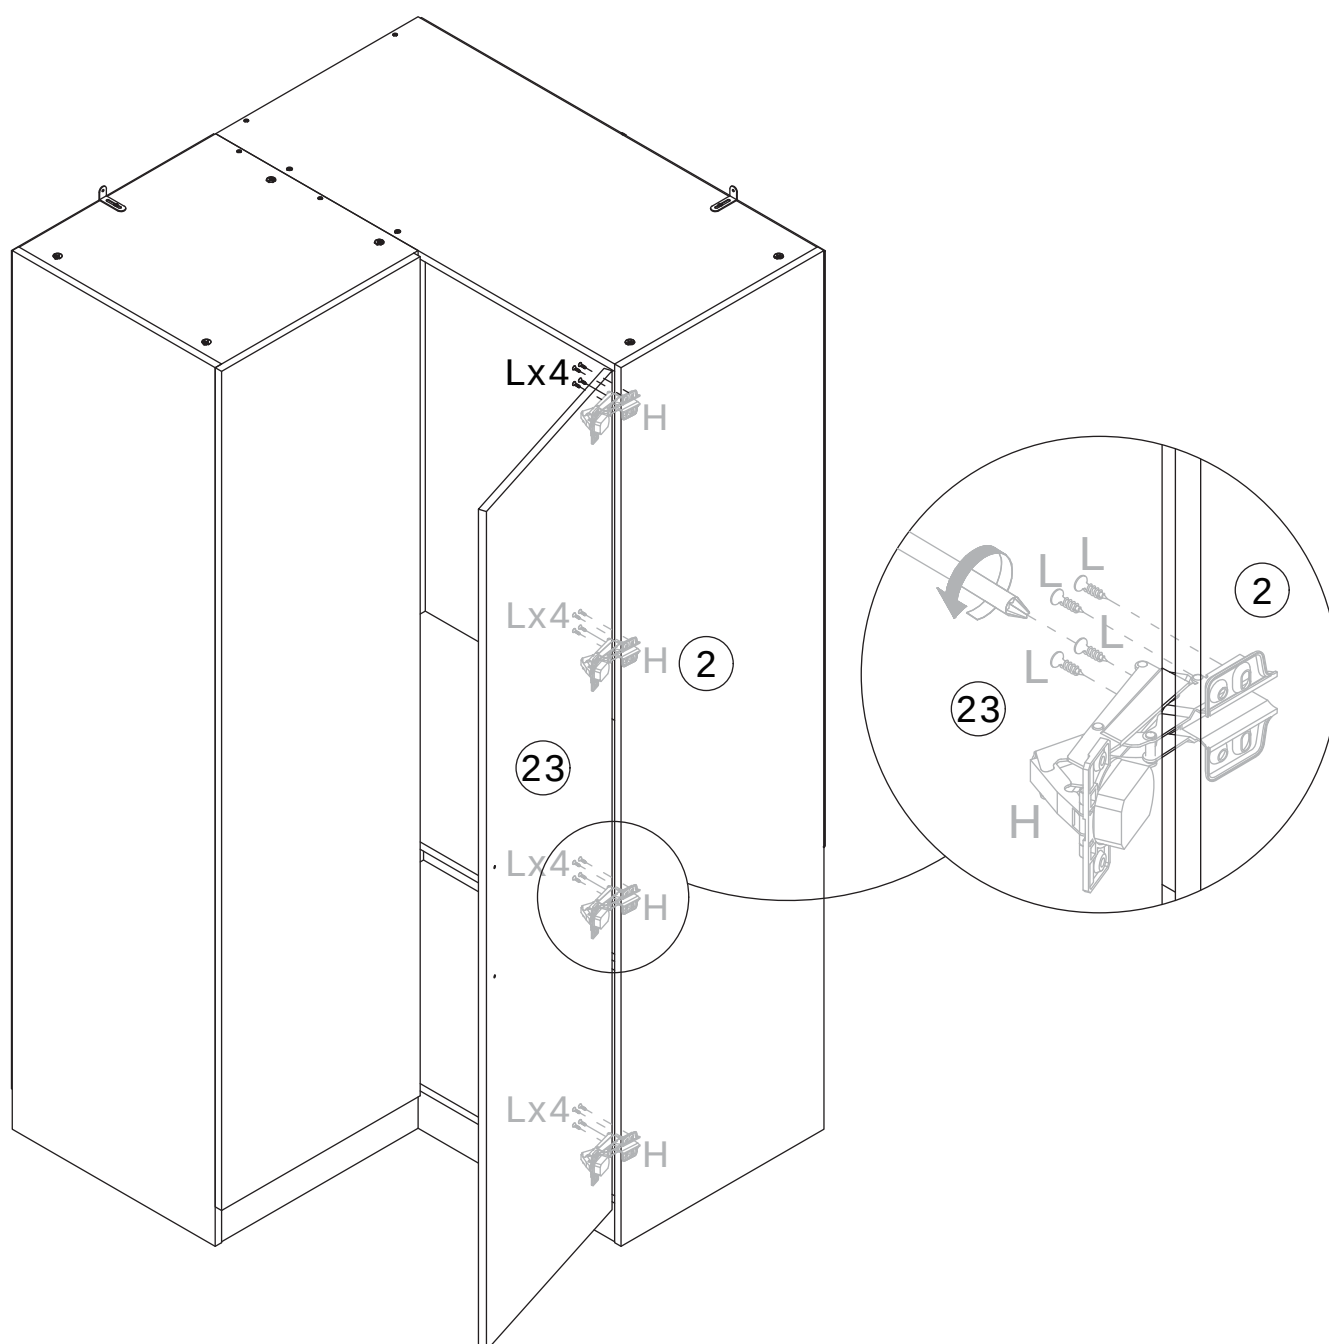

48

 
F x 1

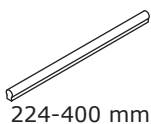


G x 2




 CRE0420A



  Secure handle (F) to panel 23 using screw (G).


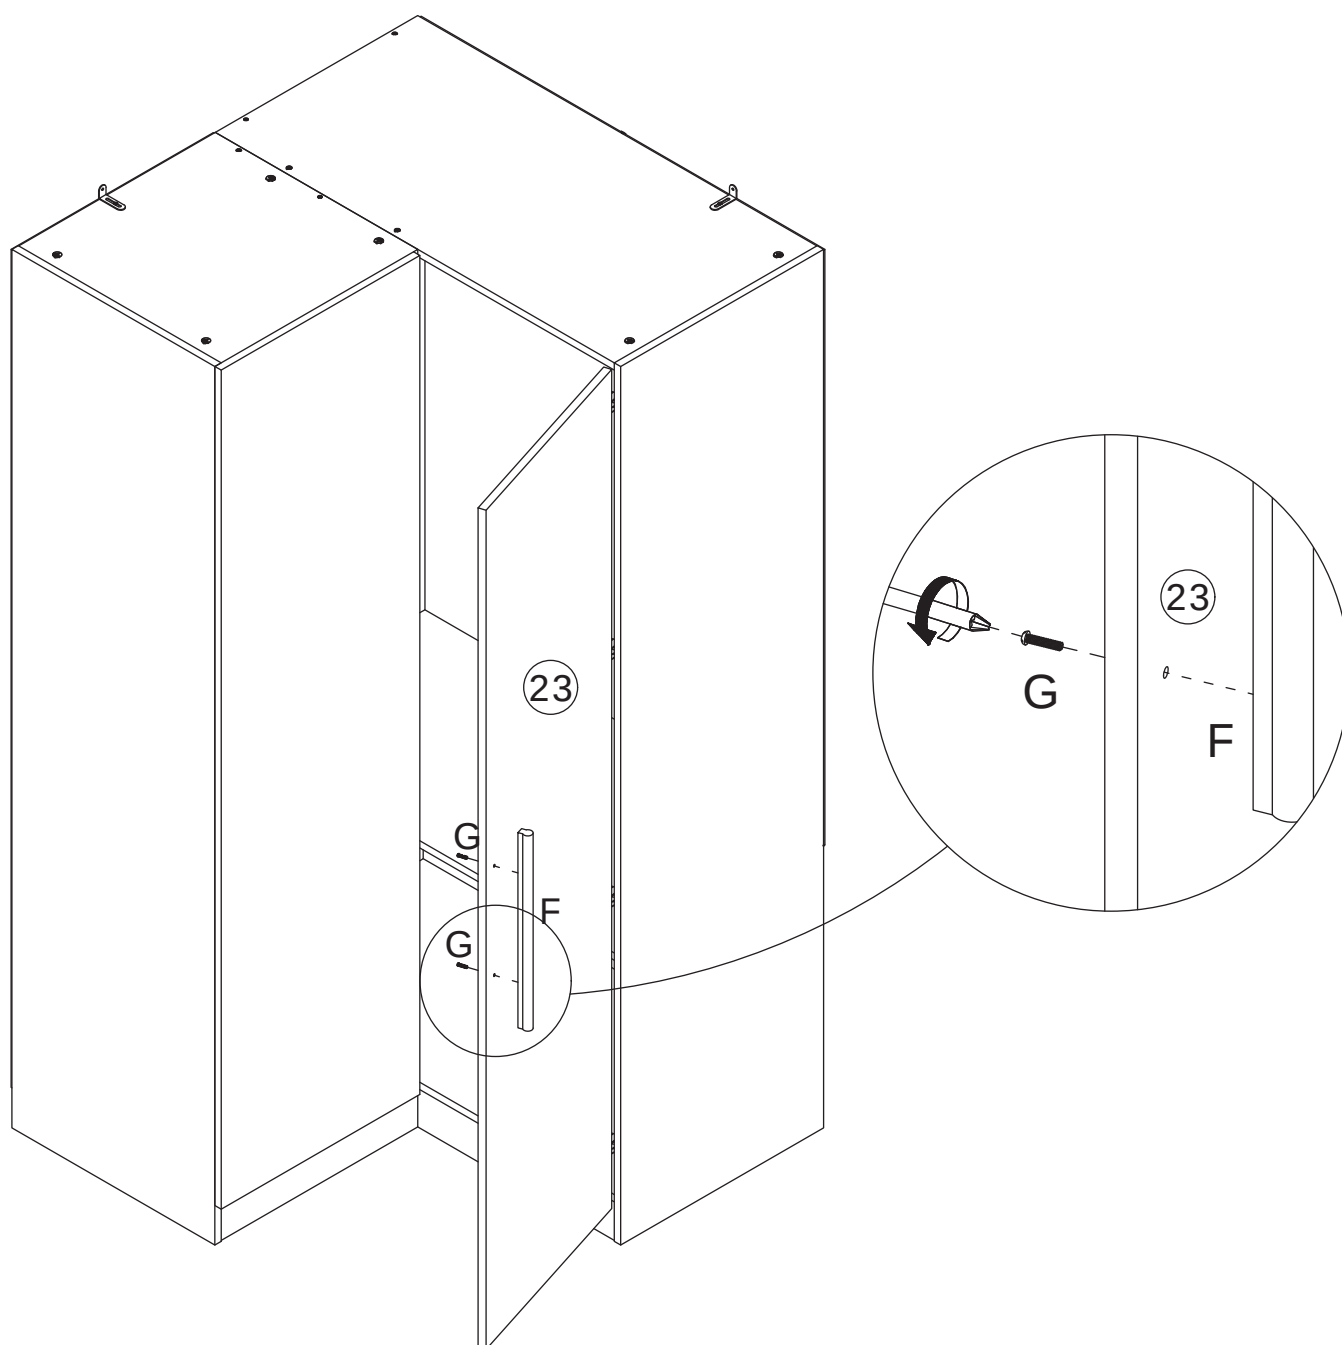





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

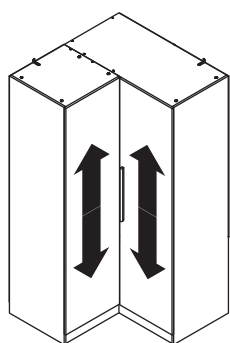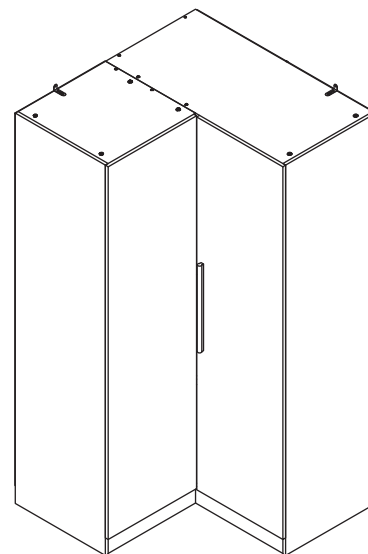



I

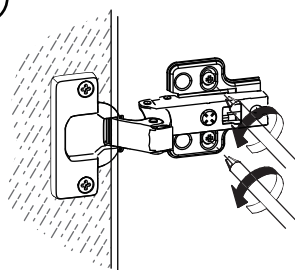 


II

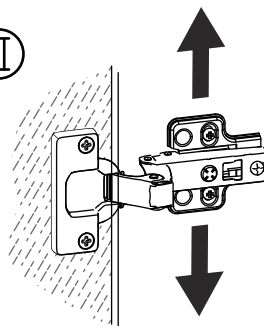 


III

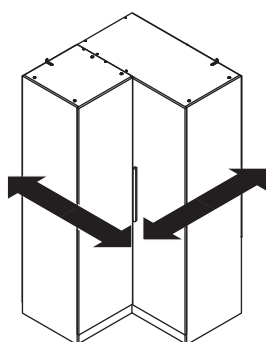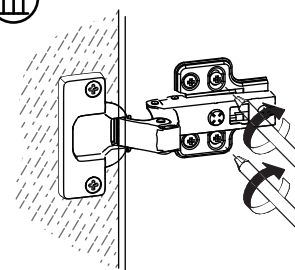  



I

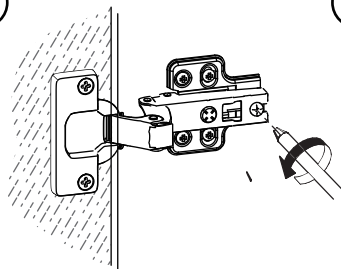 


II

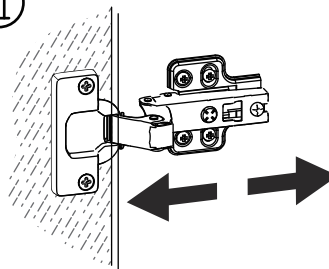 


III

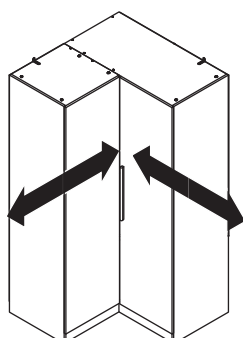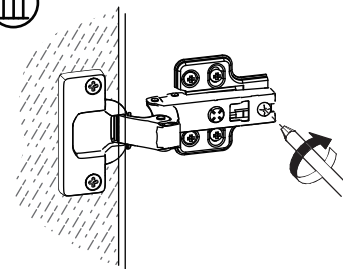  

I

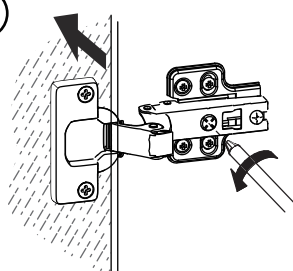 

II

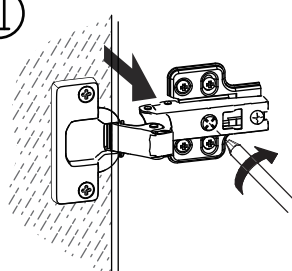 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068